



Kurz-Kasch, Inc.


Electronics Division
Box 1246
1501 Webster Street
Dayton, Ohio 45404
Telephone (513) 223-8161

Operating Instructions

For Model 256A, 185B, 222C

EXTRA INNINGS, DOUBLE PLAY

Midway

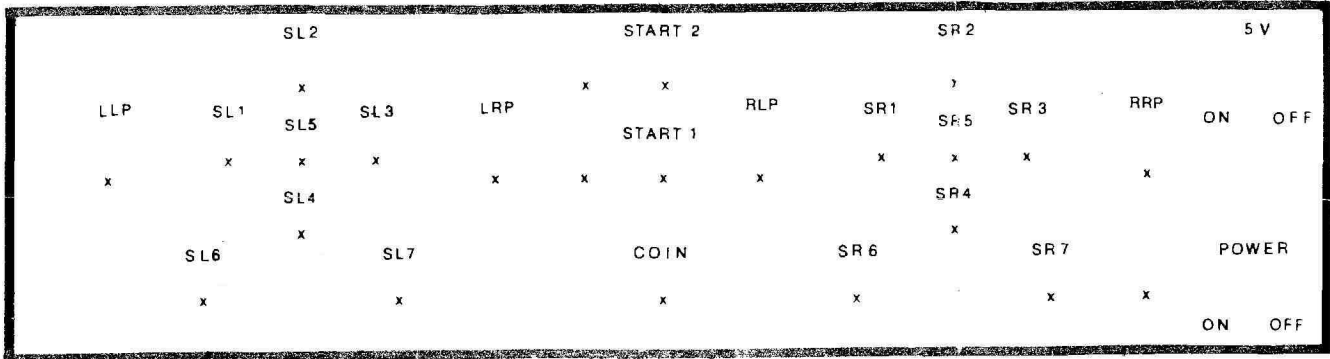

1. Insert 185B card into program "B" connector, number side up.
2. Insert 256A card into program "A" connector, number side up.
3. Insert 222C card into test fixture, number side up.
4. Insert Double Play game board into 222C connector.
5. Connect 22 pin and 11 pin Molex connector to game board.
6. Connect speaker to speaker leads.
7. Slide 5 VOLT switch to ON.
8. Slide POWER switch to ON.
9. Push Start 2 to Reset game.
10. Push COIN switch to coin game.
11. Use the momentary switch on the 256A card to select 1 Player or 2 Player.

12.	VISITORS	HOME
	SL-6	Field Left
	SL-7	Field Right
	SL-1	Pitch Left
	SL-3	Pitch Right
	SL-4	Pitch Slow
	SL-2	Pitch Fast
	SL-5	Bat
		SR-6
		SR-7
		SR-1
		SR-3
		SR-4
		SR-2
		SR-5