

GENERAL INSTRUCTIONS FOR SHUFFLEBOARD

INSTALLATION:

1. Remove shipping cleats located on bottom of cabinet.
2. Install 4 provided leg levelers to bottom of cabinet and level cabinet.
3. The power is controlled by a switch located on top of the cabinet. Plug into A.C. only, 115 volts, 60 cycles. In low line areas (105 volts or less), a boost in the output voltage of the transformer may be obtained by removing the wire from the 115 volt tap of the transformer and rewiring it to the 105 volt position.

VOLTAGE CONTROL POTS:


Located on power supply line (P.C. A080-90400-F000) and is preset at the factory. These pots should not be tampered with unless the Distributor Service Department is contacted.

VOLUME CONTROL:

Located on Game Logic Board (P.C. A084-90700-C643) controls the volume of all sounds and may be varied as desired by rotating pot.

COIN, TIME, SCORE AND LANGUAGE ADJUSTMENT SWITCHES:

Located on Game Logic Board (P.C. A089-90700-C643) and may be adjusted as indicated on separate instructions located in back box area.

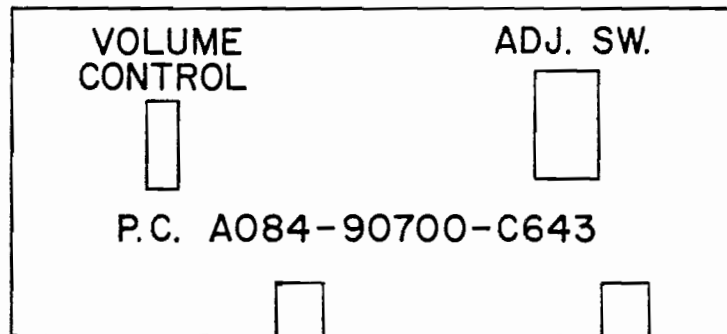

TO REMOVE CONTROL PANEL FOR SERVICE:

1. Open coin box door.
2. Unplug Control Panel jack located to the left of coin box door opening.
3. Unlatch 2 clamps located on each side of cabinet.
4. Remove Control Panel for service.