
# ARMOR... ATTACK

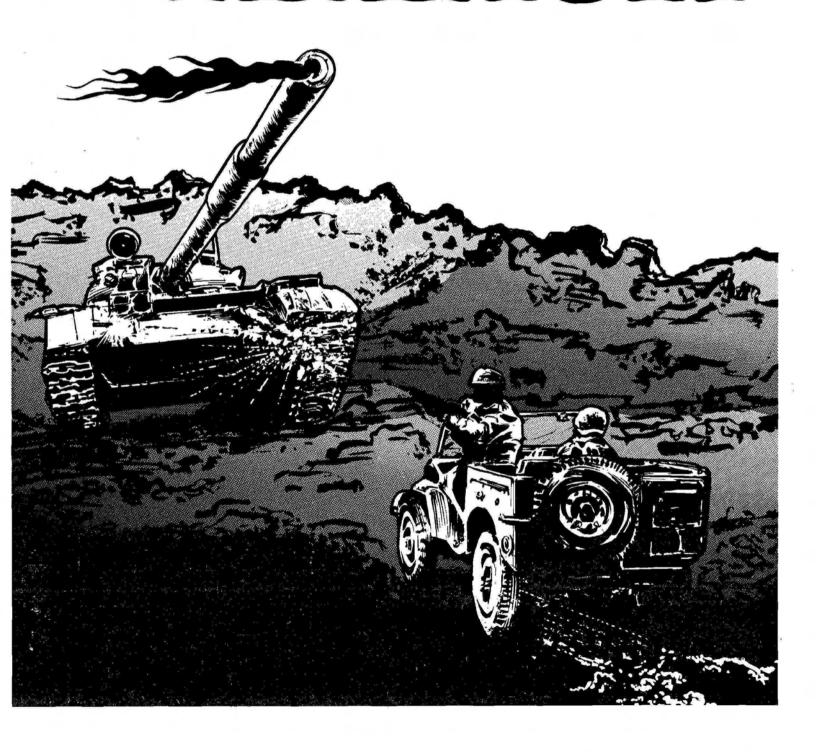

# OPERATION AND MAINTENANCE MANUAL

#### CINEMATRONICS, INC. 1150 BILLY MITCHELL DRIVE EL CAJON, CA 92020

TELEX: CINEMAT 697891

CALL TOLL FREE: 800 854-6577

IN CALIFORNIA CALL: 714-440-2933

SALES: 8-5 (PST) WEEKDAYS

SERVICE: 8-5 (PST) WEEKDAYS

Copyright 1981 All Rights Reserved

# CINEMATRONICS INC. ARMOR ATTACK

#### **WARNING:**

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction's manual, may cause interference to radio communication. As temporarily permitted by regulation it has not been tested for compliance persuant to Subpart J of part 15 of FCC rules, which is designed to provide reasonable protection against such interference. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

## TABLE OF CONTENTS

Section	Title	Page
PURPOS	E AND LIMITATIONS OF THIS MANUAL	i
WARRA	NTY	ii
CUSTOM	MER SERVICE PROCEDURES FOR AUTHORIZED DISTRIBUTORS	iii
	PART ONE	
	Information for Operators	
Section	Title	Page
1	HOW TO PLAY ARMOR ATTACK	1-1
2	RECEIVING AND INSTALLING ARMOR ATTACK	2-1
3	GENERAL INFORMATION AND PERIODIC MAINTENANCE	3-1
4	OPERATOR'S GUIDE TO TROUBLESHOOTING	4-1
	PART TWO Information for Technicians	
		_
Section	Title	Page
5	VECTOR THEORY	5-1
6	THEORY OF OPERATION	6-1
	A. Monitor	
	B. CPU	
	C. Audio Board	
7	TROUBLESHOOTING	7-1
8	PARTS LIST	8-1

## APPENDIX A

Assembly Drawings, Schematics, Wiring Diagrams.

#### PURPOSE AND LIMITATIONS OF THIS MANUAL

This manual cannot and does not replace technical expertise. Should out of warranty repair be necessary, we suggest the operator protect his/her investment by hiring an experienced, competent technician (preferably with some knowledge of the Vectorbeam tm Monitor). We have seen many examples come into the factory of incompetent repair creating many more problems than originally existed. One common fault is incorrect substitution of parts. Another is damaged foil traces on PC boards. Repairing broken foil is time consuming and therefore costly.

This manual has 2 major purposes, and is correspondingly separated into 2 major parts.

Part one of the manual contains information operators need to know. It has been written to tell people who have little or no technical knowledge what they should know about this game, without getting technical. Part one contains valuable information about the Armor Attack Game, receiving inspection and installation, an introduction to the major electronic sections of the game, and an operators guide to trouble shooting — finding the source of a problem with a minimum of technical jargon.

If you need more assistance than this manual can give call Cinematronics' Customer Service Department at our toll free number.

Part II of this manual is designed to help the qualified technician understand the functions of the various circuits in the game, and quickly troubleshoot any problems. Part II contains Theory of Operation, Trouble shooting Procedures, Schematic and Wiring Diagrams, Layout Drawings, Parts List, and suggested test equipment. If you need further assistance, please call Cinematronics' Customer Service Department at the toll free number.

#### WARRANTY

Cinematronics, Inc. warrants the goods to be free from defects in material and workmanship under normal use and service for a period of ninety (90) days from the date of shipment from factory. Cinematronics makes no representation or warranties concerning the goods whether express or implied by operation of law or otherwise, including those of merchantability or fitness for any particular purpose, or with respect of patent infringement, except as may be specifically made herein. Cinematronics limits its warranty obligations herein to the repair or replacement of such parts which have been returned to Cinematronics' plant at purchaser's expense and which examination shall disclose to Cinematronics' satisfaction to have been so defective and to the shipment of such repaired or replacement parts to the purchaser F.O.B. the shipping point.

This warranty does not apply to any Cinematronics product which has been altered or repaired by unauthorized personnel or service facilities or any products which have had the unit serial number altered or removed.

Upon acceptance of the goods, the purchaser agrees to assume all liability for damages and/or bodily injury by the purchaser or any other person and to hold Cinematronics, Inc. harmless from liability or claims arising from the use of the goods by any person. Purchaser further agrees to indemnify Cinematronics, Inc. from any liability, claim, cause of action or litigation resulting from the use or misuse of the goods by any person.

Parts returned for warranty service must be packaged so that no damage is incurred during the shipment. Full documentation and instructions must accompany returned parts. Parts must be shipped prepaid to:

Cinematronics, Inc. 1150 Billy Mitchell Drive El Cajon, CA 92020

#### CUSTOMER SERVICE PROCEDURES

#### FOR AUTHORIZED CINEMATRONICS' DISTRIBUTORS

It is the desire of Cinematronics, Inc. to provide efficient and courteous service should the need arise. We have a fully staffed Customer Service Department and encourage you to call our toll free number: 800-854-6577,78, for technical assistance between the hours of 8:00 A.M. and 5:00 P.M., California time, Monday through Friday.

In order to provide the very best service possible, the following procedures for ordering or returning parts must be followed:

- 1. All equipment ordered from Customer Service, whether in or out of Warranty, must be placed with a Distributor's purchase order, either by mail or verbally by telephone.
- 2. Advance replacement items may be obtained only during the term of the Warranty and when such items are available, using the same procedure as when ordering parts. When ordering a PCB, please include with your order the game serial number and the number of the PCB you wish replaced.
- 3. All items received as advance replacements will, after a period of thirty (30) days, become the property of the Distributor, with applicable charges applied in the event Customer Service has not received the defective item against which the advance replacement was made.
- 4. The Distributor must call this facility for an RMA number prior to returning any item. Please be prepared to provide us with the game serial number and the PCB number when requesting an RMA.
- 5. In all situations covered above, and in all other situations, the Warranty offered by Cinematronics, Inc. is applicable and should be fully understood.
- 6. Parts returned for service must be packaged so that no damage is incurred during the shipment. Cartons without a prominently displayed RMA number will not be accepted. Full documentation including game serial number. PCB number and reason for return must accompany parts. Ship prepaid to:

Cinematronics, Inc. Customer Service Department 1150 Billy Mitchell Drive El Cajon, CA 92020

800-854-6577 714-440-2933

# PART ONE

Information for Operators

#### SECTION 1

#### HOW TO PLAY ARMOR ATTACK

#### INTRODUCTION

Armor Attack is a one or two player Battle-Action game, with features geared for maximum player appeal: unsurpassed realism (functional tank treads, turret recoil, burning debris, "War Zone" audio) and progressive levels of difficulty. The game adjusts itself to the skill of player, e.g., if you're skilled, it plays harder.

#### GAME PLAY

The play field is a top view of a city with road and building areas defined. Players (jeeps) and enemy (tanks) can only manuver on the roads, however the enemy chopper can go over buildings and roads. Whenever the player shoots and hits the side of the building the missile explodes. The shots are only valid over road areas. Debris left by tanks is not self-destructive and can be driven around.

The object of Armor Attack is to accumulate the maximum number of points possible. This is done by shooting tanks and/or choppers. (Shooting other player in a two player game does not count.) The player must also avoid being shot by either the tank or chopper. If the player shoots a chopper, the bonus level is incremented by 10 points. When the fifth chopper is destroyed an extra jeep is awarded (Bonus Level +10, +20, +30, +40, extra jeep). The players turn is over when he gets shot by the tank or the chopper. In a two player game, the round is not over until both players are shot. The number of rounds per game is set by the operator. Points are awarded as follows:

#### 1. SHOOTING TANKS

20 Points is scored for hitting the body of the tank (first hit)

30 Points is scored for hitting the turrets (second hit)

The Bonus Level is also awarded for hitting the turrets (the Bonus Level of 0-40 is determined by the number of choppers destroyed.)

#### 2. SHOOTING CHOPPERS

100 Points is scored for shooting a chopper. The Bonus Level is also incremented.

#### MODES OF PLAY

There are two modes of play in Armor Attack 1) The one player mode; and 2) The two player mode

One player mode is selected by inserting coin or coins and depressing the one player start button. The player (jeep) will appear in the center of the screen and flash until one of the player control buttons (left, right, forward and fire) is depressed. The player then uses the left, right and forward buttons to manuver the jeep around the screen. If a player runs into a wall he will merely stop or slow down but no damage will occur. When a player is pointed at a target, pressing the fire button will launch a missile. A maximum of 2 missiles is allowed for a player at any given time.

The player can be destroyed three ways;

- 1) If a player is shot by a tank
- 2) If a player is shot by a chopper
- 3) If a player is run over by a tank

The number of times a player can be destroyed is determined by the number of jeeps per game selected on the 7-position option switch on the logic board.

If a player shoots a tank once, there is a time limit to shoot the turret. If the player does not shoot the turret, it will explode automatically and no points will be awarded.

#### TWO PLAYER MODE

The two player mode is selected by inserting coins and depressing the two player start. Both players jeeps will flash (to draw attention to them) until a player control button is pressed. Start buttons will have no effect during the play of the game. The players cannot shoot each other. The rest of the play is the same as a one player game except for the following exception:

If one player is destroyed, the next round will not begin until both have been destroyed.

#### Good Shooting

#### **SECTION 2**

# RECEIVING AND INSTALLATING ARMOR ATTACK

#### RECEIVING INSPECTION

Your game was shipped in ready-to-play condition. However, after removal of the shipping carton, a brief visual examination is suggested.

Naturally, you'll want to make note of any physical damage to the game cabinet and its external components for freight claim purposes. Considering the quality of the shipping carton, any damage to the exterior would indicate possible interior damage as well.

The interior of the game should also undergo a brief examination for: loose mounting hardware (check to be sure that the major components are still securely mounted); disconnected or loose wires, cables or harnesses; electronic devices loose in their sockets; etc.

At this time the game serial number should be logged. Please remember that the game serial number will be required if you need service from your distributor.

#### ELECTRICAL REQUIREMENTS

Unless specified otherwise, your game was shipped to operate at 115 VAC, 50/60 Hz. Two other voltage settings are possible. The power supply chassis has a table which shows the voltage options and fusing requirements.

A good earth ground is essential for the proper operation of this game or for that matter any electronic device. Problems with instability and erratic operation of computer-type devices can usually be traced to an

ineffective ground system. Therefore, plug the game into a properly wired 3 prong outlet. If a 3 prong to 2 prong AC adaptor must be used, an alternate method of grounding the third prong must be used.

#### INITIAL ADJUSTMENTS

#### NOTE


When the game is connected to AC power, one of the game sounds may be heard. This is normal.

The audio level (volume) can be easily adjusted and THIS IS ACHIEVED BY ROTATION OF THE VOLUME POT LOCATED ON THE COIN DOOR. The audio level should compete with other machines "on the floor" to maximize play time.

Display brightness is another easy adjustment. The monitor assembly has several adjustments, but the brightness control is the only one which does not require a "screwdriver" for rotation. Keep the brightness at the correct level for appeal.

#### **OPERATOR OPTIONS**

The option switches allow you to select how many ships per game, how many coins per credit, and a test pattern for the Vectorbeam monitor. The option switch is located on the logic or game board. It is not necessary to remove the board from the cabinet to set the options. In fact, the option switch and audio control can be reached easily through the coin door opening. Table 2-1 will assist you with your selections:

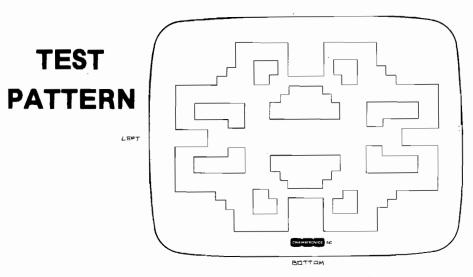

ARMOR ATTACK OPTION SWITCHES
LOCATED ON LOGIC BOARD
AT POSITION E-2

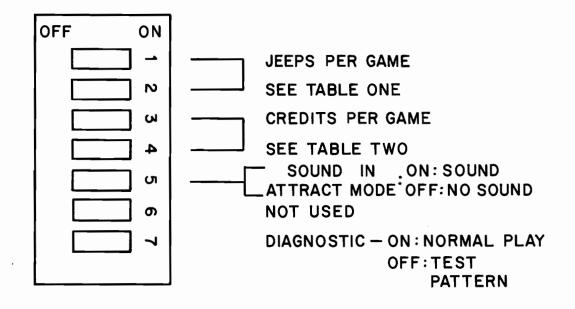


TABLE ONE

SWITCH

2

SWITCH

1

**JEEPS** 

PER

GAME

OFF	OFF	5
OFF	ON	4
ON	OFF	3
ON	ON	2

TABLE TWO

	switch 3	SWITCH 4	CREDITS PER COIN
--	-------------	-------------	------------------------

OFF	OFF	1/1
OFF	ON	1/2
ON	OFF	3/2
ON	ON	3/4

#### SECTION 3

#### GENERAL INFORMATION AND PERIODIC MAINTENANCE

Your Cinematronics game is designed much the same as conventional video games. The major exception is the use of an alternate means of visual display ... the patented Vectorbeam tm\* monitoring system. However, the game is built of the same basic building blocks as any other video game.

The Power Supply provides all the necessary voltages for the CPU board, audio board, Vectorbeam monitor, and flourescent light. As you look in the back of the cabinet, it is located on the lower left side of the cabinet. The power supply has two circuit breakers, and a 3 ampere sloblo fuse. If one circuit breaker trips, the other breaker will soon follow. Always unplug the game before replacing the fuse or resetting the circuit breakers. If you need to replace the fuse use only a 3 amp. slo-blo fuse. The power supply also has a line voltage select switch that must be set to match the voltage in your area. There is also an adjustment for the +5 volt section. DO NOT ADJUST unless you use a volt meter and follow the procedure in Section 6. needed, this power supply is directly interchangeable with the power supplies used in previous Cinematronics games.

The Central Processing Unit (CPU) is the "brain" of the game. As you look in the back of the cabinet it is the large PC (printed circuit) board on the right side. It "senses" when a coin is dropped in the coin slot, operates the coin meter, and gives credit. It then "reads" what is happening at the operator controls, interprets and computes to make the game play according to what buttons the player pushes. It tells the Vectorbeam monitor what to draw on the screen, and it tells the audio board when to make the appropriate sound effect. The CPU has a red LED (light-emitting diode), near the Molex power plug. This LED

normally flashes once when power is turned on, then stays off. More on this in Section 6.

The <u>Audio Board</u> generates all the sound effects for the game and powers the loud-speaker. As you look in the back of the cabinet, it is the smaller PC board on the right side, just below the CPU.

The <u>Vectorbeam tm\* Monitor</u> is the picture tube and associated "Monitor Board". It draws pictures on the picture tube screen according to the instructions it receives from the CPU. If it does not receive correct data from the CPU, it will pop the circuit breakers. The only operator adjustment here is the brightness control (See Display P.C.B. Connectors and Adjustments, pg. A13. For test purposes (e.g. to check the CPU), the Armor Attack monitor can be replaced by any previous Cinematronics monitor, except Sundance.

The Vectorbeam tm\* Monitor is a completely different system from the standard raster-type monitor. Two advantages to this monitor are:

- 1. circuitry is simplified, and
- 2. ability to draw fine detail in the picture far surpasses conventional monitors, adding interest to the game. If your monitor should need repair in the

future, the technician should be familiar with the Vectorbeam monitor, because it is so different from the conventional raster system.

Interconnecting Cables are of 2 types: The Main Wiring Harness, and the Ribbon Connectors.

The Main Wiring Harness carries power from the power supply to the CPU, audio board, and monitor. It connects to each unit

through the Molex plugs. The Molex plugs are built so they can only plug in the right way. NEVER CONNECT OR DISCONNECT THE MOLEX POWER PLUGS UNLESS THE GAME IS UNPLUGGED.

The Ribbon Connectors carry data to and from the CPU. Since they can plug in two different ways, care should be taken to plug them in correctly. For the CPU, the ribbons are plugged in correctly if the ribbon is naturally directed away from the board (See Universal Bench Test Configuration, pg. 7-3). The ribbon at the monitor should also be directed away from the board. (See Universal Bench Test Configuration, pg. 7-3). The audio board is different: the ribbon should go up across the audio board. (See Universal Bench Test Configuration, pg. 7-3).

#### PERIODIC MAINTENANCE

The only Periodic Maintenance required is an occasional cleaning. The very high voltage used on the picture tube attracts dust that gradually degrades picture quality. To clean: unplug game and let sit for at least 5 minutes to let voltages "bleed-off."

The monitor is mounted in the cabinet on brackets. Remove the top bolt from each bracket and gently lower the monitor. Now you can clean the face of the picture tube, and the plexiglass cover. A mild solution of dish detergent will clean the plexiglass without harming the color decal. Care should be taken to not rub the decal, as it may be brittle with age.

#### SECTION 4

#### OPERATOR'S GUIDE TO TROUBLESHOOTING

or

How do I Figure out Which Board to Send Out for Repair?

O.K. - this is where we get technical on you - but don't panic! We'll keep this as simple as possible so you can figure out which board to send out for repair. For some of the steps in this section you will need a simple VOM, and know how to use it.

Here are two important procedures we will refer back to in this section:

#### Checking the LED:

Whenever there is a problem with the game, a good place to check first is the LED (light-emitting diode) on the CPU board near the Molex power plug. This LED indicates whether most of the CPU circuit is working. When everything works right, here's what happens: Power to the game is turned on, the LED flashes on, then stays off. If the LED is flickering or on continuously, there is a problem with the CPU or the +5 volt supply. Check +5 volts on the logic board (follow procedures in this section). If the +5 is O.K., have CPU repaired.

#### Checking the +5 Volt Supply:

To check the +5 volts, you need a voltmeter. Turn power on in the game. Notice on the upper corner of the logic board nearest you is a little pin marked gnd. This is a great place to put the negative probe of the voltmeter. Near this pin in position T13 (see CPU layout, pg. A-8) is a 20 pin IC marked 74LS377. Ignore the other numbers on this chip. We can measure the +5 volt supply at pin 20. Pin 20 is the bottom pin on the far side of the chip. Put your positive probe there, without touching any other pins, and you should get a reading. Anything between +4.8 volts and +5.1 volts is o.k., otherwise, adjust the voltage.

The adjustment is located on the power supply, and it is the only screwdriver adjustment on the power supply. Adjust slowly WHILE READING THE VOLTAGE. Too much voltage will destroy IC's fast. If voltage cannot be adjusted into the correct range (+4.8-+5.1 volts), repair power supply.

#### SYMPTOM

## Circuit breakers trip

#### WHAT TO DO

- 1. Unplug game. Unplug Molex power plug from monitor and reset breakers. Turn POWER ON.
- If breakers trip: POWER OFF, see 2.
- If breakers don't trip: Coin-up game and "play" it. Are all sound effects normal? Yes - repair monitor. No - Problem is probably in CPU or power supply. Check LED on CPU. Check +5
  - volts on CPU (see procedure) If +5 volts is good, repair CPU.
- 2. Unplug Molex power connector from audio board, reset breakers and turn POWER ON.

If breakers trip: Problem is in coin meter circuit or call factory for help.

If breakers don't trip: Repair audio board. POWER OFF, reconnect molex plug to monitor.

Turn power on to see if there is a good picture. If the picture is bad, problem is probably in the monitor. If breakers trip: Check LED and +5 volt supply. If LED and +5 volts is O.K., problem is probably in monitor.

# PART TWO

Information for Technicians

#### SECTION 5

#### **VECTOR THEORY**

In order to understand the basic concept behind a vector generated display, it is important to have a basic knowledge of vector theory.

In the vector display system, there are no horizontal and vertical lines (no sweep) or sync. A line generated using a vector system is shown in Figure 5-1.

A line is drawn by programming a beginning and ending point of the line to be drawn, and forcing the cathode beam to travel between these two points, illuminating the entire path on the screen of the CRT. The angle of the line, the position of the line, and the length of the line are determined simultaneously, and simply, by selecting the proper voltage levels for the beginning and ending points of the line.

This is accomplished by the two twelve-bit codes (words) applied to the DAC-80s on the display board. The DAC-80 will produce a

different voltage level at its output for each possible combination of input bits (of which there are 4096 possibilities for a 12 bit word.)

It is also important to remember the function of the LF 13331 analog switch and its output RC network. Because we are dealing with reactive components in C101 and C201 on the display board the charging voltages found are non-linear by nature. (See figure 5-2).

Therefore, when a line appears on the CRT, it is actually only part of the entire path taken between the beginning and ending points of the vector (C-D). The section of A-B is chosen as the most linear portion of the charge curve, and is illuminated.

Sections C-A and B-D are blanked at the cathode and section A-B illuminated by controlling IC7 (7406) on the display board. These calculations are all performed on the CPU logic board.

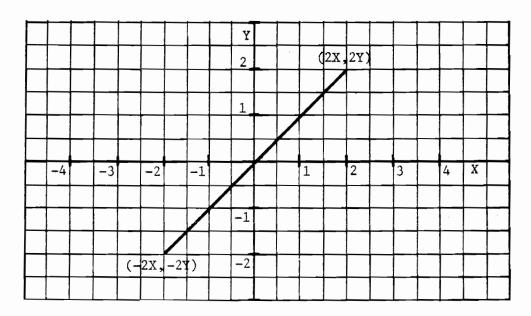


Figure 5-1. Line using Vector System

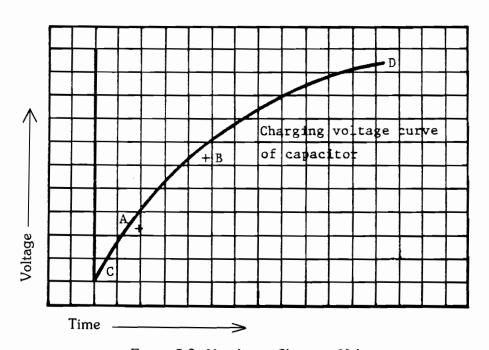


Figure 5-2. Non-linear Charging Voltages

When a line appears on the CRT, it is actually only part (section A-B), of the entire path taken between the beginning and ending points of the vector (section C-D). Section A-B is chosen as the most linear portion of the charge curve, and illuminated.

#### SECTION 6

#### THEORY OF OPERATION

#### GENERAL DESCRIPTION

This section describes the principles of operation of the major circuit functions of the Cinematronics Video Game. The system's general functional description is followed by detailed circuit schematics which are included as Appendix A. The schematics used in this manual are similar in nature to those used by most industrial electronic firms.

#### A. MONITOR

The <u>Vectorbeam tm\* Monitor</u> is unlike the conventional TV monitor in that it displays vectors (lines) generated from X-Y coordinates received from the logic board. The horizontal points are X (width) and the vertical points are Y (height). The X and Y logic signals originate from the logic board.

The Vectorbeam tm\* Monitor circuitry is so different from a raster scan monitor, it is useless to try to troubleshoot it using raster T.V. theory. The Vectorbeam tm\* Monitor has no horizontal oscillator, no vertical oscillator, no AFC, no sync circuits, and no video amplifiers. How, then, does it work?

The Vectorbeam tm\* Monitor can be divided into 4 main sections: voltage regulators; deflection circuits; video high voltage module; and brightness circuit (cathode drive).

There are three voltage regulators on the monitor board: +15v, -15v, +5v. Note that these are IC's, not transistors. The plus and minus 15 volt regulators supply both DAC-80's, the LF13331 analog switch, and the TL081 op amps. The +5 volt regulator supplies both DAC-80's and the 7406 (IC7). It takes little time and is well worthwhile to check all 3 regulator outputs every time the monitor is serviced.

Drawing a line requires two separate steps.

STEP 1. Digital information, in the form of a 12 bit word is applied to the input (pins 1 thru 12) of the DAC-80. Pin 1 receives the most significant bit, and pin 12 the least significant. The DAC-80 converts the digital word into an analog voltage which is outputted on pin 15. This voltage can swing between  $\pm 5$  volts, depending on the input word. The output of pin 15 then goes through a current limiting resistor R130 to the inputs of the analog switch IC1. (Pin 18 of the DAC-80 is an input for feedback). Now the CPU sends out an Initial Position pulse, closing the appropriate "switch" (actually a J-FET), to let the analog voltage out pin 10. C101 charges up immediately, and the analog voltage is amplified by IC 102 and the transistorized section Q101 thru Q111, causing the yoke to deflect the cathode beam to where we want the line to begin - the Initial Position.

STEP 2. Another 12 bit word is fed into the DAC-80. This word determines where the end of the line we are drawing will be. The DAC-80 again converts the digital word into an analog voltage that goes out pin 15 and into the analog switch IC1. Now the CPU sends out a Line Drawing pulse, closing the appropriate "switch" to let the analog voltage out pin 15 of The combination of R103, R102, and C101 has a time constant that determines how quickly C101 can charge (or discharge) to the new analog voltage on pin 15 of IC1. By adjusting R102, we change the amount of time it takes for C101 to arrive at the new analog voltage on pin 15 of IC1. Thus R102 determines the line length in the vertical (Y) direction. If the second (Line Drawing) analog voltage (IC1 pin 15) is greater than the first (Initial Position), the line will be drawn downward. If the second voltage is smaller, the line will be drawn upward.

In the horizontal channel, if the second analog voltage is greater than the first, the line will be drawn to the left.

Op-amp IC102 serves a dual purpose: It acts as a buffer between the deflection amplifiers and the analog switch, as well as an "edge gain" amplifier.

At the output of IC102, there is a resistor diode network consisting of R105 to R110, and D101 to D104. This resistor diode network is used to compensate for the non-linear characteristics of the CRT near the edges of the screen. If this circuit were not used, any object displayed on the screen would increase in size as it moved closer to the edges of the screen. Potentionmeter R109 adjusts the height of the pictures.

From the wiper of R109, the signal proceedes to Q101, which is the first stage of deflection amplification. Q101 to Q111 form a typical modern direct-coupled power amplifier with differential pair input and full complementary output. The differential pair consists of Q101 and Q103. The base of Q103 is tied to the amplifier output through the yoke and R117, forming a negative feedback loop. Q101 and Q103 (differential pair) compare input signal and amplifier output, and correct for any differences caused by amplifier distortion and the reactance of the yoke.  $\,$  Q102 is the constant current source for the differential pair (Q101, Q103). Bias for Q102 must be kept steady so Q102 collector current is constant. D105, D106 and R113 accomplish biasing. Note D105, D106 are in parallel with the base emitter junction of Q102 and R113. voltage across Q102 B-E junction plus voltage across R113 will equal total voltage across D105, D106, and the two forward biased diodes determine this voltage at 1.2 volts. Since the voltage across the B-E junction of Q102 is 0.6 volts, that leaves 0.6 volts across R113. The voltage across R113 is held constant, so the current through it is constant (I = E + R) at 3 ma. Thus Q102 collector current is held constant near 3 ma.

The output of the differential pair (Q101, Q103) is fed into the base of Q104. Q104 is a class A amplifier whose output feeds Q208 and Q209.

Q105 is another constant current source. D109, D110, D111 determine the bias current in Q108, Q109, Q110, Q111.

So the deflection signal has traveled to the base of Q108 and Q109, the driver transistors. If the signal happens to swing positive Q108 will turn on, turning on Q110 which drives current thru the yoke and deflects the electron beam down. If the signal swings negative, Q108 and Q110 turn off, Q109 and Q111 turn on, and the beam deflects upward.

If the signal amplitude is excessive Q110 or Q111 (also known as the output transistors) will conduct heavily. The excessive current will cause voltage to develop across R120 or R121, and Q106 or Q107 will turn on. When this happens, the signal is removed from the base of Q108, Q109. Q108 and Q110 or Q109 and Q111 are turned off by this action and are protected from burning up. So Q106 and Q107 are protection transistors, and during normal operation they are inactive.

Note that Q108, Q110 control deflection in the lower half of the CRT screen, while Q109, Q111 take care of the top half. In the horizontal (X) channel Q208, Q210 control the left half; Q209, Q211 control the right.

Because the amplifier is a direct coupled loop, it defies ordinary signal tracing as a means of troubleshooting. If the signal is wrong anywhere in the amplifier, it will be wrong throughout.

R122, R123, and C102 form a RC network, which compensates for any counter EMF that may develop by the expanding and collapsing of the deflection coil's electromagnetic field.

The video high voltage module operates off the +25v supply and generates three different voltages for three circuits. It generates 16KV for the CRT ultor voltage. It generates +400vdc for the CRT focus voltage. And it generates +90 volts for blanking the cathode. The +90v is well filtered and fed into the brightness circuit on one end of R111.

The <u>brightness circuit</u> controls the amount of current going from the CRT cathode to the phosphor screen. It does this by varying the voltage on the CRT cathode. It also incorporates protection circuitry to protect the phosphors from burns. The main components in the brightness circuit are IC7, Q1, Q2, Q3, Q6, Q7, Q8, and R111, the brightness control. There are only two levels of brightness used in this system, which I will refer to as Normal and HI. The brightness information comes from the 74LS32 in position J2 on the logic board, through the ribbon connector, and into IC7. Normal intensity data enters IC7-1, and HI intensity data enters IC7-3.

Normal intensity data then goes out IC7-2 and turns Q1 on-off. Q1 acts as an on-off switch connecting and disconnecting R7 to ground (thru Q2). Thus, when Q1 turns on, the CRT cathode voltage is lowered (assuming R111 is at a normal setting) and the beam is turned on. When Q1 turns off, CRT cathode voltage returns to +90 volts, and the beam is cut - off (no brightness on screen).

Hi intensity data goes out IC7-4 and turns Q3 on-off. Q3 collector is connected to R8 (10K) in parallel with R9 (2.2K), R10 (5.6K). When Q3 turns on there is a lower resistance path between CRT cathode and ground than there was when Q1 turned on. Thus CRT cathode voltage drops to a lower voltage, and more current flows to the phosphor screen, creating a higher brightness.

Note that when either Q1 or Q3 conducts, the only path to ground is through Q2. If Q2 is off, the CRT cathode voltage cannot change, and no picture can appear. This means Q2 is a master ON-OFF switch for the cathode beam, and is the means through which our protection circuits can turn the beam OFF.

The first protection circuit consists simply of an unfiltered full-wave rectified +25 volts from the power supply. This voltage is slightly filtered by C10 and fed through R6 to Q2, turning it on. When the game is unplugged, the +25 unfiltered dies immediately and the beam is cut off, preventing a bright spot on the screen.

The second protection circuit consists of Q6, Q7, and two sections of IC7. Part of this circuit turns off the beam if the -25 volts from the power supply is lost (breaker trips, or?). In the absence of -25 volts, IC7-9 goes high (pulled up via R20), and IC7-8 goes low, pulling the base of Q2 to ground and Q2 turns off.

The other part of the circuit protects against having the beam on too long (in case of CPU failure, etc.). The high going pulses coming out of IC7-2,4 that turn on Q1, Q3 also turn on Q6 via R22, R23. Q6 amplifies and inverts these pulses to high-going low. Pulses then go through another inverter, so at IC7-10 they are low going high (active high). The active highs here correspond to the times when the beam is on, and charge up C24. If the beam is on too long, C24 will charge up enough to turn on Q7, making Q7 collector and Q2 base go low and Q2 turns off. In normal operation C24 can discharge through IC7-10 when IC7-10 goes low.

Now, a paragraph about Q8. Q8 is the path through which IC7-2,4 receives its operating +5 volts. R19 and C23 form a time delay, so when power is first turned on it takes a while before Q8 turns on and +5 volts gets to IC7-2,4. Thus, all other circuits get a chance to stabilize before the beam is turned on.

R111 is the brightness potentiometer, which adjusts the amplitude of the negative pulses used for Normal and HI brightness.

#### B. CPU BOARD

The processor hardware can be broken down into five basic functional blocks as shown in Figure 6-1. The arrows indicate the possible data flow directions between the various blocks. The ALU and Control block are the main components of the processor while the Memory and I/O blocks may be thought of as merely peripherals. Figure 6-2 is a detailed block diagram of the processor. The numbers in each block correspond to the entries in Table 6-1, which lists the IC numbers of the main components of each functional block.

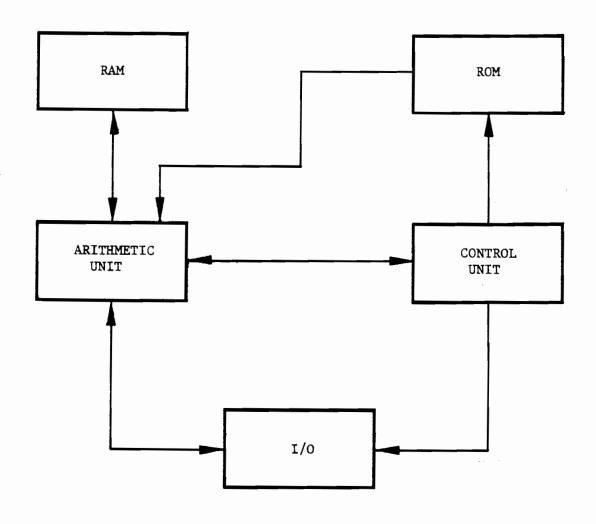


Figure 6-1. CPU Functional Block Diagram

6-4

The following is a brief description of each block shown in Figure 6-1. The numbers beside each functional block name are the numbers in Figure 6-2 which correspond to a particular function.

#### <u>RAM</u> (6)

The RAM is implemented with three read/write static memories configured as a 256 x 12 bit block. Data can be transferred to or from this memory via the ALU block. The processor uses this RAM as a scratch pad.

#### ROM (10)

The ROM is configured as an 16K x 8 bit block of memory. These memory locations contain the program instructions and/or data. It is accessed via the processor control unit.

#### I/O 19, 17, 18

The I/O block consists of 8 output lines implemented with a bit addressable latch, 24 input lines implemented with data selectors, and two 12 bit registers which are connected to the X Y display deflection circuits via D/A convertors.

#### Arithmetic Unit 1,2,3,4,5

The arithmetic unit performs all the arithmetic processing for the system. It consists primarily of two 12 bit accumulators, an arithmetic logic unit and various data selectors. The accumulators can function as temporary storage registers for arithmetic functions upon the data in the accumulators. The data selectors are used to select the various sources of data which will be processed.

#### Control Unit (15,16,14,7,8,9,11,12,13)

The control unit is the heart of the processor. It performs all instruction decoding operations and generates all the necessary control signals which the rest of the hardware requires to function correctly.

The following is a discussion of each block shown in Figure 6-2.

#### 1. Accumulator Selector

The accumulator selector consists of 3 quad data selectors. They are used to select the output of either the primary or secondary accumulator for processing by various other sections of the systems.

#### 2 & 3 Primary and Secondary Accumulators

The two 12 bit accumulators are implemented with quad bidirectional shift registers. The primary accumulator consists of S4, P4, M4. The secondary accumulator consists of T4, R4, N4. All data manipulation in the processor is accomplished using these two accumulators. All output data flows through these registers.

#### 4. Arithmetic Logic Unit (ALU)

The ALU is used to perform all necessary arithmetic functions within the processor. The ALU is implemented using three 24LS181 (N6M6L6) function generators, three 74LS85 (N9,M9,L9) 4 bit magnitude comparators, and a 74S182 (L4) look ahead carry generator. The data which the ALU manipulates can come from four different sources. The first source is the contents of the accumulators via the accumulator selector. The second and third sources are the ROM and RAM data outputs via the ALU data selector (N11, M11, L11) and the fourth source is the external input selector (E4, D4, C4).

#### Data Selector

The data selector is used to read data into the ALU from either the RAM or ROM memory. Note that the ROM data is only 8 bits wide while the RAM data is 12 bits wide.

#### 6. RAM Storage

The system RAM consists of three 9101C high speed static memory chips connected as a  $256 \times 12$  bit block. The block is 12 bits wide in order to allow the contents of an accumulator to be stored. The processor uses the RAM as temporary storage of program variables, data pointers or any other data of a dynamic nature.

#### 7. RAM Address Selector/Register

The output of this register is tied directly to the address lines of the RAM. It consists of a multiplexer which routes address data from either the ROM or RAM locations to the RAM address lines. The capability to use RAM data to select RAM addresses is the basis for the indirect addressing mode of the processor.

#### Page Selector

The page selector is used to latch the high order 4 bits of a RAM access instructions.

#### 9. ROM Data Register

The register is used to temporarily hold data from the ROM during an instruction fetch.

#### 10. ROM Memory

The ROM memory consists of the actual memory chips plus a data selector and latch circuit. The latch is used to improve the memory access time during a two byte instruction fetch by allowing one byte of the instruction to be latched while the RAM address lines are decoded for the other byte. The data selector can then be used to rapidly access both bytes of the instruction by switching between the latch and memory outputs.

#### 11. Instruction Register

The instruction register is a latch which holds the current op code as read from ROM. Its output is tied to the instruction decode circuitry which in turn generates the necessary signals to execute the instruction.

#### 12. System Sequencer

The system sequencer is used to decode an instruction op code and to generate the appropriate timed sequence of signals which execute the instruction. The op code is decoded by using it as the address data to a set of decoder ROMS. The outputs of the decoder ROMS are then synchronized with the system clock and used to control the various system functional blocks.

#### 13. Line Length Counter

The line length counter is used during the process of drawing a vector to control the length of a vector, by turning off the beam at a pre-determined time after the vector is intiated. The counter is loaded with a value from a line length ROM and then counts up until it overflows which in turn generates a signal to indicate the vector has been finished.

#### 14. Program Address Selector

This selector is used to provide the address data to the program ROM. It selects either the program address counter output or the accumulator selector output and routes this data to the ROM address lines. The ability to use the accumulator contents as address data allows the program to randomly access data tables stored in the ROM or to compute a branch address after a conditional test.

#### 15. Program Address Counter

This is a 12 bit counter whose output defines the next location in ROM to be accessed. It is normally clocked sequentially to step through a program. However, it can be loaded with data from the program address register which is how the jump instructions are implemented.

#### 16. Program Address-Register

This register is a latch used for temporary storage of an address which will be loaded into the program counter during a jump instruction. The input data to this latch can come from either the program ROM or the scratch-pad RAM.

#### 17. Input Selector

The input selector is used to read the state of one of the 24 input lines into the selected accumulator. There are 16 primary inputs and 8 secondary inputs. During an input instruction the upper 11 bits of the accumulator are set to zero while the least significant bit reflects the state of the input line. All input lines have pull up resistors on them so that they will read high if they are left unconnected.

#### 18. Output Selector


The output selector is a bit addressable latch used to control the 8 output lines. During an output instruction the selected output line is set to the complement of the least significant bit of the accumulator. The output lines are used to control the audio board, display intensity and the mechanical coin counter.

#### 19. Display Registers

The display registers are the interface between the processor and the display driver circuits. These registers are latches into which the contents of the accumulators can be stored. The outputs are tied to D/A converters which provide the input voltage to the display deflection amplifiers.

#### TABLE 6-1. BLOCK NUMBERS AND COMPONENT I.C.

- 1. T-2, R-2, N-2
- 2. S-4, P-4, M-4
- 3. T-4, R-4, N-4
- 4. N-6, M-6, L-6, N-9, M-9, L-9
- 5. N-11, M-11, L-11
- 6. N-14, M-14, L-14
- 7. J-12, I-12
- 8. H-12
- 9. S-13
- 10. U-7, R-7, T-7, P-7, U-9, T-9, U-11, T-11
- 11. T-13
- 12. A-8, G-10, F-10, G-14, F-14, E-14, D-14, C-14
- 13. E-6, D-6, E-8, H-8, G-8, F-8
- 14. S-9, R-9, P-9
- 15. S-11, R-11, P-11
- 16. P-13, R-13
- 17. E-4, D-4, C-4
- 18. F-2
- 19. S-2, R-2, M-2

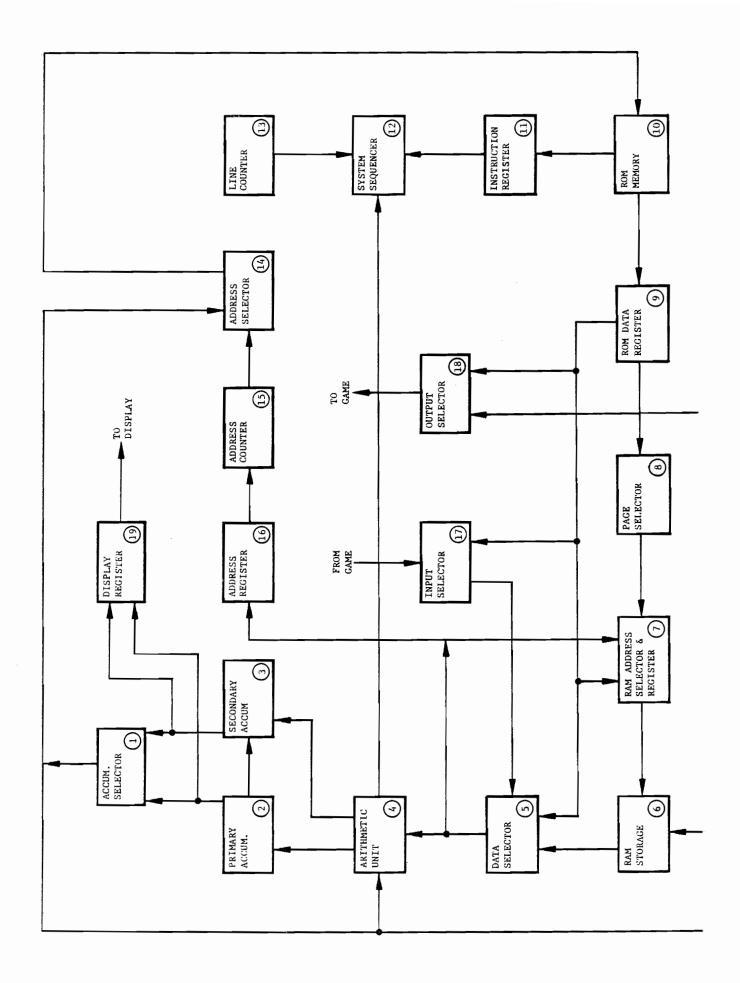

#### C. AUDIO BOARD

#### CIRCUIT DESCRIPTION AND TROUBLESHOOTING GUIDE

#### GENERAL INFORMATION

The following section describes the theory of operation for the Armor Attack audio board. The appendix contains block diagrams of the audio board. The theory of operation of each block will be described along with test techniques to enable effective troubleshooting.

An asterik (\*) to the left of a title of a section indicates a detailed discussion that will be used elsewhere in the section.

#### **DEFINITIONS**

TTL (Transistor - Transistor Logic) compatible levels are defined as follows:

- 1) A TTL "low" or logic O is any voltage less than 0.8 volts.
- 2) A TTL "high" or logic 1 is any voltage greater than +2.0 volts.
- 3) A voltage within the range of 0.8 to 2 volts on any logic point indicates a bad part or an open input.

VCO: Voltage Controlled Oscillator

CCA: Current Controlled Amplifier

IC: Integrated Circuit (chip)

#### NOTATION

A particular pin of an IC (Integrated Circuit) is denoted in the text by first the chip designation and then the pin number—e.g. IC25-10 means pin 10 of IC 25.

Jumper patches W1 thru W13 are sections of traces on the audio board designed to be cut in order to isolate a section of circuitry for test purposes. Be sure to cut between the two eyelets, one round and the other square. The orientation of these pads is the same on the board as on the schematic diagram. Repair by adding a short jumper wire into the holes provided.

DO NOT repair any traces by adding a blob of solder at the cut. This will cause intermittent operation.

#### **CAUTIONS**

NEVER connect pin 5 of a CA3080 (CCA) directly to ground or any voltage other than -15 volts. Failure to observe this rule can cause the IC to explode (also known as the plastic pop-corn effect).

NEVER connect a TTl output to +5 volts. The plastic pop-corn effect applies here also.

#### TEST EQUIPMENT

For troubleshooting this board you will need:

- 1) V.O.M.
- 2) logic probe not necessary, but recommended
  - 3) several jumper wires with "E-Z"
- 4) an oscilloscope not necessary, but recommended

#### TROUBLESHOOTING

All VCO outputs will measure 13 to 15 volts AC with a VOM (volt-ohm meter).

All 555 multivibrator outputs will measure 1.5 to 3 volts AC with a VOM.

#### INPUT CONTROL CIRCUITRY

(refer to block diagram 1)

IC1 and IC27 are schmitt-trigger inverters that clean up digital information arriving at connector J2 on pins 11, 15, & 16. The CPU board controls all sound generation by supplying digital data pulses through 16 pin connector J2. IC2 and IC3 latch this control information on the board as follows—

IC2 (74LS164) is an 8-bit serial to parallel shift register. Data in the form of a bit stream moves from connector J2-16 through IC1 and into pin 1 of IC2. Pin 8 receives clock pulses from the CPU via J2-15. Each pulse causes a single bit of data present at pin 1 to be transfered successively down the line to outputs A thru H. When the eight output ports are filled, IC3 (74LS377) swings into action. The outputs of IC2 are tied to the inputs of IC3 (1D-8D). When IC3 receives a load pulse on pin 11 thru connector J2-11, the data present on each of its inputs is transferred straight across to its outputs ports (1Q-8Q). Now data which entered on one channel thru connector J2-16 is available for use in the 8 channels of latch IC3.

#### TEST PROCEDURE

To verify proper operation of IC1, disconnect 16 the pin ribbon cable connector, J2 and decrease volume. Check IC1-2 with a logic probe, scope, or meter. It should read high or 2.4-5vDC (logic 1). Repeat for IC-11 and IC27-6.

With a test lead, ground IC1-13. The output, 1C1-2 should now read low or (0-6.7) vdc, logic 0. Repeat for the other two pairs of schmitt-trigger circuits.

To verify proper operation of IC2, load all lows into its output ports by tying IC-13 to ground. With another test lead connected to ground tap IC2-8 about 10 times. Output A thru H should now all read low. At this point, tap IC3-11 with the ground lead. Outputs 1Q-8Q should now all read low.

Repeat the above procedure, but remove the ground lead from IC1-13. This should load all highs into all the output ports. This completes all the tests.

At this point the volume control may be turned up. No sound should be heard.

#### QUICK\_CHECK PROCEDURE

At this point all of the sounds generated on the audio board can be tested one at a time. Follow the above procedure for loading all 'ones' into the input control latch (IC3).

TABLE 1.

Table of Test Points for the quick check procedure.

	TABLE 1		
Sound	Test	Ground/	Tap/
	Point	Open	Hold
Chopper	J2-14	G	T
Beep	J2-13	G	T
Tank	J2-12	G	Н
also	IC3-19	G	Н
Tank Fire	IC3-2	G	T
Hi Explosion	IC3-5	G	T
Jeep Firing	IC3-6	G	T
Lo Explosion	IC3-9	G	T

Using a test lead ground the test points shown in table 1 to activate the desired sound. Some sounds on the test point e.g. explosions. To fully exercise the tank sound refer to it's troubleshooting procedure.

#### NOISE GENERATOR

(refer to block diagram 2)

The noise generator circuitry is composed of IC17, a digital noise generator, a DC blocking network C21 and R26, and a voltage follower, IC18. Both outputs have a minimum amplitude of 11.5V P-P, with the waveform at IC18-6 centered about ground.

#### TEST PROCEDURE

Check for proper amplitude signal at outputs (IC17-3 & IC18-6). IC18-6 will read approximately 2.5V RMS or 11.5 Vp-p.

#### \*TANK FIRE SOUND

(refer to block diagram 2)

This sound is activated whenever the tanks shoot. The basic components of this circuit are white noise, from the noise generator, a low pass filter, a current controlled amplifier (CCA), an envelope control circuit, and a voltage switch.

#### LOW PASS FILTER

The output of the noise generator circuit is fed into the low pass filter, R34-38, C23-24. The filter output is then fed into the CCA IC19-2 and 3.

#### **CURRENT CONTROLLED AMPLIFIER (CCA)**

IC19 can be imagined as an amplifier that generates a current waveform characteristic of the voltage appearing at pin 2. The strength orgain of the output current (IC19-6) is proportional to the current injected into pin 5 via R33 (refer to Fig. 1, pg. 6-16).

#### ENVELOPE CONTROL

R33 controls the amount of current injected into pin 5 of the amp and the RC time constant of R33 and C22 determines the envelope or decay time of the output waveform.

#### **VOLTAGE SWITCH**

The circuit is turned on by switching a low level on the base of Q2. This pulls the voltage up to the emitter of Q3 from -3.5v to +1.9v forward biasing Q3 and allowing it to inject current into the CCA.

#### TEST PROCEDURE

With J4 disconnected from the CPU board load all 'ones' into the output latch (IC3), (refer to input control circuitry), the junction of R27 and R28 will read about 5vdc. Grounding this point should cause the collector of Q2 to swing from -3.5v to almost 4.7v, the emitter of Q2 should remain at a constant 5vdc. The upward voltage swing on the collector of Q2 should turn on Q3 and cause it's colllector to rise from about -14.3 to about 5vdc. If, for any reason the voltage switch circuit is suspect, it may be eliminated by cutting W1 and tapping a grounded test lead to the square pad of W1. In either case a roar should be heard in the speaker. If this is not the case, verify that the noise generator is functional and that the tank firing circuit is receiving noise at R34. If any of the following sounds work, (see quick check procedure) lo explosion, chopper, jeep firing, or hi explosion, replace IC19. If none of the above operate, perform a check of the voltage follower circuit (see voltage follower). If the voltage follower is operating correctly, one of the other CA3080's may be shorted. To isolate a. y of the CA3080's whose outputs feed the voltage follower, you may cut their output pin, pin 6, and use a test lead to connect the output of the CA3080 to the input of the voltage follower circuit, IC25-3. Don't forget to exercise the appropriate sound.

Using the above procedure the offending CA3080(s) can be located easily.

#### **VOLTAGE FOLLOWER**

(refer to block diagram 1)

R90 converts the total current output of all the CA3080's to a voltage. Since this is a high impedance point IC25 is used to "beef up" the signal on the top of R90, before feeding it to the pot driver (IC26).

#### TEST PROCEDURE

If any of the following, lo explosion, chopper, jeep firing, or hi explosion sounds, work it's pretty much a safe bet that IC25 is ok. However if none of the above sounds work the test procedure is as follows: cut IC25-3 and apply a known good signal to IC25-3, on the chip itself not the board. NOISE from IC18-6 is a good choice. Observe the output (IC25-6). If the input control latch is set-up properly, so that no sounds are on, the NOISE signal will be heard in the speaker.

#### LO EXPLOSION

(refer to block diagram 2)

The lo explosion is heard whenever a missile strikes a wall. The technical description is identical to that of the tank firing sound. The differences between the two circuits are different component values in the low pass filter and envelope control circuitry. These are for a different frequency response, amplitude, and decay time.

#### TEST PROCEDURE

See test procedure for tank firing sound.

#### (refer to block diagram 3)

The chopper sound is heard whenever the chopper appears on the screen. For a technical description see the technical description on the tank firing circuit. The differences between the two circuits are different part values in the low pass filter and envelope control circuitry. It should be noted that there is no capacitor in the envelope control circuit. This gives the chopper sound a fast attack and decay. Also note that there is no oscillator on the audio board for this sound. The "blade rate" is controlled entirely by the CPU board.

#### TEST PROCEDURE

See test procedure for tank firing sound. The only difference here is that the chopper sound is enabled by grounding IC27-3, it is not driven off the latch, IC3.

#### JEEP FIRING AND HI EXPLOSION SOUNDS

(refer to block diagram 3)

The jeep firing sound occurs whenever the jeep shoots. The high explosion sound occurs when a tank is struck for the second time. It also occurs when either a jeep or the helicopter is hit.

The technical description of these sounds is identical to that of tank firing sound with one major difference. These two sounds share a common low pass filter and a CCA (IC22).

#### TEST PROCEDURE

See the test procedure for the tank firing circuit. The only additional trouble shooting step required here would be to cut both W4 and W5 when attempting to enable IC22. Grounding the square end of W5 should yeild a louder noise in the speaker than when grounding the square end of W4.

#### BEEP SOUND

(refer to block diagram 3)

The beeper generates the morse code sound, which occurs at the beginning and end

of the game. It also occurs whenever a new jeep arrives on the screen.

The morse code sound is generated by a gated oscillator consisting of IC23, R81-83, C35 and C37. The CPU enables this oscillator, a 435 cycle note, J2-13. The output of the oscillator, a 435 cycle note, is coupled to the summing junction via R83 and C36.

#### TEST PROCEDURE

With the cable removed from J2 both the reset input IC23-4 and the output IC23-3 of the gated oscillator should be low. Ground J2-13. The reset input of the gated oscillator should go high and a 435 KHz rectangular waveform should appear at IC23-3.

#### TANK SOUND

(refer to block diagrams 4 and 5)

The tank sound is a composition of two sounds, the tank motor sound and the tread squeak sound.

The tank motor sound is generated by a gated oscillator, several digital division circuits, a mixer and a shaping network.

The generation of the tank sound originates at the gated oscillator consisting of IC6, R2-3, C11 and C12. The CPU enables this oscillator with a low level on J2-12. The output of the oscillator, a pulse train with a period of 136 micro-seconds is fed to a programmable divide by N circuit, after squaring by IC1.

#### \* PROGRAMMABLE DIVIDE BY N CIRCUIT

The programmable divide by N circuit consists of IC8 and ½ of IC9, a nand gate. When IC8-9 is pulses low the four bit number on the D, C, B and A inputs is transferred to the outputs Q(d) thru Q(a), respectively. Since this is an "UP" counter every time the clock input is struck with a positive transition the outputs of the counter will increment until a count of 15 is reached, all outputs high. At this time the carry output IC8-15 will go high causing the load input IC8-9 to go low. The load input will be recognized on the next positive transition of the clock, thereby causing the cycle to repeat.

Note that this circuit will not function if all inputs to the counter, TSO+ thru TS3+, are all high. Refer to table 2 for a listing of input codes versus division rates.

#### TABLE 2

Table of frequency selection inputs v.s. output frequency and period for the programmable divide by N circuit.

Frequency input = 7.35 KHz, a period of 136 micro-seconds

All pins noted are IC8.

	in	puts-			outputs-	
6	5	4	3		15	
TS3+	TS2+	TS1+	TS0+	FREQUENCY	PERIOD micro-seconds	DIVISION RATE
1	1	1	1		-ILLEGAL-	
0	1	1	1	833Hz	1200	9
1	0	1	1	1.47KHz	680	5
1	1	0	1	2.5KHz	400	3
1	1	1	0	3.7KHz	270	2

The operation of the divide by 13 circuit consisting of IC11 and 1/6 of IC1 is identical to that of the divide by N circuit, the only difference being the fixed division rate. Note also that the output of this circuit is taken from the Q(d) and not the carry output.

IC10 is utilized as a divide by 16 circuit. Note that, whereas the outputs of both IC8 and IC11 change on the positive transition of the clock, this output IC10-6 alternates only on the negative edges of it's clock, IC8-1.

The outputs of both the divide by 16 and the divide by 13 circuits are mixed at IC9-9, 10. The mixer output IC9-8 is fed to IC10-13 where it is divided by two. This last division by two insures that the waveform fed to the shaping network is always a squarewave.

The shaping network consisting of R6, R7, C13 and C14 preforms a bandpass function on the motor sound before it is sent to the summing junction of the preamp.

#### TANK TREAD SQUEAK

(refer to block diagram 5)

The tank tread squeak is generated by a gated binary counter, "wired nor" function, several low leakage switches, a summing and filter network, VCO, bipolar to TTL converter, a gated octive adder and a pair of inverters.

The gated binary counter, IC13, is enabled by the compliment of the TANK EN+ signal. It's clock input IC13-13 is fed by the output of the divide by 16 circuit, IC10-6, in the tank motor sound. Only the divide by 16, IC13-8, and divide by 8 outputs, IC13-9 are used.

Both outputs drive three Low Leakage Switches, (LLS). Two of these are driven directly. The last enabled via a "wired nor" function consisting of two open collector inverters IC7-5, 6, 10 and 11. The output of the "wired nor" function is low IC7-6 and 10, if either of its inputs IC7-5 or 11 is high.

#### LOW LEAKAGE SWITCH

The first Low Leakage Switch (LLS) is composed of Q14, Q15 and R95 thru R99. With IC13-8 high the base of Q14 rests near +5 volts. Due to lack of base of Q14 is cut-off, causing it's collector voltage to drop to -3.5 volts. Q15 now sees a severe reverse bias and responds with almost an ideal open circuit collector to emitter.

The first LLS is enabled by a low on the divide by 16 output of the gated binary counter, IC13-8. When IC13-8 goes low the base of Q14 drops to about 4.3 volts, turning it on, and causing the collector to rise to 4.7 volts. Q15 responds to this forward base drive by grounding it's collector.

The three Low Leakage Switches drive the VCO IC15-5 via a summing and filtering network composed of R19 thru R23 and C18. This network of passavie components converts the on and off states of the three Low Leakage Switches to a single time varying analog signal.

This analog signal at the top of C18 is injected into IC15-5, the control voltage pin of the VCO. As the control voltage ramps between +12vdc and +14vdc the squarewave

output of the VCO will ramp down in frequency from 27khz to 23khz. The output of the VCO (IC15-3) is then fed into the Peak-Peak to TTL converter. A 5v p-p squarewave enters the clock input of the Gated Octave Adder IC13. The outputs are then added together and sent on to the summing junction. The sound is enabled by bringing IC13-2 to a low level.

#### TEST PROCEDURE

To troubleshoot the tank sounds load all ones into the output latch IC3, refer to Input Control Circuitry.

The programmable divide by N circuit may be checked by grounding the inputs IC8-3 through 6 singularly. Refer to table 2 for correct frequency readings on the output IC8-15.

Ground IC27-13 and IC3-19. Using table 3 and an oscilloscope, verify the timing of all the digital division circuitry in the tank motor sound and the gated binary counter in the tread sweep circuit. Both the input, IC10-13 and the output, IC10-11 of the divide by two circuit posses considerable "jitter", activity is observed at these points they are probably ok.

Table 3
Table of frequency and period readings for the tank sounds.

TEST SETUP: IC8-4, 5 and 6 high, IC8-3 low, J2-12 low.

Ι <u>C</u>	<u>PIN</u>	PERIOD	FREQUENCY	
6	3	136 micro-sec.	7.35KHz.	IC
8	2	136 micro-sec.	7.35KHz.	•
8	15	270 micro-sec.	3.7KHz.	
11	l 11	3.5 milli-sec.	285Hz.	
11	l 15	3.5 milli-sec.	285Hz.	1.
13	_	70 milli-sec.	14Hz.	13
13	3 9	35 milli-sec.	28Hz.	13
7	6	70 milli-sec.	14Hz.	1.

The operation of the Low Leakage Switches may be verified as follows; ground IC27-13 and IC3-19. Remove all other grounds that may be attached. The bases of the pnp transistors, Q14 for example, should be swinging between 4.3 and 5 volts, small but ok. The collector of the same transistor should pulse from almost 5 volts down to -3.5 volts. If a 'scope is available check the output of the pnp transistor, it should go from a bit above ground to at least 8 volts. If a 'scope isn't handy and the pnp transistor is suspect, cut the troubleshooting jumper, W11 in this case, and temporarily install a resistor, 2K to 20K, between +15 volts and the round pad of the jumper. Short the pnp transistor base to collector. Using a VOM meter the collector of the pnp transistor. It should read +15 volts. Ground driver circuit, IC13-8 in this case. Anything above 0.3 volts at the collector indicates a bad npn transistor.

To check the VCO, peak to peak to TTL converter and gated octave adder, remove the ground from IC27-13. Ground IC13-2. Using table 4 and a 'scope, check the outputs of the VCO and the gated octave adder.

Table 4

Table of frequency and period readings for the tank squeak sound.

TEAT SETUP: IC27-13 high.

IC	PIN	PERIOD (micro- seconds)	FREQUENCY (KHz)
15	3	42	23.8
13	3	84	12
13	4	168	5.95
15	5	336	2.97

#### **OUTPUT AMPLIFIER**

(refer to block diagram 1)

The output amplifier section consists a preamp and volume pot driver IC26 (TL081), main driver amp IC24 (TL081) and speaker drive transistors Q12 and Q13.

IC26 drives the external volume pot located on the coin door and its associated cable. If little or no volume is heard, meter the pot wires between J1-8 and J1-3. The resistance should vary as the pot is rotated. If the audio

is at maximum volume regardless of the pot position, suspect an open lead between ground and the pot lead connected to connector J1-1.

The final drive is a non-inverting amplifier circuit containing IC24, Q12 and Q13. Observe the waveform at the speaker wire which is the emitter junction of Q12 and Q13. If the upper half of any sound waveform appears clipped, suspect Q12. For the lower half, Q13 is the suspect. For no audio meter Q12 and Q13 out of circuit and look for burned resistors R122 and R124. Also check diodes D6 and D7 at this time.



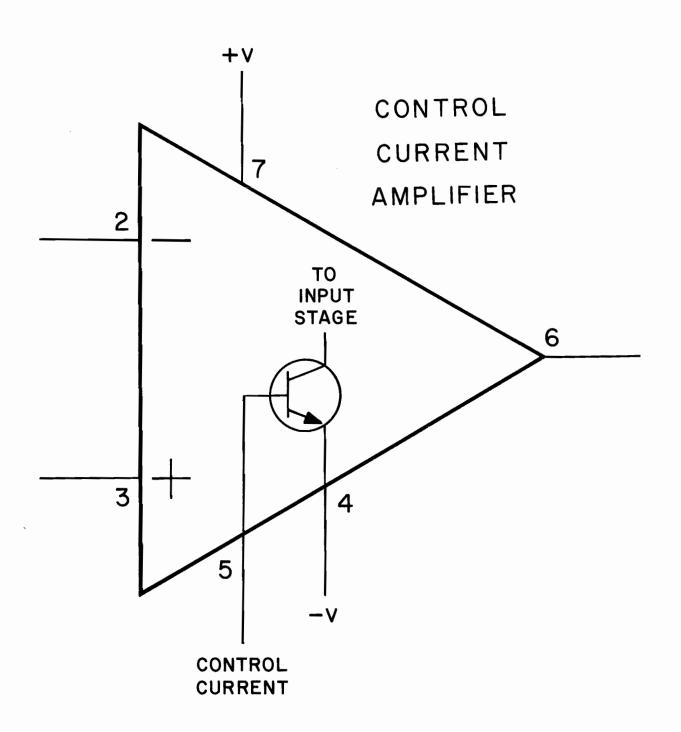


FIGURE ONE


### INPUT CONTROL CIRCUITRY

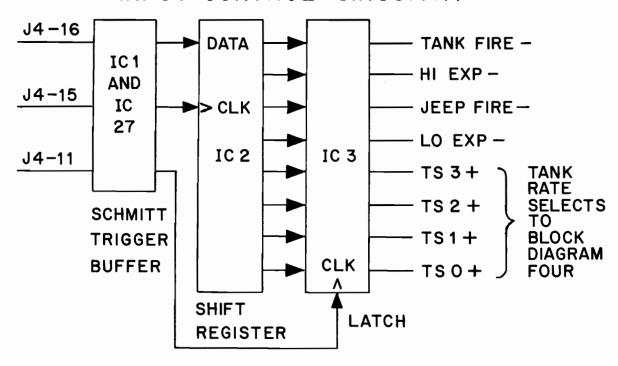


## **OUTPUT CIRCUITRY**

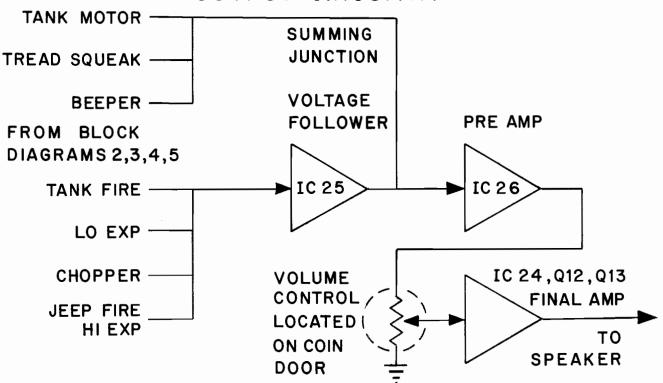


BLOCK DIAGRAM ONE

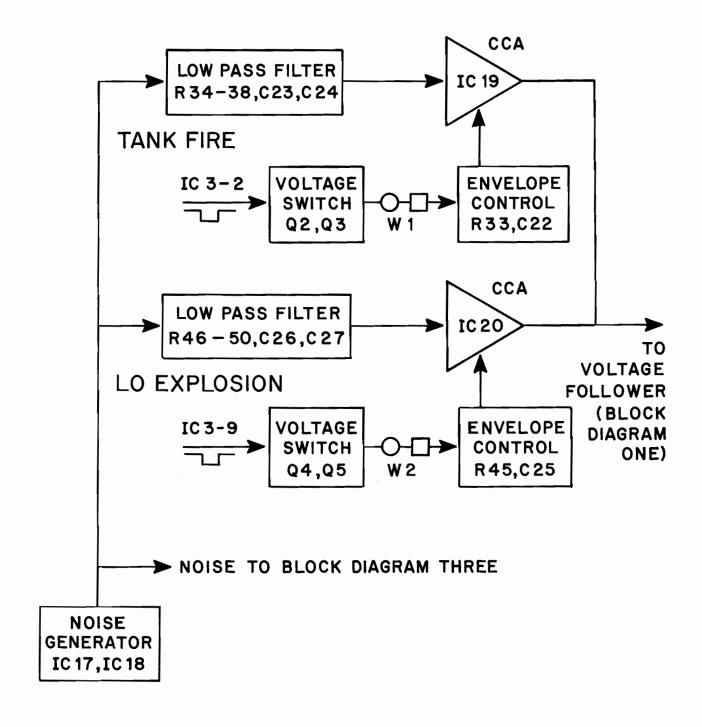


**BLOCK DIAGRAM TWO** 

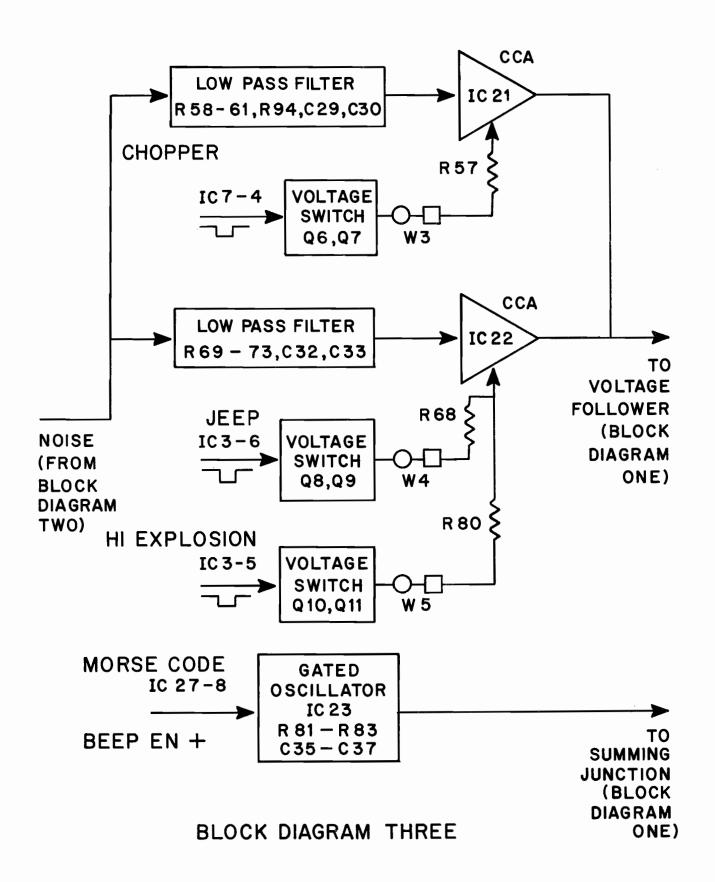

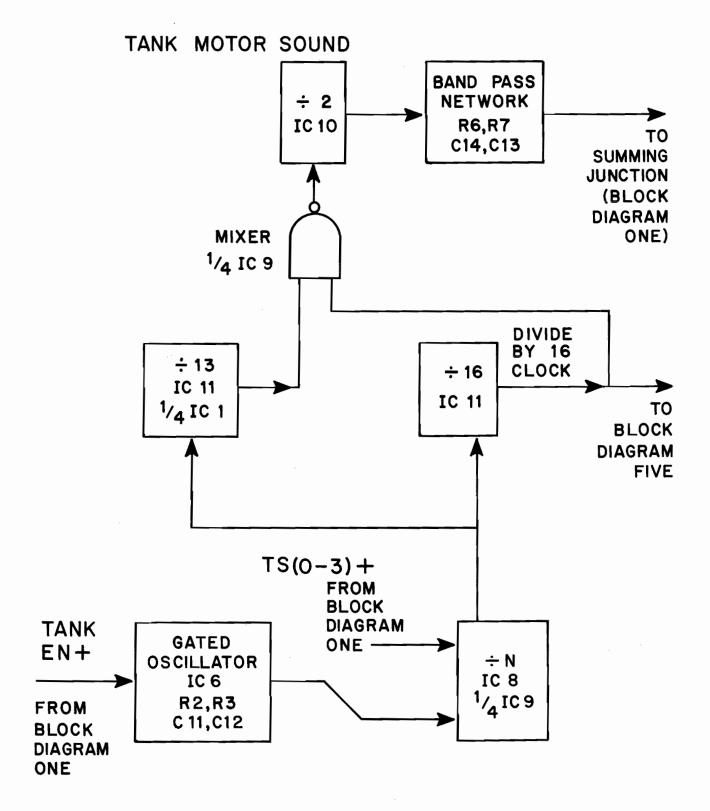

BLOCK DIAGRAM FOUR

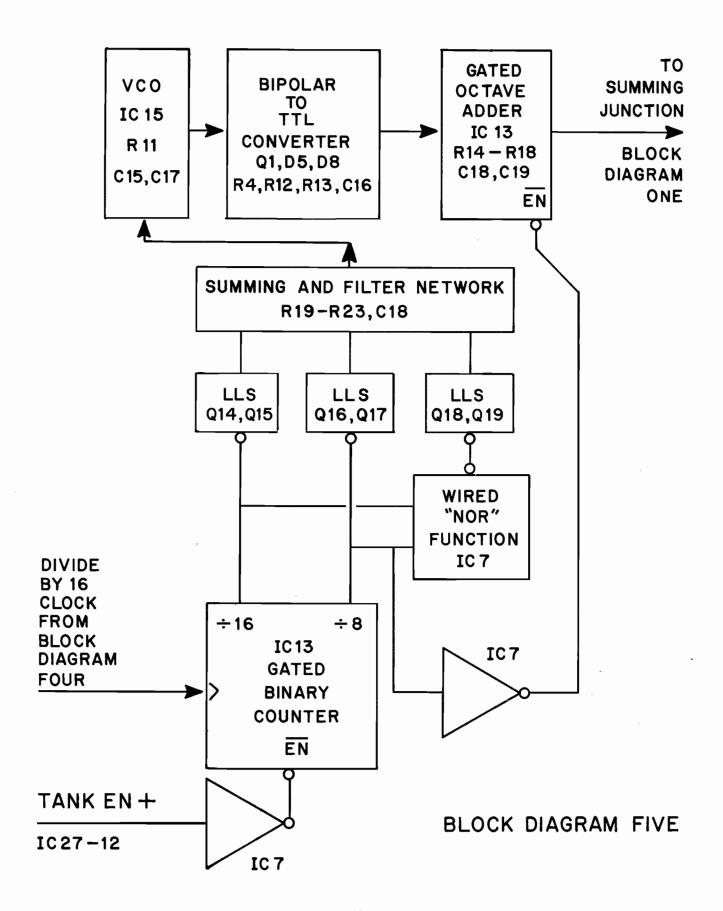

#### **SECTION 7**

#### TROUBLESHOOTING

#### UNIVERSAL BENCH TEST

#### CONFIGURATION

The components depicted in figure A represent the integral elements and interconnects necessary to effectively bench test the Cinematronics vector display video game system. The configuration is universal in that the game logic board A, display assembly B, and the power supply D are consistent from game to game. Audio board C varies in design for each new game though maintaining the pinout of its input power molex plug. Player control ribbon cable 3 terminates at the player control panel elements of each game (i.e. Joystick, Fire & Thrust buttons, Coin Acceptor Mechanism, etc.)

#### POWER INTERCONNECTS

The power supply D provides all voltages necessary for game operation.

Logic board drive is +5 volts  $\pm$  5% applied to pin 10 of the input power molex plug, & ground enters the logic board thru pin 4 to pins 1, 5, and 6. The logic board will free run in the game attract mode with proper power applied.

The audio board accepts +25 volts on pin4 and -25 volts applied thru pin 6 to pin 8. Ground enters pin 7 and is trace connected to speaker return pin 5. Pin 9 accepts +5 volts DC.

Power for the display is +25 volts thru pin 6 of its molex plug to pin 5 and -25 volts on pin 8. The CRT filament voltage of 6.3 V.A.C. enters the display electronics through pins 1 & 7 via a twisted pair of wires from the supply. A full wave rectified, unfiltered spot kill level of approximately +25 volts is applied to pin 14. The assembly is grounded thru pin 15 to pin 12.

## SYSTEM TEST CONSIDERATIONS

As previously mentioned, the logic board A will free run in the particular game attract mode solely with +5 volt applied. Ribbon cables 1 & 2 are output lines and can be removed without affecting the free-run mode. Ribbon cable 3 is an input line and can also be removed for test purposes while free running.

The audio board C can be effectively diagnosed with proper power applied and a speaker. The logic board generates most sounds by grounding various control lines through ribbon cable 2. The cable can be removed and game sounds can be generated by tying these lines low temporarily with a jumper wire. Refer to the appropriate audio board schematic and theory of operation section.

The display assembly cannot be powered up without data cable 1 from the logic board connected. With the cable open or improper data being fed from the logic board, the circuit breakers CB1 & CB2 on the power supply will trip indicating a load in excess of 3a being drawn from the +25 and -25 volt lines. Testing of the monitor requires a functional logic board. While troubleshooting a no display condition, it is recommended to remove the 8 pin molded female plug from the neck of the CRT to protect the phosphor on the tube face from being burned by a high intensity spot.

#### TEST EQUIPMENT


For most test purposes, a wideband oscilloscope and a digital or analog multi-meter is adequate. Also, a tri-level logic probe for verifying the presence of digital information is recommended.

Testing and troubleshooting of the logic board is the least straightforward aspect of bench test. However, Cinematronics has developed a logic board exerciser to be used in conjunction with a signature analyser that allows effective troubleshooting & repair with a minimum knowledge of microprocessor theory and operation. The exerciser puts a 4 bit alphanumeric code on each IC leg of each chip on the CPU board which then can be probed & read with the signature analyser to verify proper operation. Contact the customer service department at Cinematronics for details.

## **TEST PROCEDURES**

The first step in effective bench testing is to review the system theory of operation included in the manual. Discussed are principles from the mathematical concept of vector systems to the actual hardware techniques employed in generating a vector video game display.

For specific troubleshooting procedures, refer to the symptom-remedy diagnostic chart included in the manual.

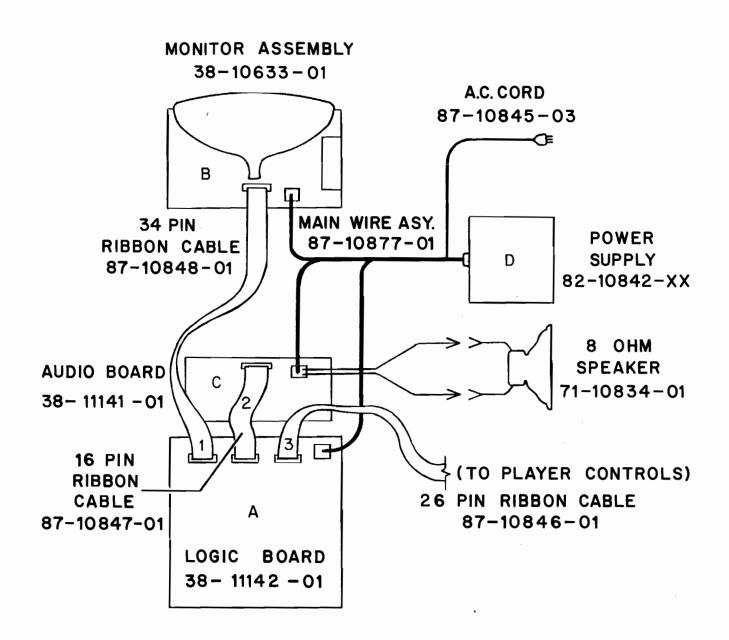

UNIVERSAL
BENCH TEST
CONFIGURATION

## MONITOR PROBLEMS

Here is a systematic guide to trouble shooting a monitor that blows breakers. Monitor must be connected to a good CPU. Check for burned components. The first thing we want to do is be able to power up the monitor without blowing breakers - then do trouble shooting.

POWER OFF. Unplug yoke from monitor board. Unplug socket from CRT. POWER ON.

If breakers blow: POWER OFF. See 1.

If breakers hold: Check outputs of -15v, +15v, and +5v regulators. Output must be within  $\pm$  0.5 volt tolerance.

A. Use O-scope to check deflection circuits for proper signal. 1mv/div time base is a good scope setting. Between DAC-80 output and input of Q101 or Q201, signal amplitude is about  $\pm 3$  volts peak. DC component should be less than  $\pm 200$  mv. Too much DC component will trip breakers. If signal into Q101/Q201 is good, problem is in transistorized deflection amps. With yoke disconnected, a good amp will put out an odd looking

"square wave", swinging between +25 volts. To check a bad deflection amp, check all transistors. Look for burned R118, R119, R113, R117 or R218, R219, R213, R217. R115, R116, R120, R121 may open with no burn marks. For test purposes, protection transistors Q106, Q107, Q206, Q207 may be removed from the circuit and amplifier can be powered up. Always replace protection transistors before returning monitor to normal service.

- 1. POWER OFF. Unplug heat sink wiring harnesses from monitor board. POWER ON. Breakers blow: POWER OFF See 2. Breakers hold: one or more of Q110, Q111, Q210, Q211 are shorted. Damage elsewhere is likely. Follow procedure at A.
- 2. Problem is most likely Video High Voltage module. Unplug from board and POWER ON. Breakers hold: replace or repair Video power supply. Breakers blow: Maybe a shorted tantalum capacitor. Or call us.

7-4

TABLE 7-1. TROUBLESHOOTING GUIDE

PROBLEM	PROBABLE SOLUTIONS
No Picture	Listen for audible "clatter" from the deflection yoke on the CRT neck. If the clatter is present, deflection circuitry is working and the problem is in the intensity circuit.
	No high voltage.
	If game audio is present, the CPU board is functional and the problem is in the monitor. If the audio is distorted or absent, the CPU board is suspect. If CPU board is equipped with red led near the input power plug, verify that it flashes once when power is applied and remains off thereafter. If no LED, verify that C8 pin 6 is constantly low with a voltmeter.
	Check the neck of the CRT for a glowing filament. If there is no glow, check the brown & black twisted pair of the CRT plug for 6.3 volts AC.
	Be sure all connections to the CPU board and monitor are firmly seated.
	Connect a scope to the yellow wire leading to the CRT connector. Set brightness full clockwise. There should be an 80-100 volt DC base with pulses dropping down to a 40 volt level. If no pulses, probe IC7 pin 4 with a scope and observe data pulses. If present, check Q2 & Q3 with an ohmeter or transistor tester.
	Check cathode of D5 for a full wave rectified, unfiltered voltage signal floating at +25 volts.
	Check seating of CRT plug. Remove and probe with scope to verify presence of proper signals.
Narrow Line on Display	Check IC1.
	Check for open yoke windings with ohmeter.
	Check for bad solder & crimp connections to yoke wires.
	Verify continuity between display board and heat sunk power transistors Q110, Q210, Q111 and Q211.
	Check Q110, Q210, Q111, Q211 with ohmeter or transistor tester. Inspect solder connections on circuit board molex connector socket pins.
Half Picture	Left Half: Check Q206, 208, 210 Right Half: Check Q207, 209, 211 Top Half: Check Q107, 109, 111 Bottom Half: Check Q106, 108, 110

TABLE 7-1. TROUBLESHOOTING GUIDE (Continued)

PROBLEM	PROBABLE SOLUTIONS
	Check solder connections on heat sink molex plugs J3 & J4.
·	Check diodes CR109, 110, 111 Check diodes CR209, 210, 211
	Check transistors Q105, Q205
	Check resistors R116, R216.
No Brightness Control	Check intensity pot R111 for open wiper or internal short. Check for open capacitor C17. Check for bad solder connections to R111.
Picture on Display Jitters	Replace analog switch IC1.
	Check size pots R109 and R209 for wiper noise by turning briskly while observing the screen. Readjust for proper screen size.
	Check for bad solder connections on R109 & R209.
	Check DAC IC101 & IC201 for bad solder connections. 3.
	Insure that all molex connectors are properly seated.
	•
Suspect High Voltage too high/too low	An accurate High Voltage meter will read close to $16KV$ if high voltage is good. Self-contained HV meters vary widely in accuracy. If $+90$ and $+400$ volts out of high voltage supply are good, chances are $16KV$ is good. If $+90$ or $+400$ volts are bad, repair or replace high voltage supply.
Dotted Display	Check IC-7 pins 2, 4. Verify proper operation of IC1. Check for proper +25 and -25 volts DC. Check operation of DAC's IC101 and IC201. On logic board, check I 8 pin 2 for pulses. Verify presence at analog switch.
No Audio	Check for open speaker coil. Check transistors 2N6292 and 2N6107 and nearby output components on audio board with ohmeter or transistor checker. Check 7815 and 7915 outputs. Check for open wiper on volume control mounted on inside of coin door.
	Refer to audio board theory of operation and troubleshooting guide.
	Replace F2 on logic board.

TABLE 7-1. TROUBLESHOOTING GUIDE (Continued)

PROBLEM	PROBABLE SOLUTIONS
Coin Counter is Inoperative	Check 2N6292 transistor on logic board with ohmeter or transistor tester. Verify proper operation of A4 by grounding A4 pin 1. Coin counter should click.  Disconnect coin counter molex connector. Measure DC voltage on red wire. Meter should read +25 volts DC.
Gives No Credits	Tie E4 pin 12 to ground. If credits fail to appear, replace E4. If credits appear, disconnect logic board ribbon connector J3. Measure +5 volts on A4 pins 1 & 5. If missing, replace pull up resistor pack C2.  Alternately ground A4 pins 1 & 5. If credits appear, problem is in
	switches on coin door. Verify proper coin door microswitch operation.  Reconnect J3. Observe A4 pins 3 & 6 alternately while depressing microswitch lever on coin mechanism. Pins 3 & 6 should change states. Replace A4.  Replace F2 (74LS259) on logic board.
Player Control Button(s) Inoperative	Refer to player control schematic in APPENDIX.  Verify with ohmeter proper closure of player control leaf blade switches.  Remove J3 connector. Measure +5 volts on D4 - 1, 2, 3, 4, 12, 13, 14, 15. If missing, replace D4. Replace pull up resistor pack D2.  Measure +5 volts on C4 - 1, 2, 3, 4, 12, 13, 14, 15. If missing, replace C4.
	Replace pull up resistor pack C2.  Coin up a game and, with J3 disconnected, ground aforementioned pins on C4 & D4. If display responds problem is in continuity from J3 to player control switches.

## SECTION 8

## SUGGESTED PARTS FOR STOCK

The following parts fail most frequently:

# MONITOR

2N5876 2N5878 2N5320 2N5322 7406 2N5550 7805 7815	<ul> <li>Analog switch</li> <li>PNP output transistor</li> <li>NPN output transistor</li> <li>PNP driver transistor</li> <li>NPN driver transistor</li> <li>IC inverter package</li> <li>NPN transistor 140 volt BVceo</li> <li>+5 volt regulator IC</li> <li>-15 volt regulator IC</li> <li>-15 volt regulator IC</li> </ul>
CPU	
74LS259/I 74LS32 D ROM 1 20101 A2 AUDIO	DM8334 — IC 8 bit latch — IC or gate — IC PROM — IC RAM 256 x 4
2N6107 2N6292 TL081/LF CA3080 74LS377	
	g parts don't fail frequently, but adily available local electronic es:
MONITOR	

DAC-80 — digital to analog converter

 $\begin{array}{lll} \text{Masked ROMS} & - \text{ set of four contain game program D ROMS (1-6)} & - \text{ custom made for CPU} \\ 25\text{LS181} & - \text{ ALU} \end{array}$ 

CPU

# **SECTION 8**

# PARTS LIST

# OVERALL ASSEMBLY

# 10-11215-01

ITEM NO.	CINEMATRONICS PART NO.	DESCRIPTION	MFGR. PART NO.	QTY.
1 2 3	38-11145-01 38-11208-01 38-10642-01	Cabinet Assembly Control Panel Assembly Circuit Panel Assembly (CPU and Audio Boards)		1 1 1 1
4 5 6	38-10633-01 38-10895-01 72-11211-01	Monitor Assembly (Display Board) Power Supply Assembly Operators Manual		1 1
		CABINET ASSEMBLY		
		38-11145-01		
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20	32-10889-01 20-10871-01 20-10872-01 20-10864-01 20-10862-01 38-10897-01 38-10891-01 20-10865-01 22-10953-01 37-10893-01 20-10863-01 20-10867-01 20-10879-01 20-10530-01 71-10831-01 21-11203-02 21-11202-02 22-11199-01 22-11200-01	Cabinet Coin Box Coin Box Cover Coin Box Handle Coin Box Tongue BKT. Coin Door Assembly Coin Meter/Vol. Cntl. Assy. Cover Plate Display Shield Interlock Switch Interlock Switch Interlock Fail, Left Rail, Left Rail, Right Retainer, Plexiglass Grill, Speaker Speaker Bezel, CRT CRT Plexiglass (Screened) Upper Plexiglass (Screened) Decal, Side left right		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
21 22 23 24 25 26	26-10588-01 01-10505-01 87-10877-01 22-10542-01 22-10543-01 22-10544-01	Fixture, Florescent Lamp Florescent Lamp Main Wire Harness Label, Patent Notice Label, Safety GND Notice Label, Unit Wired For:		1 1 1 1 1

ITEM	CINEMATRONICS PART NO.	DESCRIPTION	MFGR. PART NO.	QTY
28 29 30 31 32 33 34 35 36 37 38 39 40 41	25-10561-01 34-10903-01 35-10618-01 25-10554-01 25-10552-01 25-10553-01 25-10551-01 25-10568-01 25-10566-01 25-10568-01 25-10569-01 25-10569-01 25-10572-01	Wire Nuts Flat Braid 3/16'' Terminal, Ring Tongue (Braid) Carriage Bolt CN BX  Carriage Bolt SPK, P.S., CN DR  Carriage Bolt CNTL PNL  Carriage Bolt MNTR  Carriage Bolt CN BX TNG  Hex Nut Wing Nut Wood Screw Bx Dr Washer, Flat Washer, Flat Washer, Lock	plated 3/16''-1 <sup>1</sup> / <sub>2</sub> '' Blk Ox 3/16''-2'' Blk Ox 3/16''- <sup>1</sup> / <sub>2</sub> '' Blk Ox	2 20ft. 8 4 10 2 4 1 17 4 19 6 2 20
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15	32-11201-01 21-11106-02 37-10623-01 37-10624-01 25-10559-01 20-10879-01 80-10840-01 41-10645-01 87-10846-03 41-10646-01 25-10578-01 25-10567-01 25-10566-01 87-10876-01 37-10957-01	CONTROL PANEL ASSEMBLY  38-11208-01  Control Panel, Wood Instruction Panel, Plex (Screened) Switch W/Mounting  BRKT  Button Assembly, Long  Pal Nut  Retainer, Player Control Distribution P.C.B. Connector, Insulat. Displ. PCB 26 pin Ribbon Cable 26 wire Molex, Wafer Fric. Lock 3 cir. Swage Spacer 1/4'' Wood screw #6-1'' Blk. Ox Box Dr. Wood Screw #8-5/8'' Blk. Ox. Box Dr. Switch Wire Harness Assembly Leaf Switch Replacement	WICO#15- 0499-01 WICO#15- 0405-01 WICO#19- 0254-01 09-65-1031 WICO#15- 0677-01	1 10 10 10 1 1 1 1 1 2 2 3 1

ITEM	CINEMATRONICS PART NO.	DESCRIPTION	MFGR. PART NO.	QTY
1 2 3 4 5 6 7	20-10525-01 38-11142-01 38-11141-01 87-10847-01 87-10848-01 25-10571-01 25-10563-01	CIRCUIT PANEL ASSEMBLY  38-10642-01  Mounting Plate CPU P.C.B. Assembly Audio P.C.B. Assembly Ribbon Cable 16 pin Ribbon Cable 34 pin  #6 Lock Washer Int. Th. 6-32-1/2'' M.S. Rd. Hd. PH.		1 1 1 1 1 9 9
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22	90-10860-01 38-10631-01 38-10958-01 38-10637-01 82-10841-01 25-10583-01 20-10869-01 20-10870-01 38-10628-01 25-10563-01 25-10564-01 25-10568-01 25-10568-01 25-10565-01 20-10528-01 38-10632-01 21-11108-01 44-10715-01 22-10545-01	MONITOR ASSEMBLY  38-10633-01  CRT 19" Deflection Yoke Amplifier Monitor Assembly Test Yoke Assembly Keltron Video Power Supply Spring, CRT Mounting Bracket LH Mounting Bracket RH Display P. C. B. Assembly 4-40-1/2" M.S. Pan Hd. PH. 6-32-1/2" M.S. Pan Hd. PH. #6 Lock Washer INT. TH. 6-32 Hex Nut #6-1/2" S.M.S. Hex Hd. #10-1/2" Washer #10-1" Washer #10-1/2" S.M.S. Hex Hd. Chassis CRT Socket Assembly Overlay, Plastic (CRT) Analog Switch Label, Factory Adjust Only	19VARP4	1 Ref 1 1 1 1 3 3 3 16 4 4 4 1 Ref 1

ITEM	CINEMATRONICS PART NO.	DESCRIPTION	MFGR. PART NO.	QTY
		CRT SOCKET ASSEMBLY		
		38-10632-01		
1 2	36-10622-01 63-10804-01	CRT Socket Capacitor .05mf 1600VDC	Sprague 16PS-S50	1 2
3 4 5 6 7	25-10582-01 35-11205-01 25-10564-01 25-10579-01	Heat Shrink Tubing (clear) Ring Tongue Terminal 22 GA #6-1/2'' S.M.S. Hex Hd. TY RAP	T-18 R	AR 1 1
7	34-10608-02	Wire 18 AWG 9''	1-10 11	2 2
		DEFLECTION YOKE AMPLIFIER		
		38-10631-01		
1 2 3 4 5 6 7 8	20-10522-01 66-10822-01 66-10823-01 87-10873-01 87-10874-01 22-10546-01 45-10719-01 25-10563-01	Heat Sink Transistor Transistor Heat Sink Harness Long Heat Sink Harness Short Label, Warning Washer, MICA Greaseless 6-32-1/2'' Rd. Hd. Ph. M.S.	2107-A 2N5876 2N5878	2 2 2 1 1 1 4 3
		YOKE ASSEMBLY		
		38-10637-01		
1 2 3 4	40-10644-01 35-10615-01 35-10614-01 41-10657-01	Yoke, Broy Molex, Female Pins Molex, Male Pins Molex, Receptacle 6 Cir.	746 02-09-1118 02-09-2118 03-09-1063	1 3 1 1
		POWER SUPPLY ASSEMBLY		
		38-10895-01		
1	82-10842-** 82-10842-40 82-10842-20	Power Supply National Power Technology CONDOR		1 2 2

ITEM	CINEMATRONICS PART NO.	DESCRIPTION	MFGR. PART NO.	QTY
		MAIN WIRE HARNESS ASSEMBLY 87-10877-01		
1 2 3 4 5 6 7 8 9 10 11 12 13	41-10883-01 41-10658-01 41-10649-02 41-10647-01 41-10648-01 35-10615-01 35-10617-01 25-10579-01 25-10580-01 87-10845-01 35-10614-01	Molex Receptacle 3 Cir. Molex Receptacle 4 Cir. Molex Receptacle 9 Cir. Molex Receptacle 12 Cir. Molex Plug 15 Cir. Molex Femal Socket Molex Male Pin Terminal, Female QK DSCT TY RAPS TY RAPS W/Eyelet 63/4 Wire A.C. Cord Terminal, Molex Male Pin	03-09-1038 03-09-1042 03-09-1093 03-09-1122 03-09-2153 02-09-1118 02-09-2118 T-18 R	2 1 1 2 1 21 21 2 23 6 Ref Ref 3
		COIN SWITCH HARNESS ASSEMBLY		
1	41-10650-01	87-10876-01 Molex, Connector W/Lock 3 Cir.	09-50-3031	1
1 2 3 4	35-10880-01 35-10617-01	Molex, Female Crimp Terminal Terminal, Female Quick Disconnect .187032 Wire 5 Pcs.	08-50-0106	1 3 6 Ref
5	25-10579-01	Tie Wraps  COIN METER/VOL. CONTROL ASY.	T-18 R	8
		38-10891-01		
1 2 3 4 5 6	20-10868-11 38-10960-01 38-10961-01 25-10562-01 25-10556-01 25-10570-01	Bracket, Coin Meter/Vol. Coin Meter Assembly Volume Control Harness Assembly #4-40-½" M.S. Rd. Hd. Ph. HEX Nut 4-40 Washer, Lock #4		1 1 2 2 2
		COIN METER ASSEMBLY		
		38-10960-01		
1 2 3 4	29-10590-01 65-10812-01 35-10615-01 41-10659-01	Coin Meter Diode Molex, Female Pin Molex, Plug 3 Cir.	1N4003 02-09-1118 03-09-2038	1 1 2 1

ITEM	CINEMATRONICS PART NO.	DESCRIPTION		MFGR. PART NO.	QTY
1 2 3 4 5 6 7	51-10722-01 41-10659-01 35-10615-01 35-10614-01 25-10579-01 26-10589-01	VOLUME CONTROL HARN. ASY.  38-10961-01  Pot. 10K Molex Plug 3 Cir. Molex Female Socket Molex Male Pin TY RAPS Wire Knob  COIN DOOR ASSEMBLY		03-09-2038 02-09-1118 02-09-2118 T-18 R	1 1 2 1 3 Ref 1
1 2 3 4 5 6 7 8 9 10	20-10896-01 20-10868-01 25-10905-01 87-10876-01 87-10955-01 25-10556-01 25-10570-01 25-10571-01 25-10557-01 22-10899-01	Coin Door Bracket, Coin Meter/Volume Cable Clamps 3/16'' Wire Harness, Coin Switch Wire Harness, Volume Control Hex Nut Washer, Lock Int. Th. 6-32-1/2'' Rd. Hd. Ph. M.S. #6 Lock Washer Int. Th. 6-32 Hex Nut Decal  SWITCH WIRE HARNESS	S ASY.	4-40 #4	1 1 5 3 3 2 2 2 1
1 2	25-10579-01	87-10876-01 Wire List TY RAPS CPU P.C.B. ASSEMBL 38-11142-01		T-18 R	Ref 7
1 2 3 4 5 6 7	44-10676-01 44-10677-01 44-10678-01 44-10679-01 44-10680-01 44-10681-01 44-10682-01	I.C. ALU	M6, N6 , A10, B4, J6 , D10, H8, K4 , E12, I8 0, I6 2, F4, L2 2, D12, F6	25LS181 74LS00 74LS02 74LS04 74LS08 74LS10 74LS27	3 4 4 3 1 3 3

ITEM NO.	CINEMATRONICS PART NO.	DESCRIPTION	REF. DES.	MFGR. PART NO.	QTY.
8	44-10683-01	I.C. OR Gate	A12, B10, J2, K2	74LS32	4
	1		T9, U9	74LS75	9
9	44-10684-01	I.C. Quad D Latch			2
10	44-10685-01	I.C. Mag Comparator	L9, M9, N9	74LS85	2 3 1
11	44-10686-01	I.C. Exclusive OR	J8	74LS86	
12	44-10687-01	I.C. Dual J-K Flip Flop	A8, B2, B8, C8,	74LS107	7
			G4, G8, J10		
13	44-10688-01	I.C. 1 of 8 Data Selectors	C4, D4, E4, F10	74LS151	4
14	44-10689-01	I.C. Quad Data Selector	L11, M11, N11,	74LS157	8
			P9, R9, S9, T11,		
			U11		
15	44-10690-01	I.C. Binary Counter	C6, D6, E6, E10,	74LS163	9
			F8, I14, P11, R11,		
			S11		
16	44-10691-01	I.C. 8 Bit Shift Regist	H6	74LS164	1
17	44-10692-01	I.C. 4 Bit Shift Regist	G10, H12, N4, M4	74LS194	9
1 -		3.00	P4, P13, R4, S4,		
1			T4		ļ
18	44-10693-01	I.C. Tri-State Quad	N2, R2, T2	74LS257	3
19	44-10694-01	I.C. 8 Bit Latch	F2	74LS259/	3 1
1	14 10074 01	1.C. o Bit Eulen	1.2	DM8334	
20	44-10695-01	I.C. Quad 2-Input Multi.	I12, J12	74LS298	2
21	44-10696-01	I.C. Octal D Flip Flop	M2, P2, R13, S2,	74LS377	6
21	44-10090-01	1.C. Octai D Filip Flop	S13, T13	/4L33//	0
1 00	44-10697-01	I.C. Dual 4 Bit Counter	H4, I4	74LS393	9
22			A2, I10	74S00	2 2
23	44-10698-01	I.C. NAND Gate	H14	74S02	1
24	44-10699-01	I.C. NOR Gate	1		1
25	44-10700-01	I.C. Hex Inverter	I2, U2	74S04	2
26	44-10701-01	I.C. AND Gate	A14	74S08	1
27	44-10703-01	I.C. OR Gate	B14, H10	74S32	2 1 2 2
28	44-10704-01	I.C. Dual J-K Flip Flop	G2, H2	74S113	2
29	44-10705-01	I.C. Quad 2 to 1 Data Sel.	G14	74S158	1
30	44-10706-01	I.C. Look Ahead Carry	L4	74S182	1
31	44-10671-01	I.C. Dual 4 in NOR Gate	F12	7425	1
32	44-10675-01	I.C. Quad Comp. Output	J4	74265	1
33	44-10702-01	I.C. Triple 3 in NAND	G12	74S10	1
34	44-10667-01	I.C. RAM 256x4	L14, M14, N14	2101A2	3
35	44-10707-01	I.C. PROM DROM 1	F14	2085	1
36	44-10708-01	I.C. PROM DROM 2	E14	2086	1
37	44-10709-01	I.C. PROM DROM 3	D14	2087	1
38	44-10710-01	I.C. PROM DROM 4	C14	2088	1
39	44-10711-01	I.C. PROM DROM 5	E8	2089	1
40	44-10712-01	I.C. PROM DROM 6	J14	2090	1
41	38-11210-01	I.C. E-PROM		2732	4
42					
43	37-10625-01	7 Pole Dip Switch	E2		1
44	69-10833-01	Crystal 20 MHz	Lī		1
45	65-10811-01	Diode	CR1, CR2	1N914 B	2
46	66-10816-01	Transistor	Q2, Q3	2N3904	2
47	66-10825-01	Transistor	Q1 Q1	2N6292	1
	00 10020-01		**	2110272	

ITEM NO.	CINEMATRONICS PART NO.	DESCRIPTION	REF. DES.	MFGR. PART NO.	QTY.
48 49 50 51 52 53 54	63-10783-01 63-10785-01 63-10808-01 63-10810-01 53-10731-01 53-10732-01 53-10734-01	Cap Disk .02mf 50V Cap Disk 680pf 100V Cap Tant Dip 3.3mf 35V Cap Tant Dip 22mf 35V Resistor, 330 ohm ½W 5%C Resistor, 470 ohm ½W 5%C Resistor, 1K ohm ¼W 5%C	C1-C58 C59 C62 C61 R2, R3 R5 R1, R4, R6, R7, R8, R9, R10, R11, R17, R18, R19, R20 R15		58 1 1 1 2 1 12
55 56 57 58 59 60 61 62 63 64 65 66 67 68	53-10736-01 53-10746-01 53-10753-01 53-10762-01 53-10779-01 35-10616-01 41-10655-01 41-10653-01 41-10654-01 34-10612-06 36-10619-01 36-10620-01 36-10621-01 80-10837-01 53-10726-01 65-10814-01	Resistor 2.2K onm <sup>1</sup> / <sub>4</sub> W 5%C Resistor 10K ohm <sup>1</sup> / <sub>4</sub> W 5%C Resistor 560K ohm <sup>1</sup> / <sub>4</sub> W 5%C Resistor Dip Pak 1K Test Points Molex, Wafercon 12 Cir Male Header PCB 16 Pin Male Header PCB 34 Pin Jumpers, Socket, Dip 14 Pin Socket, Dip 16 Pin Socket, Dip 16 Pin Socket, Dip 24 Pin  Printed Circuit Board Resistor, 100 ohm <sup>1</sup> / <sub>4</sub> W 5%C L.E.D.	R13, R16 R12 R14 C2, D2 J1 J4 J3 J2 D8, U14 F6 D8, F14, U14 L6, M6, N6, P7, R7, T7, U7	09-18-5127	1 2 1 2 6 1 1 1 2 1 3 7
		DISPLAY P.C.B.	ASY.		
		38-10628-0	1		
1 2 3	53-10723-01 53-10724-01 53-10725-01	Resistor, 15 ohm ½W 5%C Resistor 33 ohm ¼W 5%C Resistor, 47 ohm ¼W 5%C	R11, R215 R116, R216 R108, R130, R131, R210, R230, R231		2 2 6
4	53-10726-01	Resistor, 100 ohm ¼W 5%C	R110, R117, R208, R217		4
5 6 7	53-10729-01 53-10731-01 53-10732-01	Resistor, 200 ohm ¼W 5%C Resistor, 330 ohm ¼W 5%C Resistor, 470 ohm ¼W 5%C	R113, R213 R207 R1, R2, R4, R5, R19		2 1 5
8	53-10733-01	Resistor, 820 ohm ½W 5%C	R130, R230, R112, R212		4

ITEM NO.	CINEMATRONICS PART NO.	DESCRIPTION	REF. DES.	MFGR. PART NO.	QTY.
9	53-10734-01	Resistor 1K ohm ½W 5%C	R20, R24		2
	53-10736-01	Resistor, 1.8K ohm ½W 5%	R104		
10	1	1 '			1 1
11	53-10738-01	Resistor, $2.2K$ ohm $\frac{1}{4}W$ 5%C			2
12	53-10740-01	Resistor, 3K ohm ¼W 5%C	R105, 107, 205		3
13	53-10744-01	Resistor, 5.6K ohm ¼W 5%C	R10, R206		2 3 2 5
14	53-10746-01	Resistor, 10K ohm ¼W 5%C	R6, R22, R23, R26, R106		5
15	53-10758-01	Resistor, 68K ohm 1/4W 5%C	R25		1
16	53-10766-01	Resistor, 47ohm ½W 5%C	R118, R119, R218, R219		4
17	53-10767-01	Resistor, 2.2K ohm ½W 5%C	R21		1
18	53-10768-01	Resistor, 8.2K ohm ½W 5%C	R111, R114,		4
			R211, R214		
19	53-10769-01	Resistor, 10K ohm ½W 5%C	R3		1
20	53-10770-01	Resistor, 2.7 ohm 1W 5%C	R124-R129, R224-R229		12
21	53-10771-01	Resistor, 360 ohm 1W 5%C	R123, R223		2
22	53-10772-01	Resistor, 10K ohm 1W 5%C	R7, R8		2 2 1
23	53-10773-01	Resistor, 100 ohm 2W 5%C	R27		<u>1</u>
24	53-10774-01	Resistor, .18 ohm 3W 5%C	R120, R121, R220, R221		4
25	53-10776-01	Resistor, 1.43K ohm ½W 1%	MF R101		1
26	53-10777-01	1	D001	İ	1 . [
26		Resistor, 2.1K ohm <sup>1</sup> / <sub>4</sub> W 1% MF	R201		1
27	53-10778-01	Resistor, 10K ohm ½W 1% MF	R103, R203		2
28	51-10720-01	Trimpot, 100 ohm	R109, R209		2
29	51-10721-01	Trimpot, 5K ohm	R102, R202	!	2
30	65-10811-01	Diode	D17, D19, D20	1N914 B	11
50	03-10011-01	Diode	D101-D104,	111914 D	11
0.1	CF 10010 01	D: 1	D201-D204	1214000	0.4
31	65-10812-01	Diode	D3, D4, D5,	1N4003	31
			D12, D13,		
			D15, D16, D18		
			D105-D115,		ľ
			D205-D215		
32	44-10669-01	I.C. Hex Inverter O.C.	IC7	7406	1
33	44-10672-01	I.C. Regulator +5V	IC8	7805	1
34	44-10673-01	I.C. Regulator + 15V	IC 4	7815	1
35	44-10674-01	I.C. Regulator -15V	IC 6	7915	1
36	44-10718-01	I.C. OP. AMP.	IC 102, 202	TL081 P/LF351	2
37	44-10714-01	I.C. Digitial Analog Con	IC 102, 202 IC 101, 201	120011/11001	2 2
38		Transistor		2NI2102	4
30	66-10815-01	Transistor	Q105, Q106,	2N2102	4
20	66 10016 01	T	Q205, Q206	0210004	
39	66-10816-01	Transistor	Q2, Q7, Q8	2N3904	3 2
40	66-10817-01	Transistor	Q107, Q207	2N3906	2
1					

ITEM NO.	CINEMATRONICS PART NO.	DESCRIPTION	REF. DES.	MFGR. PART NO.	QTY.
41	66-10818-01	Transistor	Q6, Q101, Q102, Q103, Q201, 202, 203	2N5210	7
42	66-10819-01	Transistor	Q108, Q208	2N5320	2
43	66-10820-01	Transistor	Q104, Q109, Q204, Q209	2N5322	4
44	66-10821-01	Transistor	Q1, Q3	2N5550	2
45	63-10781-01	Cap Disk .005mf 50V	C8, C9		2 6
46	63-10784-01	Cap Disk .1mf 50V	C24, C27, C103, C104, C203, C204		6
47	63-10786-01	Cap Disk .1mf 100V	C102, C202		2
48	63-10799-01	Cap Film .33mf 35V	C1		2 1
49	63-10802-01	Cap Polycarb .022mf 200V	C101, C201		2
50	63-10805-01	Cap Dip Tant .47mf 35V	C25		2 1
51	63-10806-01	Cap Dip Tant 1mf 35V	C12, C13		$\overline{2}$
52	63-10807-01	Cap Dip Tant 2.2mf 35V	C4, C10, C15, C23, C105		2 5
53	63-10809-01	Cap Dip Tant 4.7mf 35V	C26		1
54	63-10790-01	Cap Elect 47mf 50V	C205, C207		2 1
55	36-10620-01	Socket 16 Pin			1
56	35-10613-01	Molex, Male Pin Sold Tail		02-09-2134	8
57	41-10660-01	Molex, Receptacle 15 Cir	J2	03-09-1152	1
58	41-10661-01	Molex, Wafercon 6 Cir	J5	09-18-5061	1
59	41-10662-01	Molex, Wafercon 6 Cir	J3	09-18-5062	1
60	41-10663-01	Molex, Wafercon 6 Cir	J4, J6 K	09-18-5069	2
61	41-10654-01	Male Header PCB 34 Pin	J1		1
62	80-10902-01	Printed Circuit Board			1
63 64	01-10506-01	Neon Lamp	Lt 1, Lt 2	NE-2	2
65	51-10722-01	10K Pot.	R11	JAINO56103UA	1
66	20-10523-01	Heat Sink Thermalloy		22030 B	6
67	20-10524-01	Heat Sink Thermalloy		6045 B	1
68		Wire			Ref
		AUDIO P.C.B. ASS	EMBLY		
į	1	38-11141-01	ı		
1	20-10520-01	Heat Sink, Therm	''Refer To	6071B	4
2	20-10521-01	Heat Sink, Therm	veiet 10	6072B	2
3	23-10548-01	Thermal Compound	Assembly	DOW 340	
4	25-10556-01	Hex Nut		4-40	6
5	25-10570-01	Lockwasher	Drawings''	#4 Internal	6
6	25-10974-01	Machine Screw		4-40-3/8PNHDI	_
7	41-10652-01	Header, 16 Pin		609-1622 M	1
8	41-10656-01	Conn, Molex 9 Cir		09-18-5094	1

ITEM CII NO.	NEMATRONICS PART NO.	DESCRIPTION	REF. DES.	MFGR. PART NO.	QTY.
9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56	44-10669-01 44-10670-01 44-10673-01 44-10677-01 44-10690-01 44-10690-01 44-10690-01 44-10690-01 44-10713-01 44-10713-01 44-10713-01 44-10713-01 44-10713-01 53-10727-01 53-10739-01 53-10739-01 53-10745-01 53-10745-01 53-10745-01 53-10740-01 53-10750-01 53-10750-01 53-10750-01 53-10750-01 53-10750-01 53-10750-01 53-10750-01 53-10750-01 53-10750-01 53-10750-01 53-10750-01 53-10750-01 53-10750-01 53-10750-01 53-10750-01 53-10750-01 53-10750-01 53-10750-01 53-10920-01 53-10920-01 53-10920-01 53-10920-01 53-10920-01 53-10920-01 53-10920-01 53-10920-01 53-10920-01 53-10920-01 53-10920-01 53-11130-01 53-11131-01 53-11131-01 53-11131-01 53-11131-01 53-11131-01 53-11131-01	IC I	"Refer To Assembly Drawings"	7406 7414 7815-C 7915-C 74LS00 74LS163 74LS164 74LS377 74LS393 CA3080E LM555 AMI S2688 TL081P LM566 150 OHM 1K OHM 2K OHM 2K OHM 1K OHM 2K OHM 2N OHM 1SK OHM 10K OHM 12K OHM 12K OHM 15K OHM 15M OHM	1 2 1 1 2 1 1 2 1 2 1 2 1 2 1 3 1 3 2 9 1 4 6 1 2 2 3 1 1 1 2 2 3 2 3 2 3 2 3 2 3 2 3

ITEM NO.	CINEMATRONICS PART NO.	DESCRIPTION	REF. DES.	MFGR. PART NO.	QTY.
58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85	53-11135-01 53-11136-01 53-11137-01 53-11138-01 63-10780-01 63-10782-01 63-10796-01 63-10940-01 63-10942-01 63-10944-01 63-10948-01 63-10949-01 63-10952-01 63-11127-01 63-11128-01 65-10811-01 66-10816-01 66-10824-01 66-10825-01 80-11140-01	Resistor, ½W 5% C Resistor, ¼W 5% C Resistor, ¼W 5% C Resistor, ¼W 5% C Capacitor, Disk Capacitor, Disk Capacitor, Disk Capacitor, Film Capacitor, Film Capacitor, Elect Rad Capacitor, Elect Rad Capacitor, Film Capacitor, F	"Refer To Assembly Drawings"	220K OHM 430K OHM 750K OHM 910K OHM 470PF 50V .005MF 50V .01MF 50V .047MF 35V .33MF 35V .001MF 50V 2.2MF 35V 3.3MF 35V .0047MF 100V .1MF 100V .22MF 35V .47MF 100V 1.0MF 50V 22MF 50V 1N914B 1N4003 Plast 2N3904 2N3906 2N6107 2N6292	1 1 1 2 3 1 2 24 5 1 1 2 5 4 1 1 1 5 2 6 4 1 1

# APPENDIX A


Assembly Drawings
Schematics
and
Wiring Diagrams

#### TABLE OF CONTENTS


#### ASSEMBLY DRAWINGS


## SCHEMATICS AND WIRING DIAGRAMS


- 1. CABINET DRAWING
- 2. MAIN WIRE HARNESS ASY. TABLE
- 3. POWER SUPPLY PINOUT ILLUSTRATION
- 4. CONDOR POWER SUPPLY SCHEMATIC
- 5. NATIONAL POWER TECHNOLOGY POWER SUPPLY SCHEMATIC
- 6. PLAYER CONTROL AND COIN MECHANISM WIRING DIAGRAM
- 7. CPU BOARD SCHEMATIC
- 8. CPU BOARD MAJOR COMPONENT DRAWING
- 9. CPU BOARD ILLUSTRATION
- 10. DISPLAY BOARD SCHEMATIC
- 11. DISPLAY BOARD ASSEMBLY DRAWING
- 12. MONITOR ASSEMBLY DIAGRAM
- 13. DISPLAY BOARD CONNECTORS AND ADJUSTMENTS DRAWING
- 14. HEAT SINK ILLUSTRATION
- 15. HEAT SINK ASSEMBLY
- 16. AUDIO BOARD SCHEMATIC
- 17. AUDIO BOARD ASSEMBLY DRAWING

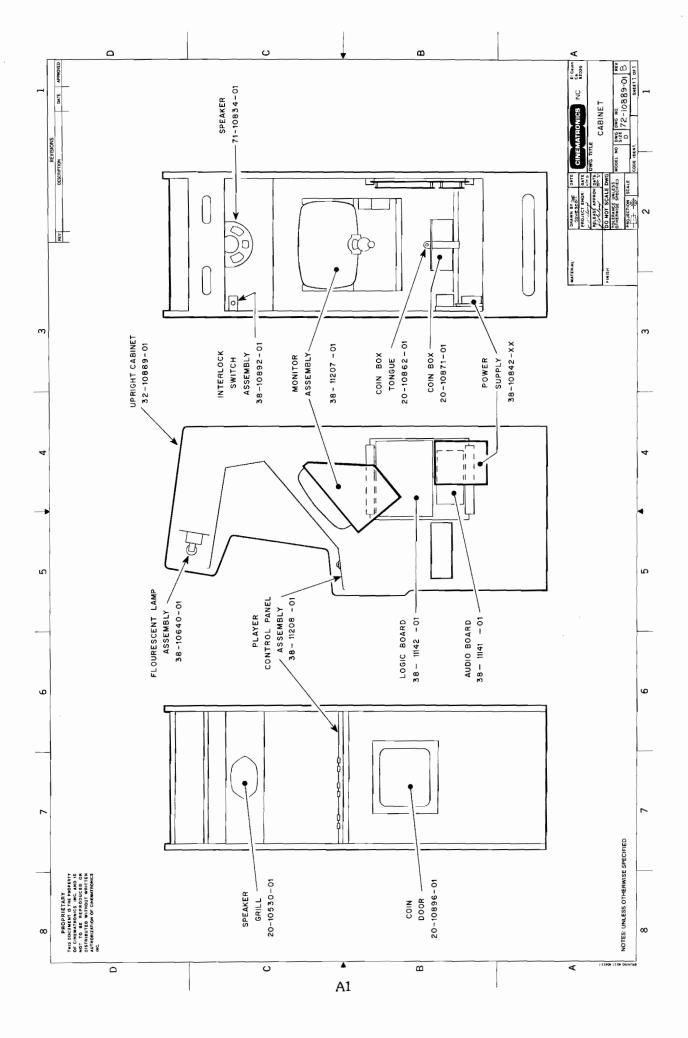



Tel	۵								_		ပ				_	<b>\</b>					C	<u>n</u>								5 2	_ <b>·</b>	₹	× + + + + + + + + + + + + + + + + + + +
REVISIONS DATE APPROVED ON RADIA	0.510			VOLUME	VOLUME	REF. +25		REF25	REF. GND	REF. +5	REF.	NOT USED	NOT USED	NOT USED	METER AND		-	NOT USED	NOT USED	REF. +5	NOT USED	NOT USED	TWISTED			96" LONG	PLUG			FICATION CANDER		MAIN HARNESS ASSY.	72-10877-01
DESCRIPTION			LENGTH	4	33		35	=		55					27															CINEMATRONICS	DWG TITLE	I NAN	MODEL NO. DWG
		  -	PIN	MALE	FEMALE "	=	= 3	= =	=	= =	MALE	MA			FEMALE	FEMALE				FEMALE			MALE	= (	3 0	MALE	M M M			AAXE DATE	DATE		
Æ	_	R LIST	AWG.	22	22		22	22		22					25										ō	9	Ď			DRAWN BY: D. HILK'L BERT	RELEASE APPROV	DO NOT SCALE DWG	TOLERANCE: UNLESS OTHERWISE SPECIFIED PROJECTION: SCALF
		WIRE	COLOR		RED	RED	RED	BLUE	BLACK	BLUE	RED	NACOR.			BROWN	BLK/YEL				ORANGE			RED	BLUE	RD/BLK					1	RE SE	8	OTA PRO
			욘	F-1	HT-2	H2-7	H5-1 RED	H2-8	H2-11	H7-3	H4-4	LAS			H5-3	H3-12				H2-10			I I	H4-8	H2-3	H2-1	H9-BLK H8-COM			MATERIAL		: HSI	
			_	7	14-2	1		H H - 4-6	H4-7	¥ ¥		15.2 15.2	H6-1	H6-2	H6-3	H6-5	9-9H	1-9H	1 1 6 6 E	H6-10	H6-11	H6-12	2 -	117-3	18-N.0.	H9-GRN	H9-BLK			MAT		FINISH	
			CONNECTOR	AUDIO	4	MOLEX	6601-60-60				COIN METER	MOLEX 03-09-1038	7130	) 1	MOLEX	03-09-1122							707 17 17	03-09-103B	H B	A O	HOOR						
						3	_	_	œ,	•1	1		1	<del> </del>	_		1	<del>- 1</del>				_	(e)		7.	.1	,		اد.	7			
			REMARKS	TWISTED	NOT USED	NOT USED			TWISTED-1 PER	SPOT KILL	+25	+25	-25	<b>ن</b>	¥0 4	QND	GND	GND	NOT USED	NOT USED	NOT USED	NOT USED	REF. 6.3 VAC	REF25	NOT LISED	NOT USED		AEF. +5	REF SPOT KILL				
			LENGTH	87				56	52	32	52	52	52	52	25	52	52	56									47						TNG.
				MALE	:			MALE	:	= =	=	= =	2	=	= =	2	=	Ł	FEMALE	,		E 1441 E	1	2			FEMALE	*	: :			TON	TWIST
		LIST	AWG.	89	20			18	22	22	18	2 4	22	22	25	9 90	18	82									18				F F 00	' 'WIRE	E AFTER
-		WIRE	COLOR	BLACK	MH1 1E		GREEN	RD/BLK	BROWN	WHITE	RED	RED RED	BULE	ORANGE	ORANGE	BLACK	BLACK	BLK/WT	BROWN			050	WHITE	BLUE			BLK/YEL	OPANGE	YELLOW		END WITH 187	NAME OF THE PROPERTY OF THE PR	IRE AR
					AWA		H9-GRN GREEN	HB-N.O. RD/BLK	H3-1	H3-7	1	4-4	1		H4-9		1	H6-4	H2-4			10	1	H2-8			_	$\neg$	12-6	:	ENO V	N MAD	ISTED W
	DPERTY AND 15 ED OR RITTEN		FROM		7 7	H1-4		H2-3	$\sqcap$	H2-5	11	H2-7	1	1	H2-9	+	+	1	72.5 F3.5	H3-3	H3-4	H3-5		H3-8	13.50	H3-11	H3-12		H3-14	2	SPEAKER	NECT 10	FOR TW
PROPRIETARY	THIS DOCUMENT IS THE PROPERTY OF CINEMATRONICS INC. AND IS NOT TO BE REPRODUCED OF DISTRIBUTED WITHOUT WRITTEN AUTHORIZATION OF CINEMATRONICS		N.	POWER		MOLE X 03-09-1042	POWER		200		<u>-</u> -		•				•	<b>'</b>	DISPLAY	×	03-09-2153	_,1_				<u> </u>		_			4. TERMINATE SPEAKER END WITH 187	W/N - THIS CONNECTION MADE WITH WIRE	I. LENGTHS GIVEN FOR TWISTED WIRE ARE AFTER NOTES UNLESS OTHERWISE SPECIFIED
"	HIS BOC OF CINE OT TO DISTRIBE	اــــا غ	ت		_	_																			_					_	4. TER	r v	I. LEN NOTES
	F0204.																																# . Z ⊕# ⊕NIP

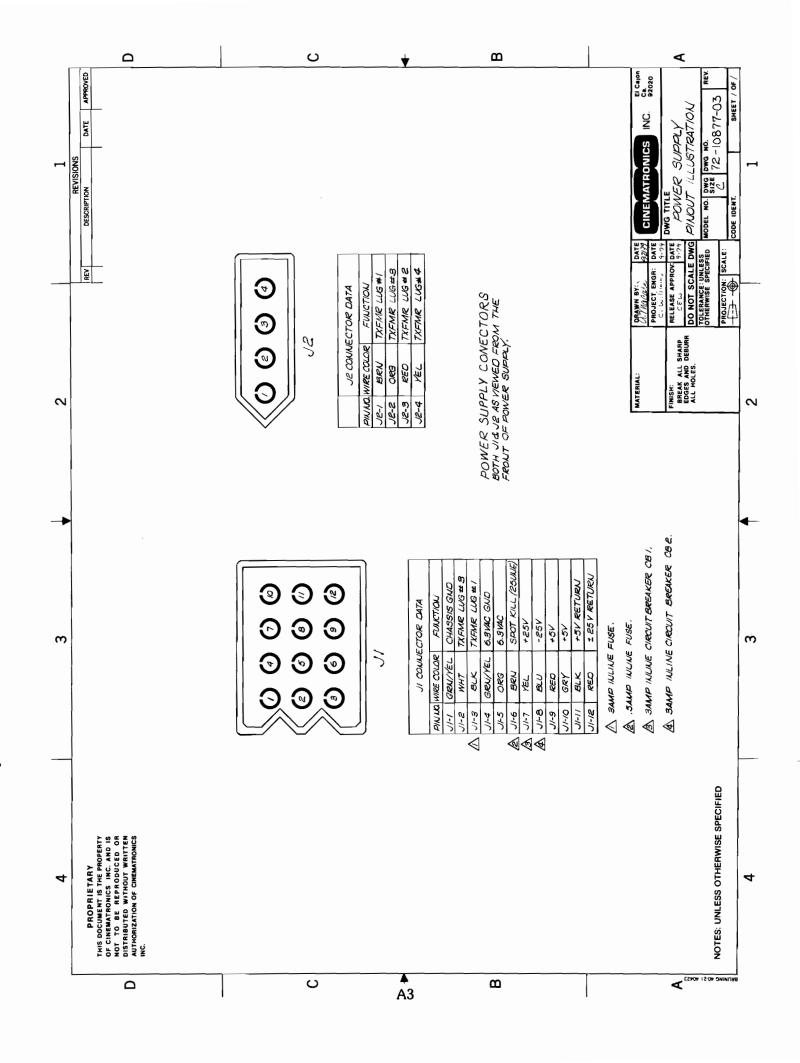


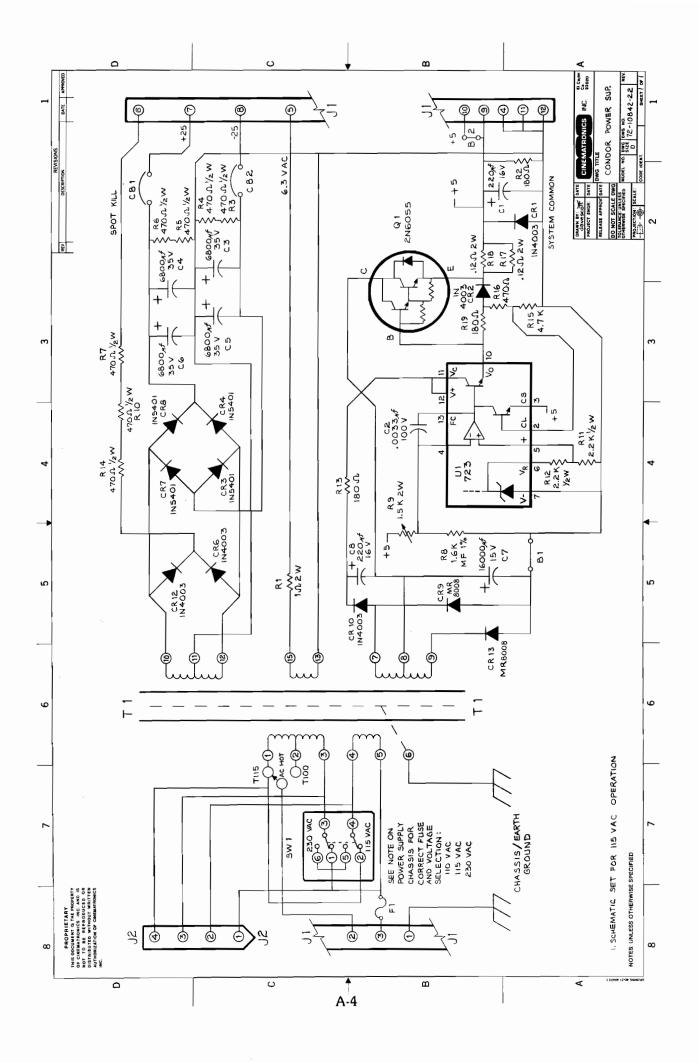


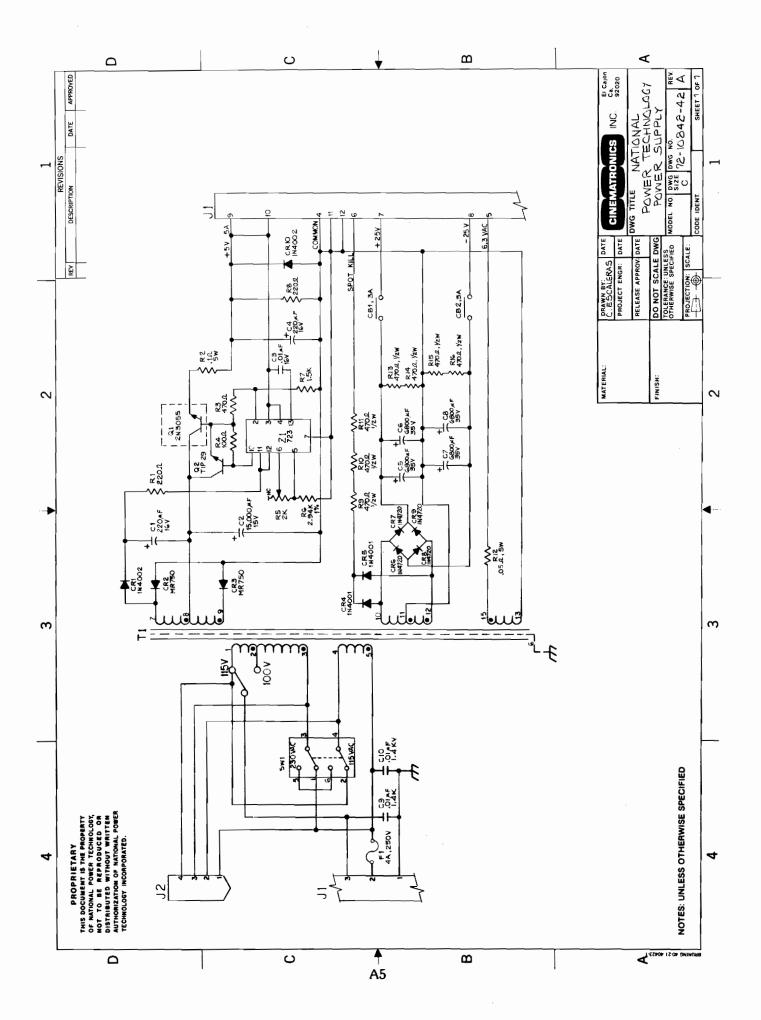


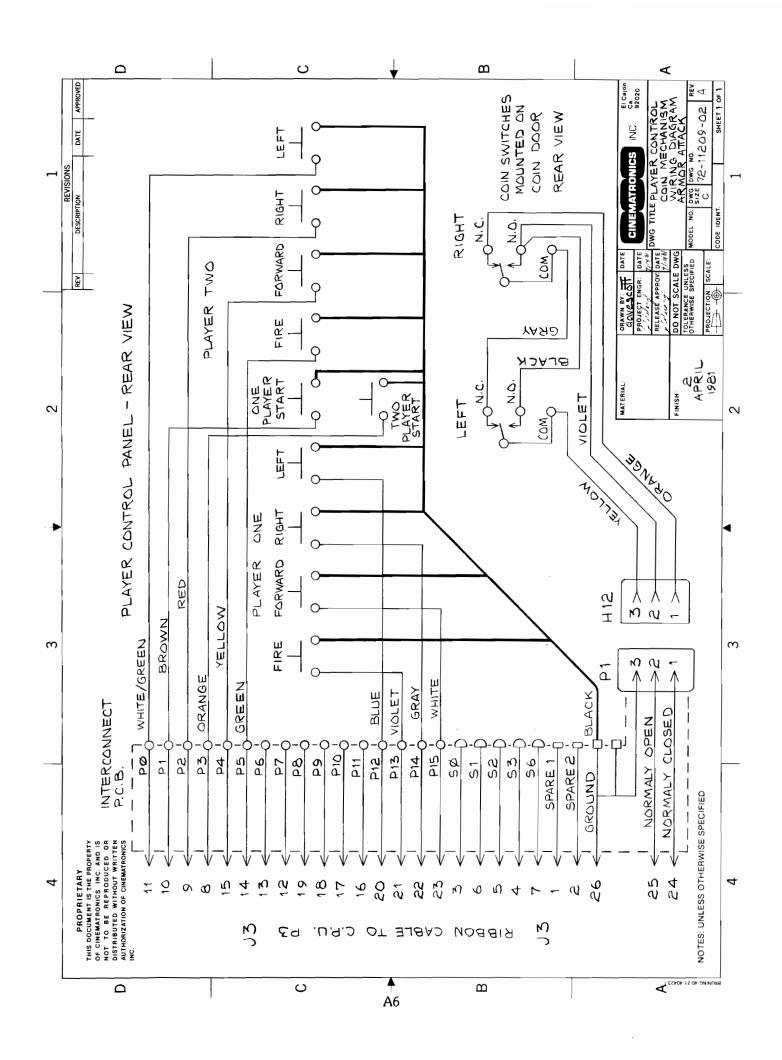


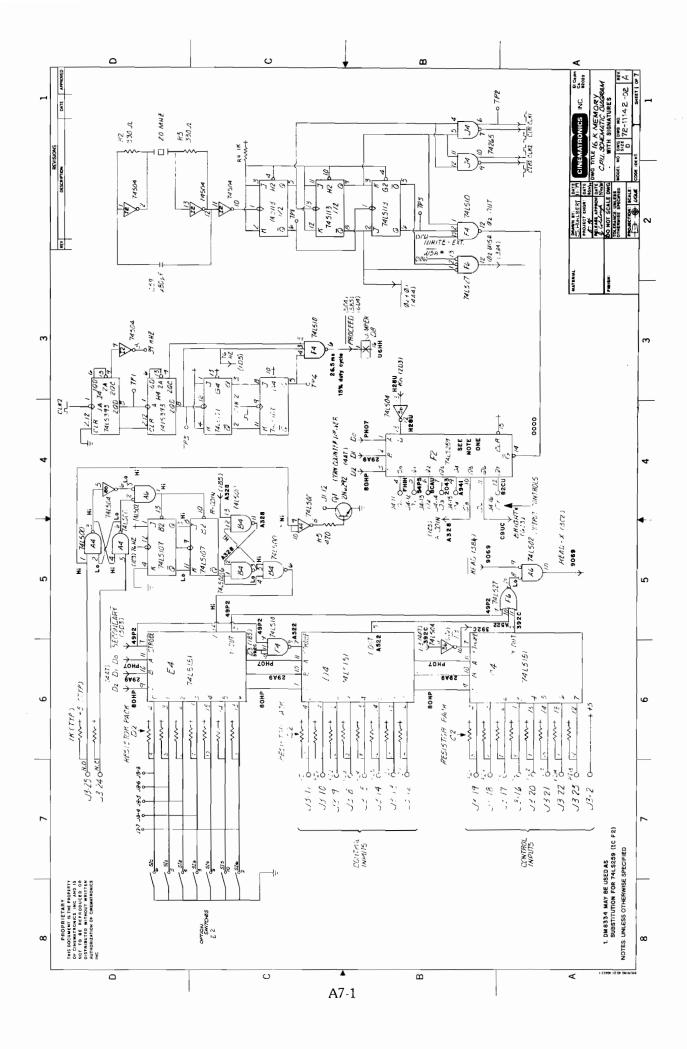


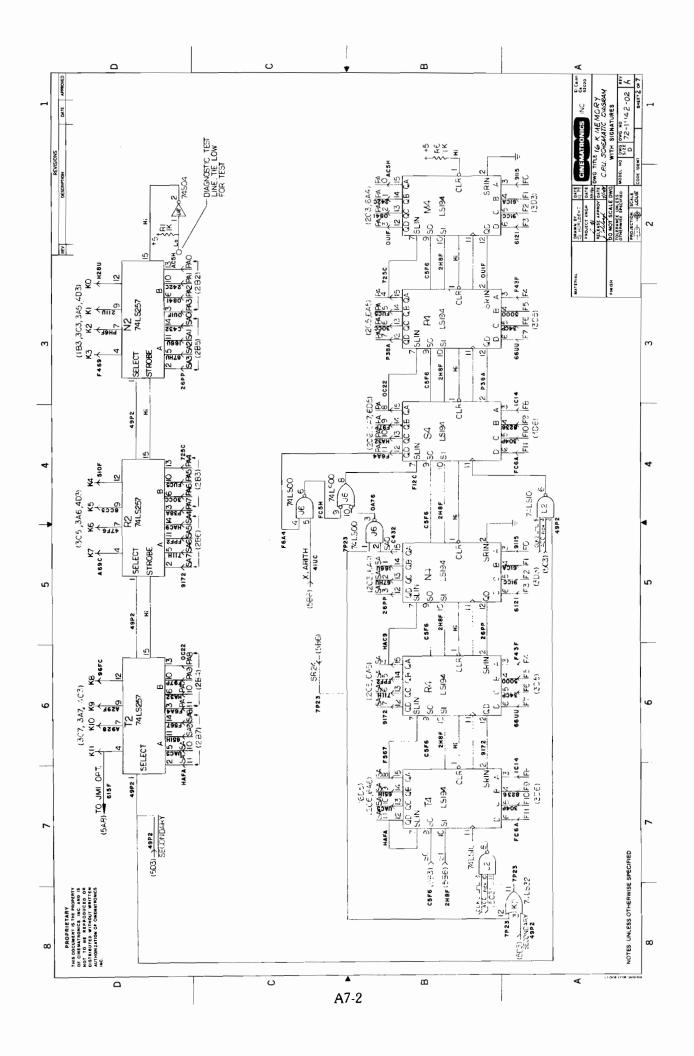

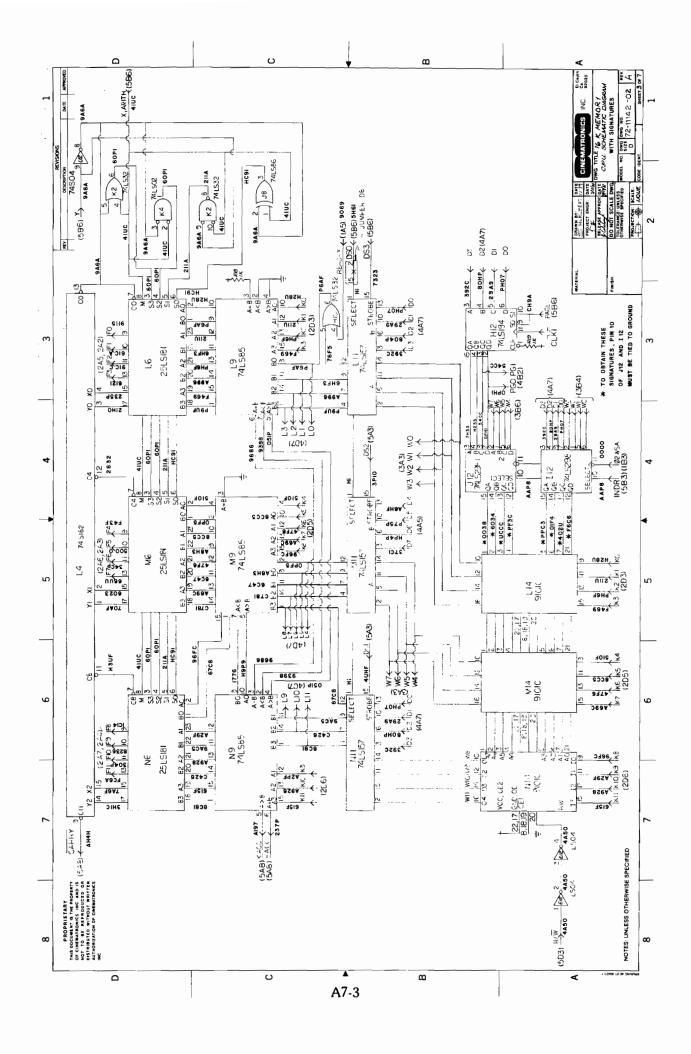


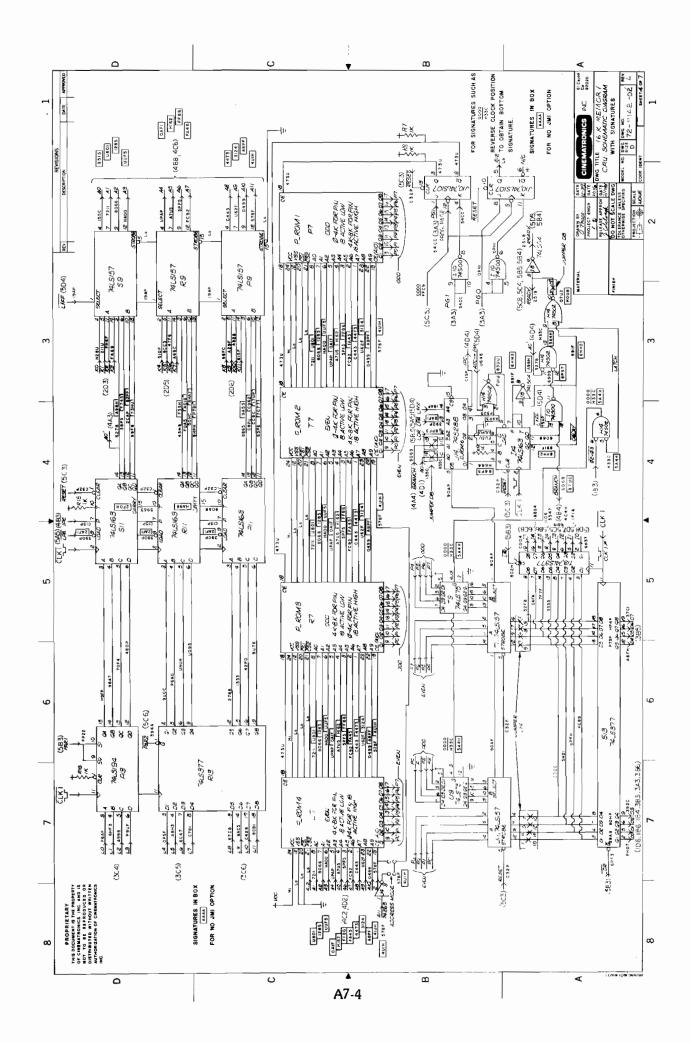

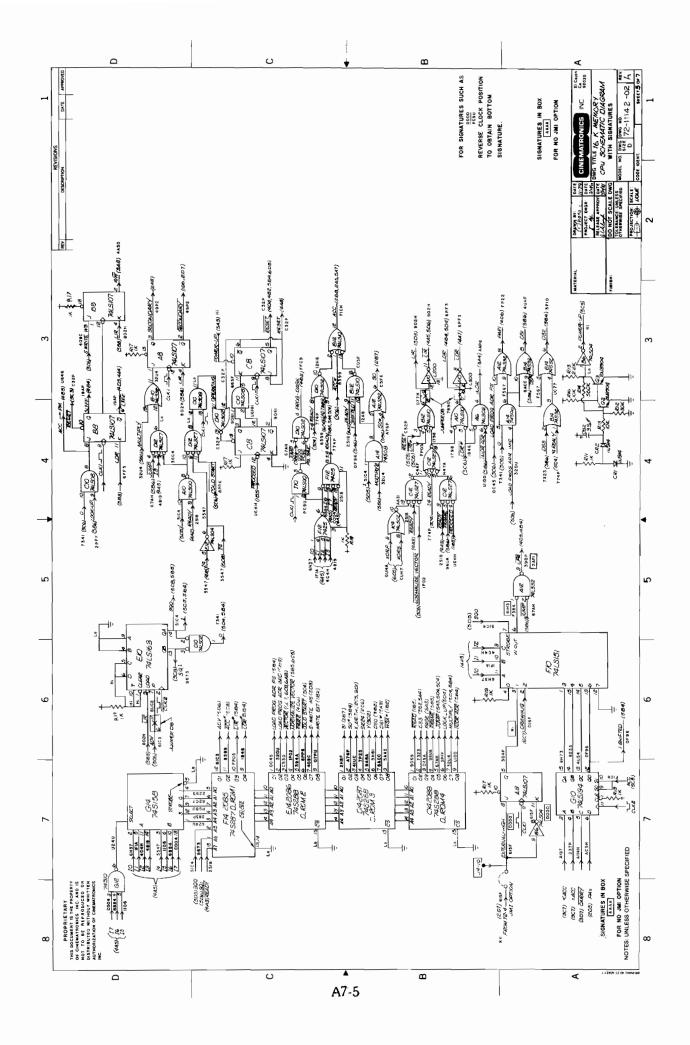


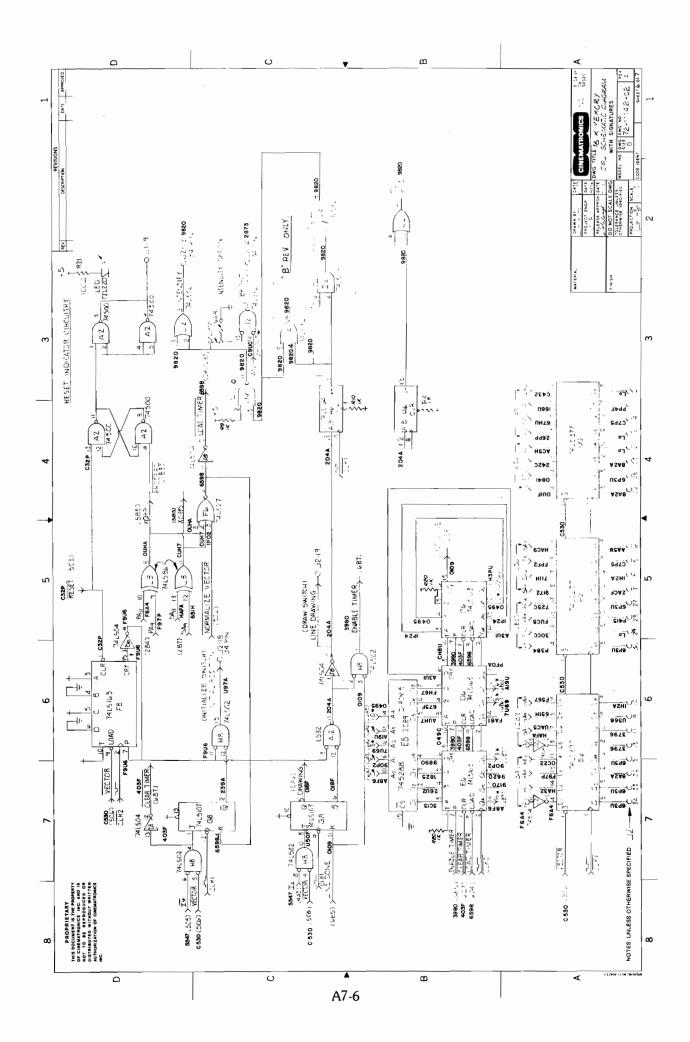



		SCHMTC LOCATION SHT-AREA	/-A6									/-46	9	O			1	Ť.	1-84	<b>\</b>						<u> </u>	_			_							El Cajon A Ca. 92020	47.10	REV
_				13-21	-12	J3-23	- 15	13-20	¥.	r PcB											2-6	2-7	0-10	į 1													MATRIONICS INC.	DWG TITLE 16 K MEMORY	DWG NO.
	4	FROM /TO IC- PIN NO.		CONN. J3-21	15 TO C4-12	CONN. J3-23	12 TO C4-15	CONN. J3-20	FROM	DISPLAY PCB	70	TO C4-13	CONN. J3-RE				94	0 40-0	FROM FR-4	FROM F2-5	FROM F2-6	FROM FR-7	FROM FR-9													E 1980	CINEMAT	DWG TITLE 16	MODEL NO. DWG
_	CONNECTOR J4	FUNCTION	PRIMARY INPUT 13		PRIMARY INPUT !		PRIMARY INPUT		XDAC OUTPUT			DRIMARY MIRIT IL	t in a land the same of the sa	NC	NC	GND	No.	HIGH OUTPUT	OUTPUT Ø		OUTPUT 2	OUTPUT 3	OUTPUT 4													NUC 4	day escott	RELEASE APPROVE DAY	DO NOT SCALE DWG
	_	PIN NO.	`		ď		М	_	4		_	ζ.	`	9	7	ю (	<u>س</u> ز	2	11	18	ű	4	5 4														MATERIAL:		HSINI
		SCHMTC LOCATION SHT-AREA			1-06					1-86						;	1-46									40	00-1												
	R 13	FROM /TO IC - PIN NO.			70 E4-4	TO E4-1	TO E4-2	TO E4-3	TO E4-13	T0 D4 -1	15 St. 10	0 04-3 5-40 07	TO 04-12	70 04-13	70 04-14	TO 04-15	10 04-1	70 64-3	70 C4-4	TO C4-15	CONN. J4-3	10 04-14	CONN. J4-1	CONN J4-5	70 09-12	CONN. J4-2	0 4	TO A4-1							,				
	CONNECTOR J3	FUNCTION	NC	+5	SECONDARY INPUT &	SECONDARY INPUT 3	SECONDARY INPUT &	SECONDARY INPUT !	SECONDARY INPUT 6	PRIMARY INPUT 3	PRIMARY INPUT &	PRIMARY INPUT	PRIMARY INPUT 7	PRIMARY INPUT 6	PRIMARY INPUT 5	PRIMARY INPUT 4	PRIMARY INPUT II		PRIMARY INPUT 8	PRIMARY INPUT IZ	,	PRIMARY INPUT 13	PRIMARY INPLIT 14		PRIMARY INPUT IS	HOTHER MAC	COIN SWITCH	COIN SWITCH	(NORMALY OPEN)	GND									
		PIN NO.	^	⊲	М	4	η	٥	7	00	σ :	9 =	12/	/3	4	5,	0 !	180	0,	80		તે	22	}	23	70	t 7	52	_	50									
		SCHMTC LOCATION SHT-AREA	6-44				6-A5				6-46		6-03	6-A6	6-63						6-06	6-05	6-44					6-A5				6-46							
	OR JR	FROM /TO IC - PIN NO.		FROM M2-19	FROM MZ-Z		FROM P2-9	FROM PZ-19	FROM P2-2	FROM P2-6	FROM S2-9	FROM SE-19	FROM JR-3	FROM SR-2	FROM JZ-11		FROMI	10	CONN. 34-4		FRGM H8-13	FKOM IB-2	FROM M2-16		FROM MZ-12	1 - CO	FROM MA-13	FROM PR-16		FROM PZ-15	FROM PR-5	FROM SR-16	TROM CALIF	FROM SZ-5					
	CONNECTOR	FUNCTION	YDAC BIT /	YDAC BIT Ø		YDAC BIT Z	YDAC BIT 5	YDAC BIT 4	YDAC BIT 7	BIT		YDAC 811 8	NTENSITY	YDAC BIT II	BRIGHT	GND	XDAC OUTPUT			GND	INITIALIZE SWITCH	DRAW SWITCH	GND XDAC BIT Ø	GND		GND		817.4	817.5	BIT 6	2 1 2	XDAC BIT B	0 10	XDAC BIT IS					
		PIN NO.	,	ત્ય	m	4	Ŋ	ای	7	ø	ω ;	9 :	12	, x	4		e 					0)	20	22	23	42 v	0 9	27	26	53	ရှိ	ا ا	4 4	0 to					
	71	SCHMTC LOCATION SHT-AREA			1 - C 4							50-0									`	77								_	0								
	CONNECTOR J1	FROM / TO IC - PIN NG.				10 PO						rkom Az-3,6								4		50 40			,	NO MOLESCY, GOTORNACO	SO WITH	PIN NO. 1 CALLED OUT											
MEMATRONICS INC. AND 15	DISTRIBUTED WITHOUT WRITTEN AUTHORIZATION OF CINEMATRONICS	FUNCTION	NC	νC	COIN COUNTER		(FEMALE) GND	GND	GND	NC		LEU CAIMODE	, + ,	NC						;		32					C.P.U. BOARD WITH	PIN NO. 1											
OF C	T T T	% ¥ %	~	a	;r)			Ĵ	9	7	0	ν 5	? =	1,5						L						,	_	_			0								FOR 12-CN

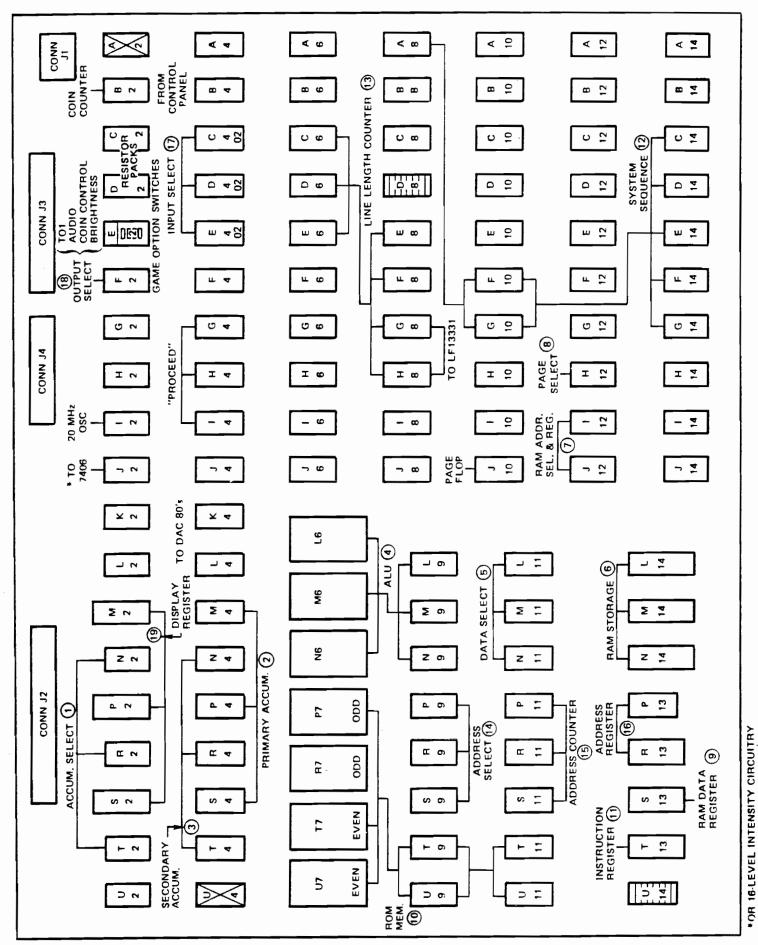


A 8

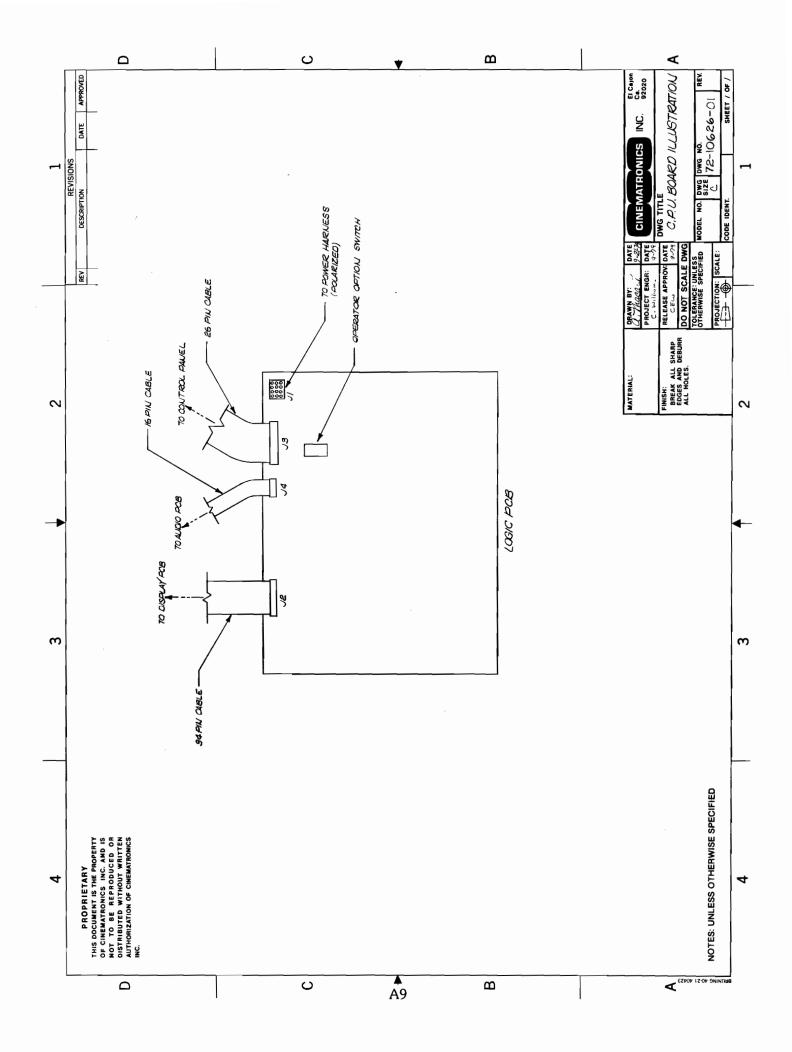


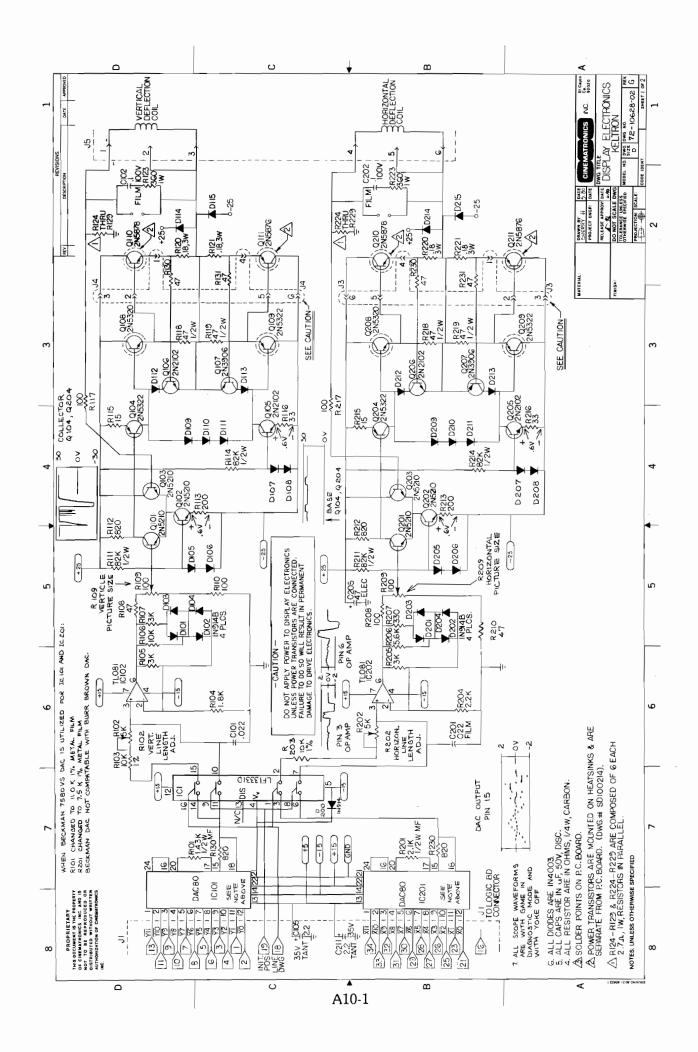


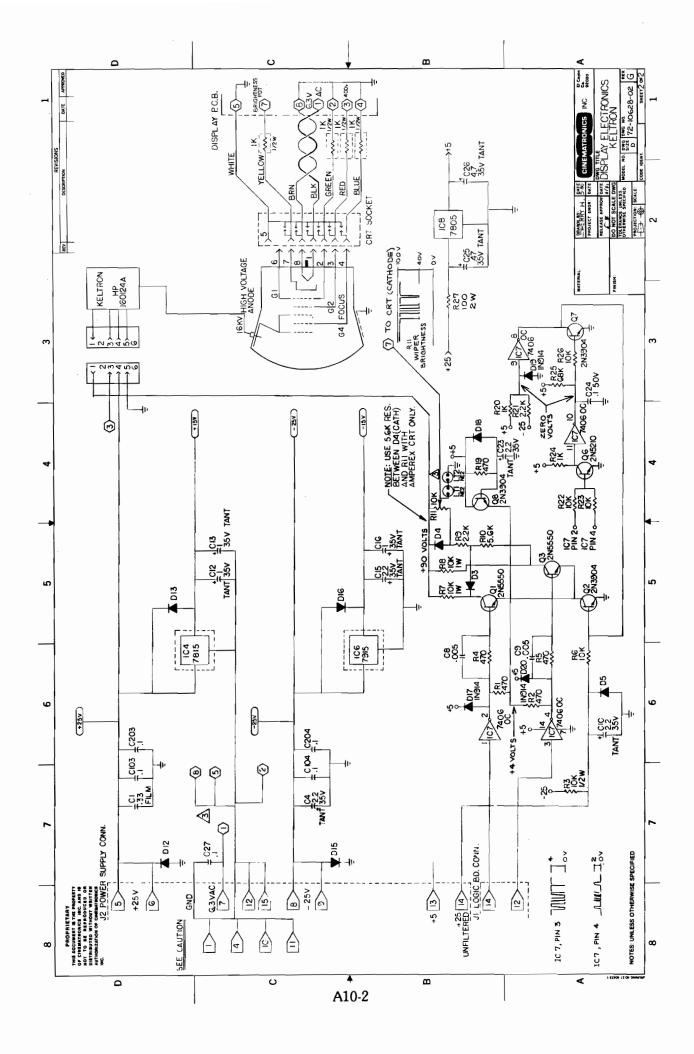

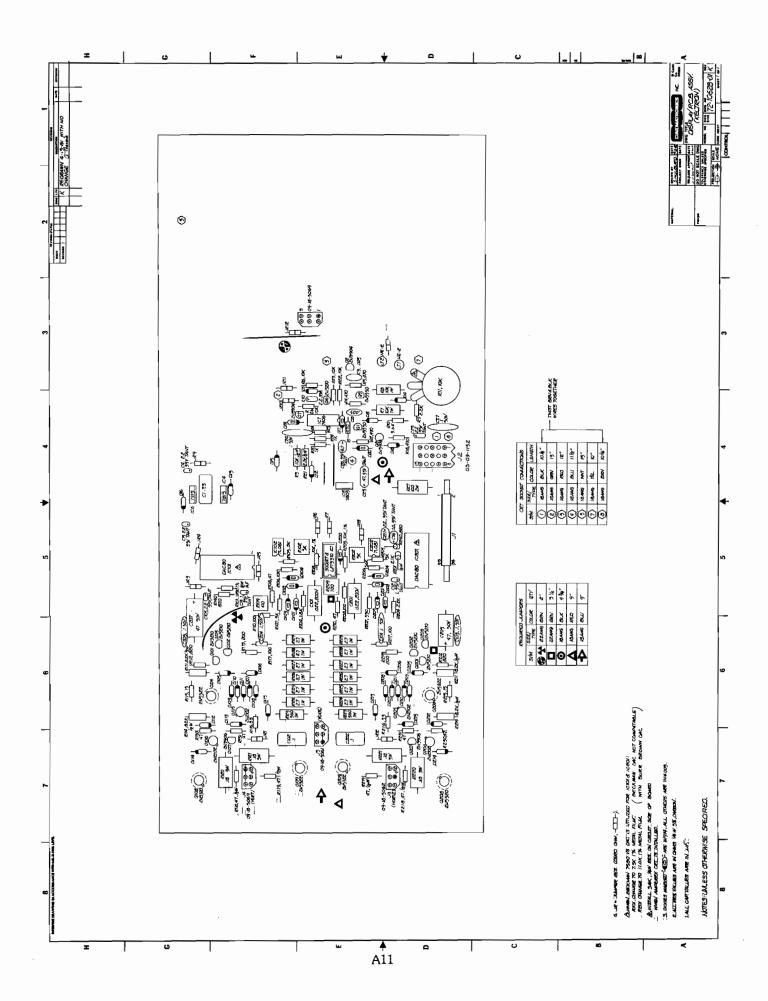

## MONITOR ASSEMBLY (KELTRON) 38-10633-01 MONITOR ASSEMBLY (PTK) 38-11207-01

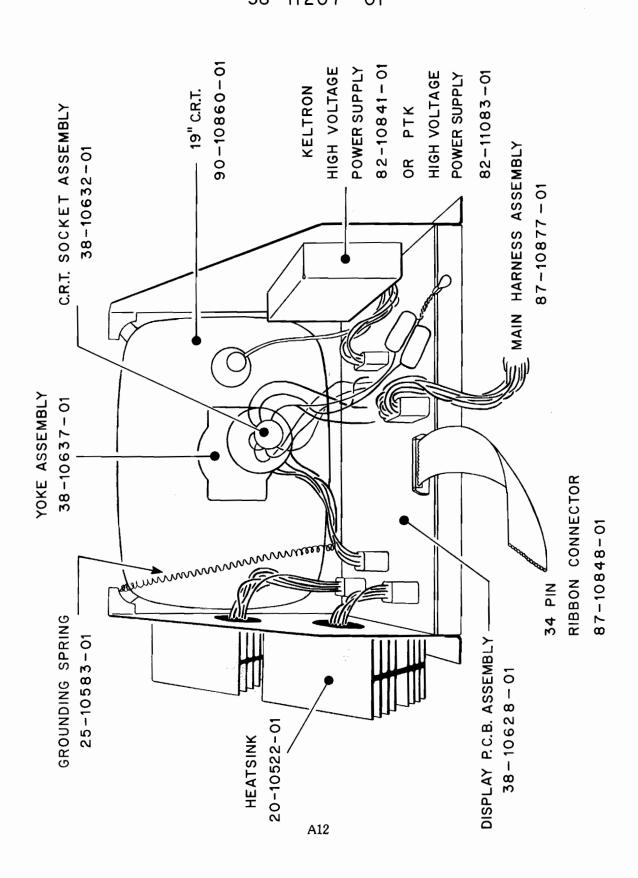

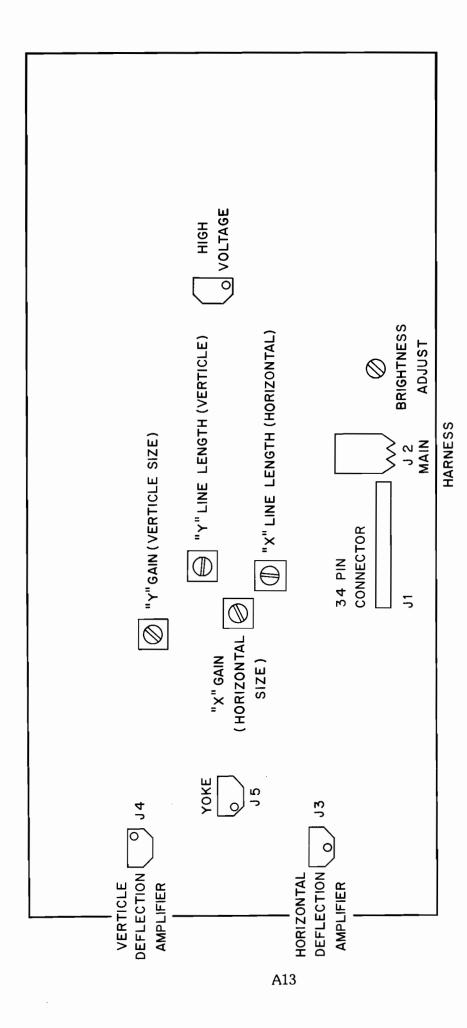

## DISPLAY P.C.B.

## CONNECTORS AND ADJUSTMENTS

