## ADJUSTMENT OF GAME PC BOARD (LIQUID KIDS G25 00620

## G-CONNECTOR (JAMMA)

			11
DOL	В .		SOUND VR
	DIP SW		(⊕ INCREASE
	A		INCREASE
Ш		0.71	
		S	

☆ CONTROL OF THIS GAME USES ONE 2-WAY

JOYSTICK AND 2 BUTTONS.

SOLDER SIDE		-	COMPONENTS SIDE
GND	A	1	GND
GND	В	2	GND
+ 5 V	C	3	+ 5 V
+5V	D	4	+5V
-5V	E	5	- 5 V
+12V	F	6	+12V
POST	H	7	POST
COIN METER B	J	8	COIN METER A
COIN LOCKOUT B	K	9	COIN LOCKOUT A
SPEAKER (-)	L	10	SPEAKER (+)
SOUND GND	M	11	SOUND
VIDEO G	N	12	VIDEO R
VIDEO SYNC	P	13	VIDEO B
SERVICE SW	R	14	VIDEO GND
TILT SW	S	15	
(COIN B)	T	16	COIN A
2P SELECT	U	17	1P SELECT
	V	18	
	W	19	4
2P LEFT	X.	20	7 1P LEFT
2P RIGHT	Y.	21	1P RIGHT
2P ATTACK BUTTON	Z	22	1P ATTACK BUTTON
2P JUMP BUTTON	a	23	1P JUMP BUTTON
	b	24	
	. C	25	
7	d	26	
GND	e	27	GND
GND	f	28	GND

NOTE) BEFORE CHANGING THE SETTING OF THE DIP SWITCH, TURN THE POWER OFF.

## ♦ SETTING OF DIP SWITCH A

(\*): FACTORY SETTING

SETTINGS	POSITIONS	1	2	3	4	5	6	7	8
PLAY STILE	TABLE	0FF							10.14
	* UPICHT	ON			1	3			
SCREEN ROTATION	* NORMAL		OFF		4 = 10				-
	REVERSE		ON-					1	
TEST MODE	* NORMAL GAME			OFF		1			
	TEST MODE		•	ON				1	
ATTRACT COUNT	* WITH				OFF			1	
ATTRACT SOUND	WITHOUT				ON				
	* 1 COIN 1 PLAY					OFF	OFF		12
PLAY PRICING COIN A	2 COINS 1 PLAY					ON.	011		
	3 COINS 1 PLAY					OFF.	ON		
	4 COINS 1 PLAY					ON	101	160	
PLAY PRICING COIN B	* 1 COIN 2 PLAYS			4				OFF	OF
	1 COIN 3 PLAYS							ON	01
	1 COIN 4 PLAYS				J			OFF	ON
	1 COIN 6 PLAYS			4		-		ON	311

## ♦ SETTING OF DIP SWITCH B

SETTINGS	POSITIONS	1	2	3	4	- 5	6	7	8
GAME DIFFICULTY EASY(A) → DIFFICULT(D)	* RANK B RANK A	OFF ON	OFF			8		7.5	
	RANK C RANK D	OFF ON	ON						
BONUS POINTS 1 UP (K=1.000 PTS.)	* 30K, 100K, 200K, 300K 30K, 150K, 300K, 450K			OFF ON	OFF				
	50K, 250K, 500K, 750K 50K, 350K, 700K, 1050	PTS.E	VERY	OFF ON	ON				
NUMBER OF	* 3				,	OFF	OFF		
PLAYERS	5 4			e-1000000000000000000000000000000000000	3.5	OFF ON	ON		
CONTINUE	* WITH WIHTOUT							OFF ON	4
ALVE TURE	* WHEN DIP SW A-1 IS SET TO "OFF": WITH SCREEN INVERSION, 2-P PLAY. WHEN DIP SW A-1 IS SET TO "ON": WITHOUT SCREEN INVERSION, SINGLE CONTROL PANEL, 2-P PLAY.							OFF	
GAME TYPE	WHEN DIP SW A-1 IS SET TO "OFF": WITH SCREEN INVERSION, 2-P PLAY. WHEN DIP SW A-1 IS SET TO "ON": WITHOUT SCREEN INVERSION, W-CONTROL PANEL .2-P PLAY.								ON