

CONNECTING DIAGRAM

(CN1)

半田面 Solder Side				部品面 Parts Side	
GND	A	1		GND	
GND	B	2		GND	
+5V	C	3		+5V	
+5V	D	4		+5V	
N/C	E	5		N/C	
+12V	F	6		+12V	
	H	7			
Coin Counter 2	J	8		Coin Counter 1	
N/C	K	9		N/C	
Speaker (-)	L	10		Speaker (+)	
N/C	M	11		N/C	
Video Green	N	12		Video Red	
Video Sync	P	13		Video Blue	
Service	R	14		Video GND	
N/C	S	15		N/C	
Coin 2	T	16		Coin 1	
※ 2P Start	U	17		1P Start	
2P Up	V	18		1P Up	
2P Down	W	19		1P Down	
2P Left	X	20		1P Left	
2P Right	Y	21		1P Right	
2P Push S/W 1	Z	22		1P Push S/W 1	
2P Push S/W 2	a	23		1P Push S/W 2	
N/C	b	24	※	Start 2P vs CPU 協力プレー	
N/C	c	25		N/C	
N/C	d	26		N/C	
GND	e	27		GND	
GND	f	28		GND	

※Use only when doing 2P conversion.

(CN2)

3P Right	1
3P Left	2
3P Up	3
3P Down	4
3P Push S/W 1	5
3P Push S/W 2	6
N/C	7
3P Start	8
GND	9

(CN3)

4P Right	1
4P Left	2
4P Up	3
4P Down	4
4P Push S/W 1	5
4P Push S/W 2	6
N/C	7
4P Start	8
GND	9

2P用筐体の場合：2P Startは、対戦プレースタート
CN1. 24 は、協力プレースタート

DIP SWITCH SETTINGS

(WWF WRESTLEFEST)

DIP SWITCH 1

1	2	3	4	5	6	7	8	ITEM
								● Coin-1 and 2
OFF	OFF							※ 1 Coin 1 Play
ON	OFF							1 Coin 2 Play
OFF	ON							2 Coin 1 Play
ON	ON							3 Coin 1 Play
								● Continue Price
				ON				※ 無し(ゲームスタートと同じ) Without Continue Price <Note 1>
				OFF				有り(1コイン) With Continue Price <Note 2>
								● Sound for Demonstration
					OFF			※ 可 Sound
					ON			不可 No Sound
								● 画面反転 Screen Invert
						OFF		※ 通常 Normal
						ON		反転 Invert
								● F.B.I. Logo 表示
							OFF	※ 有り Yes
							ON	無し No
								● Regain Power Price
			ON					無し(ゲームスタートと同じ) No <Note 3>
			OFF					※ 有り(1コイン) Yes <Note 4>
								● Buy-in Price
		ON						無し(ゲームスタートと同じ) Without Buy-in Price <Note 5>
		OFF						※ 有り(1コイン) With Buy-in Price <Note 6>

※Recommended Factory Setting. (標準設定)

<Note 1> The continue price for the game is the game as the starting price for the game.

<Note 2> The continue price is always one coin.

<Note 3> The regain power price for the game is the same as the starting price for the game.

<Note 4> The regain power price is always one coin.

<Note 5> The Buy-in price for the game is the same as the starting price for the game.

<Note 6> The Buy-in price is always one coin.

DIP SWITCH 2

1	2	3	4	5	6	7	8	ITEM
								● 難度 Degree of Difficulty
OFF	OFF							※ 普通 Normal
ON	OFF							やさしい Easy
OFF	ON							ややむずかしい Difficult
ON	ON							むずかしい Most Difficult
								● セッティング切り替え Setting Select
		OFF	OFF					※ 4人用 4 Play Setting
		ON	OFF					3人用 3 Play Setting
		OFF	ON					2人用 2 Play Setting
								● クリア時体力回復 Clear Stage Power Up <Note 7>
					OFF	OFF		※ 24
					ON	OFF		32
					OFF	ON		12
					ON	ON		0
								● チャンピオンシップ戦は何試合目 Championship Game
							OFF	※ 5試合目 5th
							ON	4試合目 4th
				OFF				● Not used

※Recommended Factory Setting. (標準設定)

<Note 7> Gives Players additional points when stage is cleared.