

Wiring Diagram for Galaxian Kong board (18 Pin).

COMP SIDE		SOLDER SIDE
GROUND	1	GROUND
GROUND	2	GROUND
GROUND	3	GROUND
SPKR GROUND	4	SPEAKER
+12 VOLTS	5	+12 VOLTS
	6	
1P UP	7	
2P UP	8	
+5 VOLTS	9	+5 VOLTS
1P DOWN	10	
2P DOWN	11	
	12	2P START
COIN I/P	13	1P START
1P JUMP	14	1P RIGHT
RED O/P	15	1P LEFT
2P RIGHT	16	BLUE O/P
2P LEFT	17	GREEN O/P
2P JUMP	18	SYNC O/P

Dip Switch Settings.

Switch 1

OFF - 1 Coin 1 Play
ON - 1 Coin 3 Plays

Switch 2

OFF - Table
ON - Upright

Switch 3 Switch 4

ON	ON	-	6 Men
OFF	ON	-	5 Men
ON	OFF	-	3 Men
OFF	OFF	-	3 Men

Switch 5 Switch 6

Not Used.

Wiring diagram for Galaxian Kong (22 Pin).

GROUND	A	1	GROUND
GROUND	B	2	GROUND
+5 VOLTS	C	3	+5 VOLTS
+5 VOLTS	D	4	+5 VOLTS



COIN I/P	J	8
----------	---	---

✓ <u>2P JUMP</u>	K	9
------------------	---	---

✓ <u>1P START</u>	L	10
-------------------	---	----

✓ <u>1P LEFT</u>	M	11
------------------	---	----

✓ <u>1P UP</u>	N	12
----------------	---	----

<u>2P LEFT</u>	P	13
----------------	---	----

<u>1P DOWN</u> <i>NO PIN BLUE</i>	R	14
-----------------------------------	---	----

<u>GRO</u>	S	15
------------	---	----

RED O/P	T	16
---------	---	----

BLUE O/P	U	17
----------	---	----

<u>SPEAKER</u>	V	18
----------------	---	----

<u>+12</u>	W	19	<u>+12</u>
------------	---	----	------------

+12 VOLTS	X	20
-----------	---	----

GROUND	Y	21
--------	---	----

GROUND	Z	22
--------	---	----

<u>1P JUMP</u>

<u>2P START</u>

<u>1P RIGHT</u>

<u>2P UP</u>

<u>2P RIGHT</u>

<u>2P DOWN</u> <i>NO PIN</i>

BLK

GREEN O/P

SYNC O/P

SPEAKER

+12 VOLTS

GROUND

GROUND
