

| | | | | | |
|-------|-------|-------|-------|-------|--------|
| 1p | Start | ECM L | 2p | Start | ECM 10 |
| UP | ECM | N | UP | ECM | 12 |
| DOWN | ECM | 9 | DOWN | ECM | K |
| LEFT | ECM | M | LEFT | ECM | P |
| RIGHT | ECM | 11 | RIGHT | ECM | 13 |

Button connect to 1p start Button ECM 14.

Coin 10p ECM J
50p ECM 8

Switch Settings

| | |
|-----|-------------------------------|
| 1 | 2 |
| OFF | OFF 2 MEN |
| ON | OFF 3 MEN |
| OFF | ON 4 MEN |
| ON | ON 5 MEN |
| 3 | 4 |
| OFF | OFF BONUS AT 30,000 PTS. |
| ON | OFF BONUS AT 50,000 PTS. |
| 5 | |
| OFF | 20p per play |
| ON | 10p per play |
| 6 | |
| OFF | UPRIGHT |
| ON | TABLE |