

S/N 1569459
3/90

ML4400,
LOGIC ANALYZER
OPERATING MANUAL

February 28, 1989

Copyright, 1988
Arium Corporation

Customer Support:
1-800-TO-ARIUM (outside CA); 714-978-9531

TABLE OF CONTENTS

I. SYSTEM DESCRIPTION

A.	SPECIFICATIONS	
B.	OVERVIEW	I-02
C.	HELP INFORMATION	I-04
D.	SYSTEM COMPONENTS AND CONFIGURATIONS	I-05
1.	MAJOR SYSTEM COMPONENTS AND CONFIGURATIONS	I-05
2.	MAINFRAME	I-06
a.	Internal	I-06
b.	Front Panel	I-07
c.	Rear Panel	I-09
3.	CAPTURE MODULES ("CAPTURE CARDS")	I-10
a.	General	I-10
b.	Standard Capture Module (SC-4400)	I-10
c.	High-Speed Capture Module (HS-4400)	I-11
4.	LOGIC PODS	I-12
5.	MICROPROCESSOR PODS	I-13
6.	MISCELLANEOUS ARIUM COMPONENTS (OPTIONAL)	f-1.5
a.	3-1/2-inch Floppy Disk Drive (FD-003)	I-15
b.	ROM Emulator Pod (W-016)	I-15
c.	Serial Data Analysis Pod (8RS-232)	I-15
E.	NON-ARIUM PERIPHERAL EQUIPMENT	I-17
1.	EXTERNAL KEYBOARD	I-17
2.	VIDEO MONITOR	I-17
3.	PARALLEL PRINTER	I-17
4.	SERIAL PORT	I-17

II. CONNECTIONS

A.	MAINFRAME AND CAPTURE MODULES ("Capture Cards")	II-01
B.	CAPTURE MODULES AND LOGIC PODS (100-, 200, AND 400-MHz)	II-02
C.	100-MHZ LOGIC POD AND EXPANSION LOGIC POD	II-02
D.	LOGIC POD AND SYSTEM UNDER TEST (VIA PROBES)	II-03
	1. LOGIC POD PROBE SETS	II-03
	2. PIN ASSIGNMENTS ON POD CONNECTORS	II-03
	3. PROBE CLIPS	II-03
	4. PROBE SET COLOR CODING	II-04
E.	STANDARD CAPTURE MODULE AND MICROPROCESSOR PODS	II-06
	1. ADAPTOR FOR ML4100 MICROPROCESSOR PODS (AD-4100)	II-06
	2. STANDARD CAPTURE MODULE AND ADAPTOR OR ML4400 MICRO- PROCESSOR POD	II-06
	3. ADAPTOR AND ML4100 MICROPROCESSOR POD	II-06
F.	MICROPROCESSOR POD AND MICROPROCESSOR	II-07
G.	OPTIONAL PERIPHERAL EQUIPMENT	II-08
	1. SERIAL DATA ANALYSIS POD (8RS-232)	II-08
	2. ROM EMULATOR POD(S) AND ML4400	II-09

III. SETUP OF OPERATING PARAMETERS

A.	GENERAL	III-02
	1. SETUP KEYS AND SCREENS	III-02
	2. CONTENTS OF THE SETUP SCREENS	III-03
	3. SPECIFYING SETUP PARAMETERS	III-04
B.	GROUPS	III-05
	1. DEFINING A GROUP	III-05
	2. GROUP OPERATING AND DISPLAY PARAMETERS	III-06
C.	STATUS SCREEN	III-07

D.	CONFIGURATION SETUP SCREEN	III-10
1.	GROUPS	III-10
2.	GROUP NAME	III-10
3.	GROUP DEFINITION (CAPTURE MODULES)	III-12
4.	GROUP CLOCK SOURCE	III-13
5.	GROUP RECORD WIDTH	III-13
6.	VOLTAGE THRESHOLD FOR LOGIC PODS	III-13
E.	FORMAT DISPLAY SETUP SCREEN	III-14
1.	FORMAT FOR TIMING DISPLAY	III-15
2.	FORMAT FOR STATE DISPLAY SCREEN (and Trigger Words Setup (Screen))	III-16
3.	POD MODE	III-17
F.	CLOCK SETUP SCREEN	III-19
1.	CLOCK SOURCE	III-20
2.	CLOCK RATES	III-20
3.	INTERNAL CLOCK	III-21
4.	EXTERNAL CLOCK	III-22
G.	TRACE CONTROL SETUP SCREEN	III-25
1.	TRACE DELAY	III-26
2.	DATA QUALIFICATION (SC-4400 only)	III-26
H.	TRIGGER WORDS SETUP SCREEN	III-28
1.	TRIGGER WORDS	III-30
2.	CHANGING NUMBER BASE (TEMP BINARY softkey)	III-31
3.	TRIGGER WORD RANGE (SC-4400 only)	III-31
I.	TRIGGER SEQUENCE SETUP SCREEN	III-32
1.	PREDEFINED TRIGGER SEQUENCES	III-35
2.	USER-DEFINED SEQUENCE	III-37

IV. OPERATION

A. GENERAL	IV-01
1. POWER ON/OFF SWITCH	IV-01
2. HEADER LINE	IV-02
3. "HELP" INFORMATION	IV-03
4. KEYBOARD	IV-05
5. SOFTKEYS (F1-F6)	IV-11
B. EDITING AND SCROLLING THROUGH SETUP AND DATA FIELDS	IV-12
1. EDITING SETUP PARAMETERS AND DATA	IV-12
2. MOVING THE CURSOR--GENERAL	IV-13
3. MOVING THE CURSOR--DATA DISPLAY SCREENS	IV-13
C. RECORDING DATA	IV-14
D. DISPLAYING RECORDED DATA	IV-15
1. DISPLAY MODES--GENERAL	IV-15
2. TIMING DISPLAY MODE	IV-16
a. General	IV-16
b. Display Format	IV-19
c. Timing Line Labels	IV-19
d. Cursors and Marks	IV-20
e. Memory (Trace Buffer or Reference Memory)	IV-21
f. Measuring Time	IV-21
3. STATE DISPLAY MODE	IV-22
a. General	IV-22
b. Scrolling, Cursor and Marks	IV-24
c. TimeStamp	IV-25
d. Search Function	IV-26
e. Filling and Editing Reference Memory	IV-29
4. DISASSEMBLY DISPLAY MODE (Optional)	IV-31
a. General	IV-31
b. Scrolling, Cursor, and Marks	IV-32
c. TimeStamp	IV-33
d. Search Function	IV-34
f. Data Field Display	IV-35
5. SPLIT-SCREEN DISPLAY	IV-36
6. GROUPS	IV-38

E.	PRINTING DISPLAYED DATA AND OTHER SCREENS (via PRINT key)	IV-3 9
F.	MISCELLANEOUS OPERATING FUNCTIONS	IV-40
1.	STORING SETUP FILES	IV-40
2.	STORING REFERENCE MEMORY	IV-42
3.	COMPARE FUNCTION	IV-44
4.	SEARCH FUNCTION	IV-47
5.	ROM EMULATION (Optional)	IV-47
6.	RS232C PORT SETTINGS	IV-48
7.	PERFORMANCE ANALYSIS	IV-50
a.	General	IV-50
b.	Data Capture Settings	IV-51
c.	Time Analysis	IV-52
d.	Value Analysis	IV-54
8.	AUTOCAPTURE	IV-56
9.	FLOPPY DISK FUNCTIONS	IV-57
G.	SUPPORT FUNCTIONS	IV-59
1.	CALCULATOR	IV-59
2.	STOPWATCH	IV-61
3.	SETTINGS FOR DATE, TIME, ALARMS, PRINTER, VIDEO AND TRIGGER BELL	IV-62
H.	INFORMATIONAL DISPLAY SCREENS	IV-65
1.	ASCII CHART	IV-65
2.	PROBE COLORS	IV-66
3.	INSTALLED OPTIONS	IV-68

V. 8-BIT MICROPROCESSOR PODS

A.	GENERAL	v-01
1.	CONNECTIONS AND ADAPTOR POD	v-01
2.	DISASSEMBLY	v-01
3.	CONFIGURATION AND SETUP	v-02
4.	OPERATION	v-03
B.	81-080 MICROPROCESSOR POD (Supports Intel 8085, 8035/39/40, 8031/32)	v-04
C.	8M-080 MICROPROCESSOR POD (Supports Motorola 6800, 6802, 6808)	v-05
D.	8M-089 MICROPROCESSOR POD (Supports Motorola 6809, 6800E)	v-06
E.	8R-065 MICROPROCESSOR POD (Supports Rockwell 6502, 6512, 65C02, 65C102, 65C112)	v-07
F.	82-080 MICROPROCESSOR POD (Supports Zilog Z80)	v-09
G.	8N-080 MICROPROCESSOR POD (Supports National Semiconductor NSC800)	v-10

VI. 16-BIT MICROPROCESSOR PODS

A.	GENERAL	VI-01
1.	CONNECTIONS AND ADAPTOR POD	VP-01
2.	DISASSEMBLY	VI-01
3.	CONFIGURATION AND SETUP	VI-02
4.	OPERATION	VI-02
B.	16M-680 MICROPROCESSOR POD (for Motorola 68000/68010)	VI-03
1.	GENERAL	VI-03
2.	HARDWARE	VI-04
3.	TRANSPARENT MODE	VI-08
4.	FILTERED MODE	VI-09
5.	JUMP MODE	VI-11
6.	TRIGGERING CONSIDERATIONS	VI-11
7.	DATA DISPLAY	VI-12
8.	DISASSEMBLY SOFTWARE	VI-17
C.	16-086 MICROPROCESSOR POD (supports 8086/8087/8088)	VI-18
1.	GENERAL	VI-18
2.	HARDWARE	VI-19
3.	MINIMUM PROCESSOR MODE, TRANSPARENT MODE ONLY	VI-25
4.	MAXIMUM PROCESSOR MODE WITH TRANSPARENT POD MODE	VI-25
5.	MAXIMUM PROCESSOR MODE WITH FILTERED POD MODE	VI-26
6.	MAXIMUM PROCESSOR MODE WITH JUMP POD MODE	VI-27
7.	TRIGGERING METHODS WITH PREFETCHING OR BYTE REPACKING	VI-28
8.	DISPLAY	VI-30

VII. 32-BIT MICROPROCESSOR PODS

A. GENERAL	VII-01
1. CONNECTIONS AND ADAPTOR POD	VII-01
2. DISASSEMBLY	VII-01
3. OPERATION	VII-01
4. CONFIGURATION AND SETUP	VII-02
a. Format Display Screen (via FORMAT key)	VII-02
b. Clock Setup Screen (via CLOCK key)	VII-02
c. Trigger Words Setup Screen (via TRIG key)	VII-02
d. Status, State, and State Search Screens	VII-02
B. 32M-682 MICROPROCESSOR POD (Supports Motorola 68020)	VII-03
1. GENERAL	VII-03
2. HARDWARE	VII-03
a. Signal Assignments	VII-03
b. Status Codes	VII-06
c. Instruction Cache	VII-09
d. Triggering Problems Due to Instruction and Data Alignment	VII-09
e. Probe Color Codes for External Input Lines	VII-11
3. DISASSEMBLY MODE	VII-11
a. General	VII-11
b. Hardware Considerations	VII-11
4. PROBE MODE	VII-11
5. DATA DISPLAY	VII-11
a. General	VII-11
b. Timing Display	VII-11
c. State Display	VII-12
d. Disassembly Display	VII-13

VIII. ROM EMULATOR POD (RP-016)

A. GENERAL	VIII-01
B. SETUP AND CONFIGURATIONS	VIII-02
1. CONFIGURATION OF RS232C SERIAL PORT	VIII-02
2. CONFIGURATION OF ROM EMULATOR	VIII-03
C. OPERATION	VIII-05
1. TRANSFERRING DATA TO AND FROM THE ROM EMULATOR	VIII-05
2. EDITING DATA IN THE EMULATED POD	VIII-07
D. HARDWARE CONSIDERATIONS	VIII-10

APPENDICES

- A. ML4400 SPECIFICATIONS
- B. PROCEDURE FOR CALIBRATION, PERFORMANCE VERIFICATION AND MAINTENANCE
- C. ERROR MESSAGE EXPLANATIONS

FIGURES

I. SYSTEM DESCRIPTION

A. ML4400 Major System Components and Configurations	I-05
B. ML4400 Mainframe Internal Components	I-06
C. ML4400 Front Panel	I-07
D. ML4400 Keyboard	I-08
E. ML4400 Rear Panel Components	I-09
F. ML4400 Rear Panel	I-09
G. ML4400 Microprocessor Pods	I-14

II. CONNECTIONS

A. Probe Color Codes for LP-4050/LP-8025 Ten-Pair Set	II-04
B. Probe Color Codes for LP-4050 Six-Pair Set	II-05
C. Probe Color Codes for LP-8200/LP-4400 Ten-Pair Set	II-05
D. Serial Data Analysis Pod Connections	II-08

III. SETUP OF OPERATING PARAMETERS

A. ML4400 Keyboard	III-01
B. Record Width, Clock Rate, and Record Length	III-06
C. Status Screen	III-08
D. ML4400 Setup Keys	III-08
E. Setup Parameter Choices (Status Screen)	III-09
F. Configuration Setup Screen	III-11
G. Format Display Setup Screen	III-14
H. ML4400 Pod Modes	III-18
I. Clock Setup Screen	III-19
J. Maximum Clock Rates	III-20
K. Trace Control Setup Screen	III-25
L. Available Trigger Words	III-28
M. Trigger Words Setup Screen (with Status Bits Window)	III-29
N. Trigger Sequence Setup Screen (with "Edit Sequence" Activated)	III-33
O. Available Trigger Sequences	III-34
P. Trigger Sequences Differences (ML4100 and ML4400)	III-34
Q. User Sequence Setup Screen	III-37

IV. OPERATION

A.	ML4400 Front Panel	IV-02
B.	Help Topic Accessed from Timing Screen	IV-03
C.	Help Topic Index	IV-04
D.	ML4400 Keyboard	IV-05
E.	Timing Display Screen (X4, with Curtain)	IV-16
F.	Timing Display Screen (X1, with Trigger, Cursor and Mark)	IV-17
G.	State Display Screen (Accum. Time Mode, with Trigger and Mark)	IV-23
H.	State Display Search Screen (with Search Results Window)	IV-27
I.	Search Results on State Display Screen	IV-28
J.	Fill Reference Memory Window (in State Display Screen)	IV-29
K.	Disassembly Display Screen	IV-31
L.	Disassembly Display Screen (with Search Window)	IV-35
M.	Timing/Disassembly Split-Screen Display	IV-37
N.	Setup File Storage Screen (with Load Setup File Window)	IV-41
O.	Reference Storage Screen	IV-43
P.	Compare Screen (with Results Window)	IV-44
Q.	RS232C Settings Screen	IV-49
R.	Performance Analysis Screen	IV-50
S.	Performance Analysis Screen with Time Analysis Results	IV-53
T.	Performance Analysis Screen with Value Analysis Results	IV-55
U.	Disk Operations Screen	IV-57
V.	Calculator Screen	IV-59
W.	Stopwatch Control Screen	IV-61
X.	Set Date/Time/Misc. Screen	IV-62
Y.	ASCII Chart (Hex)	IV-65
Z.	Probe Colors Screen (for LP-4050)	IV-66
AA.	Probe Colors Screen (Microprocessor Pods)	IV-67
AB.	Installed Options Screen	IV-68

V. 8-BIT MICROPROCESSOR PODS (No figures)

VI. 16-BIT MICROPROCESSOR PODS

A.	Signal Assignments for 16M-680 Pod	VI- 5
B.	68000/68010 External and Status Signals for 16M-680 Pod	VI- 6
C.	Trigger Setup Screen with 16M-680 Pod	VI- 7
D.	68000/68010 Status Code Examples for 16M-680 Pod	VI- 8
E.	State Display Screen with 16M-680 Pod (All Modes)	VI-12
F.	Disassembly Display Screen with 16M-680 Pod (Transparent and Filtered Modes)	VI-13
G.	Disassembly Display Screen with 16M-680 Pod (Jump Mode)	VI-14
H.	Designation of Processor/Pod Modes for 161-086 Pod	VI-20
I.	8086/8088 Signal Assignments (Overview) for 161-086 Pod	VI-20
J.	8086/8088 Status Signal Assignments (Detailed) for 161-086 Pod	VI-21
K.	161-086 Pod Status Signals Whose Names Do Not Correspond to 8086/8088 Signals	VI-22
L.	External Field Signal Assignments for 161-086 Pod	VI-22
M.	Typical 8086/8088 Status Codes for Triggering on Specific Cycle Types for 161-086 Pod	VI-23
N.	Typical 8086/8088 Status Codes for Triggering on Specific Memory Segment Accesses for 161-086 Pod	VI-23
O.	Disassembly Display Screen for 161-086 Pod (Transparent and Filtered Modes)	VI-30
P.	Disassembly Display Screen for 161-086 Pod (Jump Mode)	VI-31

VII. 32-BIT MICROPROCESSOR PODS

A.	Signal Assignments for 32M-682 Pod	VII-04
B.	68020 External and Status Signals for 32M-682 Pod	VII-05
C.	68020 Data Bus Size Codes and Byte Validity	VII-07
D.	68020 Status Code Examples for 32M-682 Pod	VII-08
E.	Trigger Setup Screen with 32M-682 Pod	VII-10
F.	State Display Screen with 32M-682 Pod	VII-12
G.	Disassembly Display Screen with 32M-682 Pod	VII-14

VIII. ROM EMULATOR POD (RP-016)

A.	ROM Emulator Configuration Setup Screen	VIII-04
B.	ROM Emulator Transfers Screen	VIII-06
C.	ROM Emulator Editor Screen	VIII-09