



SEGA SERVICE

Field Service Bulletin Strike Fighter Deluxe Important Notice !!!

Problem: The Joystick used for the direction control (Camera Angle) on the Strike Fighter Deluxe is threaded and may come loose.

Solution: See the pictures below and install Blue Loctite (242) on the locations indicated ASAP.

Apply Loctite at these points

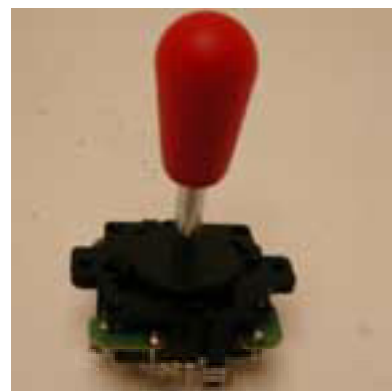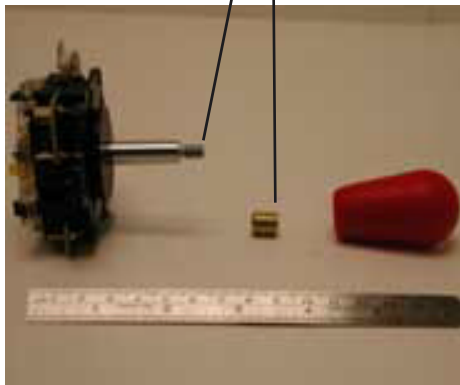

Assembled Joystick

If you have any questions or need further assistance, contact your Authorized Sega Distributor or Sega Technical Services at (415) 701-6580 M-F 7:30am to 4:00pm PST.