January 13, 2003





Field Service Bulletin

House of the Dead III Upright and Deluxe Models

Problem: The screws on the plastic covers of the slide mechanism can come

loose during heavy usage. This can cause the covers to break or

fall off.

Solution: Remove the 4ea Phillips screws, clean and re-install using Blue

Loctite (242) on the threads. Tighten the screws. Be sure to be careful and not get the Loctite on the plastics parts as it can

damage them.



Use Loctite on these screws (4ea / 2ea per side)

If you have any questions or need further assistance, contact your Authorized Sega Distributor or Sega Technical Services at (415) 701-6580 M-F 7:30am to 4:00pm PST.