108



## SERVICE BULLETIN

SEGA Service Department 45133 Industrial Drive Fremont, Ca. 94538 http://www.sgwservice.com Phone: 650.632.7580 Fax: 650.632.7594



This service bulletins affects all Zombie Revenge U/R games


Problem: Joystick knobs work loose and are unscrewed by players during game play.

Solution: Secure the joystick knob to the shaft by using the steps below:

- 1.) Unscrew and remove the joystick knob from the shaft.
- 2.) Clean all threads.
- 3.) Apply super glue(cyanoacrylate) to the threaded hole in the knob.
- 4.) Re-apply the knob to the shaft and tighten allow 10-15 min for glue to dry.

USE GLUE SPARINGLY! (It is not neccessary to apply glue to both portions)

APPLY GLUE HERE

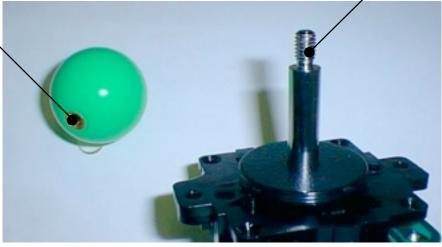

APPLY GLUE HERE

Please note that the joystick pictured above may not be the sameas the one used in your game, and is shown for clarification purposes only.