


Roekola 1448


No. 18990-A Power Distribution Panel Assembly

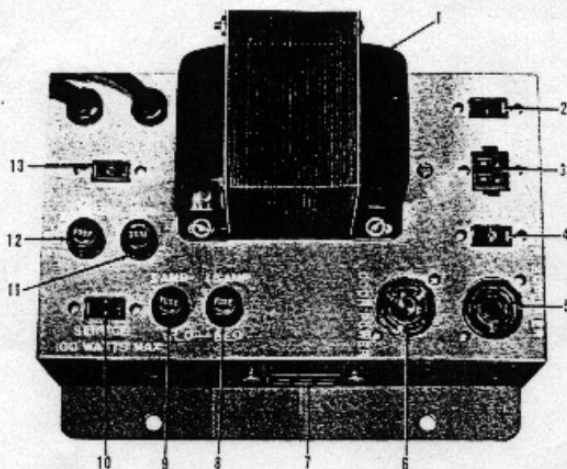

Part No.	Description
1 17604	Control Circuit Transformer
2 19006	Miniature Outlet
3 17596	4 Prong Socket
4 19006	Miniature Outlet
5 PH-3722	4 Prong Socket
6 PH-3740	4 Prong Socket
7 19008	6 Prong Jones Socket
8 ST-4321	1.6 Amp. Fuse
9 ST-3090	3 Amp. Slo-Bla Fuse
10 19006	Miniature Outlet
11 PH-3523	3 Amp. Fuse
12 ST-3092	10 Amp. Fuse
13 19006	Miniature Socket

No. 18990-A Power Distribution Panel Assembly

Part No.	Description
1 11555	Fuse Holder
2 17621	Power Rectifier
3 18859	Start Relay (D.C.)
4 18417	.01 MFD. 400 V. Condenser
5 15476	.002 MFD. 1200 V. Condenser

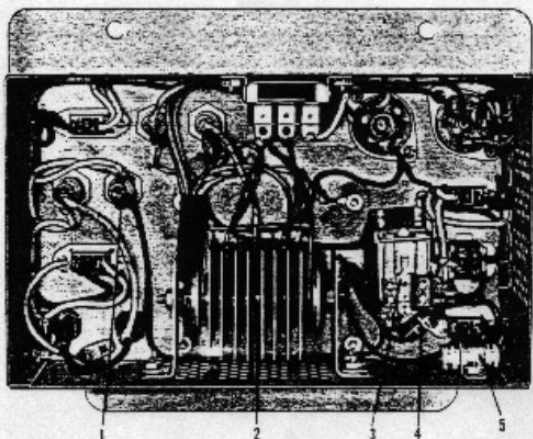

Additional Parts Listing

Part No.	Description	Part No.	Description
1 ST-3046	Type #44 Bulb	12 18926	10¢ and 3 for 25¢ Decal
2 ST-6028	Caster	13 18927	5¢ - 10¢ - 25¢ Decal
3 ST-7379	Cash Door Lock	14 18928	5¢ - 10¢ - 6 for 25¢ Decal
4 ST-7392	Rear Door Lock	15 18930	Cash Door Frame
5 ST-7394	Front Door Lock	16 18938	Cash Bag
6 12053	20 W. Fluorescent	17 18946	10¢ and 4 for 25¢ Decal
7 13362	Master Line Switch	18 19056	15" Hi-Fi Speaker
8 15159	Momentary Push Switch	19 19106-A	Volume Control Assembly
9 17008	Needle Brush	20 19163-A	Skid Front Casting Assem.(R.H.)
10 17804	Brush Wire	21 19164-A	Skid Front Casting Assem.(L.H.)
11 17958	Leveling Bolt	22 19172-A	Cash Door Assembly