



**Kurz-Kasch, Inc.**

Electronics Division  
 Box 1246 • 2271 Arbor Blvd.  
 Dayton, Ohio 45439  
 Telephone (513) 299-0990


# Operating Instructions

For Model

376A

FROGGER

GREMLIN/SEGA

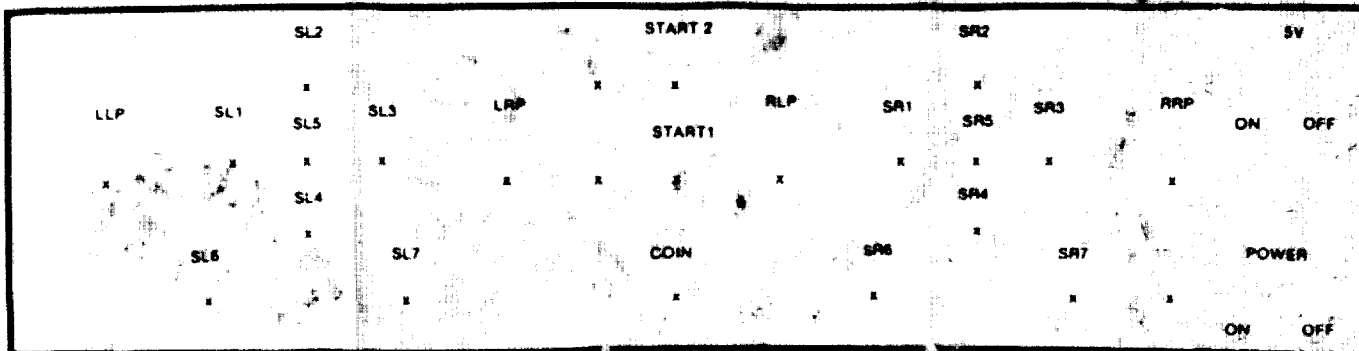

1. Insert 376A program card into "A" connector on TF-650 with number side up.
2. Connect 36-pin ribbon cable connector to GAME BOARD with RED DOT facing up.
3. Connect 6-pin ribbon cable connector to AUDIO BOARD with slots facing away from PC Board.
4. Connect speaker across 6" RED & BLACK leads leaving 36-pin connector. Audio volume control is on 376A card.
5. Slide 5 VOLT switch to ON.
6. Slide POWER switch to ON.
7. Controls are:

COIN is COIN 1 (---) coin counter LED's are on 376A card.  
 SR6 is COIN 2  
 START 1 is 1 PLAYER START  
 START 2 is 2 PLAYER START  
 SR1 is FROG RIGHT 1st PLAYER  
 SR2 is FROG UP 1st PLAYER  
 SR3 is FROG LEFT 1st PLAYER  
 SR4 is FROG DOWN 1st PLAYER  
 SL1 is FROG LEFT 2nd PLAYER  
 SL2 is FROG UP 2nd PLAYER  
 SL3 is FROG RIGHT 2nd PLAYER  
 SL4 is FROG DOWN 2nd PLAYER

NOTE: Connect GND lead to GAME BOARD if hum bars are present.