


1240 LOGIC
ANALYZER

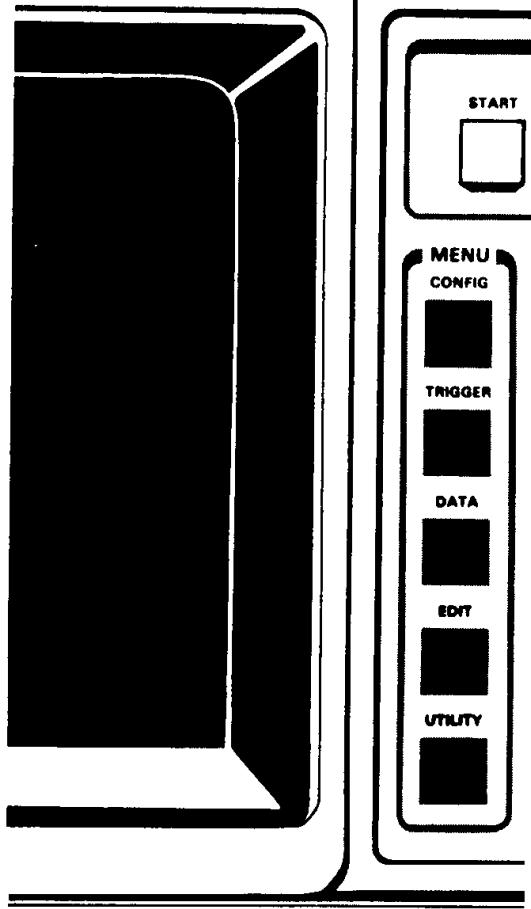

INDEX

INDEX *

⚠	ix, 1-13
↳ (falling edge symbol)	2-6, 2-7, 3-4, 3-5
↗ (rising edge symbol)	3-4, 3-5
✗ (rising or falling edge symbol)	2-6, 2-7, 3-4, 3-5
◆ (glitch key, symbol)	1-3, 2-12, 3-11, 4-2, 4-6, 4-7, 5-2, 5-4, 6-5
\$	in Reference Memory Editor menu	6-6
	in Search Pattern Entry menu	6-1
	in Trigger Spec menu	4-4
◀ (symbol for left-truncated data, event fields only)	4-4
▶ (symbol for right-truncated data)	4-4
	in event fields	4-4
	in State Table displays	5-7, 5-9, 6-1, 6-5
1240D1	1-1, 8-8
1240D2	1-1, 8-9
9-channel grouping	3-18, 3-19
18-channel grouping	3-18, 3-22
accessories	8-22
ACQ#	4-15, 4-20, 4-21, 5-7
ACQMEM (acquisition memory)		
	COMPARE ACQMEM TO REFMEM (Auto-Run condition)	4-15, 4-17
	default contents of ACQMEM	5-5
	general information	5-5
	SWITCH DISPLAY TO ACQMEM/REFMEM soft key (State Table, Timing Diagram)	5-3, 5-5, 5-12
ACQMEM TO REFMEM soft key (State Table, Timing Diagram)	5-3, 5-5, 5-12
active cursor	5-1
active cursor value in Timing Diagram		
	binary format	5-11, 5-13
	State Table format	5-11, 5-13
ACTIVE MEMORY field		
	in the Search Pattern Entry menu	6-2, 6-4
	in the State Table and Timing Diagram	5-3, 5-5, 5-12
ACTIVE TIMEBASES field	3-3, 3-5
ADD LEVEL soft key (Trigger Spec menu)	4-2, 4-12
ADD LINE soft key (Search Pattern Entry menu)	6-3, 6-4
ADD NEXT CHANNEL soft key (Channel Grouping menu)	3-20, 3-23
AFTER MEMORY FULL	4-1, 4-3, 4-4
ASC (ASCII display radix)	3-18, 3-19, 3-21, 8-20
ASYNC (asynchronous timebase)	3-3, 3-4, 3-5
asynchronous clock period	3-4, 3-5
audible trigger	4-18
AUTO key	1-2, 1-6, 4-15
Auto-Run conditions		
	COMPARE ACQMEM TO REFMEM	4-15, 4-17, 4-20, 4-21
	CONTINUOUS TRIGGER OUT	4-15, 4-16, 4-19
	STORE AFTER TRIGGER	4-15, 4-19
	TRIGGER IN	4-15, 4-16, 4-19
Auto-Run Spec menu	1-3, 1-6, 4-15

* When an index entry has more than one page reference, the one in bold type is the primary reference.

back panel	1-9
BETWEEN CURSORS	4-17, 4-18
BIN (binary radix)	3-18, 3-19, 3-21
blank POD/CHAN pair (X)	3-19, 3-21
blanks in the data displays	5-8
C/Q line (see clock/qualifier line)	
CARD 0	3-12
CARD THRESHOLD field	3-12
CARD TYPE field	3-18, 3-19, 3-22
chained memory	3-10, 3-16
CHAN fields	3-18, 3-19, 3-21
CHANGE ACTIVE CURSOR soft key	
in Reference Memory Editor menu	6-5, 6-6
in State Table and Timing Diagram displays	5-1, 5-3, 5-12
changes, effects on other menus	1-5, 8-1 to 8-4
Channel Grouping menu	1-3, 1-6, 2-8, 3-18 to 3-23, 8-4
channel grouping, defaults	3-19, 3-23
channel polarity	3-13
channel selection fields in Timing Diagram	5-10, 5-11
cleaning the screen	1-5
CLEAR GROUP soft key (Channel Grouping menu)	3-20, 3-23
CLEAR PATTERN soft key (Search Pattern Entry menu)	6-1, 6-3
clock qualification	3-4, 3-5
clock/qualifier line (from probe)	
general information	1-13, 3-6, 3-11, 3-16
use of in clock qualification	3-4 to 3-6
use of in definition of a synchronous clock	3-4 to 3-6, 3-8
CLOCKED (global event)	3-3, 3-5, 3-6, 4-5
CLOCKS field (part of sequential event action DELAY)	4-7
clocks, OR'd (defining a synchronous clock)	3-4, 3-5
COMM pack	
COMM pack socket, back panel	1-9
COMM Port Control menu	1-3, 1-7
installing a COMM pack	1-17
list of available packs	8-22
removing a COMM pack	1-17
COMM Port Control menu	1-3, 1-7
COMPARE ACQMEM TO REFMEM (Auto-Run condition)	4-15, 4-17, 4-20, 4-21
comparison limits, COMPARE ACQMEM TO REFMEM	4-17, 4-18
CONFIG key	1-3
configuration	
configuration label, back panel	1-9
list of cards in Operation Level menu	3-1
confirmation message (PRESS "X" TO CONFIRM OPERATION (ANY OTHER HARD KEY CANCELS IT))	8-15
CONTINUOUS TRIGGER OUT (Auto-Run condition)	4-15, 4-16, 4-19
conversion charts, radix	8-20, 8-21
correlation, data	5-4, 5-6, 5-7
counter value	4-5, 5-2
CRT control, back panel	1-9
CTL1 (default group name)	3-23
CTL2 (default group name)	3-23
cursor keys	1-4
cursor locations	5-1, 5-2, 5-11
cursor movement, COMPARE ACQMEM TO REFMEM	4-20, 4-21

cursor value in Timing Diagram	
binary format	5-11, 5-13
State Table format	5-11, 5-13
cursor Δ	2-13, 5-1, 5-2, 5-11
cursor, search data (Search Pattern Entry menu)	6-1, 6-2
cursors, data	
active cursor	5-1
cursor 1	5-1, 5-2, 5-11
cursor 2	5-1, 5-2, 5-11
cursor locations	5-1, 5-2, 5-11
cursor Δ	2-13, 5-1, 5-2, 5-11
data correlation	5-4, 5-6, 5-7
data cursors	
active cursor	5-1
cursor 1	5-1, 5-2, 5-11
cursor 2	5-1, 5-2, 5-11
cursor locations	5-1, 5-2, 5-11
cursor Δ	2-13, 5-1, 5-2, 5-11
data entry keys	1-3
DATA key	1-3
data qualification (see storage qualification)	
default group names	3-23
DEFAULT TRIGGER SPEC soft key (Trigger Spec menu)	4-2, 4-12
DELAY (sequential event recognizer action)	4-7, 4-8, 4-10
DELAY COUNTER	4-14
DELETE CHANNEL soft key (Channel Grouping menu)	3-20, 3-23
DELETE FILE soft key (Storage Memory Manager menu)	7-3
DELETE LEVEL soft key (Trigger Spec menu)	4-2, 4-12
DELETE LINE soft key (Search Pattern Entry menu)	6-3, 6-4
Demultiplexing	
demonstration	2-5
setting up the Memory Config menu	3-11, 3-14, 3-17
setting up timebases	3-7 to 3-9
with an 18-channel card	3-11, 3-17
with 9-channel cards	3-11
with T1 and T2	3-9
with T2 DEMUX	3-7 to 3-9, 3-11, 3-17
18-channel grouping	3-22, 3-24
DEMUX	3-3, 3-7 to 3-9, 3-17
diagnostic lead set	1-18, 2-1, 2-2, 2-5, 8-22
diagnostics, power-up	
Main Diagnostics menu	1-10, 1-12
power-up diagnostics error messages	1-10
differences between Operation Levels	8-17
disable search pattern	6-1, 6-2
DISCARD AND REACQUIRE (COMPARE ACQMEM TO REFMEM action) ..	4-15, 4-17, 4-20
DISP field (see display radix)	
DISPLAY AND REACQUIRE (COMPARE ACQMEM TO REFMEM action) ..	4-15, 4-17, 4-21
DISPLAY AND STOP (COMPARE ACQMEM TO REFMEM action) ..	4-15, 4-17, 4-20
DISPLAY DATA AT LEAST field	4-18
DISPLAY NEXT CHANNEL soft key (Timing Diagram display)	5-10, 5-12
display radix (DISP field)	
applying display radix to acquired data	3-21
defaults	3-23
selections	3-18, 3-19

DO NOTHING	
in global event recognizer	4-6
in sequential event recognizer	4-1, 4-2, 4-7
DON'T CARE key (X)	1-3
EBC (EBCDIC display radix)	3-18, 3-19, 3-21, 8-21
edge event recognition	4-10, 4-11
EDIT key	1-3
EDIT LINE VALUE field	
in Reference Memory Editor menu	6-5, 6-6
in Search Pattern Entry menu	6-1, 6-2
effects of changes to menus	1-5, 8-1 to 8-4
enable search pattern	6-1, 6-2
enabling glitch storage	3-11, 3-12
ENTER DATA FOR field	6-1, 6-2
ENTER NORMAL OPERATION soft key (Main Diagnostic menu)	1-12
error messages	
errors during operation	8-11
power-up diagnostics error messages	1-10
event	4-1
event recognizers	4-1, 4-3, 4-6
event recognition, edge vs. level	4-8, 4-9
EXECUTE keys	
AUTO key	1-2, 1-6, 4-15
START key	1-2, 4-12
STOP key	1-2, 5-1
EXISTING FILES list	7-1, 7-2, 7-5
EXPANSION field	2-13, 5-10, 5-11
EXT TRIG IN BNC (external trigger input)	
back panel location	1-9
use in Auto-Run (TRIGGER IN condition)	4-16
EXT TRIG OUT BNC (external trigger output)	
back panel location	1-9
general information	4-3
use in Auto-Run (pulsed/latched)	4-15, 4-16, 4-18, 4-19
extrapolated data in the Timing Diagram	5-6, 5-13
FILENAME field	7-2
FILETYPE field	7-2, 7-5
FILTER field	
in global event recognizer	4-5, 4-6
in sequential event recognizer	4-7, 4-9
relationship to edge and level event recognition	4-10
FIXED	4-17, 4-18
FREE STORAGE	7-2, 7-4, 7-5
glitch display	5-2, 5-4, 5-12
glitch key/symbol (♦)	1-3, 3-11, 4-2, 4-6, 4-7, 5-2, 5-4, 6-5
glitch storage	
effect on glitch triggering	3-11, 4-2
effect on other menus	8-3
enabling/disabling glitch storage in Memory Config menu	3-11, 3-12
glitch triggering	3-11, 4-2
GLITCHES (highlighting)	5-3, 5-4, 5-12

GLITCHES ON/OFF field in Memory Config menu	
effect of changes to this field on other menus	8-3
effect on glitch display	5-2, 5-4, 5-12
effect on glitch triggering	3-11
effect on 9-channel memory depth	3-11, 3-12
enables/disables glitch storage	3-11
GLITCHES ON/OFF field in State Table and Timing Diagram	5-2, 5-4, 5-12
GLOBAL EVENT = CLOCKED/UNCLOCKED field	3-3, 3-5, 3-6, 4-5
global event recognizer	
actions	4-6
clocked/unclocked	3-3 to 3-6, 4-5
counter/timer actions	4-5, 4-6
edge vs. level event recognition	4-10, 4-11
filter	4-5
general information	4-1, 4-5
storage qualification	4-6, 4-8
ground leads, probe	1-13, 1-15
group (definition)	3-18
group name (NAME field)	3-18, 3-19
group size, maximum	3-18, 3-19
group timebase	3-20 to 3-22
grouping, 9-channel	3-18, 3-19
grouping, 18-channel	3-18, 3-22
GRPA (default channel group name)	3-23
GRPB (default channel group name)	3-23
GRPC (default channel group name)	3-23
GRPD (default channel group name)	3-23
HEX (hexadecimal radix)	3-18, 3-19, 3-21, 8-20, 8-21
HIGHLIGHT field	5-3, 5-4, 5-5, 5-12, 5-13
highlighted video	1-7
IF COUNT field	4-6
IF TIMER field	4-6
IMMEDIATELY	4-1, 4-3, 4-4, 5-8
INCR CNTR (global event recognizer action)	4-5, 4-6, 5-2
INIT	2-14, 7-1, 7-3
INPUT field (see input radix)	
INPUT POD field	3-10, 3-13, 3-14, 3-17
input radix (INPUT field)	
defaults	3-23
selections	3-18, 3-19
INSERT CHANNEL soft key (Channel Grouping menu)	3-20, 3-23
inspection, incoming (Operator's Checkout Procedure)	1-18
internal RAM, for storing setups	7-1, 7-2, 7-4
JUMP IF/JUMP IF NOT (sequential event recognizer action)	4-7, 4-10
keys, front panel	1-2 to 1-4

LATCHED (EXT TRIG OUT BNC)	4-15, 4-16, 4-18, 4-19
lead sets, probe	
connecting to probes	1-15
connecting to the TPG output	2-2
ground leads	1-13, 1-15
10-inch, 5-inch	1-13, 1-15
least significant channel in a group	3-18
level event recognition	4-10, 4-11
levels, operation (0-3)	3-1
levels, sequence	4-1, 4-8
LIMITS	4-17, 4-18
line voltage selector	1-8, 1-9
LOAD FILE soft key (Storage Memory Manager menu)	7-1, 7-3
LOAD FROM ACTIVE CURSOR soft key	
in Search Pattern Entry menu	6-3, 6-4
in Trigger Spec menu	4-2, 4-12
LOAD NEW PACK soft key (Storage Memory Manager menu)	7-1, 7-3 to 7-5
loading files, using the Storage Memory Manager menu	2-14, 7-1, 7-3
LOC (memory location number, State Table)	5-1, 5-2
LOOK FOR TRIGGER field	4-1, 4-3, 4-4, 5-8
Main Diagnostics menu	1-10, 1-12, 1-18
MAIN POWER SWITCH, back panel	1-8, 1-9
MASK fields	4-17
MEM DIFFS (memory differences, highlighting)	5-3, 5-4, 5-5, 5-12
memories, storing/loading with Storage Memory Manager menu	7-1, 7-4, 7-5
memory chaining	3-10, 3-16
memory comparisons	
COMPARE ACQMEM TO REFMEM (Auto-Run condition) ..	4-15, 4-17, 4-20, 4-21
comparison limits	4-17, 4-18
Memory Config menu	1-3, 1-5, 2-6, 3-10 to 3-17, 8-3
memory depth (number of samples stored per channel)	3-10
memory segment	3-10
memory width (number of channels acquiring data)	3-10
memory width vs. depth	
affect of GLITCHES ON/OFF field on 9-channel memory depth ..	3-10, 3-11, 3-12
affect on memory display	5-8
for 9-channel cards	3-10, 3-12, 3-14
for 18-channel cards	3-10, 3-12, 3-15
memory window (area of memory displayed in Timing Diagram)	5-10, 5-12
menu changes	1-5, 8-1 to 8-4
MENU keys	1-3, 1-4
Menus	
descriptions	1-5 to 1-7
effects of changes on other menus	1-5, 8-1 to 8-4
overview	1-5
soft keys	1-5
most significant channel in a group	3-18
MOVE TRIGGER TO CURSOR soft key (Reference Memory Editor menu) ..	6-5, 6-6
NAME field	3-18, 3-19
negative-true logic	3-13
NEW FILE VALUES fields	7-1, 7-2
NEXT HIGHLIGHT DATA soft key (State Table, Timing Diagram)	5-3, 5-5, 5-12
NEXT key	1-4
NVM (nonvolatile memory)	7-1, 7-2, 7-4

OCT (octal radix)	3-18, 3-19, 3-21, 8-20, 8-21
OFF	
display radix, group not displayed	3-18, 3-19
global event recognizer action	4-2, 4-6
highlighting selection	5-3, 5-4, 5-12
trace display selection	5-10, 5-11
ON field (part of global event filter)	4-5, 4-6, 4-11
ON/ON NOT field (global event recognizer)	4-5, 4-6
Operation Level menu	1-3, 1-5, 2-1, 2-2, 2-5, 3-1, 8-1
Operation Levels	
differences between the Operation Levels	8-17
Operation Level menu	1-3, 1-5, 2-1, 2-2, 2-5, 3-1, 8-1
options and accessories	8-22
PACK	7-1, 7-4, 7-5
PAGE field	5-8, 5-10, 5-11
PASS/FAIL diagnostic messages	1-10, 1-12, 1-18
PATTERN SEARCH ENABLED/DISABLED field	5-5, 6-1, 6-2
pattern, search	
default pattern	5-5, 6-1
enable/disable	5-5, 6-1, 6-2
entering a pattern	2-13, 6-1, 6-2
use with PATTERNS highlighting	5-5, 6-1
PATTERNS (highlighting)	5-3, 5-5, 5-12
Pod ID	
general information	1-13
in Memory Config menu	3-10, 3-14, 3-15
in Timebase menu	3-5
Pod ID button on probe	1-15
pod-timebase assignments	
affect on memory display	5-8
general information	3-11
INPUT POD field	3-13, 3-14
TIMEBASE field	3-11, 3-13, 3-14, 3-15
POD/CHAN pairs	3-18, 3-19, 3-21
POLARITY field	3-13
positive-true logic	3-13
post-trigger	4-1
power	
line voltage	1-8, 1-9
power cords	1-8
power switch, front panel	1-3, 1-8
power switch, main, back panel	1-3, 1-8, 1-9
power-up diagnostics	1-10
power-up error messages	1-10
power-up procedure	1-8
specifications	8-5
pre-trigger	4-1, 4-3, 4-8
PRESS "X" TO CONFIRM OPERATION (ANY OTHER HARD KEY CANCELS IT)	8-15
probes, data acquisition	
clock/qualifier (C/Q) line	1-13, 3-4 to 3-6
connecting to acquisition cards	1-13, 1-14
connecting to TPG outputs	2-1, 2-2
lead sets and ground leads	1-13, 1-15
list of available probes	8-22
Pod ID	1-13
Pod ID button	1-13, 1-15

PROCESSING DATA status display	4-12, 4-14
prompt messages	8-11
PULSED (EXT TRIG OUT BNC)	4-15, 4-16, 4-18, 4-19
qualifiers (clock), AND'd	3-4, 3-5
qualification (storage)	
STORE action in global event recognizer	4-6, 4-8
WITH STORAGE field in sequential event recognizer	4-7, 4-9
radix	
applying display radix to acquired data	3-21
conversion charts	8-20, 8-21
default input and display radices	3-23
display	3-18, 3-19
input	3-18, 3-19
RAM pack	
installing a RAM or a ROM pack	1-16
list of available packs	8-22
RAMPACK FAIL error message	1-11
removing a RAM or ROM pack	1-16
using a RAM pack with Storage Memory Manager menu	7-1, 7-4, 7-5
RAM, internal	7-1, 7-2, 7-4
Reference Memory Editor menu	1-3, 1-6, 6-5, 6-6
REFMEM (reference memory)	
COMPARE ACQMEM TO REFMEM (Auto-Run condition)	4-15, 4-17
default contents of REFMEM	5-5
general information	5-5
SWITCH DISPLAY TO ACQMEM/REFMEM soft key (State Table, Timing Diagram)	5-3, 5-5, 5-12
regular video	1-7
RESET	
effect of reset on counter/timer	4-8
effect of reset on storage qualification	4-9
sequential event action	4-1, 4-2, 4-7
global event recognizer action	4-6
RESET IF/RESET IF NOT (sequential event recognizer action)	4-7, 4-10
reverse video	1-7
ROM pack	
installing a ROM or a RAM pack	1-16
list of available packs	8-23
removing a ROM or RAM pack	1-16
ROM pack menu	1-3
using a ROM pack with the Storage Memory Manager menu	7-1, 7-4
RS170	1-9
screen, cleaning instructions	1-5
SCROLL knob	1-4
scrolling data	5-1
search data cursor	6-1, 6-2
Search Pattern Entry menu	1-3, 1-6, 2-13, 5-5, 6-1 to 6-4
search pattern	
default pattern	5-5, 6-1
enable/disable	5-5, 6-1, 6-2
entering a pattern	2-13, 6-1, 6-2
using with PATTERNS highlighting	5-5, 6-1

SELECT keys	1-4
SELECTED field	7-1, 7-2
sequence level	4-1, 4-8
sequential event recognizer	
actions	4-7, 4-10
edge vs. level event recognition	4-10
filter	4-9
general information	4-1, 4-8
storage qualification	4-9
timebase selections	4-4, 4-8
setups, storing with Storage Memory Manager menu	2-13, 7-1, 7-2, 7-4
slot (acquisition card position)	1-13, 3-1
SLOW CLOCK message	4-13, 4-14
soft keys	
ACQMEM TO REFMEM (State Table, Timing Diagram)	5-3, 5-5, 5-12
ADD LEVEL (Trigger Spec menu)	4-2, 4-12
ADD LINE (Search Pattern Entry menu)	6-3, 6-4
ADD NEXT CHANNEL (Channel Grouping menu)	3-20, 3-23
AUTO-RUN SPEC (menu soft key)	1-3, 1-6, 4-15
CHANGE ACTIVE CURSOR	
in Reference Memory Editor menu	6-5, 6-6
in State Table and Timing Diagram displays	5-1, 5-3, 5-12
CHANNEL GROUPING (menu soft key)	1-3, 1-6, 2-8, 3-18 to 3-23
CLEAR GROUP (Channel Grouping menu)	3-20, 3-23
CLEAR PATTERN (Search Pattern Entry menu)	6-1, 6-3
DEFAULT TRIGGER SPEC (Trigger Spec menu)	4-2, 4-12
DELETE CHANNEL (Channel Grouping menu)	3-20, 3-23
DELETE FILE (Storage Memory Manager menu)	7-3
DELETE LEVEL (Trigger Spec menu)	4-2, 4-12
DELETE LINE (Search Pattern Entry menu)	6-3, 6-4
DISPLAY NEXT CHANNEL (Timing Diagram display)	5-10, 5-12
ENTER NORMAL OPERATION (Main Diagnostic menu)	1-12
INSERT CHANNEL (Channel Grouping menu)	3-20, 3-23
LOAD FILE (Storage Memory Manager menu)	7-1, 7-3
LOAD FROM ACTIVE CURSOR	
in Search Pattern Entry menu	6-3, 6-4
in Trigger Spec menu	4-2, 4-12
LOAD NEW PACK (Storage Memory Manager menu)	7-1, 7-3 to 7-5
MAIN DIAGNOSTIC (menu soft key)	1-12
MEMORY CONFIG (menu soft key)	1-3, 1-5, 3-10, 3-12, 8-3
MOVE TRIGGER TO CURSOR (Reference Memory Editor menu)	6-5, 6-6
NEXT HIGHLIGHT DATA (State Table, Timing Diagram)	5-3, 5-5, 5-12
OPERATION LEVEL (menu soft key)	1-3, 1-5, 3-1, 8-1
REFERENCE MEMORY EDITOR (menu soft key)	1-3, 1-6, 6-5, 6-6
SEARCH PATTERN ENTRY (menu soft key)	1-3, 1-6, 5-5, 6-1, 6-2
STATE TABLE (menu soft key)	1-3, 1-6, 5-1, 5-2, 5-7
STORAGE MEMORY MANAGER (menu soft key)	1-3, 1-7, 7-1, 7-2
STORE NEW FILE (Storage Memory Manager menu)	7-1, 7-3
SWITCH DISPLAY TO ACQMEM (State Table, Timing Diagram)	5-3, 5-5, 5-12
SWITCH DISPLAY TO REFMEM (State Table, Timing Diagram)	5-3, 5-5, 5-12
TEST ALL MODULES (Main Diagnostic menu)	1-18
TEST THE SELECTED MODULE (Main Diagnostic menu)	1-18
TIMEBASE (menu soft key)	1-3, 1-5, 3-3, 3-5, 8-2
TIMING DIAGRAM (menu soft key)	1-3, 1-6, 5-1, 5-11, 5-13
TRIGGER SPEC (menu soft key)	1-3, 1-6, 4-1, 4-2
software version	3-1

specifications	8-5 to 8-10
standard accessories	8-22
START key	1-2, 4-12
START TIMER (global event recognizer action)	4-5, 4-6, 5-11
starting data acquisition	1-2, 2-12, 4-12
State Table display	1-3, 1-6, 2-12, 5-1, 5-2, 5-7, 5-9
status displays	
COMPARE ACQMEM TO REFMEM (Auto-Run)	4-20, 4-21
PROCESSING	4-12, 4-14
TRIGGERED	4-12, 4-14
WAITING FOR TRIGGER	4-12, 4-13
STOP (stop trigger in State Table)	5-1
STOP key	1-2, 5-1
Storage Memory Manager menu	1-3, 1-7, 2-13, 7-1 to 7-5
storage (data) qualification	
STORE action in global event recognizer	4-6, 4-8
WITH STORAGE field in sequential event recognizer	4-7, 4-9
STORE (global event recognizer action)	4-6, 4-8
STORE AFTER TRIGGER (Auto-Run condition)	4-15, 4-19
STORE NEW FILE soft key (Storage Memory Manager menu)	7-1, 7-3
STORED IN field	7-1, 7-2, 7-5
storing memories in a RAM pack with Storage Memory Manager menu	7-4, 7-5
storing setups with Storage Memory Manager menu	2-13, 7-1, 7-2, 7-4
SWITCH DISPLAY TO ACQMEM soft key (State Table, Timing Diagram) ..	5-3, 5-5, 5-12
SWITCH DISPLAY TO REFMEM soft key (State Table, Timing Diagram) ..	5-3, 5-5, 5-12
SYNC (synchronous timebase)	3-3, 3-4, 3-5
 T1 (timebase 1)	3-3
T1 AND T2	3-3, 3-5
T1 ONLY	3-3, 3-5
T1 VALID (highlighting)	5-3 to 5-5, 5-12, 5-13
T2 (timebase 2)	3-3
T2 F	3-7 to 3-9, 3-17
T2 L	3-7 to 3-9, 3-17
T2 ONLY	3-3, 3-5
T2 VALID (highlighting)	5-3 to 5-5, 5-12, 5-13
TB field (group timebase)	3-20 to 3-22
TEST ALL MODULES soft key (Main Diagnostic menu)	1-18
Test Pattern Generator (TPG)	
connecting probe lead sets to the TPG	2-2
general information	8-18
patterns	8-18
TPG mode	2-5, 3-1, 3-2, 8-18
TPG threshold	2-6, 3-12, 8-18
TEST THE SELECTED MODULE soft key (Main Diagnostic menu)	1-18
threshold fields in COMPARE ACQMEM TO REFMEM status displays ..	4-20, 4-21
THRESHOLD field (Memory Config menu)	3-12
tick marks in Timing Diagram	5-6, 5-11
time between acquisitions, COMPARE ACQMEM TO REFMEM	4-18
TIME WHILE (global event recognizer action)	4-5, 4-6, 5-11
TIMEBASE fields, (Memory Config menu)	3-11, 3-13, 3-15, 3-17
timebase fields in sequential event recognizer	4-4, 4-8
Timebase menu	1-3, 1-5, 2-6, 3-3 to 3-9, 8-2
timebases in the Search Pattern Entry menu (ENTER DATA FOR field) ..	6-1, 6-2
timer value	4-5, 5-11
Timing Diagram display	1-3, 1-6, 2-12, 5-1, 5-10 to 5-13
TO LEVEL field	4-7

TO OCCUR field	4-7
TPG (see Test Pattern Generator)	
TPG MODE field	2-5, 3-1, 3-2, 8-18
trace name fields in Timing Diagram	5-10, 5-11
TRIG (location of trigger in State Table)	5-1, 5-2
TRIG IN (see EXT TRIG IN BNC)	
TRIG OUT (see EXT TRIG OUT BNC)	
TRIGGER	
final sequential event action	4-1, 4-2, 4-7
global event recognizer action	4-6
trigger display	5-1, 5-2, 5-11
TRIGGER IF/TRIG IF NOT (sequential event recognizer action)	4-7, 4-10
TRIGGER IN (Auto-Run condition)	4-15, 4-16, 4-19
TRIGGER key	1-3
TRIGGER POSITION field	4-1 to 4-3
Trigger Spec menu	1-3, 1-6, 2-10, 4-1 to 4-14
TRIGGERED status display	4-12, 4-14
truncated data	
in event recognizer fields	4-4
in State Table displays	5-7, 5-9, 6-1, 6-5
UNCLOCKED (global event)	3-3 to 3-6, 4-5
UNUSED channels	3-18, 3-20 to 3-22
UTILITY key	1-3
video	
highlighted	1-7
regular	1-7
reverse	1-7
video out BNC, back panel	1-9, 8-5
voltage, line selector	1-8, 1-9
WAIT FOR/WAIT FOR NOT (sequential event recognizer action)	4-7, 4-10
WAITING FOR TRIGGER status display	4-12, 4-13
window, memory (Timing Diagram)	5-10, 5-12
WITH STORAGE field (sequential event recognizer)	4-7, 4-9
X	
X (no channel specified, Channel Grouping menu)	3-19, 3-21
X key (don't care)	1-3