

GENERAL INSTRUCTIONS FOR "SEA WOLF"

INSTALLATION:

- A. Attach and adjust 6 provided leg levelers to bottom of Cabinet. (4 to Cabinet, 2 to Step.)
- B. Remove shipping cleats (located on bottom of cabinet) pull step out and secure in place with provided bolt.
- C. Remove (Red) shipping bracket (located in back box area) from Periscope Assembly.
- D. The power is controlled by a switch located on top of the Cabinet. Plug into A.C. only, 115 volt, 60 cycles. In low line areas (105 volts or less) a boost in the output voltage of the transformer may be achieved by removing the wire from the 115 volt tap of the transformer, and rewiring to the 105 volt position.
- E. In event the game is tilted, or the line cord is removed, any credits accumulated will reset to zero.

VOLTAGE CONTROL POT:

Located on Power Supply Board (P.C. 80-904) and is preset at the factory. This pot should not be tampered with unless the the factory Servis Department is contacted.

• TIME, COIN, HIGH SCORE AND EXTENDED PLAY ADJUSTMENT SWITHCES:

Located on Game Logic Board (P.C. 596-904) and may be adjusted as indicated on separate instructions located in back box area.

SOUND VOLUME AND TONE CONTROL POTS:

Located on Sound Generator (P.C. 596-909) and may be adjusted by rotating pots as indicated on separate instruction sheet in back box area.

HIGH SCORE RESET BUTTON:

Located on cabinet face. (upper left) High Score may be reset by depressing button when a game is not in progress if switch #5 on Game Logic Board (P.C. 596-904) is properly conditioned.

MIDWAY MFG. CO.
10750 W. GRAND AVE.
FRANKLIN PK, IL 60131