Total Carnage

Page 1-12, DIP Switch Test This amendment provides additional information to the DIP Switch Test procedure.

The number of keys required to enter the Pleasure Dome is DIP switch selectable. See DIP Switch 1 Setting Table below.

NOTE: Switch positions SW3 through SW8 of Dip Switch DS1 determine the coinage of the game. To change coinage, set the coinage switch SW2 to ON, then change the setting of switch positions SW3-SW8 to the desired setting shown in the DS1 Chart. The game must then go through a FULL FACTORY RESTORE (found in the Utilities Menu) to activate the change in coinage.

DIP Switch 1 (DS1) Setting Table

		SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
200 Keys		ON							
220 Keys		OFF							
Coinage	DIP Switch Setting CMOS Coinage		ON OFF						
COUNTRY	COIN MODE								
USA 1	L=1/.25 R=1/.25 1 Credit to start, 1 credit to			OFF	OFF	OFF	OFF	OFF	OFF
USA 2	L=1/.25 R=1/.25 2 Credits to start, 1 credit	to continu	e	OFF	OFF	OFF	OFF	OFF	ON
USA 3	L, R=1/2X.25; 2/3X.25, 3/4X.25			OFF	OFF	OFF	OFF	ON	OFF
GERMANY 1	L=1/1DM, R=6/5DM, (3)=2/2DM			OFF	OFF	OFF	OFF	ON	ON
GERMANY 2	L=1/1DM, R=7/5DM, (3)=2/2DM			OFF	ON	OFF	ON	OFF	OFF
GERMANY 3	L=6/5DM, R=2/2DM, (3)=1/1DM			OFF	OFF	OFF	ON	OFF	ON
FRENCH 1	L=2/5F, R=5/10F			OFF	OFF	OFF	ON	ON	OFF
FRENCH 2	L=2/5F, R=4/10F			OFF	OFF	OFF	ON	ON	ON
FRENCH 3	L=1/3X1F, R=2/5F, (3)=5/10F			OFF	OFF	ON	OFF	OFF	OFF
SWISS 1	L=1/1F, R=6/5F			OFF	OFF	ON	OFF	OFF	ON
ITALY	L, R=1/500 LIRE			OFF	OFF	ON	OFF	ON	OFF
UK1	L=1/20P, R=3/50P			OFF	OFF	ON	OFF	ON	ON
UK2	L=2/20P, R=5/50P			OFF	OFF	ON	ON	OFF	OFF
UK ELEC.	L=4/L1.00, R=2/50P, (3)=1/30P, (4)=1/3X10	P		OFF	OFF	ON	ON	OFF	ON
SPAIN 1	L=1/25 PESETA, R=5/100 PESETA					ON		100000000000000000000000000000000000000	
AUSTRALIA 1	L=1/3X.20, R=2/1.00			OFF	OFF	ON	ON	ON	ON
JAPAN 1	L, R, (3)=1/100 YEN			OFF	ON	OFF	OFF	OFF	ON
JAPAN 2	L, R, (3)=2/100 YEN	v:		OFF	ON	OFF	OFF	ON	OFF
AUSTRIA 1	L=1/2X5 SCHILLING, R=3/2X10 SCHILLING	3		OFF	ON	OFF	OFF	ON	ON
BELGIUM 1	L=7/50F, R=3/20F, (3)=1/2X5F			OFF	ON	OFF	ON	OFF	OFF
BELGIUM 2	L=3/20F, R=3/20F			OFF	ON	OFF	ON	OFF	ON
SWEDEN NEW ZEALAND	L=1/3X1 KRONA, R=2/5 KRONA L. R=1/3X.20			OFF	ON	OFF	ON	ON	OFF
NETHERLANDS	L=1/1HFL, R=3/2.5HFL			OFF	ON	OFF	ON	ON	ON
FINLAND	L=1/1HFL, H=3/2.5HFL L=1/2X1 MARKKA, 3/5X1 MARKKA			OFF	ON	ON	OFF	OFF	OFF
NORWAY				OFF	ON	ON	OFF	OFF	ON
DENMARK	L=1/2X1 KRONE, R=3/5X1 KRONE				ON	ON	OFF	ON	OFF
DEINMARK	L=1/2X1 KRONE, R=3/5X1 KRONE, 7/2X5 KRONE			OFF	ON	ON	ON	ON	ON

DIP Switch 2 (DS2) Setting Table

	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8		
Test Switch Game Mode Test Mode								OFF*		

^{*} Indicates Factory Setting