

# POWER DRIFT (834-6697)

## COIN/CREDIT OPTION SWITCH SETTING    DIP SWITCH A

DIP SWITCH A								GAME PRICE SETTING.	
1	2	3	4	5	6	7	8		
OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	1 COIN	1 CREDIT
ON	OFF	OFF	OFF	ON	OFF	OFF	OFF	1 COIN	2 CREDITS
OFF	ON	OFF	OFF	OFF	ON	OFF	OFF	1 COIN	3 CREDITS
ON	ON	OFF	OFF	ON	ON	OFF	OFF	5 COINS	1 CREDIT
OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	6 COINS	1 CREDIT
ON	OFF	ON	OFF	ON	OFF	ON	OFF	1 COIN	6 CREDITS
OFF	ON	ON	OFF	OFF	ON	ON	OFF	2 COINS	1 CREDIT
ON	ON	ON	OFF	ON	ON	ON	OFF	3 COINS	1 CREDIT
OFF	OFF	OFF	ON	OFF	OFF	OFF	ON	4 COINS	1 CREDIT
ON	OFF	OFF	ON	ON	OFF	OFF	ON	2 COINS	3 CREDITS
OFF	ON	OFF	ON	OFF	ON	OFF	ON	6 COINS	4 CREDITS
ON	ON	OFF	ON	ON	ON	OFF	ON	4 COINS	3 CREDITS
OFF	OFF	ON	ON	OFF	OFF	ON	ON	5 COINS	6 CREDITS
ON	OFF	ON	ON	ON	OFF	ON	ON	4 COINS	5 CREDITS
OFF	ON	ON	ON	OFF	ON	ON	ON	2 COINS	3 CREDITS
ON	ON	ON	ON	ON	ON	ON	ON	NO	USE
COIN SW #1				COIN SW #2					

## GAME DIFFCULTY SWITCH SETTING    DIP SWITCH B

DIP SWITCH B								GAME OPTION SETTING	
1	2	3	4	5	6	7	8		
OFF	OFF							*CABINET TYPE.	MOVING
ON	OFF								UP RIGHT
OFF	ON								MINI UP RIGHT
ON	ON								NO USE
		OFF						*ADVERTISE SOUND.	OFF
		ON							ON
			OFF					*EVER OFF.	
				OFF				*INITIAL CREDIT.	2 CREDIT
				ON					1 CREDIT
					OFF			*CONTINUE GAME.	YES
					ON				NO
						OFF	OFF	*GAME DIFFCULTY.	NORMAL
						ON	OFF		EASY
						OFF	ON		HERD
						ON	ON		HERDEST