



**Kurz-Kasch, Inc.**


Electronics Division  
 Box 1246  
 2876 Culver Ave.  
 Dayton, Ohio 45407  
 Telephone (513) 296-0330

# Operating Instructions

For Model 189 A

FLIM-FLAM 4 Ply

Meadows

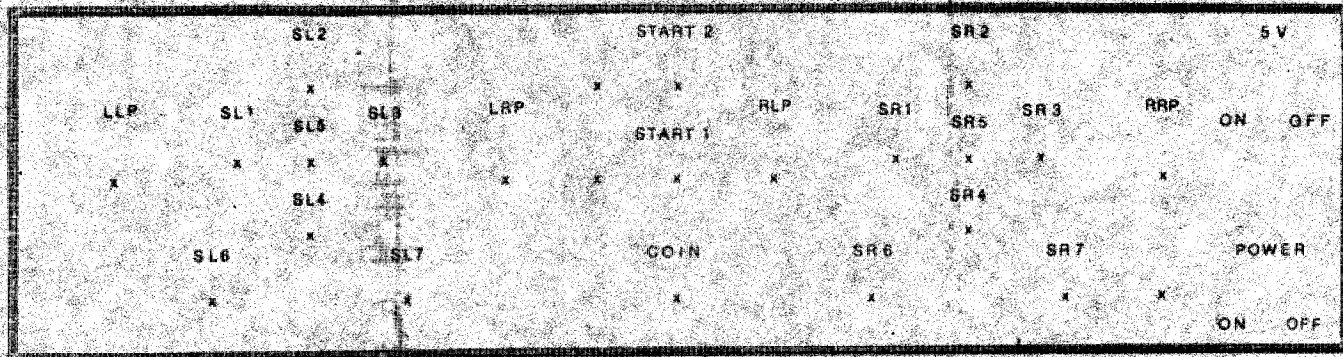

1. Insert 189 A card into program "A" connector, number side up.
2. Insert computer board into test fixture using 22 pin orientation.  
 (CAUTION: Line up fingers with connector properly).
3. Push POWER switch to on.
4. Push 5 VOLT internal switch to on.
5. Push COIN switch once for 2 PLY, twice for 4 PLY.
6. START game and select paddle size by pushing:
  - SR1 - NOVICE
  - SR2 - EXPERT
  - SR3 - PRO
7. RRP is right paddle vertical motion.  
 RLP is right paddle horizontal motion.  
 LRP is left paddle horizontal motion.  
 LLP is left paddle vertical motion.
8. SR5 is right player ball speed switch.  
 SL5 is left player ball speed switch.
9. To check 4 PLY circuits completely, switch paddles in right and left lower quadrants to upper quadrants by moving switches to 4 PLY on 189 A program card.