



**Kurz-Kasch, Inc.**


Electronics Division  
Box 1246 • 2271 Arbor Blvd.  
Dayton, Ohio 45439  
Telephone (513) 299-0990

# Operating Instructions

For Model 345AB---171C or 287C


PAC-MAN

MIDWAY

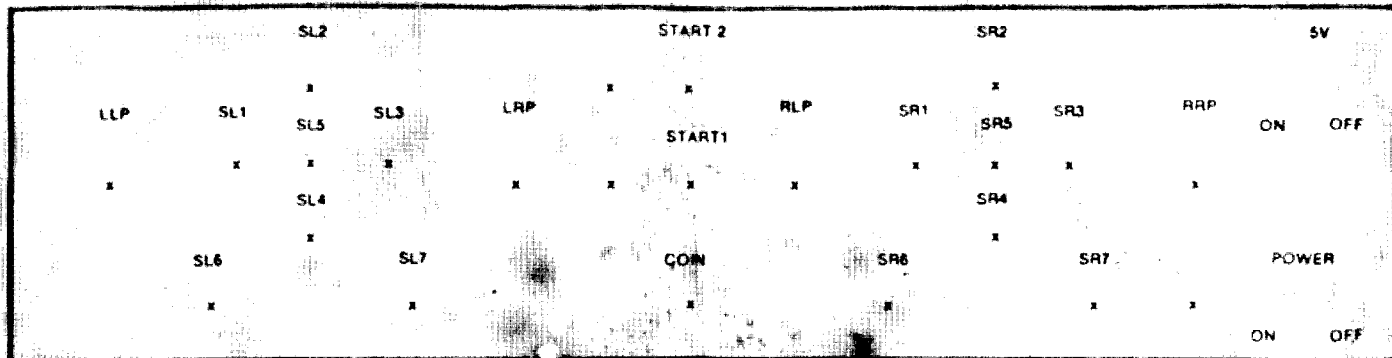

1. Insert 345B program card into "B" connector on TF-650, number side up.
2. Insert 345A program card into "A" connector on TF-650, number side up.
3. Insert 171C or 287C into 25-pin connector on the TF-650, number side up!
4. Insert GAME BOARD into 171C or 287C and connect.
5. Slide POWER switch to ON.
6. Push COIN switch for credit. **SL7**
7. START 1 is 1 PLAYER.  
START 2 is 2 PLAYER.
8. SR1 is MAN LEFT  
SR3 is MAN RIGHT  
SR2 is MAN UP  
SR4 is MAN DOWN
9. TEST switch is on 345A card.
10. SR6 is RESET.

 *now*  
*2/7 + SL7*  
*2/7*



ELECTRONICS DIVISION  
DAYTON, OHIO

PAC-MAN ROM SIGNATURES

IDENTIFICATION	ROM/FROM TYPE	PB	SIGNATURE
6E	2532	L24	140
6F	2532	L24	9553
6H	2532	L24	1370
6J	2532	L24	29H
5E	2532	L24	C420
5F	2532	L24	18EU
1M	5623	A16	7C37
3M	5623	A16	98P7
4A	5623	A16	5009
7F	5623	A16	6829
6E	9332B	9332	GACU
6F	9332B	9332	C023
6H	9332B	9332	8746
6J	9332B	9332	PF2
5E	9332B	9332	C293
5F	9332B	9332	DOCA
7F	M36503-5	D16	6929
4A	1M 5623	A16	826
3M	1M 5623	A16	7364
1M	1M 5623	A16	407H

NOTE - SIGNATURES ARE FROM KURZ-KASCH ROM TEST 1