
INDY 800

Service Manual

REE GAMES

a wholly owned subsidiary of Atari, Inc.

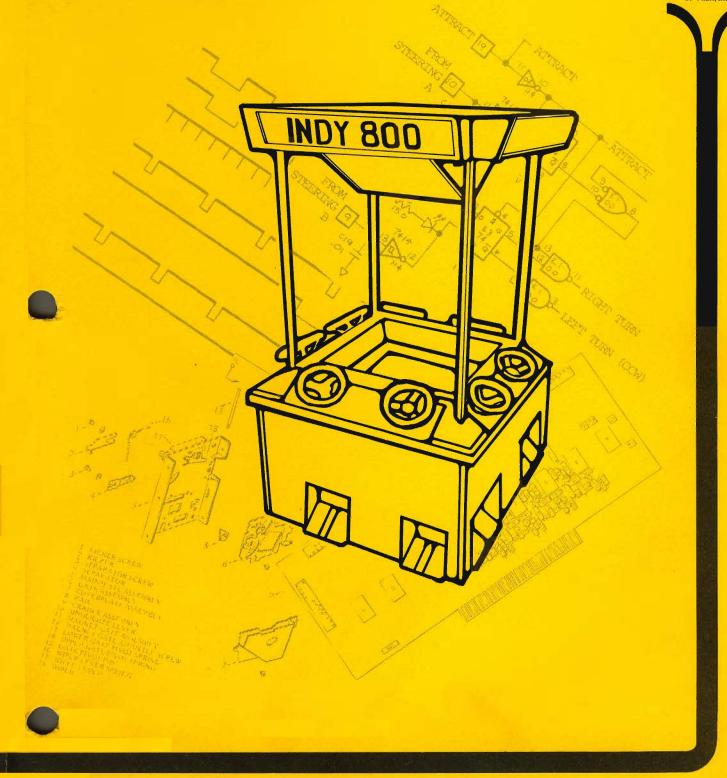

WARRANTY

Seller warrants that its printed circuit boards and parts thereon are free from defects in material and workmanship under normal use and service for a period of ninety (90) days from date of shipment. Seller warrants that its television monitors are free from defects in material and workmanship under normal use and service for a period of thirty (30) days from date of shipment. None of the Seller's other products or parts thereof are warranted.

If the products described in this manual fail to conform to this warranty, Sellers' sole liability shall be, at its option, to repair, replace, or credit Buyer's account for such products which are returned to Seller during said warranty period, provided:

- (a) Seller is promptly notified in writing upon discovery by Buyer that said products are defective;
 - (b) Such products are returned prepaid to Sellers' plant; and
- (c) Seller's examination of said products discloses to Seller's satisfaction that such alleged defects existed and were not caused by accident, misuse, neglect, alteration, improper repair, installation or improper testing.

In no event shall Seller be liable for loss of profits, loss of use, incidental or consequential damages.

EXCEPT FOR ANY EXPRESS WARRANTY SET FORTH IN A WRITTEN CONTRACT BETWEEN SELLER AND BUYER WHICH CONTRACT SUPERSEDES THE TERMS OF THIS ORDER, THIS WARRANTY IS EXPRESSED IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON THE SELLER'S PART, AND IT NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR THE SELLER ANY OTHER LIABILITIES IN CONNECTION WITH THE SALE OF PRODUCTS UNDER THIS ORDER.

This document is and contains confidential trade secret information of Atari, Inc.

This document is loaned under confidential custody for the sole purpose of operation, maintenance or repair of Atari equipment and may not be used by or disclosed to any person for any other purpose whatever, and remains the property of Atari, Inc.

Neither it nor the information it contains may be reproduced, used, or disclosed to persons not having a need to know consistent with the purpose of the loan, without written consent of Atari, Inc.

Table of Contents

					Page
Warrant	<u>y</u>		Inside	Front	Cover
Section	1	Seneral Maintenance Information			
	1-1	Introduction			1-1
	1-2	New Machine Set-up Procedure			1-1
	1 - 3	New Machine Checkout			1-1
	1-4	Coin Acceptor			1-2
	1-5	General Machine Maintenance			1-3
Section	2	Circuit Description			
	2-1	General System Description			2-1
	2-2	SYNC Printed Circuit Board			2-5
	2-3	Score Printed Circuit Board			2-8
	2-4	Coin Control Printed Circuit Board			2-10
	2-5	Car Printed Circuit Board			2-13
	2-6	Power Supply Printed Circuit Board			2-19
	2-7	Operator Adjustments & Instructions			2-19
	2-8	Service and Troubleshooting			2-21
Section	3	Customer Service Information			
	3-1	Test Equipment			3-1
	3-2	Required Minimum Equipment			3-2
	3-3	Optional Equipment			3-2
	3-4	Logic Types and Functions			3-3
Section	4	Schematics, Drawings and Parts Lists			

1. GENERAL MAINTENANCE INFORMATION

1-1. INTRODUCTION

The Atari Indy 800 game consists of a cabinet, TV monitor, printed circuit boards (PCBs), interconnecting wiring, and various cabinet—mounted circuit components. Except for a schematic, no information about the TV monitor is presented in this manual. The TV monitor is a GE 25" color unit. TV circuit malfunctions can be solved using standard TV troubleshooting techniques. However, the PCB computer requires troubleshooting techniques that may be unfamiliar to the average technician. Therefore, the troubleshooting information in this manual is dedicated to the PCBs and their associated cabinet circuitry.

1-2. NEW MACHINE SET-UP PROCEDURE

Before turning this machine on, inspect it carefully for any damage which may have occurred during shipment. Inspect both interior and exterior of the machine for any obvious damage to the cabinet or internal components. Check for cracked or broken cabinet parts, assemblies pulling loose, broken or disconnected wires, or foreign objects shorting electrical connections. After the machine has been plugged in and turned on, perform the checkout procedure.

1-3. NEW MACHINE CHECKOUT

As each new machine leaves the factory, every component and subassembly is carefully checked for proper operation. However, since parts may have been damaged or adjustments changed during shipping, the following checkout procedure must be repeated prior to placing the machine on location:

- 1. Inspect both the exterior and interior of the machine for obvious shipping damage such as cracked or broken cabinet parts, subassemblies broken loose, etc.
- 2. Carefully inspect the interior of the machine to see that all solder joints, slip-on connectors, and plug-in type connectors are firmly seated. Pay particular attention to the PCB edge connector and the fuses. Also check the connections to the coin switch, the TV monitor, the interlock switches, and all other Molex-type connectors.
- 3. Plug the machine in, and pull out the white actuator shafts of the interlock switches if the rear door is open. Inspect the cathode ray tube image for a steady and sharp picture that exhibits the proper levels of brightness and contrast.

- 4. Insert several old and new coins into the coin acceptor. No genuine coin should be rejected, and each coin insertion should step the coin counter one digit. Depress the coin rejector button to make sure that the linkage is operating smoothly.
- 5. Coin insertion should start the game. Check for proper game sequence, making sure that all aspects of the game are functioning correctly.
- 6. The interlock switch must turn off the entire machine when the rear door is opened.

1-4. Q-530 COIN ACCEPTOR: OPERATION, ADJUSTMENT & MAINTENANCE

All coin acceptors leave the factory adjusted for maximum performance. If, however, more critical adjustments are desired, or if the unit has been completely disassembled for service, the following adjustment procedure is suggested. If the coin acceptor has been removed from the machine, place it in a vertical position on a level surface. If the acceptor is still mounted on the coin door, place the coin door in a vertical position on a level surface.

1. Kicker and Separator

- a. Set the acceptor with the back of the unit facing you in the test position.
- b. Loosen the screws holding the kicker (1) and the separator (3) and move both the kicker (2) and the separator (4) as far to the right as they will go. Tighten the screws.
- c. Insert several test coins (both old and new) and note that some are returned by striking the separator.
- d. Loosen the separator screw and move the separator a slight amount to the left. Tighten the screw.
- e. Insert the test coins again and, if some of them are still returned, repeat Step d until all the coins are accepted.
- f. Loosen the kicker screw and move the locker as far to the left as it will go. Tighten the screw.
- g. Insert the test coins and note that some are returned.
- h. Loosen the kicker screw and move the kicker a slight amount to the right. Tighten the screw.
- i. Insert the coins again and, if some are still returned, repeat Step h until all the coins are accepted.
- j. Be sure that both screws are tight after the adjustments have been made.

2. The Magnet Gate


- a. Set the acceptor with the front of the unit facing you in the test position.
- b. Turn the magnet gate adjusting screw (2) out or counterclockwise until none of the coins will fit through.
- c. With a coin resting in the acceptor, turn the adjuster in or clockwise until the coin barely passes through the magnet gate.
- d. Test this adjustment using several other coins, both old and new, and if any of them fail to pass the magnet gate, repeat Step c until all the coins are accepted.
- e. Fix the magnet gate in this position with a drop of glue or Loctite, if necessary.

3. Acceptor Maintenance

Depending on the environment in which the acceptor is used, periodic preventive maintenance should be performed. The mainplate (5) may be cleaned with any household cleaner. Thorough rinsing and drying are necessary to remove deposits and/or film. Remove all metal particles from the magnet by guiding the point of a screwdriver or similar tool along the edges of the magnet. You will notice that the particles will cling to the point of the tool. Remove the transfer cradle (9) and the undersize lever (10) and clean the bushings and the pivot pins. A pipe cleaner is an effective cleaning tool. Apply powdered graphite or pencil lead to the pivot pins and bushings and reassemble. Spray the entire unit lightly with WD-40®, a lubricant.

1-5. GENERAL MACHINE MAINTENANCE

Due to its solid-state circuitry, your machine will require very little maintenance other than periodic cleaning, lubrication and TV monitor adjustment. The cabinet and plexiglass screen may be cleaned with any non-abrasive household cleaner. The coin acceptor and the rejector linkage should be sprayed lightly once every three months with WD-40 or a silicone lubricant. The potentiometer shafts must never be lubricated in any way. The TV monitor is adjusted only when the CRT picture is distorted, or if the contrast or brightness appear to be out of adjustment.

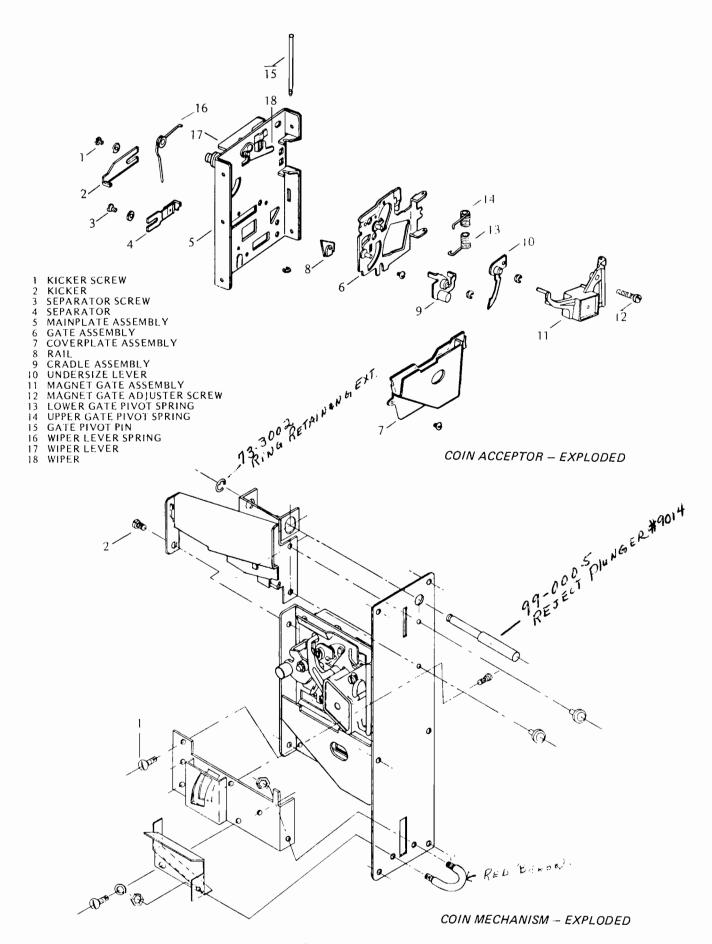

2. CIRCUIT DESCRIPTION

2-1. GENERAL SYSTEM DESCRIPTION

1. The Indy 800 electronics system consists of the following components:

Part/Assy No.	Qty.	Description	Section	Page
A003182	1	Sync PCB	2-2	2-5
A003170	1	Score PCB	2-3	2-8
A003184	1	Coin control PCB	2-4	2-10
A003000	8	Car PCB	2-5	2-13
A003199	1	Backplane PCB	2-1	2-4
A003191	1	Power Supply PCB	2-6	2-19
A000607	8	Steering PCB	2-1	2-4
A003193	1	Remote panel PCB	2-4	2-11
92-013	1	25" color TV monitor		
	-	Harness & controls		

The sync, score, coin control, and eight individual car boards are housed in a card rack within the game. These PCBs are interconnected by the backplane circuit board which is located at the rear of the card rack. The backplane board also provides edge connectors for interfacing with the other system components through the harness. Figure I-A shows the locations of the various boards and connectors within the card rack. The car numbers, colors, and steering wheel locations as well as locations of the card rack and power supply are shown in Figure I-B.

2. Basic functional description of each PCB

a. Sync PCB

This includes the system clock, the video sync counters, and timing function generators, the race track video, the score checkpoints, score video windows, and the ORing circuitry for detection of collisions with other cards. The master audio volume control is also located on this board.

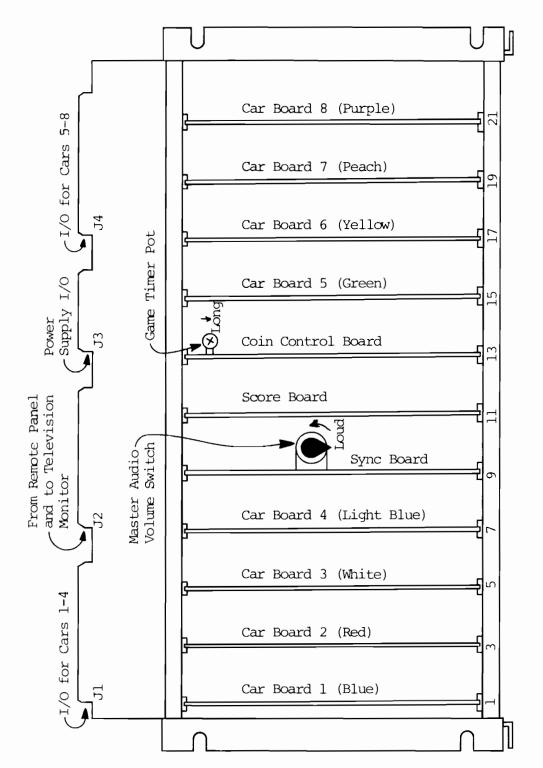


Figure I-A: Indy 800 Card Rack Layout (Front View)

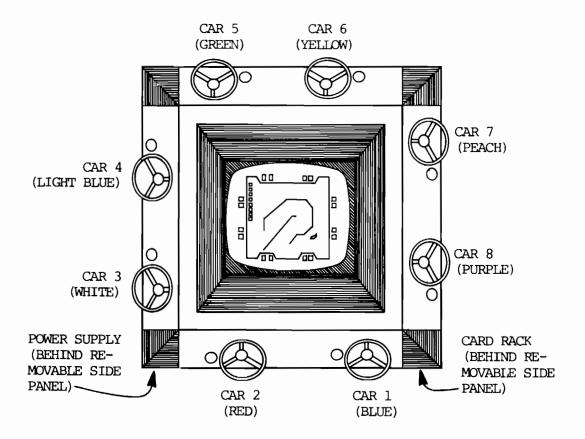


Figure I-B: Indy 800 Cabinet, Location of Car Controls and Electronics

b. Score PCB

This includes all the circuitry necessary for detecting, counting, and displaying the score for each car. It also senses which car has the highest score and causes that score to blink. Finally, it contains the video outputs to the TV (except sync) and the TV calibration function circuit.

c. Coin control PCB

This monitors all coin inputs. It generates the reset and enable for each car in both the attended (with remote panel) and unattended (coin input, automatic) modes. The game timer and game turn-off circuitry are also included on this board.

d. 8 identical car PCBs

These control each of the individual cars. Each board contains all the circuitry necessary to rotate, move, and produce the video and audio for one car when enabled. The skid, collision, and crash detectors are also on this board.

e. Backplane board

This has no electronic components and serves only as an interface between the various components of the entire system.

f. Power supply PCB

This is the source of the unregulated power supplies for the digital and analog circuitry of the other boards. The relays and drivers for the coin mechanism lockout coils are also located on this board.

g. Steering PCBs

These are mounted on the backside of the steering wheel assemblies. The boards use optical sensing to produce two signals in quadrature, which may be decoded into rate and direction of rotation.

h. Remote panel

This is simply a switch board which is used to control the game in the attended mode of operation. Individual car enables, a master enable, and a start button are provided. When the remote panel is disconnected, the game automatically reverts to the unattended or automatic mode.

2-2. THE SYNC PRINTED CIRCUIT BOARD

The sync PCB has circuitry to produce the following functions:

- 1. System CLOCK and video countdown chain.
- 2. COMP SYNC signal to TV monitor.
- 3. Race track video.
- 4. Score CHECKPOINTS.
- 5. SCORE WINDOW.
- 6. OTHER CARS signal for each car.
- 7. +5 volts power for steering boards.
- 8. Miscellaneous timing signals to other logic.
- 9. MASTER VOLUME CONTROL signals.

The system CLOCK runs at 14.3 MHz. The horizontal countdown chain A4 B4, C4 (9316s) divides this basic frequency by 908 for each video line (15.76 KHz). The vertical countdown chain D4, D4 (7493), E3 (74107) divides the line rate by an additional 263 for a video frame (60 Hz).

The horizontal counter starts at 116 (binary 0001110100) and counts to 1024 (1111111111). The horizontal sync pulse (HSYNC) begins at count 256 and is 64 clock pulses wide (4.47 sec). This is done at C3-9 (7474) where the rising edge of 256H clocks a low through to Q, which is set back to a high 64H later by B3-11 (7400).

The vertical counter counts from zero (binary 000000000) to 262 (100000110), at which time D3-12 (7410) goes low. At the next rising edge of 512H, this low is clocked through to C3-5 (7474). VRESET then resets the vertical counters to zero and the cycle begins again after VRESET is cleared again one line later. The vertical sync pulse (VSYNC) comes from an R/S flip flop, D3-1 (7202). It begins with VRESET and is 4½ lines long (290 sec).

The race track signal (RT) is generated by feeding sync counter signals into a 1K ROM, F4 (003189). The 4-bit output is multiplexed to a single line by F3 (74153) and is gated by 512H and by a signal to produce "dots" from A3-8 (7420).

Similarly, the score CHECKPOINTS come from a 256-bit ROM, E5 (003188) which is addressed with functions from the sync counters. The three lowest-order data outputs of this ROM are used to generate the score windows in which the score video will be shown. This generation is

accomplished in some random logic including Al (7400), Bl (7486), and finally out of Cl-8 (7420).

COMP RESET CLOCK is a signal which drives the car reset circuitry on the coin control board. It is a signal that occurs at horizontal count 544 through 1024 on one line out of every 12. Dl (74107) is hooked up as a divide-by-3 counter to produce a 4-line signal every 12 lines. B2 (7400) is hooked up as an R/S flip flip to produce the proper horizontal timing. These are ANDed together along with 1V and 2V signals to produce the required signal at Cl-6 (7420).

BOUNDS is a signal that represents a horizontal boundary. It goes to the car reset circuitry on the coin control board. Any car found coincident with this signal is out of bounds and will be reset back to the starting line.

FLASH is a 4-bit (250 µsec) square wave used to make the score of the leader blink.

16V ? 32H is a timing signal used in the generation of the score video. It is a digit select signal that multiplexes the high- and low-order digits of the score.

The OTHER CARS signals are a three-level ORing of every car except the one to which the signal is sent. They are used on the car boards to detect collisions between cars.

VCLOCK is a two-pulse signal during horizontal sync on each line (except those lines from 256V until the end of VSYNC). It is used to clock the vertical-motion counters on the car boards.

MASTER VOLUME signals choose one of four possible volume levels for all cars.

See Figure II-A for a diagram of the sync functions, race track, etc., as oriented on the TV screen.

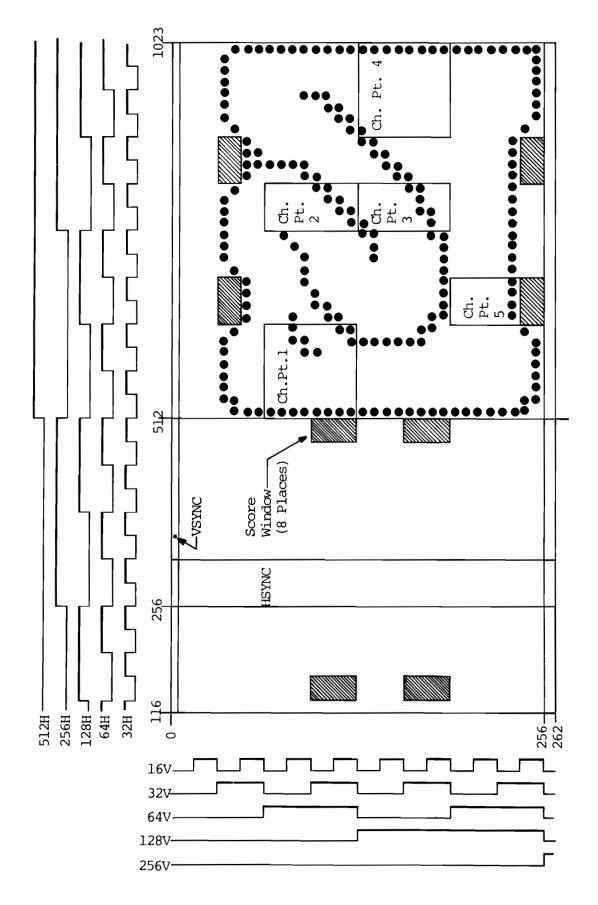


Figure II-A: Sync PCB Functions

2-3. THE SCORE PRINTED CIRCUIT BOARD

The score circuit board includes several subcircuits that detect, count, and display the score as well as detect the leader. Each car has 6 bits of score arranged in two digits of 3 bits each. The three least significant bits (nC, nB, nA, where n = car number) represent an even decimal digit from zero to 8 and are the signals from the divide-by-5 outputs of a 7490 decade counter. The three most significant bits (nF, nE, nD) are the outputs of a divide-by-8 counter configuration and they represent a decimal digit from zero to 7. Thus, the score for each car runs from 00 to 78, counting by twos.

Score is detected by sensing that the car crosses a series of "checkpoints" in a certain sequence. These checkpoints are generated on the sync board and are located at appropriate places along the race course (see sync board, Section 2). The detection of coincidence between car and checkpoints in the proper sequence is provided by a 9312 IC, an eight-input multiplexer. The circuit is shown in Figure III-A. Depending on the least significant digit (3 bits) of score, the next checkpoint to be crossed is selected.

From the score counters, the score bits are time-multiplexed in another stage of six 9312s so that each score is present at the output of the multiplexers when it is to be displayed on the screen. This time-multiplexed score information is then fed into two circuits -- the leader detector circuit and the seven-segment decoder.

The leader detector circuit operates as follows (see Figure III-B). At the start of a game, all of the score counters and the latches K2 (74175) and H2 (74174) are reset. H2 contains the high score bits and K2 contains a code telling which car first achieved that score. At each video frame all the scores are compared to the highest score by comparing the multiplexed score bits (A through F) with the outputs of H2. This comparison is made in the digital comparators J2 and F2 (7485). When the incoming score exceeds the previous high score, an output of the comparator is gated with some sync signals in C6 (7410) to avoid race conditions. The resulting signal clocks H2 and K2 to store the new highest score and new-leader code.


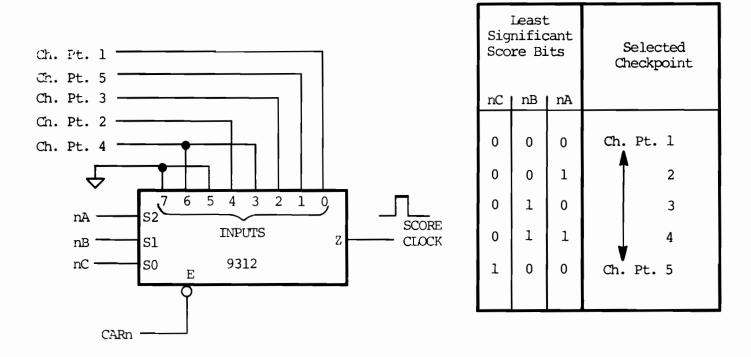


Figure III-A: Score Detection Circuit

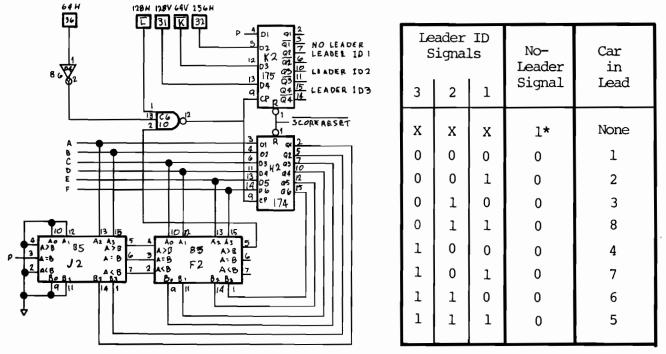

*No-leader condition is present only at start of game.

Figure III-B: Leader Detector Circuit

The time-multiplexed score is further multiplexed into two digits in H1 (9322) and this information is fed into a seven-segment decoder, F1 (7448). A digital comparator, L2 (7485), is used to make the score of the leader blink by exciting the blanking input of F1 when the LEADER I.D. code matches the time-multiplexed sync signals (256H, 64V, 128V).

Four 74153s (A1, B1, D1, E1) and three 9312s (A2, B2, C2) are the function generators that translate the multiplexed seven-segment data into score video information. E1 and B1 form the seven-segment characters for scores 1, 2, 5, and 6. E1 (74153) forms the vertical segments b, c, e, and f. B1 (74153), together with a blanking signal from B2 (9312), forms the horizontal segments a, d, and g. These are ORed in C1 (7432): C1-11 has the video for scores 1 and 2; C1-8 has the video for scores 5 and 6. Similarly, D1 (74153) forms the vertical segments for scores 3, 4, 7, and 8, and A1 (74153) and A2 (9312) produce the horizontal segments. These are again ORed in C1 (7432): C1-6 has the video for scores 3 and 4; C1-3 has the video for scores 7 and 8. These separate video signals are remultiplexed in C2 (9312), where the score window from the sync board is used to gate the information through at the proper time.

This composite score video signal is then demultiplexed in D6 (9301) into eight separate score video signals. These signals are then ORed with the car signals in E6 and F6 (7408), ANDed with the video function SIGNAL, and sent out to the television as video information. There is some slight additional circuitry that creates video test and alignment functions on the white video output line (car 3). These functions are: normal operation, all-white screen, all-black screen (no video), and a dot pattern for convergence adjustment. They may be selected by attaching the appropriate jumper as shown on the schematic.

2-4. COIN CONTROL PRINTED CIRCUIT BOARD

The coin control circuit board contains the circuitry for the following functions:

- 1. Coin detection and credit latches.
- 2. Game control, game timer.
- 3. Car reset circuitry.

The heart of the coin detection and credit latch circuitry is the LM339 quad analog comparator. This device is used to sense a proper coin input and to latch and register credit for that coin until the end of the game. Normally open and normally closed coin inputs are brought into an inverter latch where the coin signal is debounced.

When the coin switch is closed, the 0.1 µf capacitor on the non-inverting (+) terminal of the LM339 is discharged through a 68K resistor. If the switch is closed for more than 12 msec, the voltage at the non-inverting terminal of the LM339 will go negative with respect to the inverting (-) terminal voltage (ref. Voltage). When this occurs, the output of the LM339 changes state. Through positive feedback, this state is latched into the comparator. If the coin switch is closed for less than 6 msec, the capacitor will not discharge sufficiently to allow the output of the LM339 to change state. Between 6 and 12 msec, the latching may or may not take place, depending on device tolerances. The typical duration of coin pulse needed to toggle the latch is 10 msec. At the end of the game, or in case of a power or static interrupt, the REF voltage at the inverting (-) comparator input is pulled low. The output again goes high, and the 0.1 µf capacitor is quickly recharged through a diode.

The game control circuitry determines which cars are enabled in all modes of operation. There are three basic modes of operation:

- 1. Unattended (automatic).
- 2. Attended with coin inputs, remote start.
- 3. Attended with remote enable and start.

In the attended mode, the remote panel is not used. In the first attended mode the start button on the remote panel is used, but the enable switches are not (they should all be turned to the "off" position). The second attended mode assumes manual collection of money by the attendant. The lockout coil switch on the power supply board should be turned to "off" so that no money can be put into the machine. The attendant then enables any or all of the cars by turning the appropriate switches on the remote panel and pushing the start button.

The coin board determines whether it is in the attended or unattended mode by seeing if the remote panel is connected to it. If the remote panel is connected, then the REMOTE signal will be low (provided by a grounded jumper in the remote connector). Otherwise REMOTE will be high or pulled up. This signal goes to a 9322 quad two-input multiplexer (D2) that selects the proper control functions for required mode of operation.

In the unattended or automatic mode of operation, if any coin has been put into the machine, CREDIT is high (from CREDIT 1, IC C5, 7430). When CREDIT goes high, the game counters Kl, Jl (7493s) start counting. After eight pulses from the 1 SEC oscillator, Ll (555), the PLAY 1 latch Hl-10 and Kl-13 (7402) changes state and the game starts.

If the game is in the play mode and car n has credit (Qn is high), then ATTRACT n will go low (ICs H4 and F4, 7400). This enables the controls on car n so that it may be driven. During the eight-second waiting period, the SCORE RESET signal is driven low by C2-8 (7410). At the end of the game, after 128 pulses from the one-second clock, the END GAME latch H1-4 (7402) produces a pulse to reset the credit latches.

In the attended mode, the START signal clocks the CREDIT 2 flip flop at C3-11 (7474). If any coin latches are set or remote enable switches are in the "on" position, CREDIT and PLAY will go high. The score will be reset by the START signal. At the end of the game, the END GAME latch (H1) will reset the CREDIT 2 flip flop (C3) through C2-4 (7410).

The car reset circuitry resets each car at the start of the game and if it travels out of bounds. COMP RESET CLOCK shifts a series of high signals through the 8-bit parallel out-shift register, C4 (74164). As the high signal ripples through the shift register on consecutive pulses from COMP RESET CLOCK, the individual car reset clocks (CRC 1 through CRC 8) are produced. These are used to clock the car reset flip flops A3, A4, B3, B4 (7474s). If coin switch n is closed or if car n is out of bounds, the set input of car reset flip flop n will be pulsed low, and CAR RESET n will go high. If the game has credit but car n does not, then the D-input to the reset flip flop will be held high and CAR RESET n will be continuously clocked high by CRC n. As long as the CAR RESET signal is high, car n will disappear. Then credit for car n is established, CAR RESET n will be clocked low, and the car will reappear at the starting line.

2-5. CAR PRINTED CIRCUIT BOARD


The car board contains the following circuits:

- 1. Car steering processor.
- 2. Car acceleration processor.
- 3. Car motion counters.
- 4. Car video processor.
- 5. Crash and collision detection.
- 6. Sound synthesis and power amp.

The steering processor is a two-stage up/down counter (E2 and F2, 74193s) with decoding circuitry in front (E3, 7474, and E1, 7300) and the skid detector (C1, 7400) and latch (D1, 7475) after. When the circuit is enabled (attract goes low), the decoder circuitry translates a quadrature signal from the steering board into direction and rate of turn information -- see Figure V-A). VTC on E3-13 (7474) serves as a maximum turning rate signal.

When there is a collision between cars, El-6 (7400) forces the car to turn for the duration of the COLLISION signal at the maximum turning rate. The red LEDs on the outputs of H4-10, 12 (7414) serve only as visual indicators of the operation of the quadrature signal from the steering board. E2 and F2 (74193s) divide the rotation pulses of the decoder circuit by 128. The last five bits of this division become the rotation code R4-R0* that represents a specific car orientation. Binary 00000 is straight up; the count continues clockwise through 32 consecutive positions up to binary 11111, which is just left of straight up. The skid latch D1 (7475) contains the direction code* of the car or D4-D1 (the lowest-order direction bit is R0).

*The rotation code R4-R0 tells in which direction the car is pointed; the direction code D4-D1, R0 tells the direction of motion.

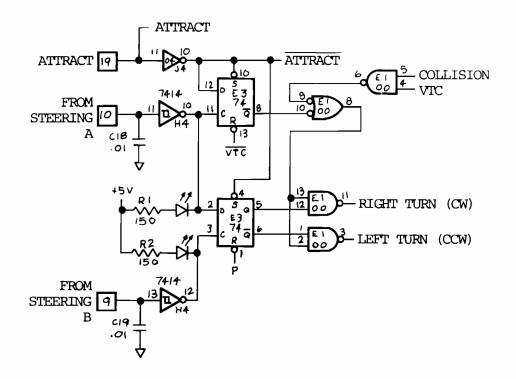

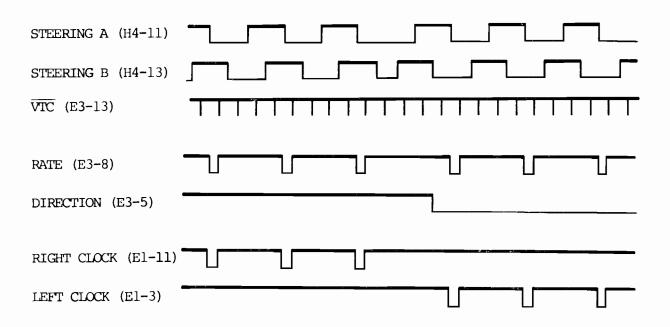


Figure V-A: Steering Decoder Circuit with Sample Waveforms

This code differs from the rotation code only when the car is in a skid. The skid condition is determined by Cl (7400). If the car is at quarter-speed or greater when the brake is depressed, or if the car collides with another car, a skid condition exists, and $\overline{\text{SKID}}$ goes low to latch the last rotation into Dl.

The acceleration processor consists of some preprocessing circuitry (D3, 74153) to create acceleration and deceleration pulses, an up/down counter (C2, 74193) to count these pulses and keep track of the speed, and a circuit (D2, 7485) that translates this speed information into speed pulses in the GO signal.

With only the gas pedal depressed, the car will accelerate at the rate of one unit per 16 frames (signal from C3-6, 7420 gated with 8F at D3-4). With no pedal depressed or with only the brake depressed, the car will decelerate at the rate of one unit per eight frames. With both gas and brake pedals depressed, the car will decelerate one unit per 16 frames. The up/down counter, C2 (94193) with a fifth stage A1-5 (7407), counts these acceleration units. At speed 14 (binary 11110), C3-8 (7420) gates out any further acceleration pulses and maximum speed is attained. At speed zero, in the attract mode, or after a crash into the pylons, the STOP signal resets the counter outputs to zero. The digital comparator D2 (7485) compares the speed code (SPEED 5-SPEED 1) against frame bits (1F-16F) from B1 (7493) and A1-3 (74107). The result is shown in Figure V-B.

The motion circuit operates on the principle of the Atari patented "slipping counter" method of moving objects on a raster scan display (patent no. 3793483). The motion counters count in parallel with the sync counters on the sync board. In order to move vertically, the vertical motion counter K3 (9316), L3 (9316), and J1-5 (74107) is forced to count short (up) or long (down) with respect to the sync vertical counter. Similarly, the horizontal motion counter H3, J2, H2 (9316s) causes horizontal motion by counting short (left) or long (right) with respect to the sync horizontal counter.

Each frame in which the GO signal is high causes the motion counters to make a unit move in the direction specified by the direction code (D4-D1, RO). To move faster, GO is high more often. A table of approximate sine/

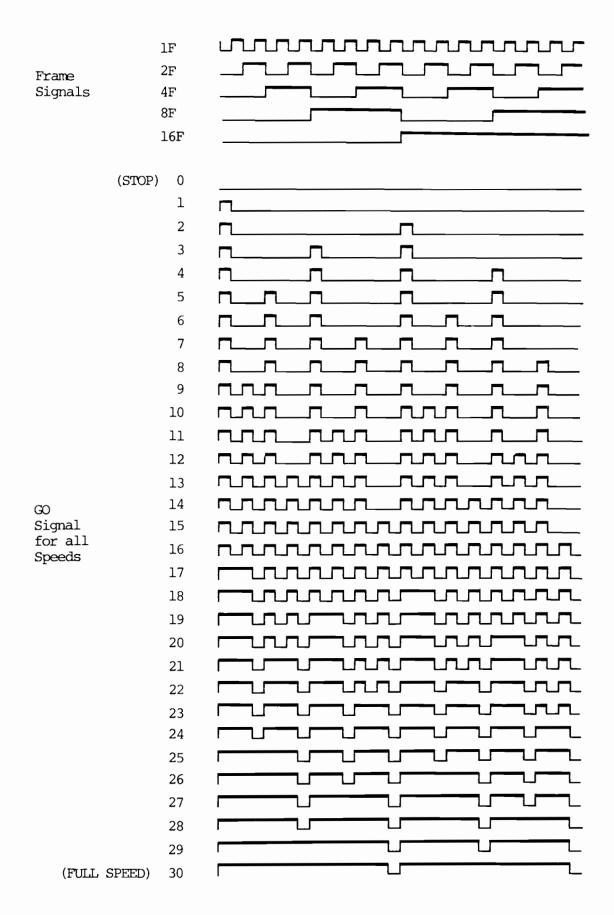


Figure V-B: GO Signal (Speed Pulses)

cosine values for the 32 different directions is contained in a PROM (K4, 003187). This motion code goes to the motion counters when GO enables the PROM. The horizontal motion code is gated with VRESET in F3 (7402). This limits the long or short count to one line of the frame. A table of the horizontal and vertical motion codes for all 32 directions, as seen at the load inputs of H3 and K3 (9316s), is given in Table V-C. The horizontal counter is clocked at the system clock rate of 14.318 MHz.

In order to maintain the same amount of motion resolution vertically as well as horizontally, the vertical motion counter is clocked by VCLOCK. This signal is two pulses per line and is gated out during vertical sync so that the vertical motion counter requires one less stage. Using the terminal count outputs of the counters, a car window is formed of 16 clock pulses by 8 lines.

The video processor uses line, column, and rotation information to address video information in a 4K ROM, K2 (003186). Further column information from the horizontal motion counter is used to multiplex the ROM outputs to a single line from L2 (9312). This video is then clocked into J1-3 (74107) to remove edge effects and race problems. The result is the car video information.

When the car collides with another car, L1 (555) produces a half-second pulse during which the car will skid and spin. If the car crashes into the pylons, a low pulse is made at $\overline{\text{CRASH}}$ (H1-8), 7400). This signal stops the car and triggers the crunch sound. $\overline{\text{CRASH}}$ SEQ remains low and prevents further crashes until the car is no longer in contact with the pylons.

The sounds that are synthesized are the MOTOR SOUND, HORN, CRUNCH (crash), and SCREECH (skid). The MOTOR SOUND is produced by performing a D/A conversion on the speed code (SPEED 5-SPEED 1), and using the result to drive a current source that controls the oscillation frequency of B3 (555). This frequency is divided by both 6 and 4 and various divisions are mixed. The HORN is a 760-Hz signal gated by the horn button input. CRUNCH is made by gating noise from a noise source (D5-1, LM324) with a discrete one-shot, triggered by $\overline{\text{CRASH}}$. The SCREECH sound is formed by an op amp (D5-14, LM324) configured as a free-running multivibrator. This oscillator is also perturbed by the noise source to give it a

DIRECTION CODE D4-D1, RO	HORIZONTAL INPUTS (H3) D C B A	VERTICAL INPUTS (K3) DCBA
0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 1 0 0 0 0 1 0 0 0 0 0 0 1 0 0 0 0 0 0 1 1 0 0 0 0 0 1 1 0 0 0 0 1 1 1 0 0 0 0 1 1 1 1 1 1 1 0 0 0 0 1	0 1 0 0 0 0 1 1 0 0 1 0 0 0 0 1 0 0 0 0 0 0 0 1 0 0 1 0 0 1 0 1 0 1 0 1 0 1 1 1	1 1 0 0 1 1 0 0 1 0 1 1 1 0 1 1 1 0 1 1 1 0 1 0 1 0 0 1 1 0 0 0 1 1 0 1 1 0 0 0 1 0 0 1 0 1 1 0 0 0 1 0 0 1 0 1 1 0 0 0 1 0 1 1 0 0 1 1 0 1 0 1 0 1 1 0 1 0 1 0 1 1 0 1 1 1 0 1 1 1 0 1 1 1 0 1 1 1 0 0 0
STOP CODE	0 1 0 0	1000

TABLE V-C: UNIT MOTION CODES INTO MOTION COUNTERS

"gritty" quality, and it is turned on and off by the SKID signal F4-8 (7406); the sounds are then mixed, buffered, and fed into a digitally controlled four-position master attenuator. The audio volume trimpot should be adjusted so that with the horn turned on, the signal at D5-8 (LM324) is 0.75 volt peak to peak. Finally, the audio signal is amplified by the LM380 power amp.

2-6. POWER SUPPLY PRINTED CIRCUIT BOARD

The power supply board has the circuitry for the unregulated supplies and for driving the coin mechanism lockout coils.

The unregulated supplies are both full-wave center-tap rectified configurations. The +9V supply may vary from 7.5V to nearly 11V, depending on line voltage at the transformer primary and the load current. It supplies the power for the +5V regulators on the logic PCBs. The +20V supply may vary from 8V to 22V, again depending on line and load conditions. It supplies power for the audio electronics on the car boards and for the lockout coil drivers.

The lockout coil driver should be active when the $\overline{\text{LO}}n$ signal is high, i.e., when car n has credit. This turns transistor $(n \ on, powers \ the coil of relay Kn, and applies 20V to the lockout coil on coin mechanism n (activating the coil disengages the lockout function). The diode across the relay coil shorts inductive spikes of turn-off. The diode from the emitter of the transistor to ground increases noise immunity by raising the turn-on voltage of the transistor. The 100-ohm resistor from the relay coil to +20V is a current limit resistor to limit the dissipation in the relay and the transistor.$

2-7. OPERATOR ADJUSTMENTS AND OPERATING INSTRUCTIONS

1. Adjustments

There are several adjustments available to the operator. These are:

- a. Master volume switch (sync PCB).
- b. Game time adjustment (coin control PCB).
- c. Lockout coil power switch (power supply PCB).

The master volume switch adjusts the overall audio volume level to one of four possible levels. It is located on the sync PCB as shown in Figure I-A. Clockwise adjustment decreases volume; counterclockwise

adjustment increases the sound level. All of the car PCBs have their own separate volume controls. These are preset at the factory for balanced output levels and should be changed only by service personnel making repairs or adjustments to the car PCBs.

The game timer potentiometer is located on the coin control PCB in the upper corner near the front of the card rack. It adjusts the length of the game from approximately 75 seconds to nearly three minutes. Game time is increased by turning the pot downward or clockwise as seen from the front of the card rack.

The lockout coin power switch is located near the edge connector of the power supply PCB. If switched to the "off" position, all of the coils will go into the coin lockout mode, and the machine will not accept coins. This feature is useful in applications where an attendant collects payments manually and uses the remote panel to control the game. In order to use the coin mechanisms in the machine, this switch must be in the "on" position and power must be on.

2. Operating instructions

The unattended or automatic mode: after insuring that the machine is properly assembled and secure, apply power by inserting the power plug into a 105-125 VAC, 60-cycle, three-pronged or grounded receptacle rated for at least 5 amperes (600 watts). It will take a few minutes for the TV monitor to warm up. The game should come on in the attract mode (no sound or car motion). A coin in any slot will increment that coin counter, cause the lockout coil to engage, and reset that car to the starting line. After approximately eight seconds, the game will start (sound will come on and the cars may be driven). All cars that have not received credit will disappear from the TV screen. The eight-second delay allows all players to deposit their money before the game starts. Any player depositing money after the game starts will also get his car reset to the starting line and may play for the remainder of the game. The lockout coil power switch must be on, and the remote panel must be disconnected for this mode of operation.

The attended mode or using the remote panel; with power off (power cord disconnected), remove the side access panel. Guide the remote panel cable through the power cord outlet hole and into the machine. Connect the cable to the mating connector coming from the main harness just left of the card rack. If the coin mechanisms are to be used, the lockout coil power switch should be in the "on" position; it should be off if money will be collected manually. Put the access panel back into place. After insuring that the game is properly assembled and secure and that all toggle switches on the remote panel are in the "off" or downward position, apply power of 105-125 VAC, 60 cycles, 5 amperes, third terminal grounded.

If the coin mechanisms are used for money collection, the game will perform as in the automatic mode, except that to start the game the start button on the remote panel is used. All toggle switches on the remote panel should be in the "off" position at all times in this mode.

If money is collected manually, the cars for which payment has been received are enabled by toggling the appropriate switches on. Optionally, if all cars are to be enabled, the master switch in the center of the remote panel may be switched on. The game may be stopped at any time by disabling all the cars — if a restart is desired or if a contest for a certain number of laps is desired. To start a game after setting the switches to their proper positions, push the "start" button.

2-8. SERVICE AND TROUBLESHOOTING

Indy 800 is sold with spare circuit boards for all boards in the card rack and one spare steering PCB. When inserting circuit boards into the card rack, take the following steps to insure that the game will not be damaged:

- Be certain that the board is the proper type for that position and that it is not reversed. See Figure I-A for location of board types. Heatsinks should always be at the top of the board and to the right.
- Be certain that the board is inserted straight into position in the card guides.

- 3. Pushing gently, wobble the board slightly until it begins to seat into the connector. If it does not begin to seat, recheck steps 1 and 2 and check for warpage of the board. Correct any problem.
- 4. Applying firm, <u>constant</u> pressure, push the board into place until it is seating fully. The front edge of the board should be flush with adjacent circuit boards. DO NOT use fast, jerky motions, as this could damage the backplane board or the edge connector.

When removing boards, always use the card ejector tool provided with the game. Hook the bolt of the tool into the hole in the uppermost corner of the circuit board. Using the frame of the card rack as a pivot, pull gently up to disengage the card from the backplane (see Figure VIII-A). Remove the ejector tool and pull the card out by hand.

When troubleshooting, the short description of each board in Section 1 should be a great help in quickly locating a problem. Replacing the suspect circuit board with a replacement gives quick verification of the source of the problem. To fix a circuit board, refer to the schematic and technical description provided in this manual. Repair of circuit boards should be attempted only by qualified technical personnel with proper equipment. As an additional aid to maintenance, the system has been designed so that all eight car PCBs are interchangeable. Also, removing one car board will only disable that car, without affecting any others.

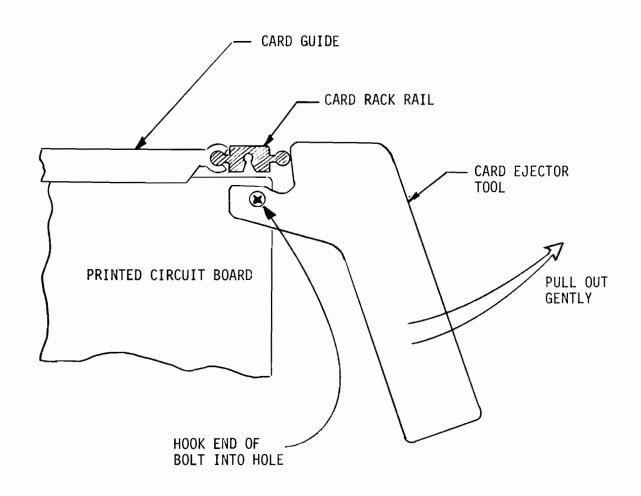


FIGURE VIII-A USE OF THE CARD EJECTOR TOOL

3. CUSTOMER SERVICE INFORMATION

3-1. TEST EQUIPMENT

In order to test any Atari PCB, some items such as the logic probe are absolutely essential. Others are desirable and will make the test procedure easier but are not absolutely essential. Some of these instruments are available from the Atari Customer Service Department and these are: the Kurz-Kasch 520 Logic Probe, the Atari Video Probe and the Hewlett-Packard 10529A Logic Comparator. Other instruments that are very useful are the HP 10526T Logic Pulser and the Tektronix 465 Oscilloscope. These items are available through your local electronics supply house.

3-2. REQUIRED MINIMUM EQUIPMENT

The following items are absolutely essential to perform the test procedures presented in this manual:

- 1. Logic Probe: The logic probe is an instrument designed for checking the outputs of integrated circuits.

 The Kurz-Kasch Logic Probe, Model No. LP-520, which is available through the Atari Customer Service Department or most large electronics supply houses, is recommended. This logic probe indicates if a signal is logic high, logic low, or changing from one state to another. Consult the operating instructions included with the probe for further details about its operation.
- 2. Video Probe: The video probe is a very simple but extremely useful device and consists of two test clips, a length of rubber-coated, test lead wire, and a 4.7K, ½-watt carbon resistor. Video probes may be obtained from the Atari Customer Service Department or, if necessary, they can be assembled from standard components available at all electronics supply houses.

3-3. OPTIONAL EQUIPMENT

It is possible to find 90% of the possible PCB computer malfunctions without the following items. However, if a complete set of trouble-shooting equipment is desired, Atari recommends:

- 1. Hewlett-Packard 10529A Logic Comparator
 The Hewlett-Packard 10529A Logic Comparator is used to verify
 correct IC operation. This device simply clips onto in-circuit
 ICs and instantly displays any logic state difference between
 the in-circuit test IC and the reference IC in the comparator.
 Logic differences for each pin of a 14 or 16 dual in-line
 package are indicated by a lamp on the comparator. If the logic
 comparator is purchased from the Atari Customer Service Department,
 it is shipped with 20 preprogrammed reference PCBs. If the device
 is purchased elsewhere, these PCBs must be specially programmed.
- 2. Hewlett-Packard 10526T Logic Pulser
 The Hewlett-Packard 10526T Logic Pulser is used to stimulate incircuit ICs so that they are driven to their opposite states. This device is available from the Atari Customer Service Department or can be obtained from most large electronics supply houses.
- 3. Tektronix 465 Oscilloscope
 The Tektronix 465 Oscilloscope is used for viewing various wave
 forms and should be ordered from Tektronix. Consult the manufacturer's
 operating instructions for details on oscilloscope operation.

3-4. LOGIC TYPES AND FUNCTIONS


TYPE	FUNCTION
7400	QUAD 2-INPUT NAND GATE
7402	QUAD 2-INPUT NOR GATE
7404	HEX INVERTER
74S04	HEX INVERTER
7408	QUAD 2-INPUT AND GATE
7410	TRIPLE 3-INPUT NAND GATE
7413	DUAL NAND SCHMITT TRIGGER
7420	DUAL 4-INPUT NAND GATE
7425	DUAL 4-INPUT NOR WITH STROBE
7427	TRIPLE 3-INPUT NOR GATE
7430	SINGLE 8-INPUT NAND GATE
7448	BCD TO 7-SEGMENT DECODER
7450	DUAL AND/OR GATE (INVERTER/EXPANDER)
7474	DUAL D FLIP FLOP
7483	4-BIT FULL ADDER
7486	QUAD EXCLUSIVE OR GATE
7490	DECADE COUNTER
7492	DIVIDE-BY-12 COUNTER
7493	4-BIT BINARY COUNTER
74107	DUAL JK M/S FLIP FLOP
74153	DUAL 4-BIT MULTIPLEXER
74157	QUAD 2-INPUT DATA SELECTOR/MULTIPLEXER
74165	PARALLEL-LOAD 8-BIT SHIFT REGISTER
74192	SYNCHRONOUS DECADE UP/DOWN COUNTER


74193	SYNCHRONOUS BINARY UP/DOWN COUNTER
LM380	AMPLIFIER
NE555	TIMER
NE566	FUNCTION GENERATOR
747	DUAL OPERATIONAL AMPLIFIER
RC4136D	QUAD OPERATIONAL AMPLIFIER
MFC6040	VOLTAGE-CONTROLLED OPERATIONAL AMPLIFIER
8098	HYBRID
8103	HYBRID
8099	HYBRID
9311	ONE-OF-SIXTEEN DECODER/DEMULTIPLEXER
9312	8-INPUT MULTIPLEXER
9314	QUAD LATCH
9316	4-BIT BINARY COUNTER
9321	DUAL ONE-OF-FOUR DECODER
9602	DUAL MONOSTABLE MULTIVIBRATOR
74186	ROM


SECTION 4.


SCHEMATICS, DRAWINGS AND PARTS LISTS

Number	<u>Title</u>	
003347	Assembly Inst	ructions
000598-02 A000598-xx 000607 A000607 000589 A000589	Steering Whee Parts List, S Steering PCB	Steering PCB Assembly Assembly Coot Pedal Assembly
003153	Wire (Harness	S) Schematic
003182	Schematic Parts List Assembly	Sync PCB
003170	Schematic Parts List Assembly	Score PCB
003184	Schematic Parts List Assembly	Coin Control PCB
003000	Schematic Parts List Assembly	Car PCB
003191	Schematic Parts List Assembly	Power Supply PCB
003199	Parts List Assembly	Backplane PCB
003193	Schematic Parts List Assembly	Remote Control PCB

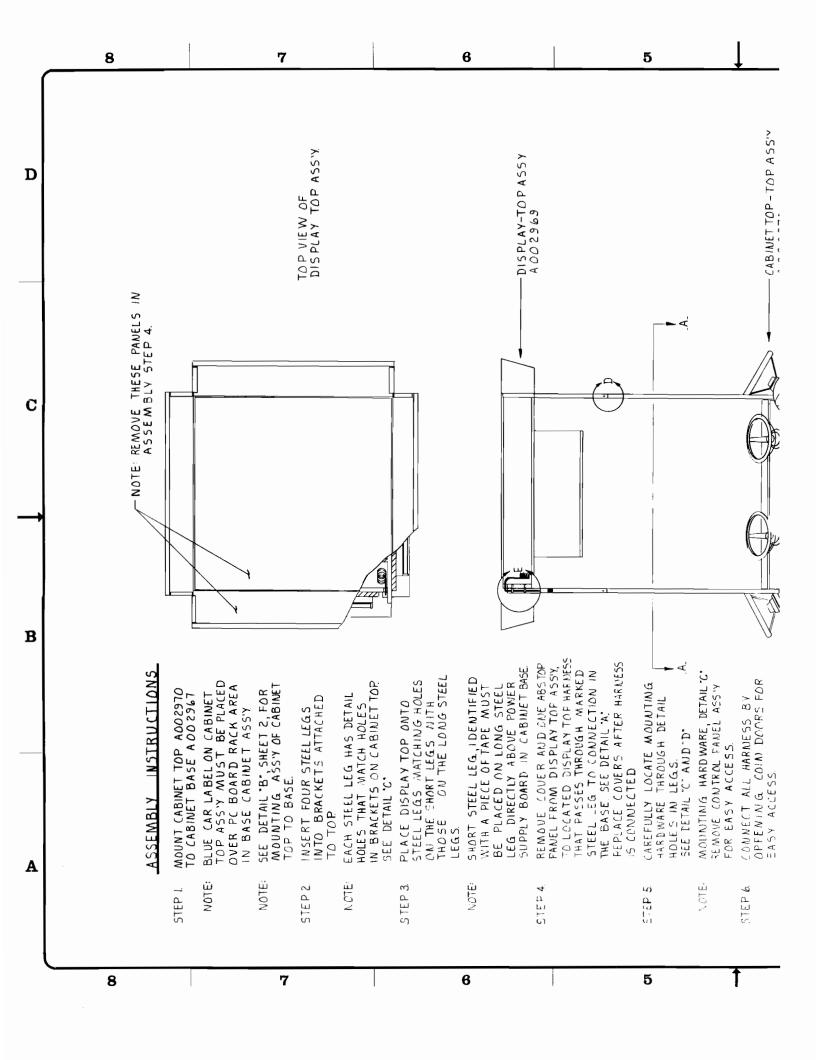

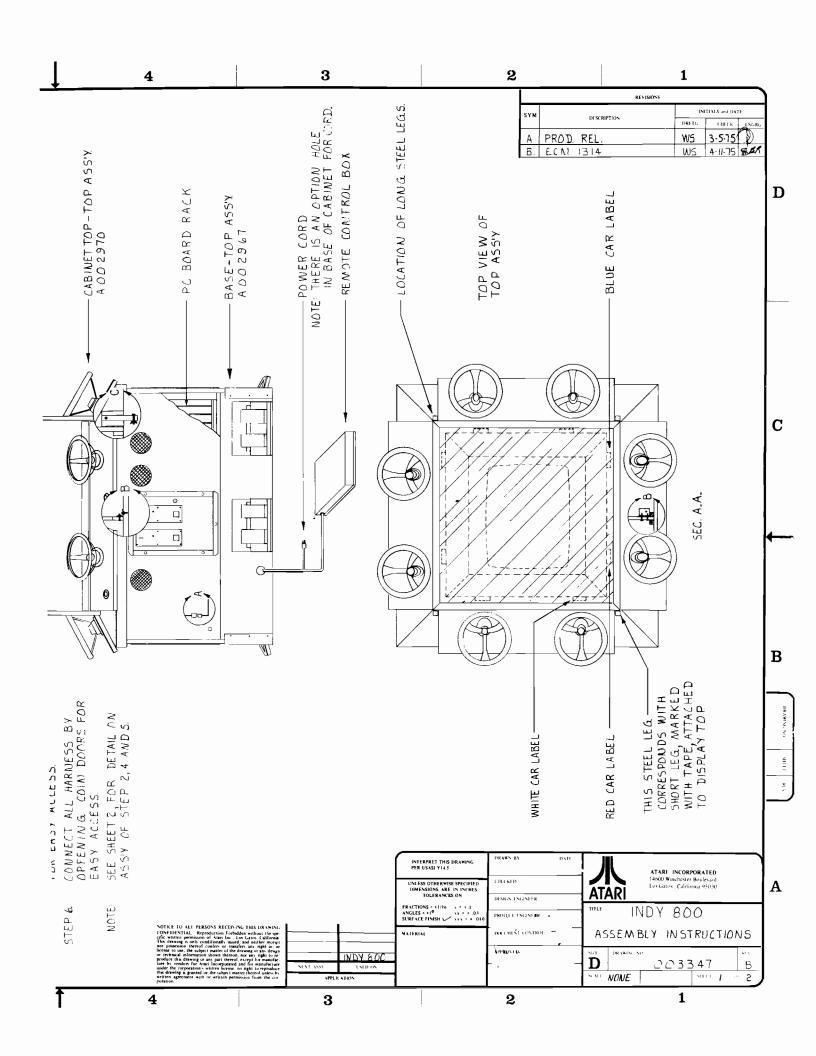


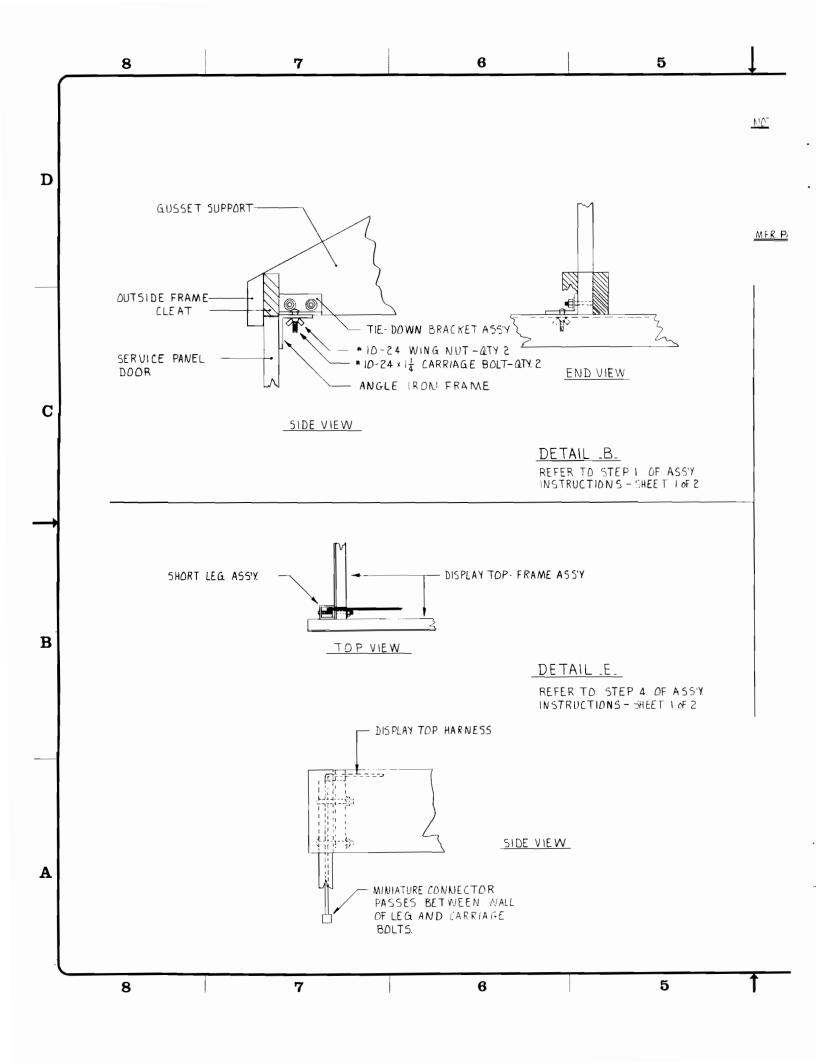


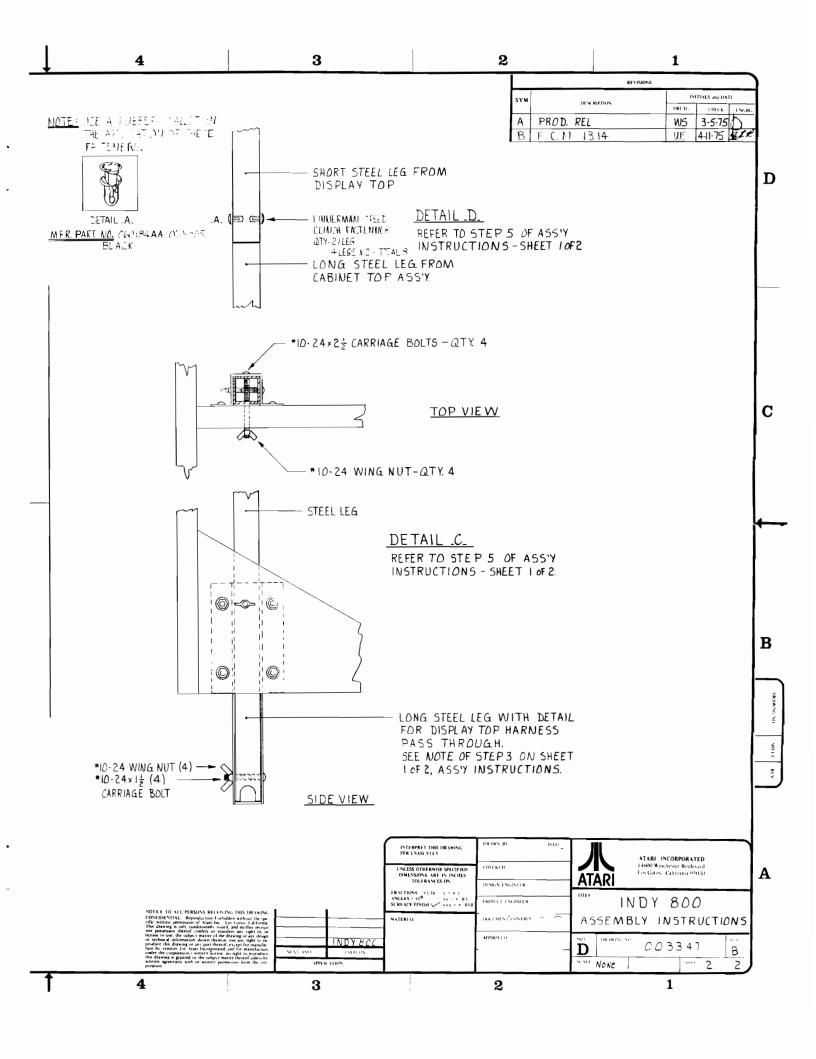

			,	
			,	
			•	

P/L₀₀₀₅₉₈₋₀₂ ASSEMBLY TITLE INDY 800 STEERING WHEEL ASSY Page 1 of 1 PARTS LIST SPECIFICATION Drawn Checked Mech. Eng. Proj. Eng. Elec. Eng RFV. leisure G Reν. Description Reν. Description Date Appry Date Apprv. 2/6/75 ECN 1131 214175 DESCRIPTION Item Part Number Qty. Steering Wheel Assy (3201-3803) Ref 000598 1 Cover, Kee Games Insigna 2 1 002133 Housing (3201-3545) Shaft (3201-3544) 3 000605 1 4 000606 1 Screw, Mach, Fil. Hd, Phil #4-20 x 3/4 Lg. 3 6 72-7512 Printed Circuit Assy 7 A000607 1 8 9 75-07002 2 Washer, Fender, 4 10 Bearing, Thompson (20L20-F) 11 76-042020 1 Bearing, Thompson (10L10-F) 12 76-041010 1 Steering, Wheel 10" 78-40102 1 13 Nut, #4-20, Nylon Lock 14 75-945N 1 1 Screw, Mach, Truss Hd, Slotted #4-20 x 5 Lg. 15 72-9580 1 000616 Hub Light 16 Washer, 氧" Int. Tooth, Starlock 1 17 75-055 Silicone Grease, Compound #5 Λ/R 18 78-16002 10 73-1208 MACH SCR. 256 x 1/2 PAN HD PH. 2

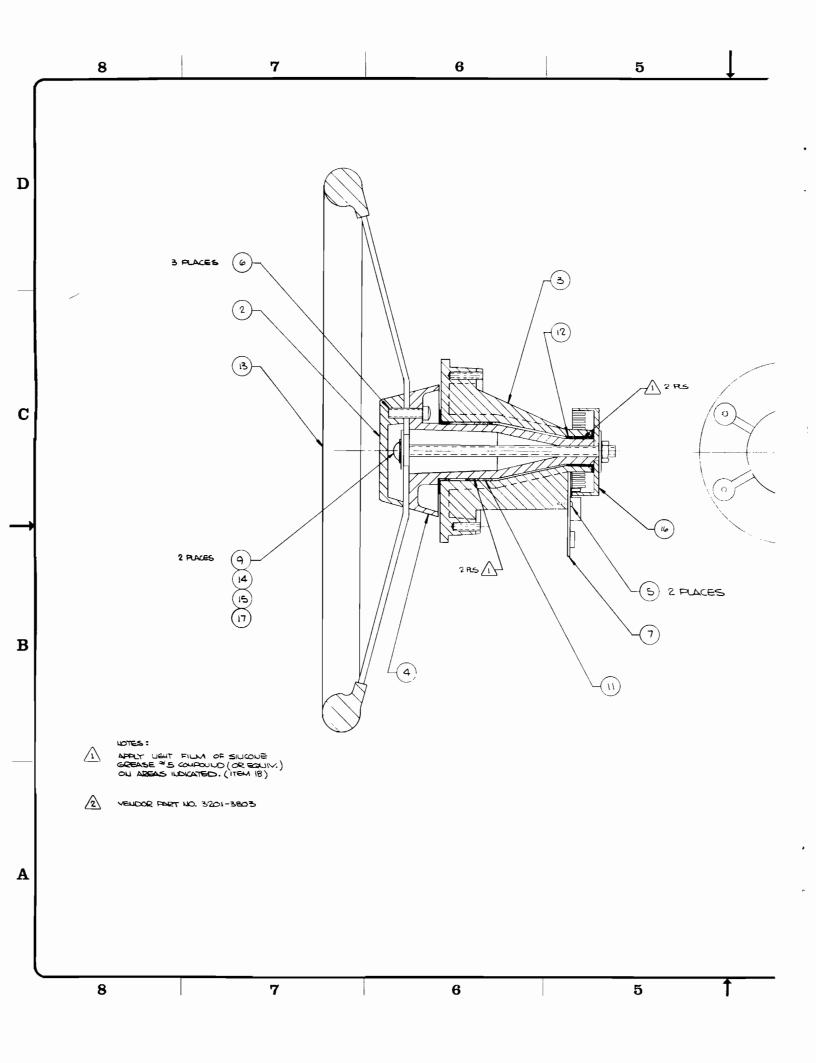

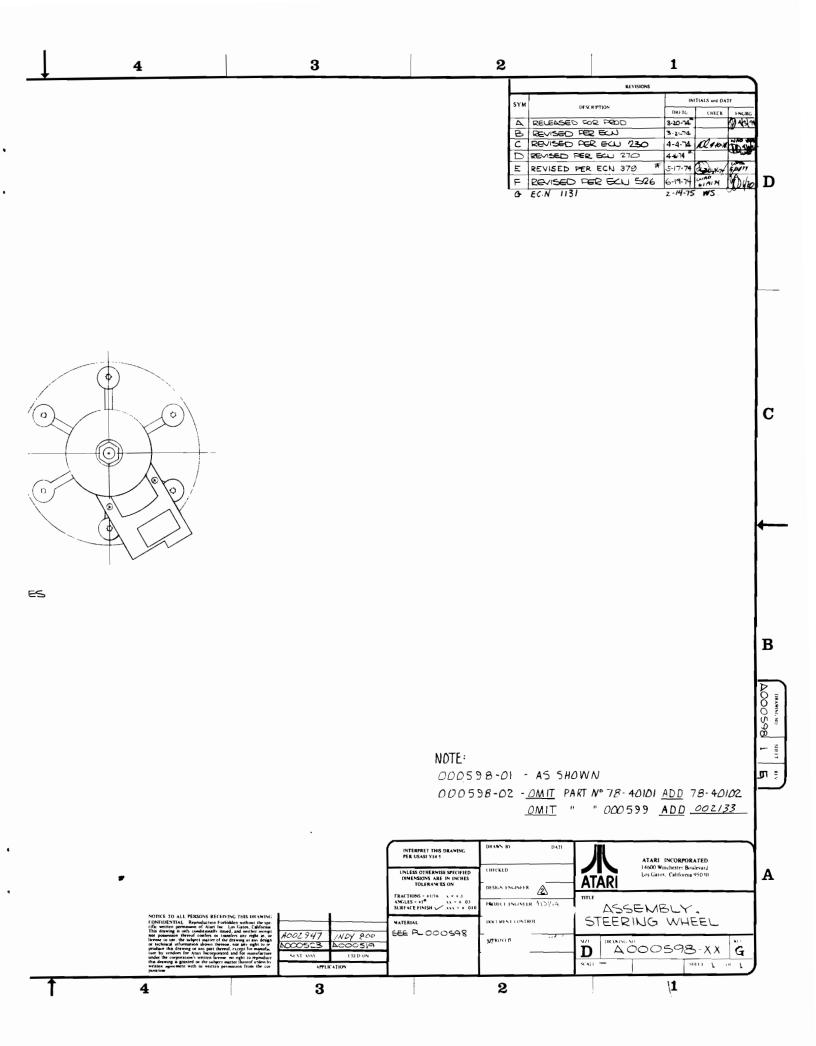

	•		
			,
			•


Job Title RACETRAK STEERING PCB ASSY	Dwg. P/L 000607
--------------------------------------	------------------------




Parts List Spece	fication	sheet 1 of	1
Drawn			
Checked	Mech. Eng.	•	Rev.
Proj. Eng	Elec. Eng.		
			М

Rev.	Description	Apprv.	Rev.	Description	Apprv.
Н	Redesigned	5-6-74			
J	Rev per ECN 397 5/	28/74			
К	Rev per ECN 457 6/3	174			
L	Rev per ECN 601 7/3	5/74%			
M	Rev per ECN 1531				

<u> </u>			
Item	Part. No.	Qty.	Description
1 2 3 4 5 6 7 8 9 10 11 12	000614 001092 001151 11750/10-5750 11471/10-5471 11332/10-5332 34104 /27-101103 70006/38-2N5777 70000/34-2N3643 71008/38-ME7124	1 Ref 2 4 2 2 2 2 2 2	Printed Circuit Board (E) Light Mount Schematic Diagram Resistor, Comp., 75 ohm, ¼ watt, 5% Resistor, Comp, 470 ohm, ¼ watt, 5% Resistor, Comp, 3.3Kohm, ¼ watt, 5% Capacitor, Ceramic, .0luf Transistor, 2N 5777 (Photo Darlington) Transistor, 2N 3643 Light Emitting Diode, I.R. ME 7124
13 14 15 16 17 18	80089 /79-58005 72-1212s 75-042 75-912s 003749	1 1 1	Connector, 10 pin, PC Mount, Amp #1-380991 Screw, Machine, Pan Head Phil, #2-56 x 3/4 Lg. Washer, Split Lock #2 Nut, Hex, #2-56 Retainer, Led Light Mount

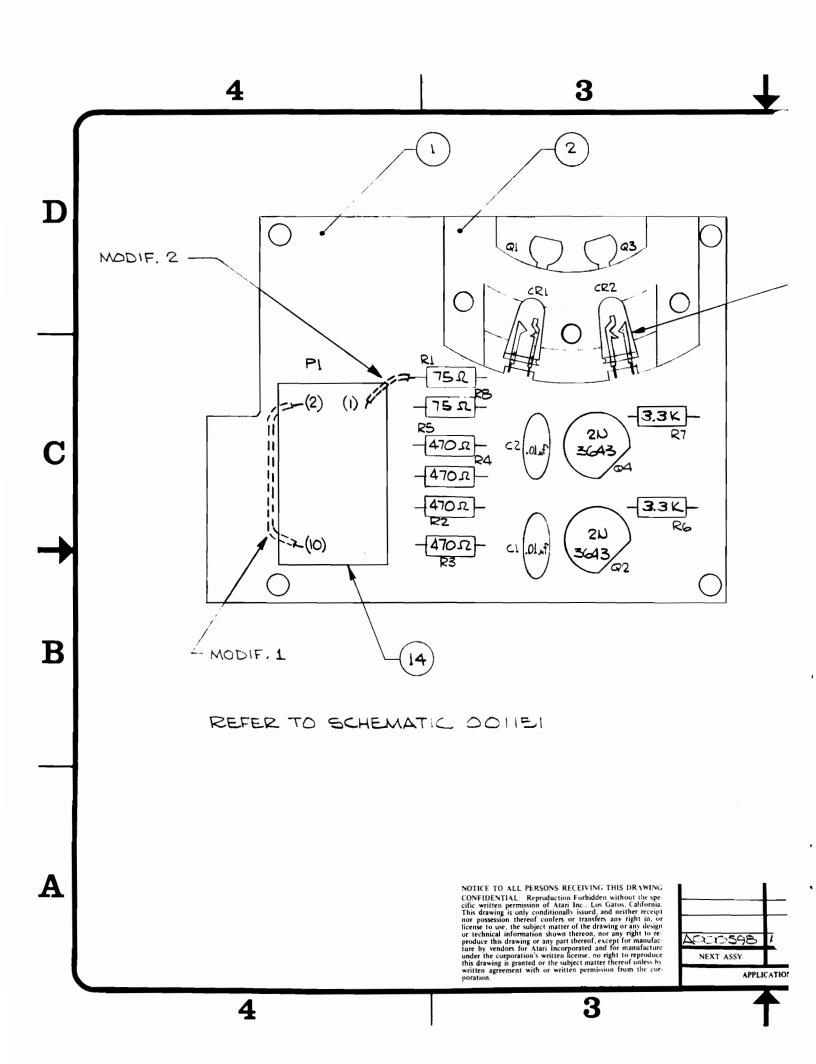

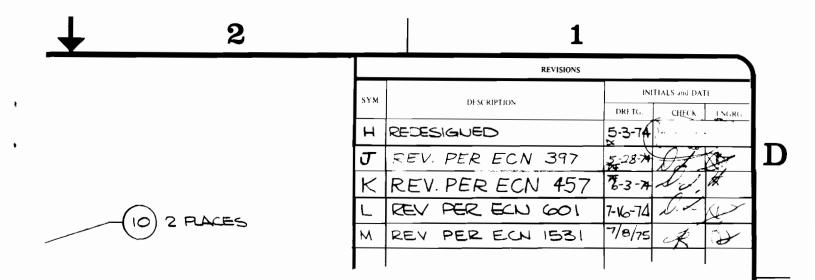

MODIFICATIONS: FOR ODOGIA REV J P.C. BOARDS


1. JUMPER FROM PIN 2 TO PIN 10 OF THE 10 PIN CONNECTOR, ON CIRCUIT SIDE OF BOARD.

2. JUMPER FROM PIN 1 OF THE 10 PIN CONNECTOR TO THE PAD MARKED +5V (END OF RI) ON CIRCUIT SIDE OF BOARD.

MODIFICATIONS: FOR DODGIA REV K P.C. BOARDS.

1. JUMPER FROM PIN 2 TO PIN 10 OF THE 10 PIN CONNECTOR, ON CIRCUIT SIDE OF BOARD.

 \mathbf{B}

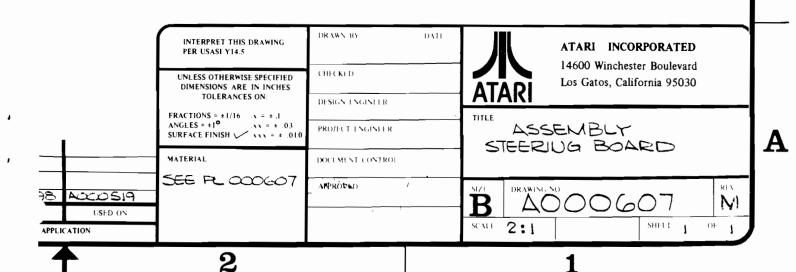






Parts List Specife	icalion	sheet 1 of 1
Drawn Patty		
Checked	Mech. Eng	g. Rev.
Proj. Eng,	Elec. Eng.	G


Rev.	Description	Apprv.	Rev.	Description	Apprv.
Α	Release for Producti	on W>3/20/14		DEA DED EON OCO	12-3-74
В	Revise per ECN : (M	8-21-74	<u> G</u>	REV. PER ECN 969	12-3-74
C	Rev per ECN 229	4 - 4 - 7 4	1		
_D	Rev per ECN 382	5-20-74			
E	Rev per ECN 442 5/2	8/74/2	* 		
F	Rev per ECN 460	6-6-74			


F	Rev per ECN 460		6-6-74
Item	Part. No.	Qty.	Description
1 2 3 4 5 6 7 8 9	A000589 000590 000591 000592 000593 000594	Ref 1 1 1 1 1 1 1	Foot Pedal Assy (3201-3555) Foot Pedal (3201-3533) Pedal Foot (3201-3534) Spring (3201-3550) Bumper (3201-3551) Stop Washer (3201-3552)
7 8 9	000597	1	Bearing Block (3201-3549)
	75199/72-1508	1	Screw, mach., Pan Hd, Phil #4-20 x ½ 1g
14 15 16	757002/75409	1	Washer, Fender ¼
17	83268	A/R	Silicone Grease Compound #5
18	84012	A/R	Contact Cement

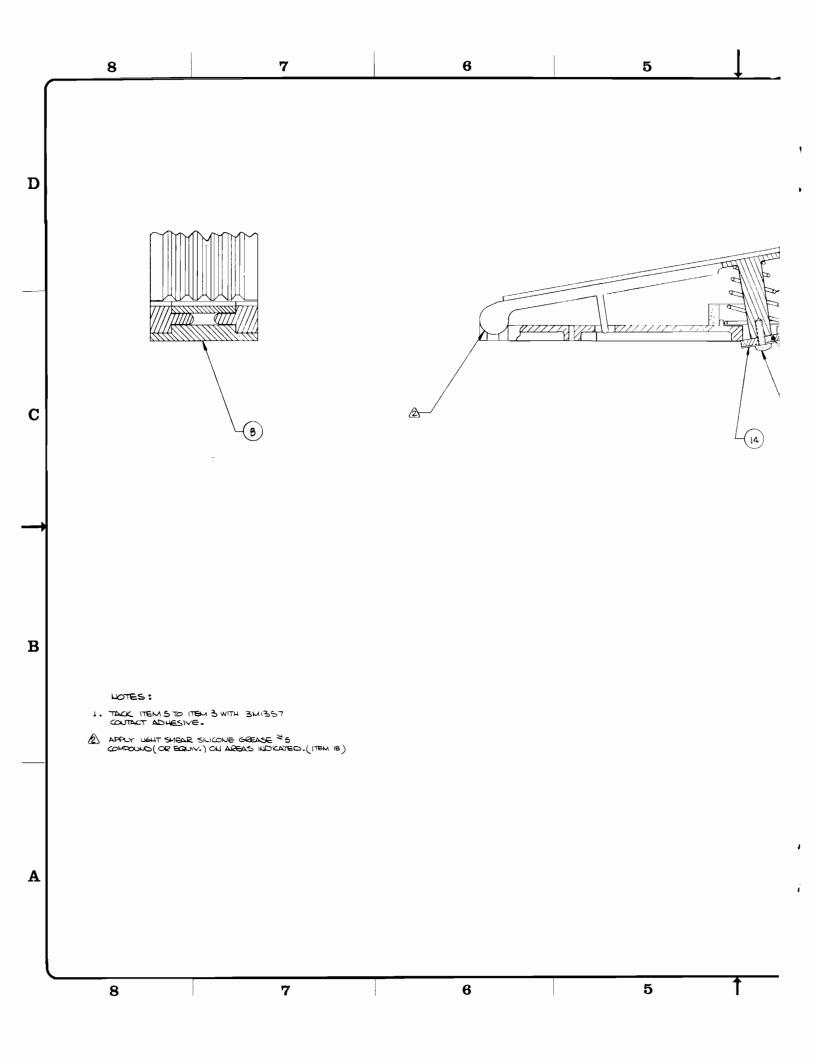


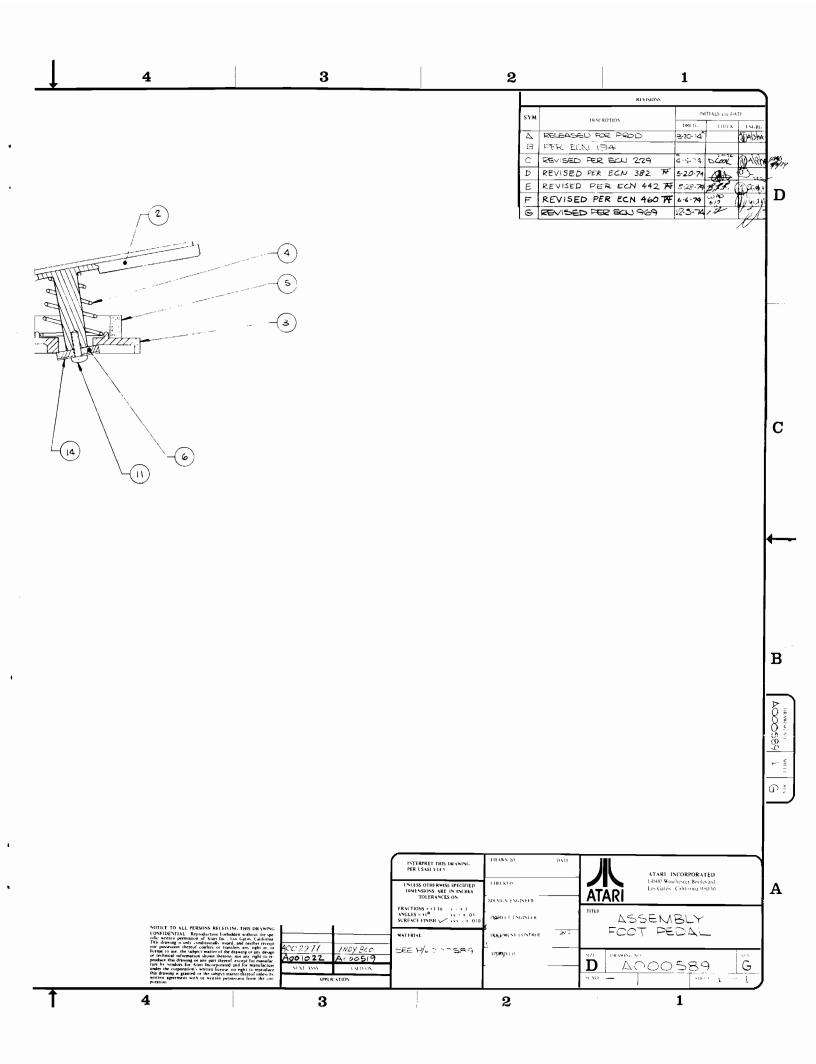

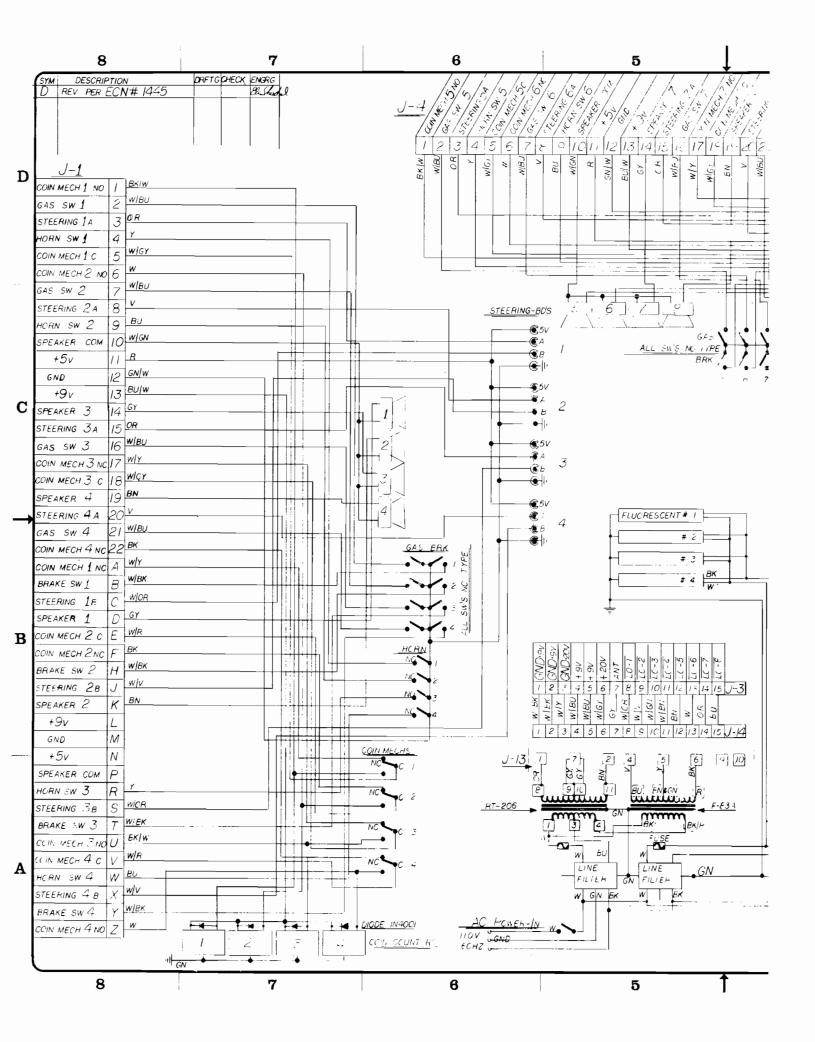

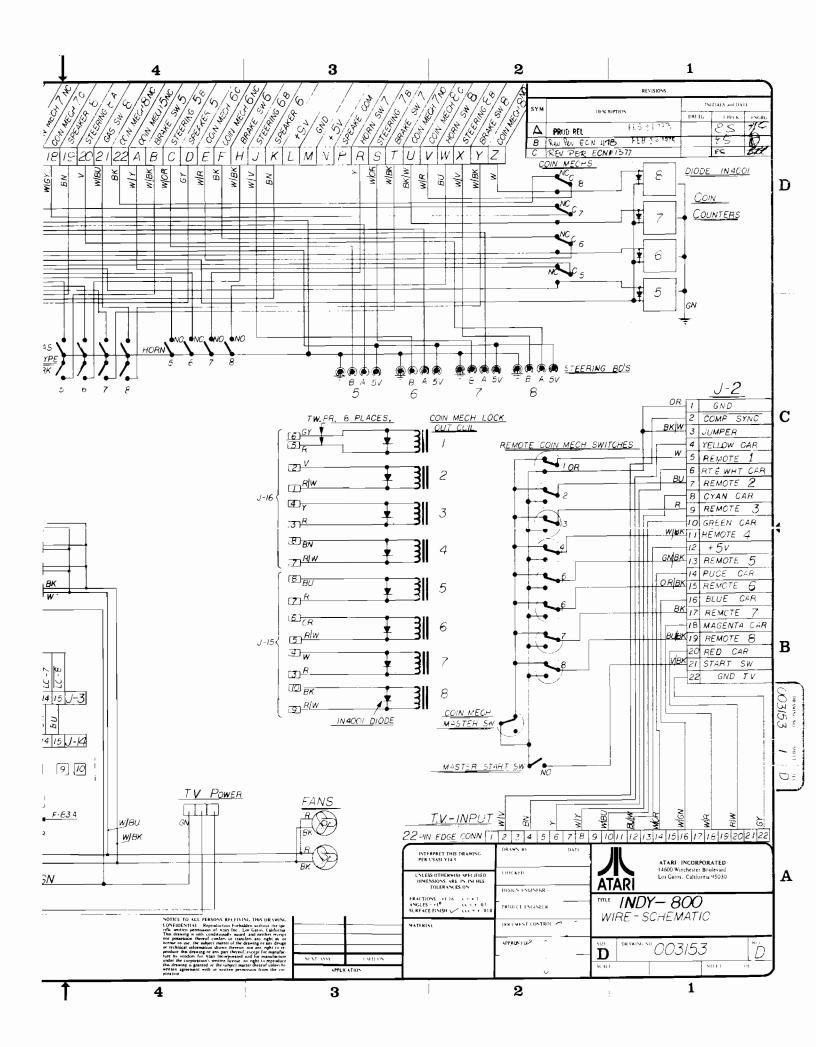

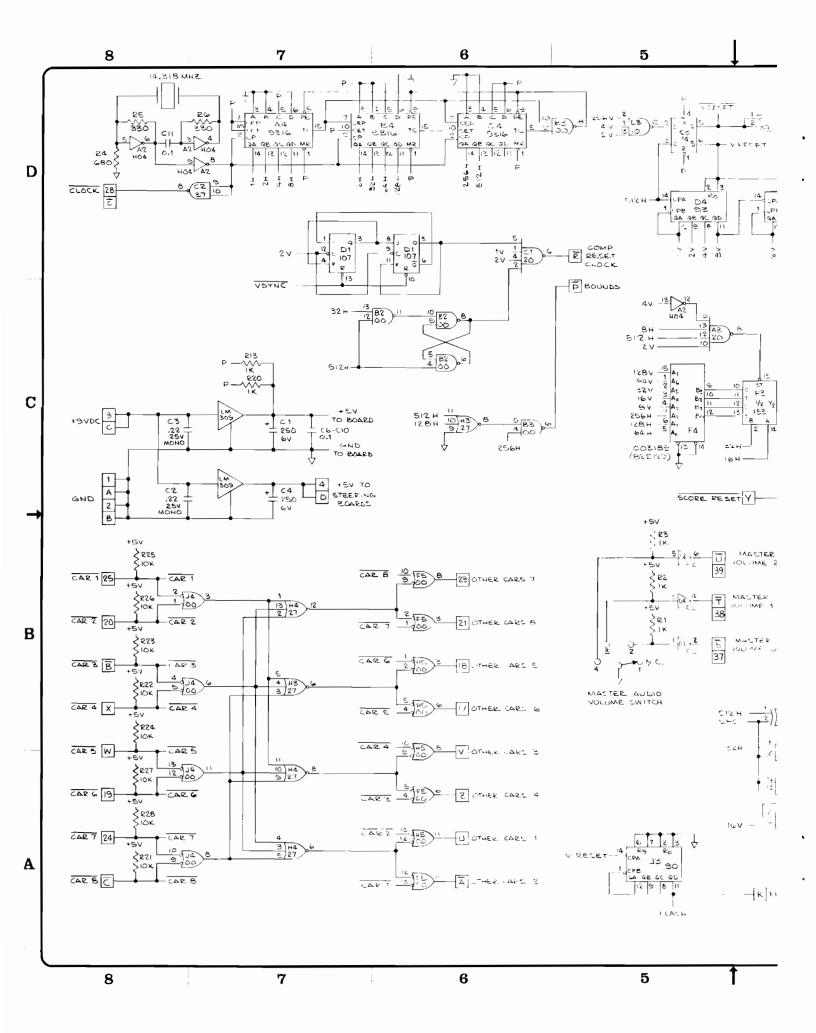

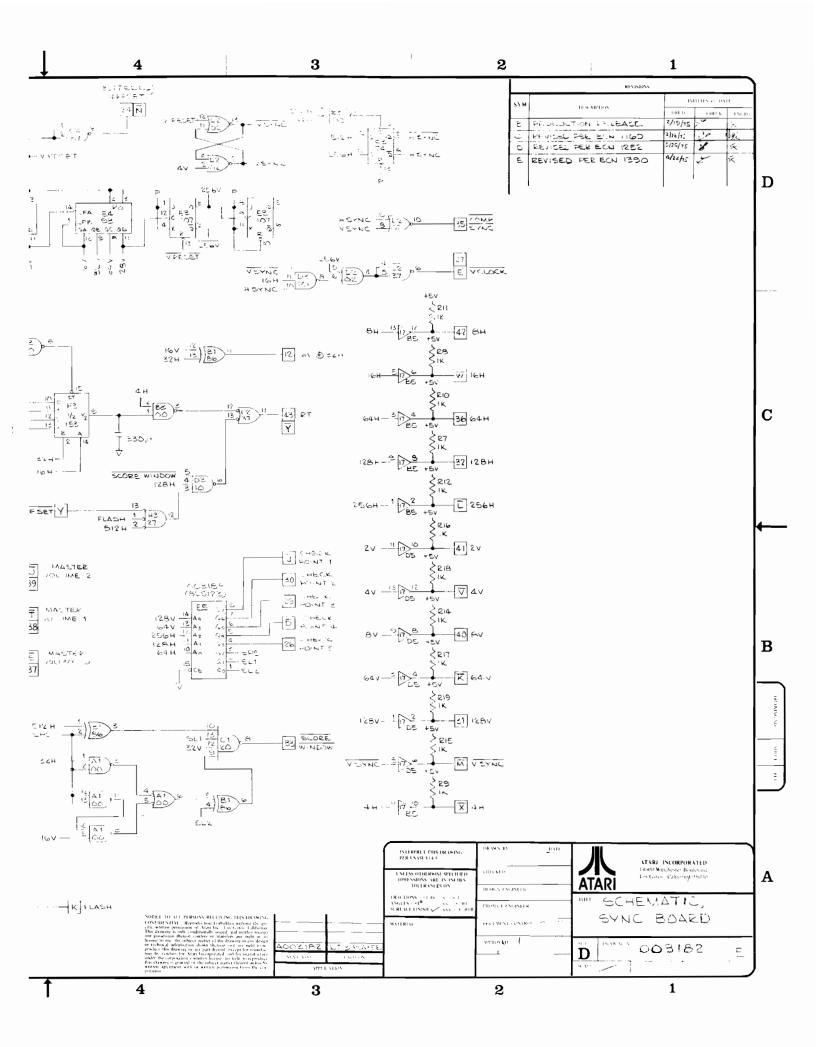





PARTS LIST SPECIF	FICATION Page 1 o	f <u>l</u>
Drawn		
Checked	Mech. Eng.	
Proj. Eng.	Elec. Eng	REV.
		1


Rev.	Description	Date	Apprv.	Rev.	Description	Date	Apprv.
_ A		2 - 4 - 75	البيد				
(3)		1					
Ü		_	1 1/2				
. :	The state of the s		1				
[1]	REI, PER INI, 1200	Marie Company	7				


8 7 6 5

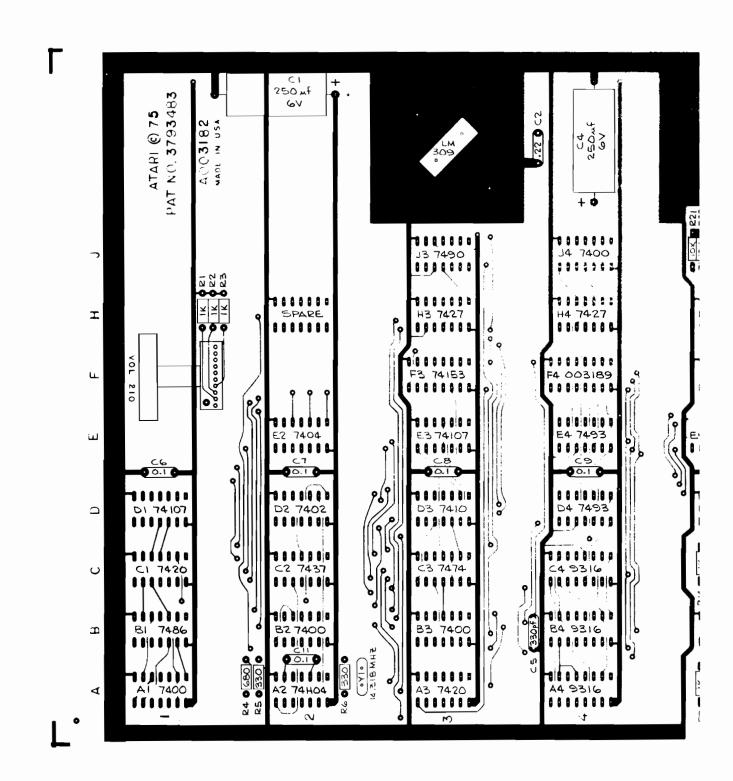

8 7 6 5

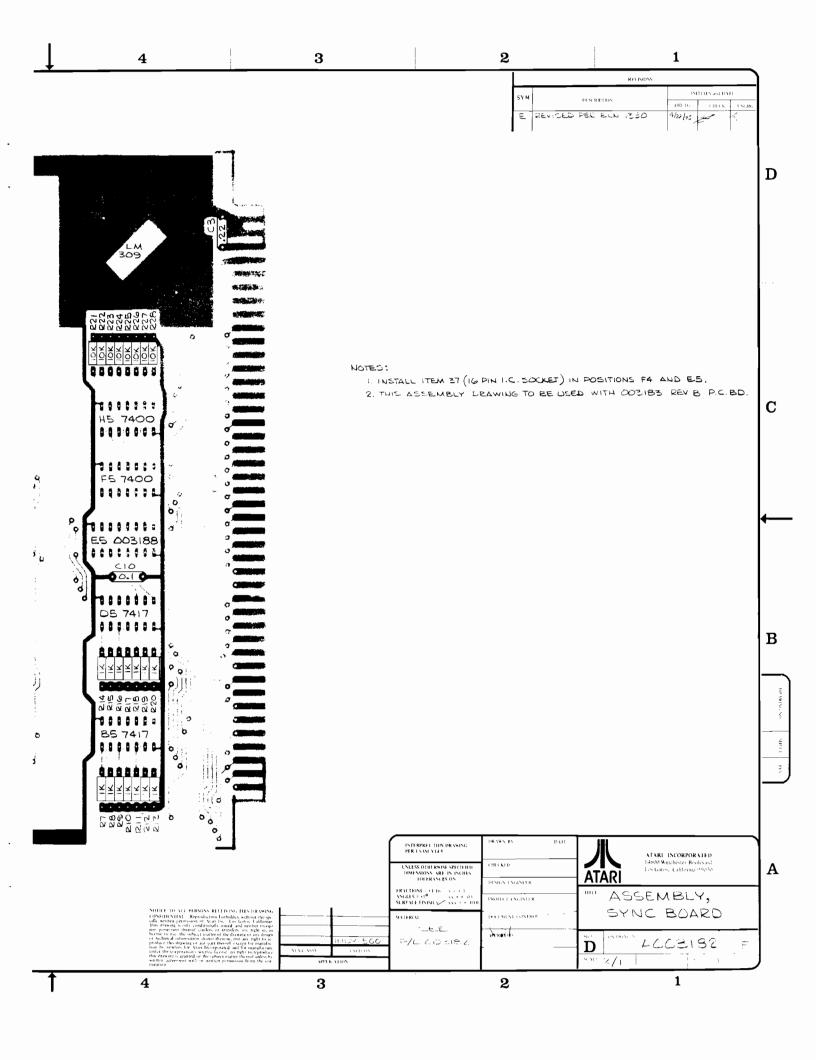

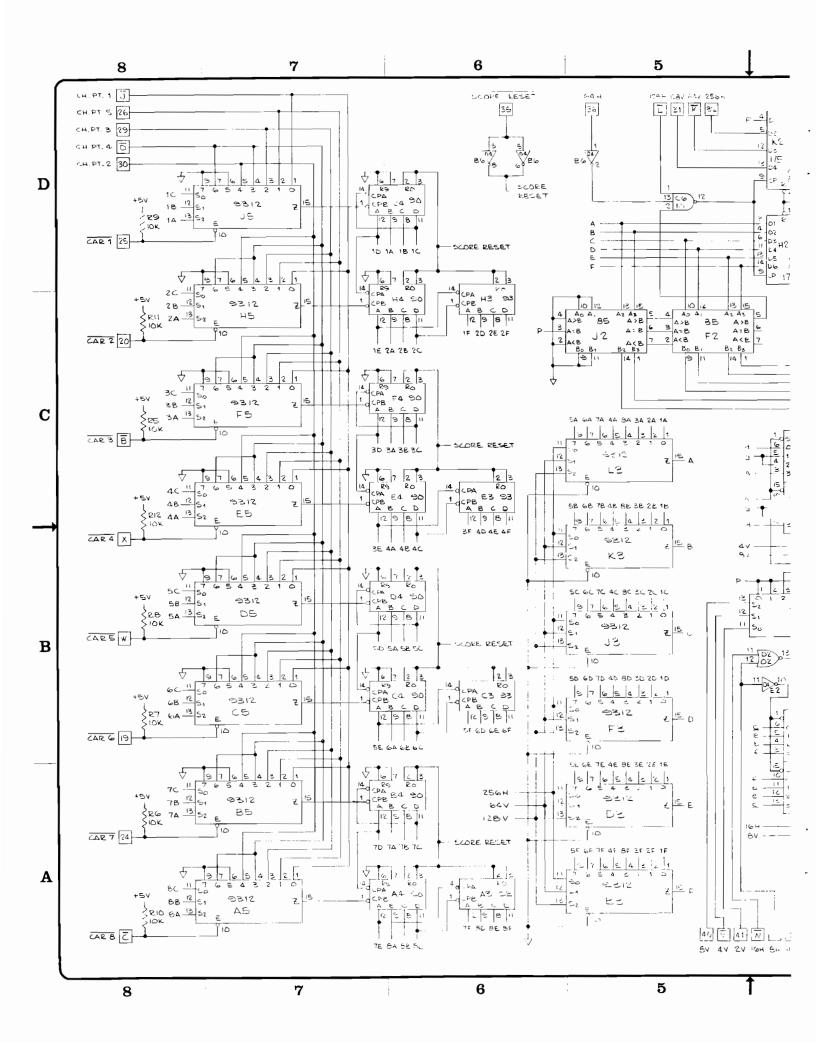

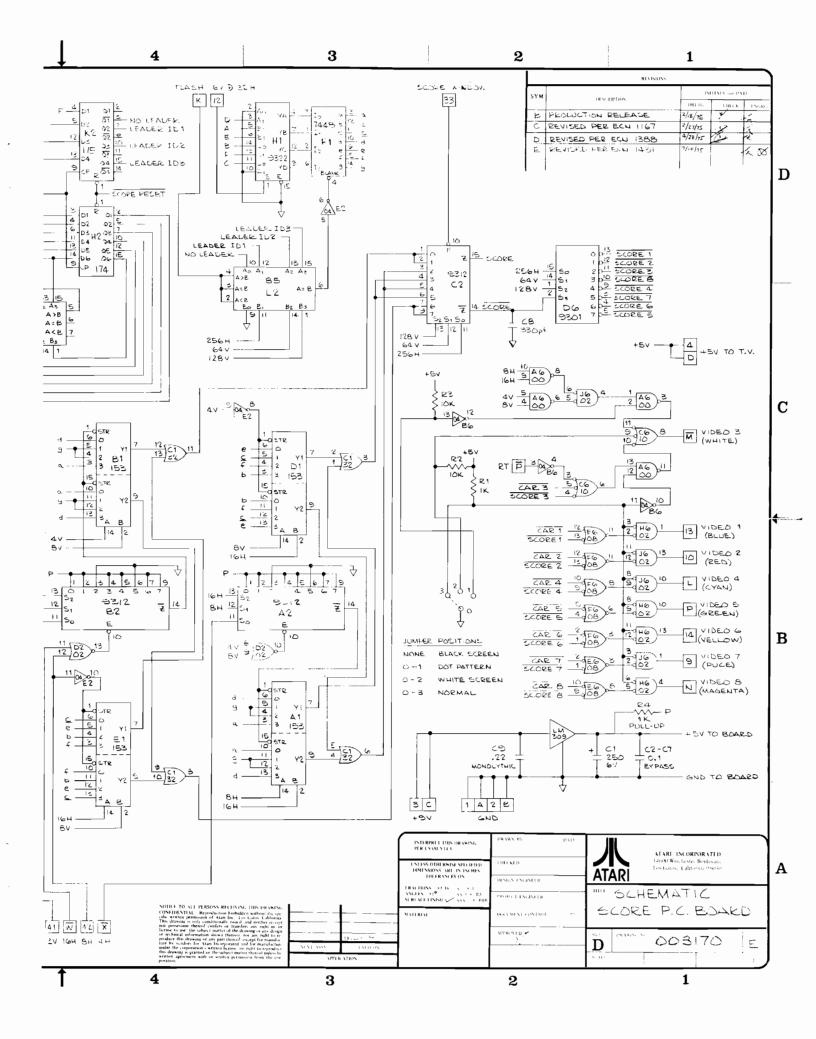

				•
				•

	ASSEMBLY TITLE RT8 SCORE	BOARD
A a	PARTS LIST SPECIF	ICATION
	Drawn	
ATARI L	Checked	Mech. Eng.
AIAKI K	Proj. Eng	Elec. Eng
leisure		· · · · · · · · · · · · · · · · · · ·

Rev.	Description	Date	Apprv.	Rev.	Description	Date	Apprv.
A		2-3-75	5 / E				
В	Rev per ECN 1142	2-18-75					
	122V 080 920 1167	0.11 (2) (3)	\				
		mand = = =	X				
<u>t</u>	•		W E				

P/L003170

Page <u>1</u> of <u>1</u>

REV.

Item	Part Number	Qty.	DESCRIPTION								
1 2 3 4 5 6 7 8 9	003171 37-LM309 78-06005 72-1412S 75-916S	1 1 1 2 2 2	LM30 Heat Scre	9K Possink, w, Ma Mach	ositiv Wake nch., nine,	field	1t Re 680-1 etal, -32	Pan Hd,	Phil,6	5−32 x	5/
10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 29 31 32	37-7400 37-7402 37-7404 37-7408 37-7410 37-7432 37-7448 37-7485 37-7490 37-7493 37-74153 37-74174 37-74175 37-9301 37-9312 37-9322 10-5102 10-5103 28-101331 27-101104 29-011 24-060257	1 3 2 2 1 1 1 3 8 4 4 1 1 1 7 1 2 10 1 6 1 1	Resi Capa Capa Capa	3 4 5 stor, stor, citor	"" "" "" "" "" "" "" "" "" "" "" "" ""	on, 5% a, 330 amic, olythi	, ^坛 W, ,坛W, pf, 1 0.1μf c, .2	1K Ohm 10K Ohm 00V , 100V 2&f, 12V 250&f, 6	,		


8 7 6 5

D


C


 \mathbf{B}


A

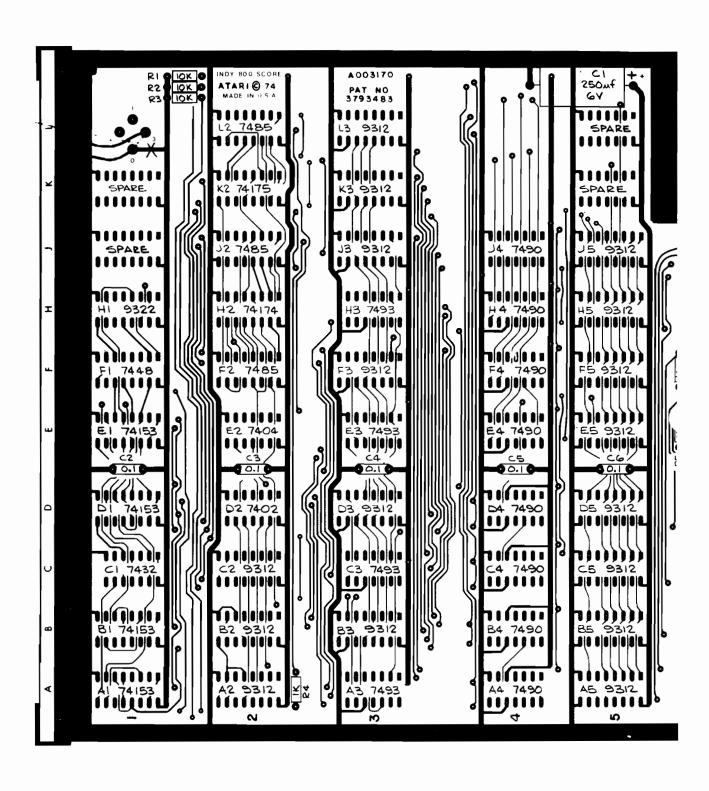

8 7 6 5

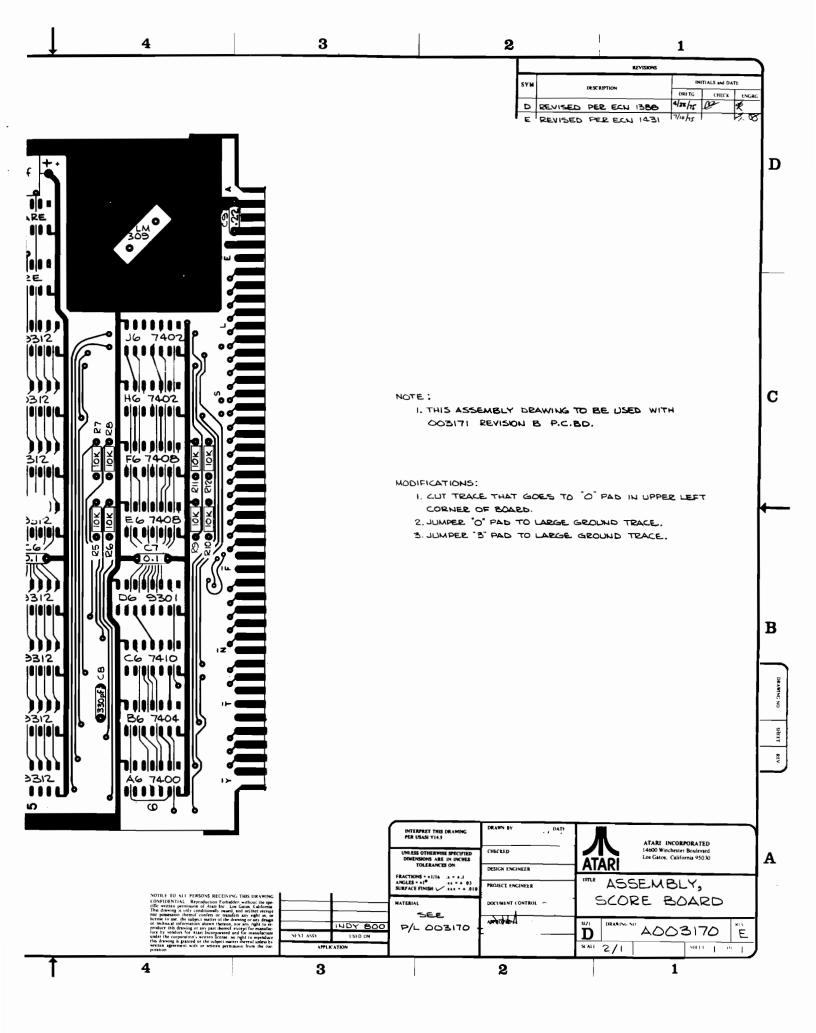

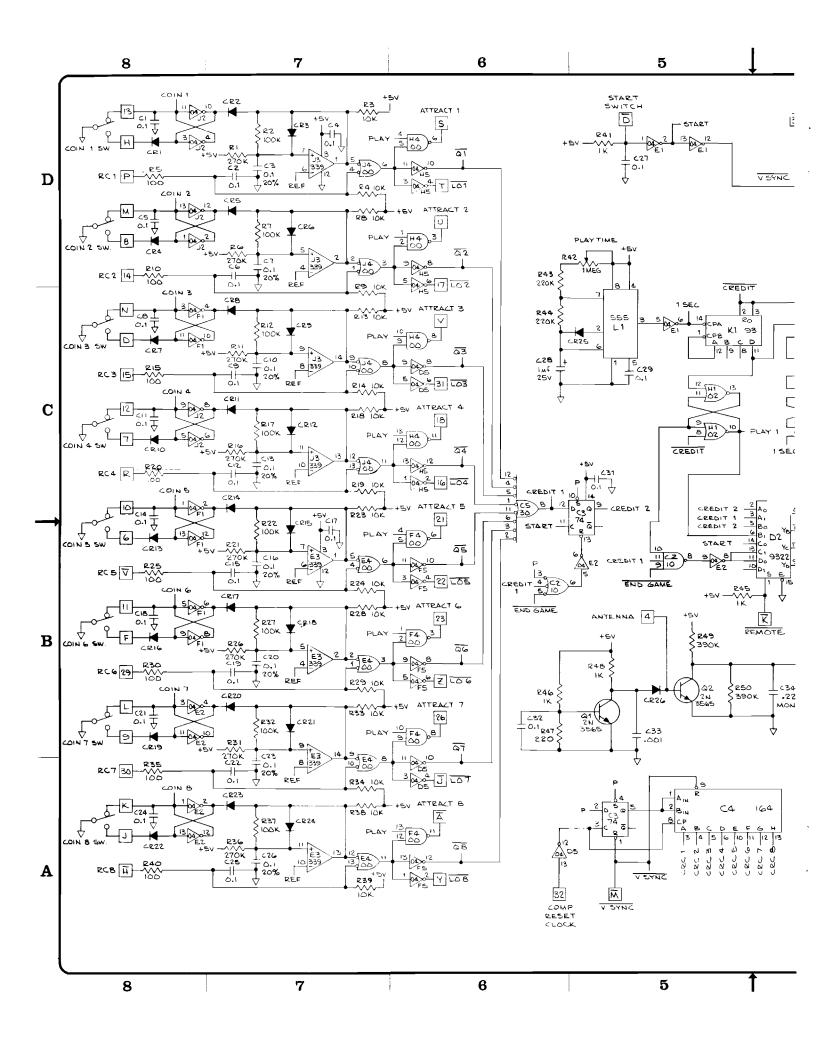


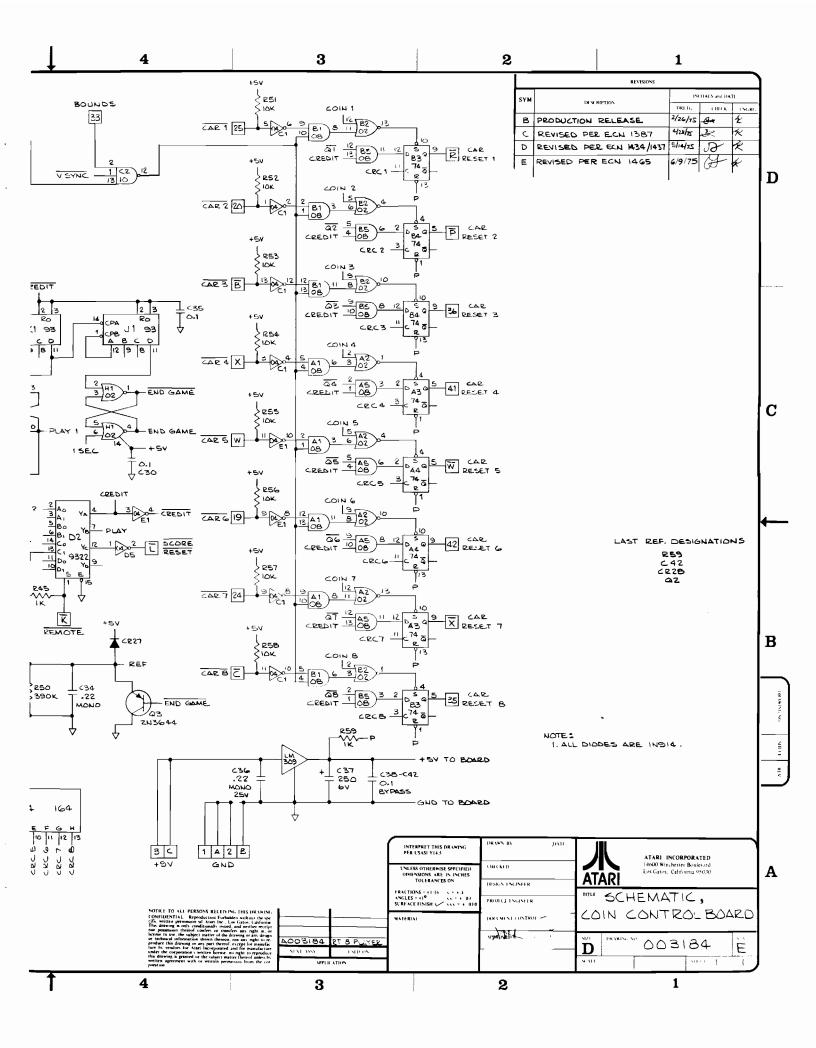



			,
			•
			•


ASSEMBLY TITLE RT8 COIN CONTROL BOARD Page 1 of 1 PARTS LIST SPECIFICATION Drawn Mech. Eng. Checked Proj. Eng. Elec. Eng REV. leisure Rev. Description Rev. Date Apprv. Description Date Apprv 2-4-75 2-26-75 Rev per ECN 1161 В ، سهنسر Item Part Number DESCRIPTION Qty. Printed Circuit Board 1 003185 1 LM309K Positive 5-Volt Regulator 2 37-LM309 1 3 1 Heatsink, WakeField 680-.75A 78-06004 2 Screw, Machine, 4 72-1412S 5 2 Nut, Machine, Hex, 6-32 75**-**916S 6 2 7 Lock Washer, Internal Star, #6 75-056

Pan Hd., Phil., $6-32 \times 5/8$ " 8 37-7400 4 7400 I.C. 3 7402 9 37-7402 11 8 7404 10 37-7404 ** 11 37-7408 4 7408 ** 12 37-7410 1 7410 11 1 7430 13 37-7430 5 7474 11 14 37-7474 11 2 15 37-7493 7493 1 74164 " 16 37-74164 9322 " 17 37**-**9322 1 1 555 Timer I.C. 37-555 18 2 LM339 Quad Comparator 19 37-LM339 2 Transistor, NPN, Type 2N3565 20 34-2N3565 27 Diode, Type 1N914 21 31-1N914 22 8 Resistor, Carbon, 5%, W, 100 ohm 23 10-5101 ** 11 5 lK 24 10-5102 11 tt 11 11 11 10K 24 25 10-5103 26 11 27 8 100K 10-5104 11 11 11 220K 3 28 10-5224 11 * * 220 11 29 10-5221. 1 270K 8 30 10-5274 1 Trimpot, 1M ohm, P.C. Vert. Mount 31 19-311105 Capacitor, Ceramic, .001 uf, 100V 32 27-101102 1 33 27-101104 29 0.1 uf, 100V 2 Capacitor, Monolythic, .22 uf, 12V, Rad. 34 29-011 1 Capacitor Electrolytic, 1 uf, 25V 35 24-250105 1 250 uf, 6V 36 24-060257 Capacitor, Ceramic, 0.1 uf, 12V, 20% 8 27-120104 37 Transistor, PNP, 2N3644 1 33-2N3644 38 Resistor, Carbon, 5%, ¼W, 390K ohm 2 10-5394 39

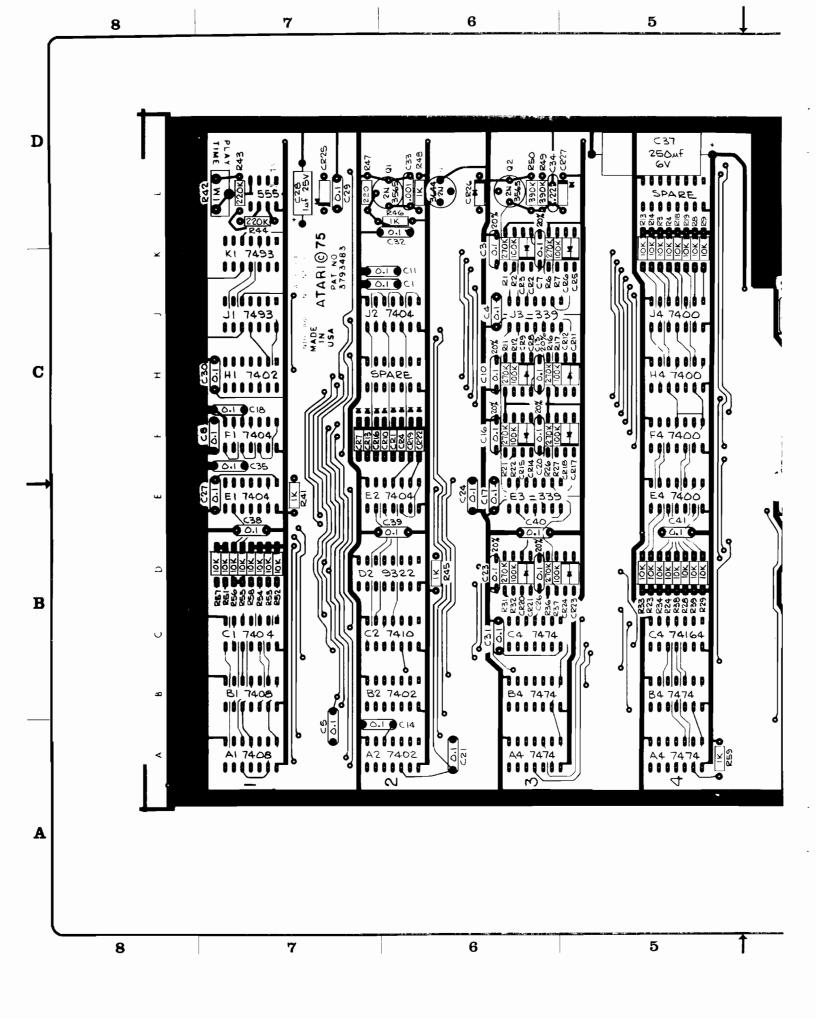

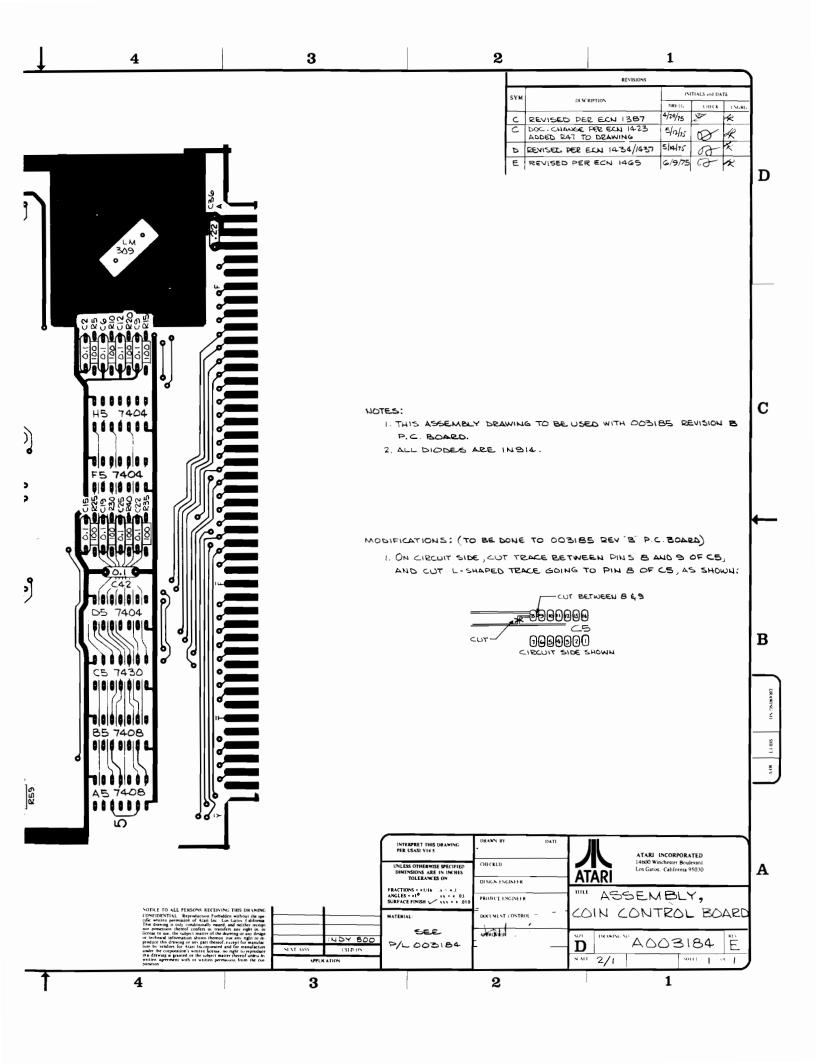

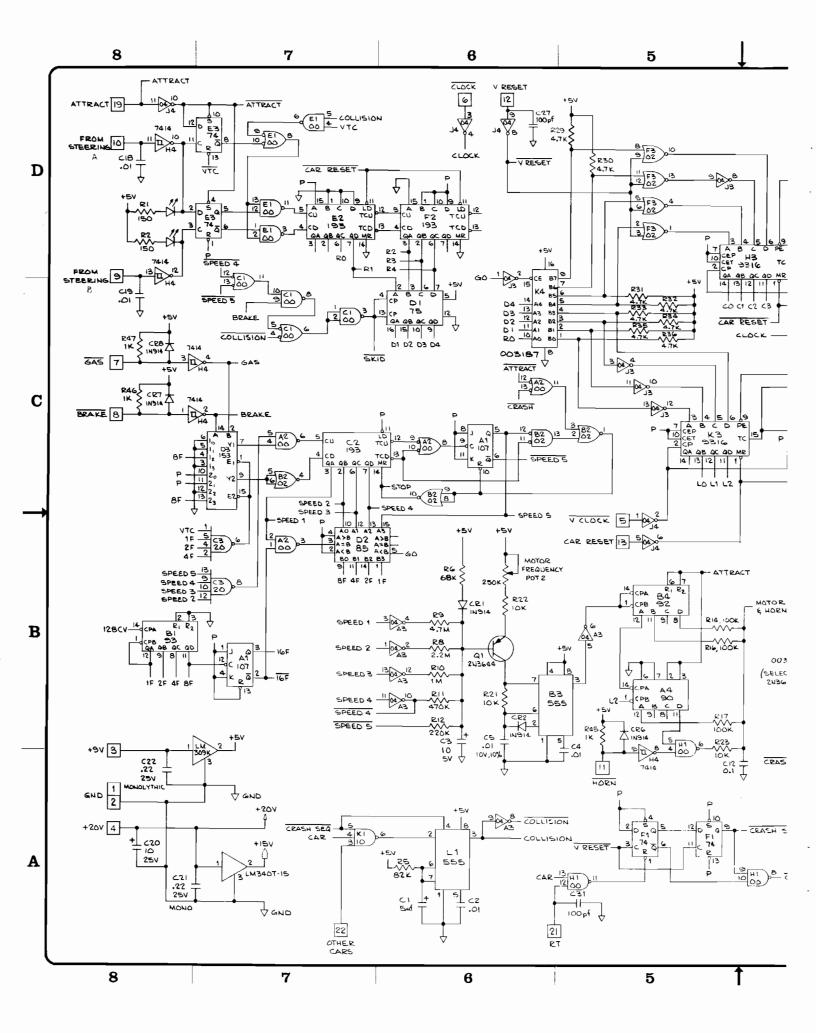

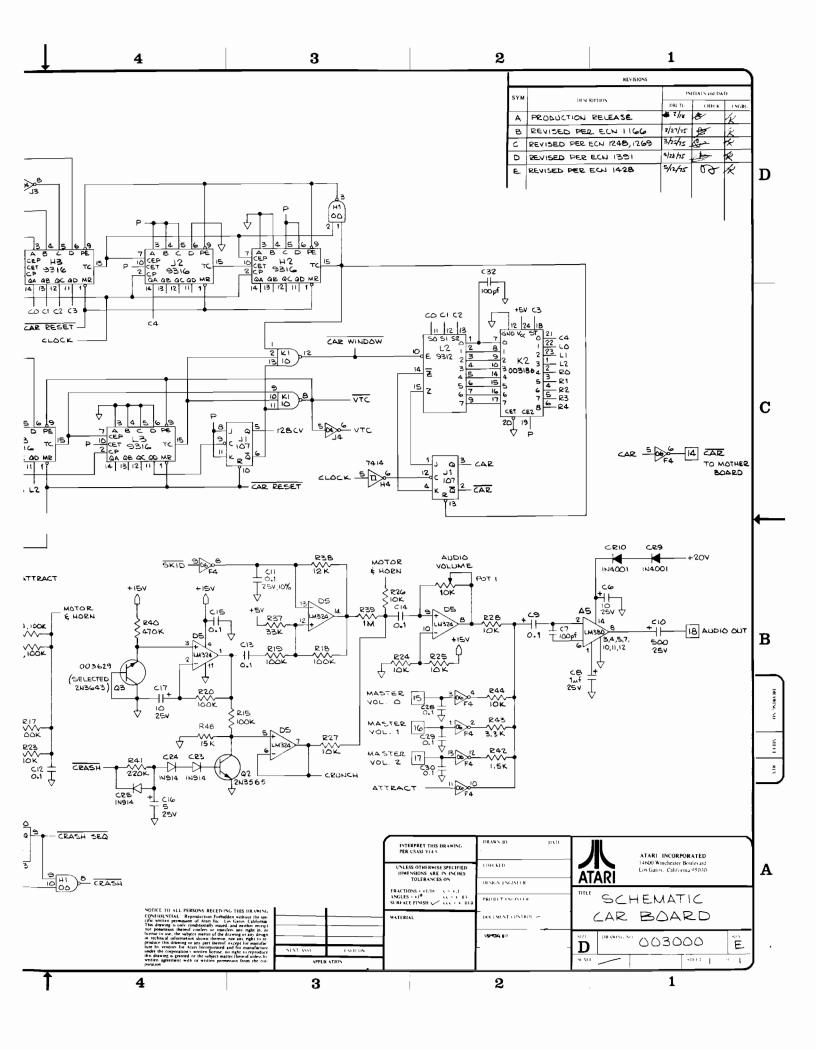



PARTS LIST S	PARTS LIST SPECIFICATION				
Drawn		-			
Checked	Mech. Eng.	_			
Proj. Eng.	Elec. Eng		REV.		
		217			

Rev.	Description	Date	Apprv.	Rev.	Description	Date	Apprv.
A		2-3-75	J. J.				
		. ,	F. 12	_			
	(Per) 国立主力、投资 (1.20)	1.1c +0					
-	20 1 1 1 30	4.52	8/1/				\dagger
÷			7,5			·	\vdash
ı	1	I	1	■ !		I .	

						_				
Item	Part Number	Qty.			Ľ	ESCR I PT	ION			
12345678901123456789011234567890122345678901333333333333333333333333333333333333	Part Number 002999 78-06004 37-LM309 37-LM340T-15 37-7400 37-7402 37-7406 37-7410 37-7414 37-7475 37-7475 37-7475 37-7492 37-7493 37-74107 37-74153 37-74107 37-74153 37-74193 003186 003187 37-9316 37-555 37-LM324 37-LM380 34-2N3565 003629 35-2N3644 31-1N914 38-MV 5013 79-42424 79-42116 19-311103 10-5151 10-5102 10-5152 10-5332 10-5472	Qty. 11142311121112131115211118211127118	Head LM30 7400 7400 7400 7410 7410 7410 7410 741	tsink, 09K P15 10T-15 11T-15 12T-15 15T-15 15T-1	ircui Wake sitiv Wake sitiv Posi grate "" "" "" "" "" "" "" "" "" "" "" "" ""	t Boar field e 5-Vo tive 1 d Circ "" "" ideo, d Circ grated Amp wer Am N, Typ ise So P, Typ 914 ode Socket t	d #680- 1t Re 5-Vol uit 512 x de, 3 cuit Circ ip e 2N3 urce, 3	gulator t Regula 8, 4096 2 x 8, 2 uit 565 2N3643 644 ible, Re	S Bit 256 Bit ed n nm	

P/L 003000 ASSEMBLY TITLE RT8 CAR BOARD PARTS LIST SPECIFICATION REV E Page 2 of 2 Item Part Number Qty. DESCRIPTION 9 10-5103 Resistor, Carbon, 5%, ¼W, 10Kohm 41 42 10-5123 1 12K ohm 11 1 15K ohm 43 10-5153 11 11 ** * * 1 33K ohm 44 10-5333 11 11 11 1 68 K ohm 45 10-5683 tt 11 1 82K ohm 46 10-5823 7 11 11 11 11 100K ohm 47 10-5104 2 11 ** 11 11 220K ohm 48 10-5224 2 11 11 470K ohm 49 10-5474 2 11 11 1M ohm 50 10-5105 11 11 11 1 2.2M ohm 10-5225 51 1 4.7M ohm 52 10-5475 1 250K ohm Trimpot 19-311254 53 Capacitor, Mica, 100pf, 100V 4 54 28-101101 4 Ceramic, .01uf, 100V 55 27-101103 11 56 21-250103 1 Film (Mylar), .01uf,25V ** 12 Ceramic, 0.1uf, 100V 57 27-101104 Film (Mylar), 0.luf,25V 1 58 21-250104 11 Monolythic, 0.22uf, 12V 2 59 29-011 11 1 Electrolytic, luf, 25V 60 24-250105 11 61 24-250505 2 Electrolytic, 5uf, 25V Electrolytic, 10uf, 25V 4 62 24-250106 1 " Electrolytic, 500uf, 25V Screw, Mach, Sht Mtl, Pn Hd, Phil, 6-32 x 5/8" 24-250507 63 2 64 72-1412S Nut, Machine, Hex, 6-32 2 65 75-916S 66 2 75-056 Lock Washer, Internal Star, #6 67 68 31-1N4001 2 DIODE, INGOIT


8 7 6 5

D


C


В


A

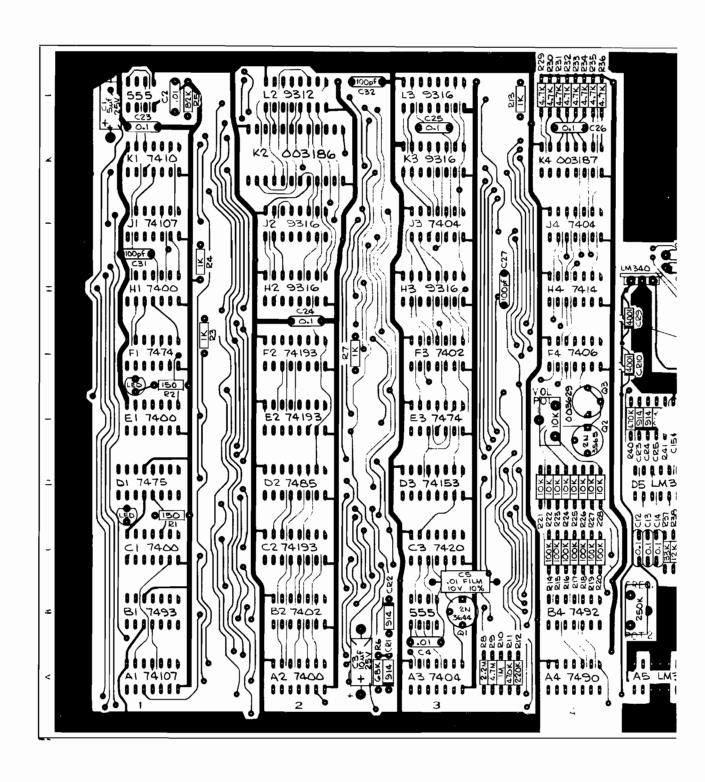

8 7 6 5

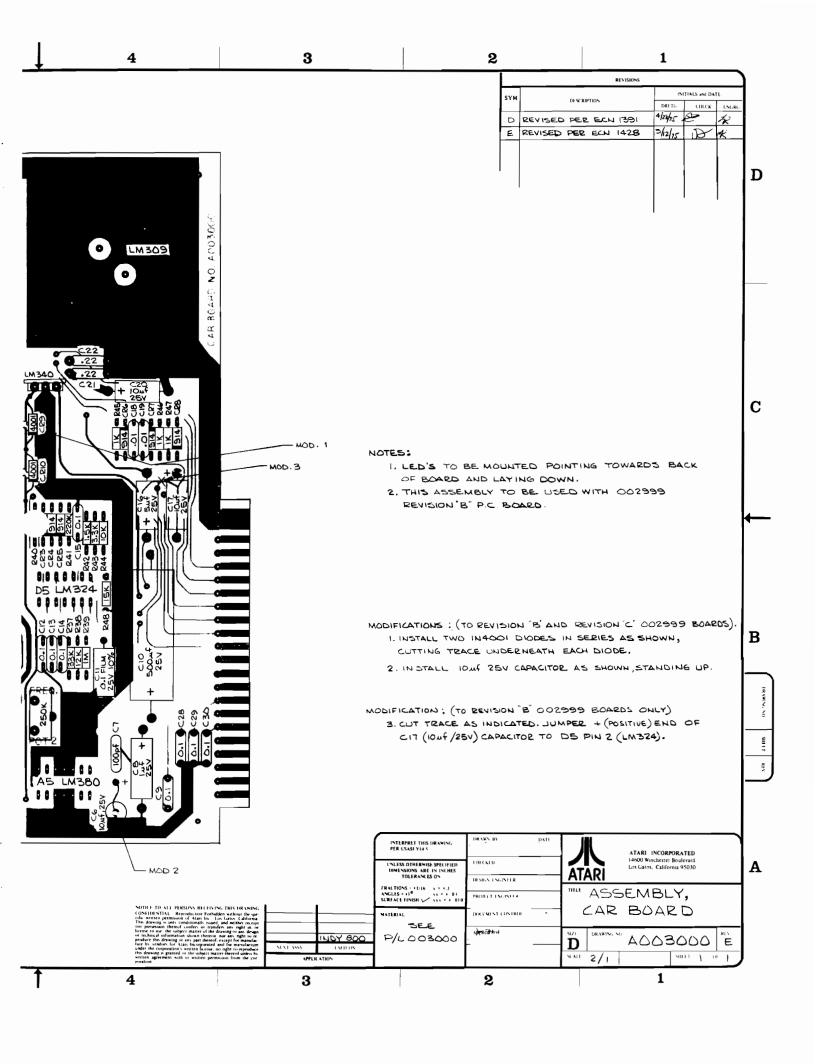

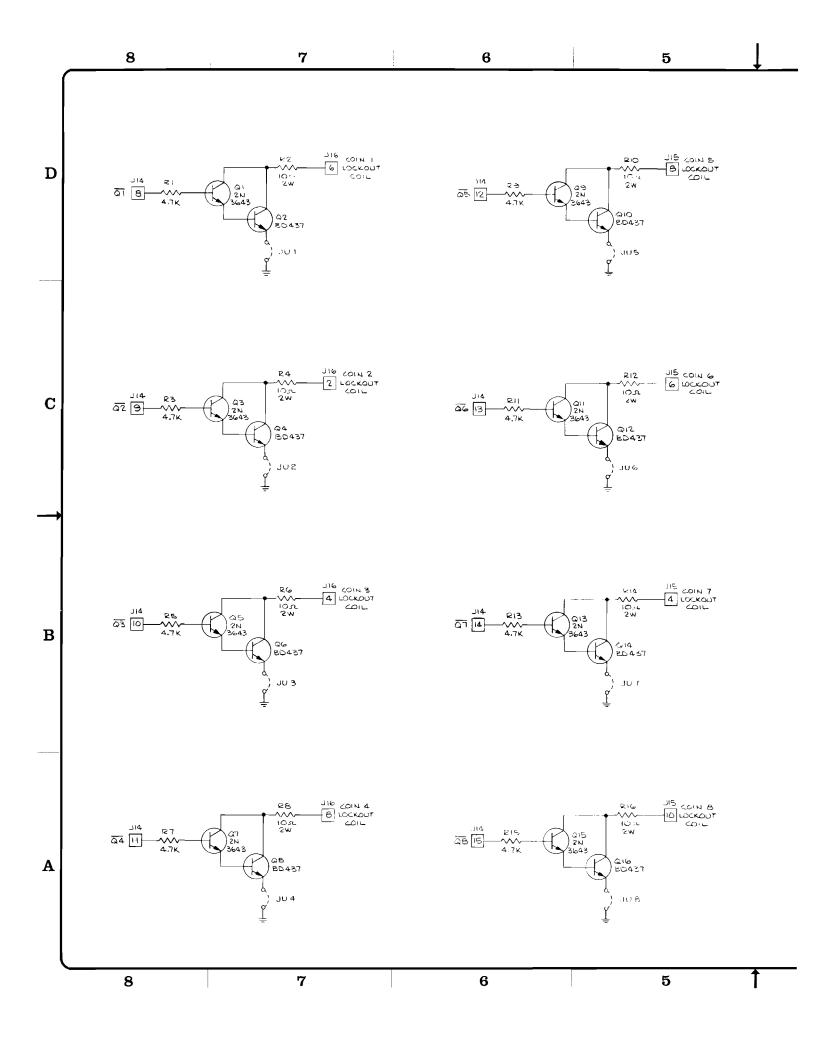

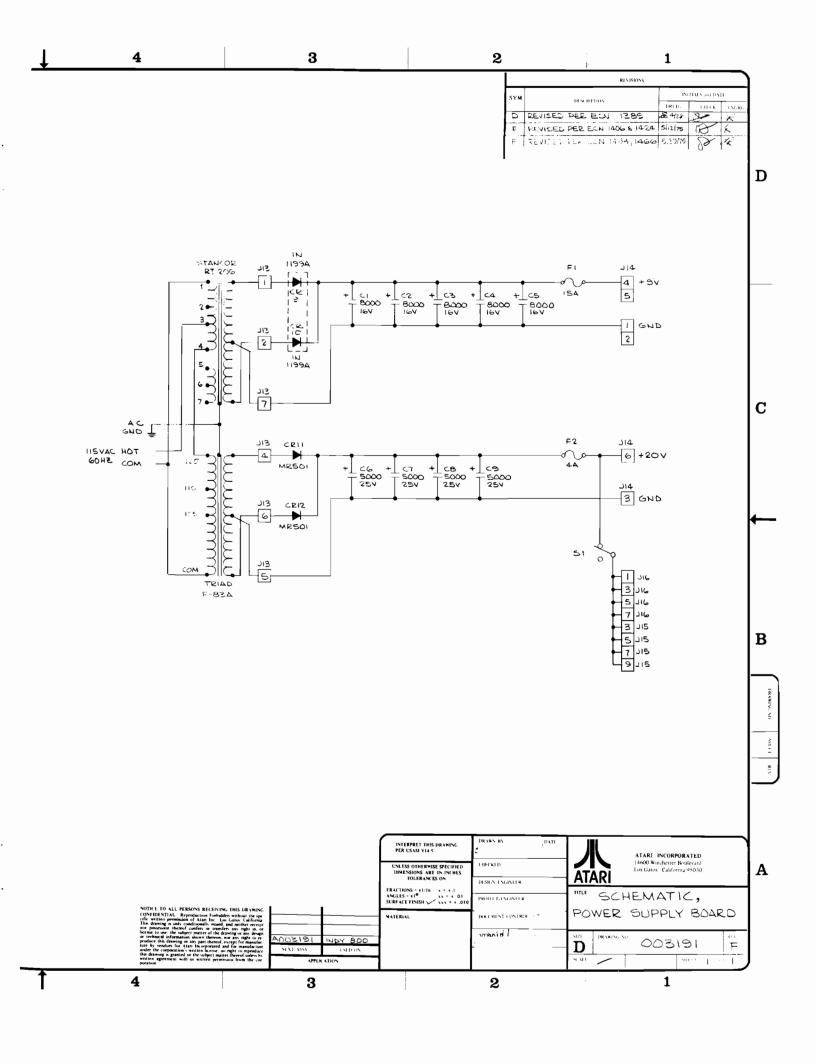



ASSEMBLY TITLE INDY 800 POWER SUPPLY P.C.B.

P/L 003191

PARTS LIST SPECIF	Page <u>l</u> of	1	
Drawn			
Checked	Mech. Eng.		
Proj. Eng.	Elec. Eng		REV.
			F

Rev.	Description	Date	Appry	Rev.	Description	Date	Apprv.
\Box	LEV PER EN. IEF	4.50 to	1				
:	Markovski state i state						
F	Rev per ECN 1458:	5/30/75	J. J. J. J.				

									<u> </u>
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21	Part Number 003192 24-160808 24-250508 31-MR501 31-1N1199A 78-06006 61-011C 10-5472 13-0100 34-2N3643 34-BD437 72-1405C 75-914S 75-054 75-014S 79-58005 79-3202 46-2031503 46-203401	Qty. 1 5 4 2 2 1 1 8 8 8 12 12 12 12 12 3 4 1 8	Capac Capac Diode Diode Heats SPDT Resis Resis NPN T NPN P Machi Hex N Lock Flat Conne Fuse Littl Fuse, Fuse,	itor, itor, , Type , Type ink, W Toggle tor, C tor, C ransis ower T ne Scr ut, 4- Washer Washer ctor, Clip, e Fuse 3AG, 3AG,	ly 800 Electric Electric MR501 Elect	99A (12A) eld 680-1.25 eh, C & K 7101 , 5%, ¼W, 4.7h , 10%, 2W, 10 Type 2N3643 stor, Type BD -40 x 5/16, St ernal Star, #4 n, P.C. Mount Beryllium Copp 1001 132V, Fast-Blow	L Cohm ohm 437 (SGS-Acainless 4, Amp #1-3 per, Silve	5 C ATES) 80991	

7 6 5 8 D 14 AWG WIRE 2 PLACES \mathbf{C} 0 G • 0 9 + 0 +Ŧ **()** 25 8000uf 16V 161 8000mt (5 16V 6000mt 73 C4 8000uf 16V 66 5000uf 25V ∠ l 8000mf ۷8 ۲> 5000mf 25V 5000 50000 254 25V \mathbf{B} 0 3 * 0 ;;


A

7

8


6


5

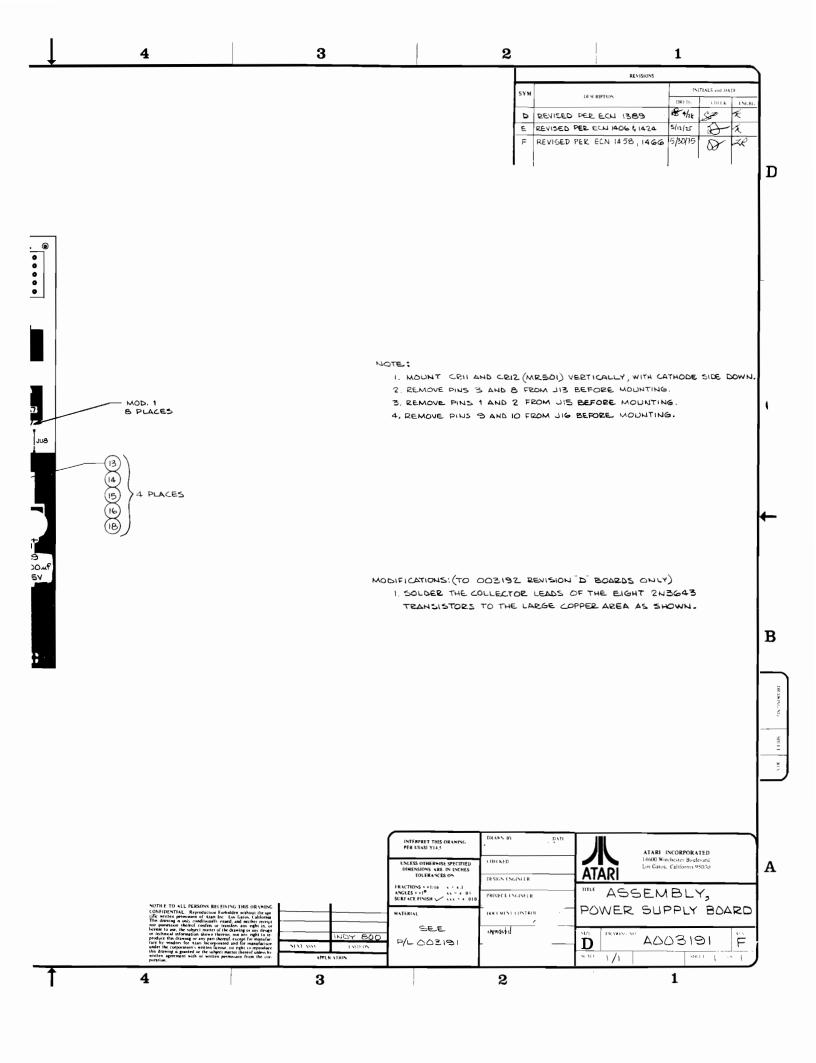



		<i>(</i>

A B SIM		OLMDL 1	TITLE	RI	18 BAC	KPLANE BOARD	P/L 00	3199
Innovative leisure Rev. Description A			PAR	TS LIST	SPECI	FICATION	Page_1_c	of1_
Innovative leisure Rev. Description A	Dr	awn	_			_		
Innovative leisure Rev. Description A	Ch	ecked				Mech. Eng.		
Rev. Desc. A B PAN 1 003 2 79- 3 75- 5 75- 6	Pr	oj. Eng				Elec. Eng		REV.
A B. STATES E. STATES FEV P D. VIII 1 003 2 79- 3 79- 4 75- 5 75- 6 75-								D
Item Part 1 003 2 79- 3 79- 4 75- 5 75- 6 75-	ription		Date	Apprv.	Rev.	Descr <u>i</u> ption	Date	Apprv.
Item Part 1 003 2 79- 3 79- 4 75- 5 75- 6 75-			-3-75					
Item Pars 1 003 2 79- 3 79- 4 75- 5 75- 6 75-				177				
1 003 2 79- 3 79- 4 75- 5 75- 6 75-			4 5 7-	8				
1 003 2 79- 3 79- 4 75- 5 75- 6 75-								
1 003 2 79- 3 79- 4 75- 5 75- 6 75-				 				-
1 003 2 79- 3 79- 4 75- 5 75- 6 75-		 _	-			EGGD I DITTON		4
2 79- 3 79- 4 75- 5 75- 6 75-	t Number	Qty.	1		L	ESCRIPTION		
	200 514222 514243 1408 914 054 511001	1 8 3 22 22 22 3	44 86 Scr Nut Loc	Pin Ed Pin Ed ew, Ma , Mach	lge Co lge Co ach., nine, ner, I	t Board (Backpl nnector, 156, D nnector, .156, Pan Hd., Phil., Hex, 4-40 nternal Star, #	oip Solder Dip Solder 4-40 x 눌"	

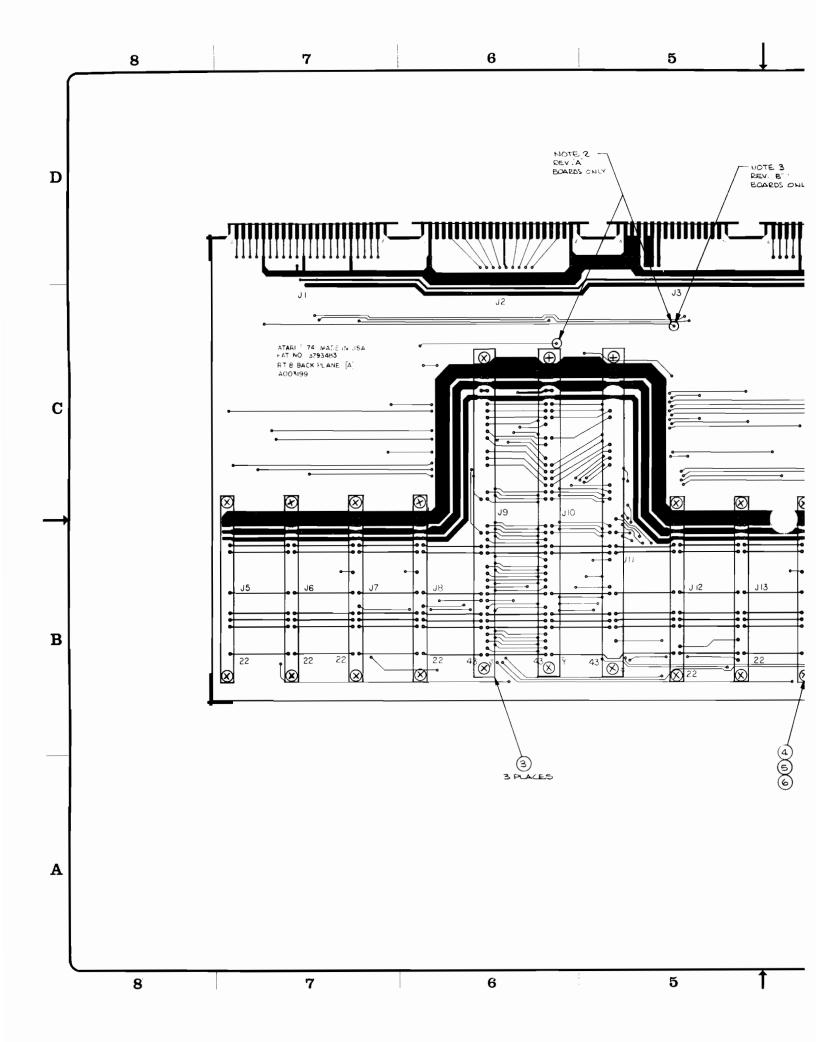

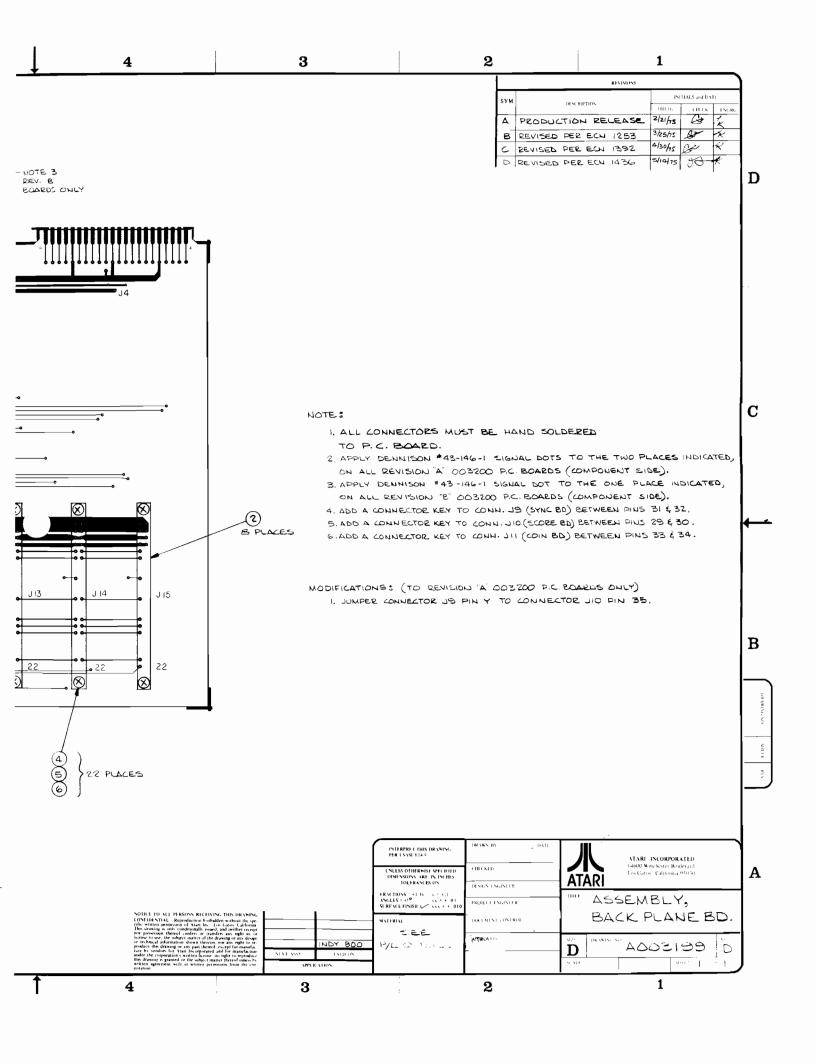

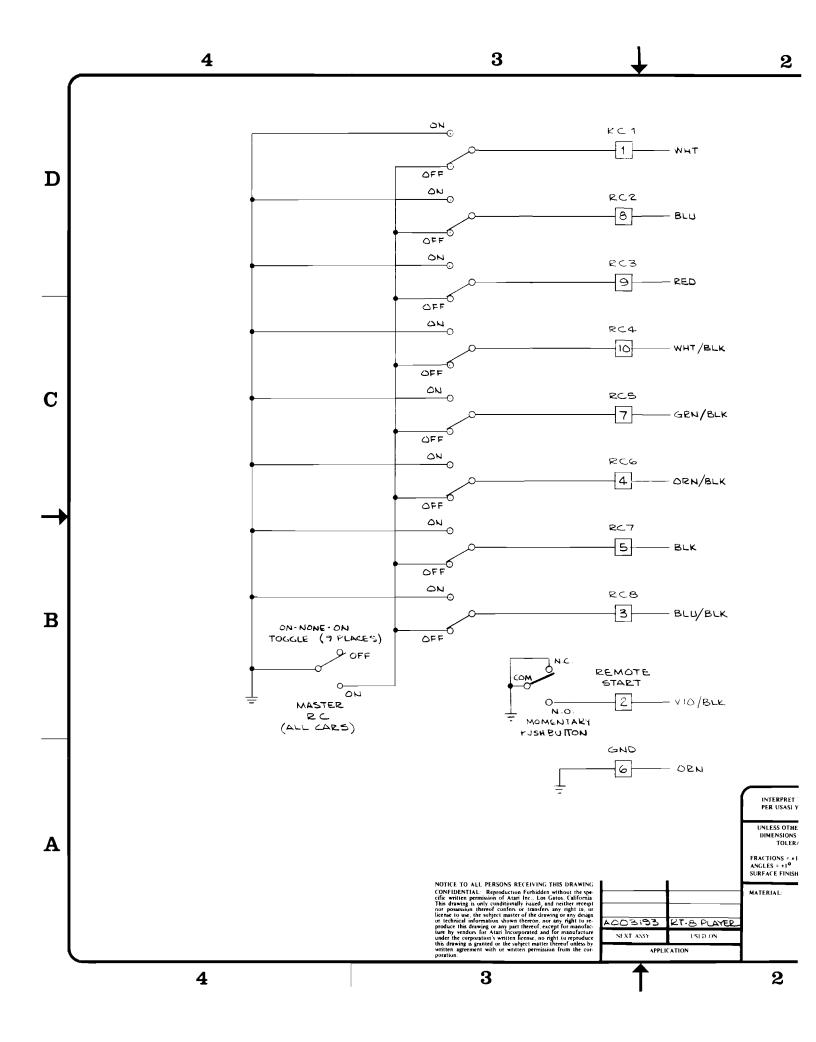

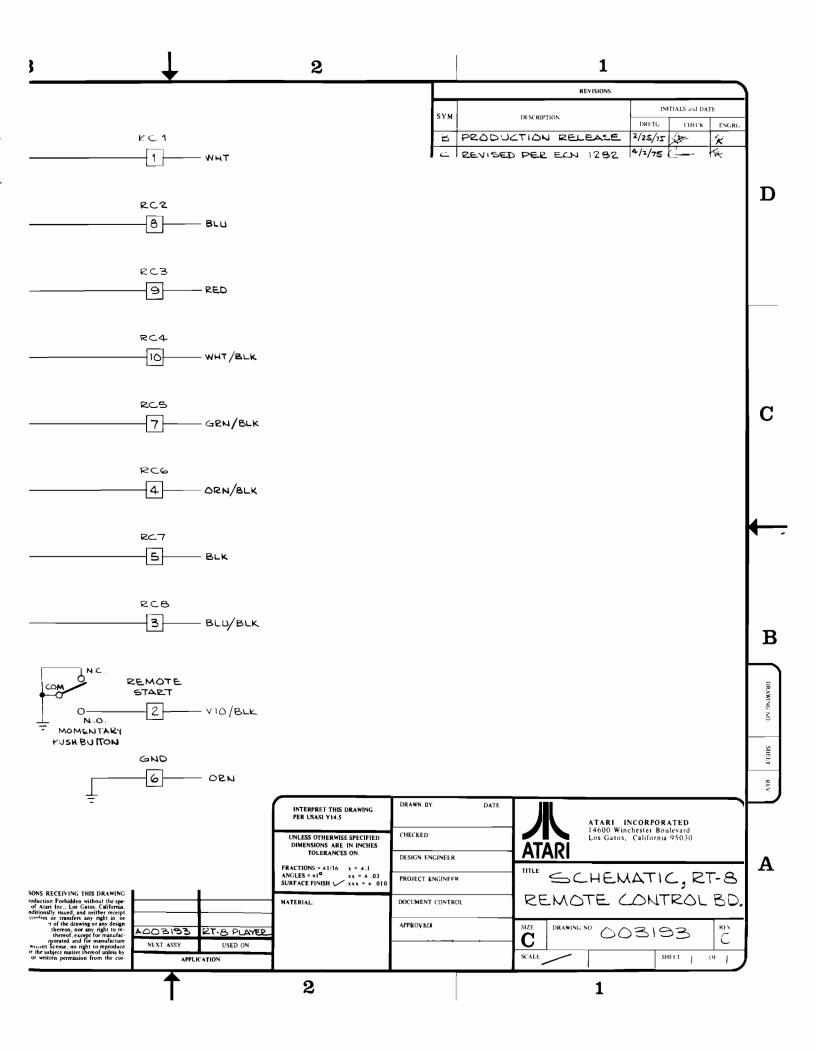

		ASSE	MBLY '	TITLE	REM	OTE C	ONTROL BOARD	P/L 00	3193		
			_	PAR	TS LIST	SPECI	FICATION	Page 1 o	f_1_		
AT		Draw					Mech. Eng.				
ATA	ative		j. Eng.				Elec. Eng				
leis			7			<i>P</i>			C 		
Rev.	Description		2-	ate 3 - 75	Apprv.	Rev.	Description	Date	Apprv.		
В	Rev per ECN	1148 : కి		·26 - 75							
			+								
Item	Part Number		Qty.			[DESCRIPTION				
1 2 3 4 5 6 7 8	003194 61-011C 62-007 A003159-01 78-25001 75-247S 75-054 75-914S		1 9 1 1 1 1 1	SPDT SPDT V Remo Cabl Scre Wash	T Togg Nut (C T Mome w/Cap te Con e Tie, w, Mack er, Loc	gle Sw EK #7 Entary & Bez trol Ca Screw nine, F Ek, Int		, w/Panel D A7807) itch, PC Mo 8018-2 w/8	unt,		

