

## ADJUSTMENT SWITCHES

### LANGUAGE

|         | SW. 1 | SW. 2 |
|---------|-------|-------|
| ENGLISH | OFF   | OFF   |
| GERMAN  | ON    | OFF   |
| GERMAN  | ON    | ON    |
| FRENCH  | OFF   | ON    |

### ATTRACT SEQUENCE SOUNDS

|                             | SW. 3 |
|-----------------------------|-------|
| SOUND ON (EVERY 17 MINUTES) | ON    |
| SOUND OFF                   | OFF   |

### TIME

|                               | SW. 4 |
|-------------------------------|-------|
| LIMITS GAME TIME TO 5 MINUTES | ON    |
| NO TIME LIMIT                 | OFF   |

### COIN

|                    | SW. 5 |
|--------------------|-------|
| 2 COINS = 1 PLAYER | ON    |
| 1 COIN = 1 PLAYER  | OFF   |

### HARD—EASY (STRIKES)

|      | SW. 6 |
|------|-------|
| EASY | ON    |
| HARD | OFF   |

### GAME SELECT

|                      | SW. 7 |
|----------------------|-------|
| COCKTAIL TABLE MODEL | ON    |
| UPRIGHT MODEL        | OFF   |

### TEST

|              | SW. 8 |
|--------------|-------|
| RAM/ROM TEST | ON    |
| PLAY MODE    | OFF   |