# **OPERATOR'S MANUAL**



# 取扱説明書

Power Supply	DC+5V DC+12V				
Monitor	Vertical Screen				
Game Style	2-Player Simultaneous				



# **CONNECTOR DIAGRAM**

SOLDER SIDE	NO.	NO.	PARTS SIDE
GND	A	1	GND
GND	в	2	GND
+5V	С	3	+5V
+5V	D	4	+5V
	E	5	
+12V	F	6	+12V
	н	7	
COIN COUNTER 2	J	8	COIN COUNTER 1
	K	9	
SPEAKER (-)	L	10	SPEAKER (+)
-	м	11	
VIDEO GREEN	N	12	VIDEO RED
VIDEO SYNC	Ρ	13	VIDEO BLUE
SERVICE SW	R	14	VIDEO GND
	S	15	
COIN SW 2	т	16	COIN SW 1
2-P START	U	17	1-P START
2-P UP	v	18	1-P UP
2-P DOWN	w	19	1-P DOWN
2-P LEFT	x	20	1-P LEFT
2-P RIGHT	Y	21	1-P RIGHT
2-P SW 1 BUTTON	z	22	1-P SW 1 BUTTON
2-P SW 2 BUTTON	а	23	1-P SW 2 BUTTON
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

# HOW TO PLAY

- ■アメリカ、日本、スウェーデン、イギリスそれぞれ2人のパイロ ットの中から1人選び、ボタンで決定します。
- ■フルパワー時のみ弾数制限があります。
- ■自分の国を除く7つのステージをクリアするとエンディングです。
- Choose your player from U.S.A., JAPAN, SWEDEN and U.K.
- Full power for limited time.
- Game is over when you clear seven stages.

## **CONTROL PANEL**



### **DIP-SWITCH 1**

		[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]
Coin Slot	● SAME ● INDIVIDUAL	* OFF ON							
• 2 • 3 • 1 • 1 • 1 • 1	$\begin{array}{l} \text{COIN} &= 1 \text{ CREDIT} \\ \text{COINS} &= 1 \text{ CREDIT} \\ \text{COINS} &= 1 \text{ CREDIT} \\ \text{COIN} &= 2 \text{ CREDITS} \\ \text{COIN} &= 3 \text{ CREDITS} \\ \text{COIN} &= 4 \text{ CREDITS} \\ \text{COIN} &= 5 \text{ CREDITS} \\ \text{COIN} &= 6 \text{ CREDITS} \\ \end{array}$		* OFF ON OFF ON OFF ON OFF ON	* OFF OFF ON OFF OFF ON ON	* OFF OFF OFF ON ON ON ON				
• 2 • 3 • 1 • 1 • 1 • 1	$\begin{array}{llllllllllllllllllllllllllllllllllll$					* OFF ON OFF ON OFF ON OFF ON	* OFF OFF ON OFF OFF ON ON	* OFF OFF OFF ON ON ON ON	
(s c (s	oin IORMAL TART = 1 COIN ONTINUE = 1 COIN IONTINUE TART = 2 COINS ONTINUE = 1 COIN								* OFI ON

■ Continue Coin が CONTINUE の時は、DIP[2]~[7]の設定が無視されます。

With Continue "ON", two coins to play and one coin to continue, and other COIN/CREDIT option disabled.

■[1]~[8]が全て ON の時は、FREE PLAY mode になります。

FREE PLAY mode : Have [1]~[8] switches ON.

#### **DIP-SWITCH 2**

		[1]	[2]	[3]	[4]	[5]	[6]	[7]	[8]
Screen Revers	● Normal ● Invert	* OFF ON							
Demo Sound	● OFF ● ON		OFF * ON						
Difficulty	● Normal ● Easy ● Hard ● Super Hard			* OFF ON OFF ON	* OFF OFF ON ON				
Fighters	•3 •1 •2 •4					* OFF ON OFF ON	* OFF OFF ON ON		
Extend Player	● 200,000 ● 300,000	4						* OFF ON	
Test Mode	● OFF ● ON								* OFF ON

■ Demo Sound が OFF の時は、コイン待ちデモの時に音が鳴らないようになります。

When DEMO-SOUND is "OFF", there will be no sound during demonstration mode.

\*出荷時の設定

\* INDICATES FACTORY SETTING.



**ビデオジステム株式会社** 〒606 京都市左京区下鴨松ノ木町35-1 TEL.075(723)0358代 FAX.075(723)0368 OFFICE: 35-1 Matsunoki-cho, Shimogamo, Sakyo-ku, Kyoto, Japan. 606. TEL: 075-723-0358 FAX: 075-723-0368