

TARE



1.0 - ақпарат - операторы

III. SELECTABLE OPTIONS

TARG has several switch selectable options which are controlled by a 8-position DIP switch located on the main logic board at position 16A. This switch is accessible from the front of the game through the coin door. Figure 1 shows all selectable functions controlled by the 8-position DIP switch.

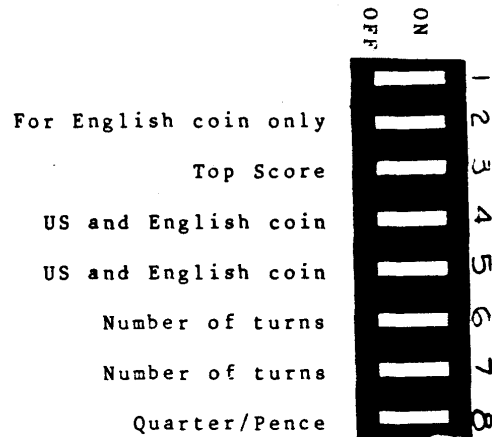


Figure 6.5: Functions of the 8-position DIP Switch

Following are the switch settings for the selection of options:

A. COINAGE	Switch 4	Switch 5		
2 Player - 1 Coin	OFF	OFF		
1 Player - 1 Coin	OFF	ON		
2 Player - 2 Coin				
1 Player - 2 Coin	ON	OFF		
2 Player - 4 Coin				
B. TYPE OF COINS	Switch 8			
Quarters	OFF			
English coins	ON			
C. FOR ENGLISH COINS ONLY		Switch 2	Switch 4	Switch 5
1 game, one 10 pence coin		ON	OFF	OFF
6 games one 50 pence coin				
1 game two 10 pence coins		OFF	OFF	OFF
3 games one 50 pence coin				
D. NUMBER OF TURNS	Switch 6	Switch 7		
2 Wummels (turns)	OFF	OFF		
3 Wummels	ON	OFF		
4 Wummels	OFF	ON		
5 Wummels	ON	ON		
E. TOP THIS SCORE	Switch 3			
Credit awarded for topping score	ON			
Extended play for topping score	OFF			