


Williams®

Service Manual

BLASTER

T.M.

- set-up
- operation
- troubleshooting
- logic and schematic diagrams
- parts

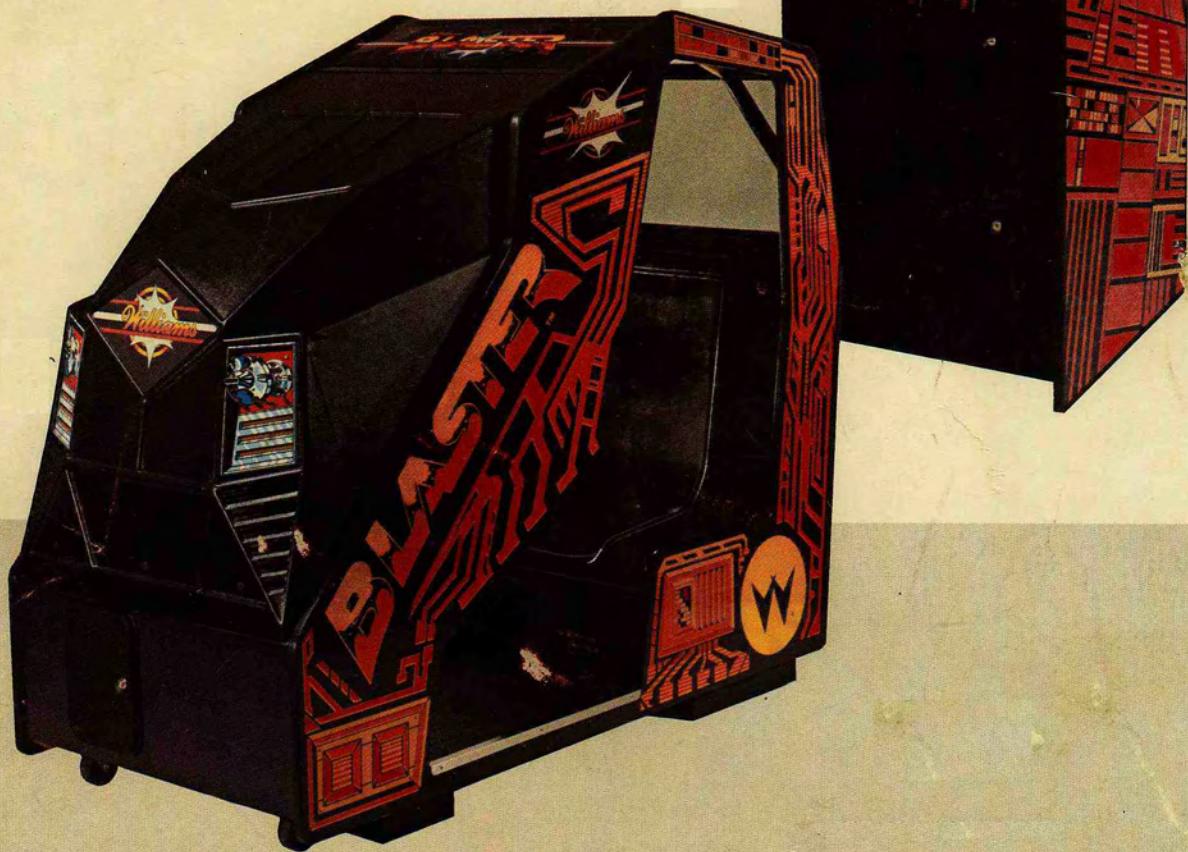

CONTENTS

● CHAPTER 1 Game Setup	3
Warnings & Notices.....	5
Game Features	5
Examine Your Game.....	6
Location of Controls.....	6
Optional Extension Monitor Connections.....	7
● CHAPTER 2 Game Operation	9
Power Turn-On.....	10
Game Operation.....	10
Bookkeeping Totals.....	10
Game Adjustments.....	11
Definitions of Pricing Terms.....	13
● CHAPTER 3 Troubleshooting Procedures.....	15
Introduction.....	16
Power-Up Tests.....	16
+5VDC Power Supply Adjustments.....	17
Self-Diagnostics	17
Diagnostics Mode Tests	18
Sound Board Diagnostics	20
CMOS RAM Data Test Protocol.....	22
● CHAPTER 4 Schematic and Logic Diagrams	23
● CHAPTER 5 Parts.....	45

CHAPTER 1 Game Setup

 
Warnings and Notices

Game Features

Examine Your Game

Location of Controls

Optional Extension Monitor Connections



Warnings & Notices

WARNING:

- 1. FOR SAFETY AND RELIABILITY, WILLIAMS** does not recommend or authorize any substitute parts or modifications of WILLIAMS equipment.
- 2. USE OF NON-WILLIAMS PARTS** and modifications of game circuitry may adversely affect game play, or may cause injuries.
- 3. SUBSTITUTE PARTS, MODIFICATIONS AND GAME "CONVERSIONS"** may void FCC type-acceptance.
- 4. SINCE THIS GAME IS PROTECTED** by Federal copyright, trademark and patent laws, so-called game "conversions" may be illegal under Federal law.
- 5. THIS "CONVERSION" PRINCIPLE ALSO APPLIES** to unauthorized facsimiles of WILLIAMS equipment, logos, designs, publications, assemblies and game (or game features not deemed to be in the public domain), whether manufactured with WILLIAMS components or not.

RF INTERFERENCE NOTICE:

CABLE HARNESS PLACEMENTS AND GROUND STRAP ROUTING on this game have been designed to keep RF radiation and conduction within levels accepted by FCC regulation.

TO MAINTAIN THESE LEVELS, reposition harnesses and reconnect ground straps to their original placements if they should be disconnected during maintenance.

CAUTION

FOUR GREEN #18 WIRES Terminate at the power-pack (transformer) assembly chassis D-9886. These wires provide earth ground to the marquee, monitor, switch brackets and PCB-plate mounting bracket. If one of these chassis-ground wires is disconnected during servicing, it must be reconnected to maintain safety standards.

NOTICE:

Assemblies secured to the plastic-upright cabinet use special #8 x 1 $\frac{1}{16}$ screws, WILLIAMS part no. 4608-01081-11. Always replace these screws with the same type. NEVER attempt to substitute ordinary sheet-metal screws.

Game Features

FIRST-PERSON ACTION

IN MOST VIDEO GAMES players have to watch a "hero" go through the motions *for them*. Not so in **BLASTER** video!

IN BLASTER VIDEO players are right there in the action. When they move the joystick, their whole point-of-view changes just as it would in a jet aircraft or in the space shuttle! When they press THRUST the stars, asteroids and interstellar gas clouds *shoot by at death-defying speed*.

BUY-IN FEATURE

CONTINUED GAMES. After completing a game players are encouraged to continue where they left off. (At factory settings upright **BLASTER** models even offer continued games at half-price.) Continued games are more challenging than original games. So continued games tend to involve skilled players at the level they prefer and to increase collections.

PLAYERS CHOOSE STARTING DIFFICULTY

FOUR WAYS TO START. Players may begin a game in any of the first four waves: (1) Planetoids; (2) Robot Grid; (3) Saucerland and (4) Vampires. This feature allows players to select the amount of challenge the game will offer, while increasing the game's collection for the operator.

49-WAY OPTO JOYSTICK

MODELED AFTER A MILITARY AIRCRAFT JOYSTICK, the **BLASTER** joystick is engineered to fit the hand and provide quick game response as well as durability.

ELECTRONICALLY THE JOYSTICK IS UNIQUE. Six opto-isolators (three on the X-axis and three on the Y-axis) are positioned to accept both direction and speed cues. A resolution of 49 directions and speed combinations is possible. See **PLAYER CONTROLS** below.

STEREO COCKPIT SOUND

STEREO SOUND. Since "true" stereo requires two sound sources, **BLASTER** video has not only two speakers, but two entire sound boards.

Examine your Game

When you receive a new WILLIAMS game, examine it carefully before you power it up. Be sure it was delivered in good condition!

INSPECT THE OUTSIDE of the shipping carton and/or game cabinet for shipping damage.

UPRIGHTS: Unlock and set aside the top-rear panel. Undo the two trunk latches on the inside of the bottom door. Open the door. Now check circuitry.

PLASTIC UPRIGHT: Unlock and open the rear door. Now check circuitry.

COCKPIT GAMES: See Figure 1. **(1)** Unlock the access door on the front of the game. **(2)** Now extend your arm to the left and right inside the door. Undo the two hood trunk latches. **(3)** Raise the hood. **(4)** Loosen the two access screws at the sides of the circuit board panel. **(5)** Raise the panel and inspect circuitry.

ARE CONNECTORS SECURELY ATTACHED? Reconnect any found loose. DON'T FORCE CONNECTORS. They're keyed and only fit one way.

ARE PLUG-IN CHIPS FIRMLY seated in their sockets?

UNWRAP THE POWER CORD coiled inside the cabinet. **UPRIGHT GAMES:** place the strain-relief plate in the slots as shown in Figure 2. **PLASTIC GAMES:** position the cord in the groove of the cabinet floor. **COCKPIT GAMES:** **Strain-relief provided** the power cord is secured under the front edge of the cabinet below the access door; free the power cord. **Strain-relief not provided** extend the power cord through the hole in the cabinet floor. DON'T PLUG IT IN YET!

SCRUTINIZE MAJOR SUBASSEMBLIES, such as the monitor, control panel, transformer chassis and power supply. Make sure they're securely-mounted.

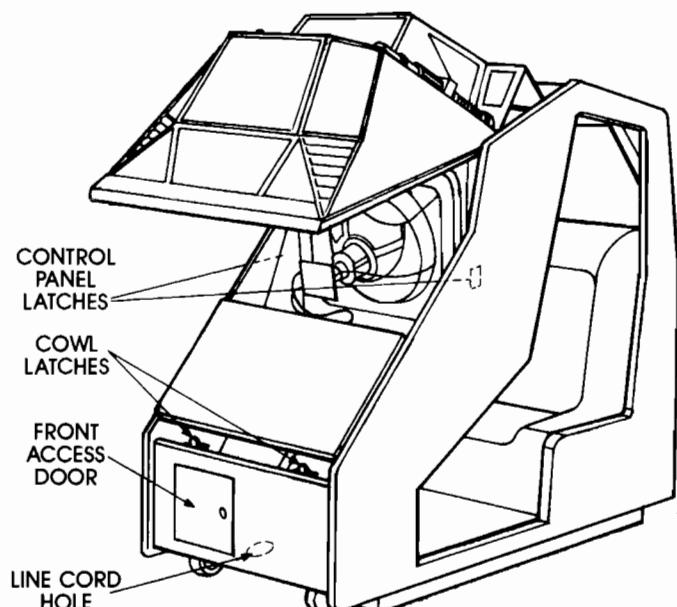


Figure 1. Cockpit model with hood raised.

Location Of Controls

THE ON-OFF SWITCH is located: in the top right corner of the rear of the cabinet (*UPRIGHT*) on the bottom of cabinet below access door (*COCKPIT*) in center over rear door (*PLASTIC*).

THE POWER INTERLOCK SWITCH is located behind the top-right corner of rear door *UPRIGHT & PLASTIC* inside the access door on the front of the game *COCKPIT*. The interlock switch is a spring-loaded DPDT type that will turn off the game when you open the door. For servicing purposes, pull the switch out and the game will power up.

THE DUAL VOLUME CONTROL is located on the circuit board panel. On uprights and plastic cabinets you can adjust it from the coin door. On cockpits models open the hood to adjust volume.

DIAGNOSTIC SWITCHES are on the inside of the coin door in upright and plastic cabinet games. In cockpit games they're under the hood and on the top-right side as you face the front of the game.

These switches are used to access the Diagnostic-Mode Tests, the BOOKKEEPING TOTALS screen and the GAME ADJUSTMENTS screen. Refer to appropriate sections for information on each of these important features.

MISCELLANEOUS CONTROLS. The *memory-protect interlock switch* is near the diagnostic switch bracket (see above). This switch must be open when you clear BOOKKEEPING TOTALS or make GAME ADJUSTMENTS. It automatically opens when the coin door is open on upright and plastic cabinet games and when the hood is up on cockpit games. The *CPU board reset switch* is located on the CPU board beside the batteries. The *cashbox advance switch*, found inside the cashbox door on all models, allows bookkeeping information to be audited without permitting it to be zeroed. A *sound-board diagnostic switch* is diagonally across each sound board from a large, strap-mounted axial capacitor. Sound-board diagnostics are explained in chapter 3.

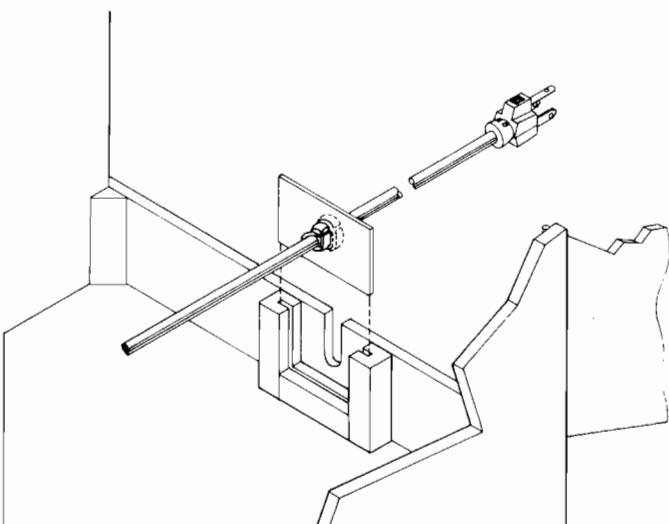


Figure 2. Power Cord Strain Relief (Upright)

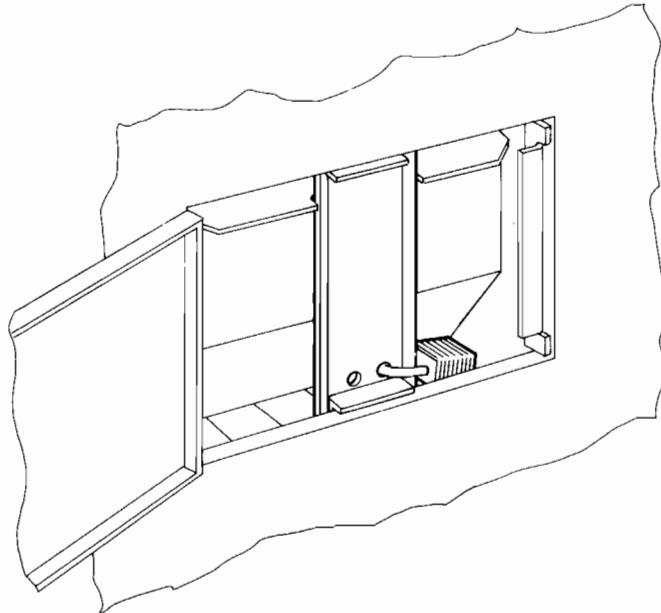


Figure 3. Cockpit Model Cashbox Security Plate

Optional Extension Monitor Installation

An extension monitor must be connected to 115VAC power through a 1:1 isolation transformer. The transformer must have a minimum current rating of 1A. Connections from the WILLIAMS video system to the monitor inputs may simply be paralleled to provide the extension monitor with sync and video.

CAUTION: These monitor connections void the game's FCC certification and UL listings. These may not be restored when the extension monitor is disconnected.


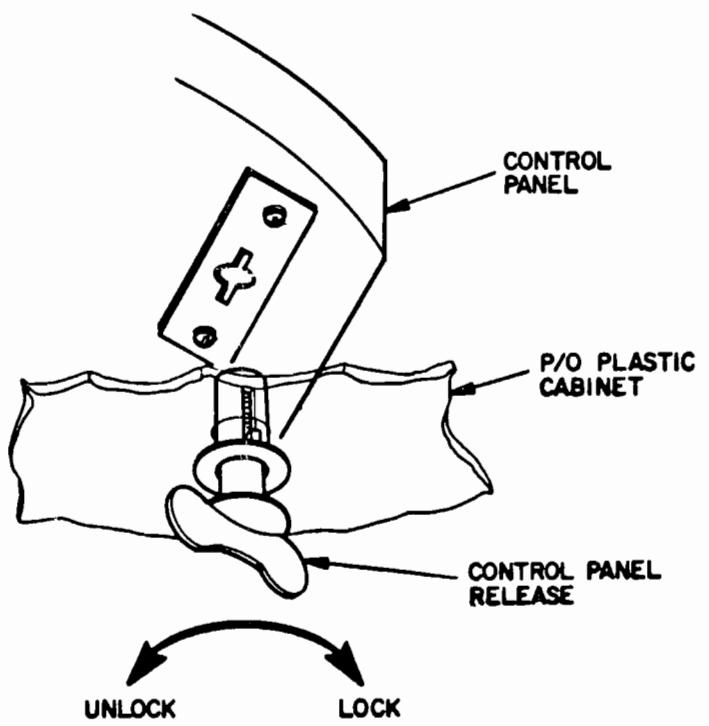


Figure 4. Access to Plastic Cabinet Control Panel

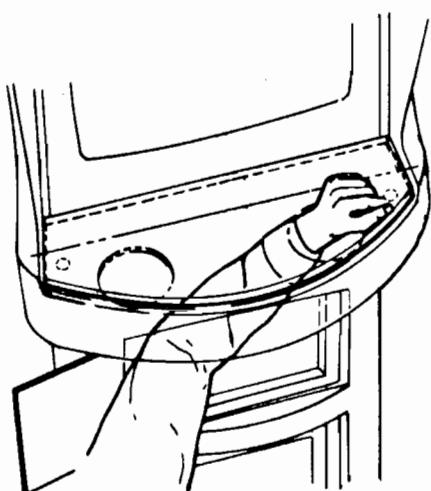

CHAPTER 2 Game Operation

**Power Turn-On
Game Operation
Bookkeeping Totals
Game Adjustments
Definitions of Pricing Terms**

Power Turn-On

CAUTION: This game must be plugged into a properly-grounded outlet to prevent shock hazard and to ensure proper game operation. DO NOT use a "cheater" plug to defeat the ground pin on the power cord, and DO NOT cut off the ground pin.

WHEN THE GAME IS FIRST TURNED ON general illumination should come on and a moment later a scanning "rug pattern" indicating the RAM test should appear on the screen. Next the rug should become stationary as the ROM test is performed. In a correctly-running game the rug pattern will be followed by the message "INITIAL CHECKS INDICATE OPERATIONAL". If RAM or ROM failure messages come up on the screen instead, refer to Power-Up Tests in TROUBLESHOOTING PROCEDURES.

Game Operation

GAME START

INSERT COINS; The number of COINS RECEIVED is displayed on the CRT. With four or more coins displayed, pressing 2-PLAYER START initiates a 2-player, 3-turn game (adjustable feature).

PLAYER CONTROLS

CONTROLLED BY THE JOYSTICK, a unique configuration of optoswitches provides a faster response and a greatly-increased number of vectors in each quadrant for the precise aiming of your spaceship.

TWO SETS OF THREE OPTOSWITCHES each are arranged at right angles to each other. One set is for aiming along the X-axis; the other is for aiming along the Y-axis. With the joystick in the center position all six optoswitches are blocked.

AS THE JOYSTICK IS MOVED it actuates one or both sets of switches. The spaceship responds with extraordinary precision due to the sequential action of the optoswitches in each set. Each switch in the set is offset so that joystick action multiplies the circuitry brought in by the switches, increasing the precision aiming of the spaceship.

THE RATE OF X-Y COURSE CHANGE INCREASES as the joystick is moved further from the center position; it decreases as the joystick is returned toward the center position.

SPECIAL CIRCUITRY is included so the spaceship can respond immediately to sudden reversals of joystick movement.

PRESS BLAST! The spaceship fires at planetoids and enemies.

PRESS THRUST! The spaceship accelerates to maximum speed.

GAME PLAY

IN A VALIANT SPACESHIP the player defies space and time while vying with robots, vampires, cat fighters and other fearsome foes. The player must BLAST enemies or stay out of their way to protect his shields (and his turn). A shield may be hit three times before it disintegrates. **GAME ACTION IS DIVIDED INTO WAVES.** Each wave may have one or several goals. Some of the more-important goals are to...

- BLAST enemies and planetoids (fleet bonus for eliminating all of one type)
- pick up spacemen (in time tunnel or space)
- dock with energizer E's (restores shields)
- BLAST the red saucer first or last (at Saucerland)
- fly through the magic arches (on the Robot Grid)
- attain wave 30 to enter astral paradise

BAD GUYS

- | | | |
|---------------|----------------|----------------|
| ● android | ● master mind | ● space cowboy |
| ● cat fighter | ● planetoids | ● space robot |
| ● death rider | ● red saucer | ● star cruiser |
| ● destroyer | ● runaway ship | ● vampire |
| ● enduro | ● saucer | ● X-29 fighter |

Bookkeeping Totals

ENTERING BOOKKEEPING MODE. See Figure 5. Inside the coin door (or under the hood on cockpit-model games) is a bracket with three button switches. Set the AUTO-UP/MANUAL-DOWN (center) switch to AUTO-UP. Press the ADVANCE switch to display BOOKKEEPING TOTALS on the screen (Figure 3). Now check those totals. Here's what to look for...

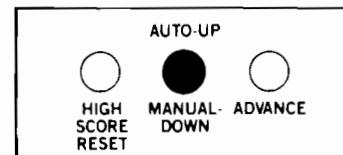


Figure 5. Diagnostic Button Switches

BOOKKEEPING TOTALS SHOW YOU AT A GLANCE if game settings are bringing you a satisfactory return on your investment! Only games by WILLIAMS ELECTRONICS have this feature. Think of it as a unique way to keep your **BLASTER** game the leader of the pace when it comes to earnings... location after location, week in and week out!

ENTERING BOOKKEEPING MODE. See Figure 5. Inside the coin door (or under the tabletop on cocktail-model games) is a bracket with three button switches. Set the AUTO-UP/MANUAL-DOWN (center) switch to AUTO-UP. Press the ADVANCE switch to display BOOKKEEPING TOTALS on the screen (Figure 6). Now check those totals. Here's what to look for...

BOOKKEEPING TOTALS

LEFT SLOT COINS	432
CENTER SLOT COINS	0
RIGHT SLOT COINS	398
PAID CREDITS	830
EXTRA SHIPS EARNED	172
SHIPS PLAYED	1723
TOTAL PLAYS	517
CONTINUED PLAYS	204
PLAYS LESS THAN 1:30	116
PLAYS 1:30 TO 3:00	303
PLAYS 3:00 TO 5:00	74
PLAYS 5:00 TO 10:00	22
PLAYS OVER 10:00	2
TIMES WAVE 20 REACHED	74
TIMES WAVE 30 REACHED	7
AVERAGE TIME PER PLAY	2:13
AVERAGE TIME PER CONTINUED PLAY	1:46

Figure 6. Bookkeeping screen

AVERAGE TIME PER PLAY: TWO MINUTES. Your most important figure on the BOOKKEEPING TOTALS screen is AVERAGE TIME PER PLAY. You'll want to pay special attention to this figure every day for this reason: Thorough field and factory research has shown that *two-minute games both satisfy players and also keep the quarters flowing.*

If games aren't running about two minutes long, then collections probably aren't at their peak. *But...is someone throwing the average off?* Now you can check. Because **BLASTER** video even tells you how many people played at each of five skill (time) levels. Most of them should be grouped at PLAYS 1:30 to 3:00. How many players reached upper waves? **BLASTER** video even lets you know this! These features help you tailor your game to your game-playing public. It's easy. But *only WILLIAMS games let you do it!*

Game Adjustments

ANOTHER EXCLUSIVE IN WILLIAMS GAMES! No other brand of games permits such a broad range of GAME ADJUSTMENTS. Without expensive "speed-up kits" or risky modifications you can make BLASTER play to your advantage...whatever your location needs may be. This feature makes BLASTER video a very *versatile performer*. And it means that **BLASTER** video has *phenomenal staying power!* Now here's the secret...

USE THE DIAGNOSTIC SWITCHES. With the AUTO-UP/MANUAL-DOWN switch set to AUTO-UP press the ADVANCE switch twice. The GAME ADJUSTMENTS screen will come up (See Figure 7. Factory settings are shown there).

Now for the multiple choice section! *Choose one or more:*

- Use the BLAST (longer game) and THRUST (shorter game) buttons to choose the appropriate difficulty level (0 = easiest or extra liberal, 4 = average, 9 = hardest or extra conservative).
- For a shorter game, increase the bonus points figure (EXTRA SHIP EVERY) or set it to zero. For a longer game, reduce it. (50,000 = long/200,000 = short).
- For a shorter game, decrease the number of TURNS PER PLAYER. For a longer game, increase the number. (1 = short/20 = long).

SET ATTRACT MODE MESSAGE

1. Move the cursor to SET ATTRACT MODE MESSAGE.
2. Press BLAST.
3. Press ADVANCE.
4. Enter up to two lines of your message by following instructions on the screen.
5. Press ADVANCE to enter Game-Over Mode.

To restore the WILLIAMS attract-mode message, perform steps 1 through 3 and then turn the game off and back on.

GAME ADJUSTMENTS

EXTRA SHIP EVERY	100,000	RECOMMENDED
TURNS PER PLAYER	3	RECOMMENDED
CREDITS REQUIRED TO START GAME	2	RECOMMENDED
CREDITS REQUIRED TO CONTINUE GAME	1	RECOMMENDED
PRICING SELECTION	3	
LEFT SLOT UNITS	1	
CENTER SLOT UNITS	4	
RIGHT SLOT UNITS	1	
UNITS REQUIRED FOR CREDIT	1	
UNITS REQUIRED FOR BONUS CREDIT	0	
MINIMUM UNITS FOR ANY CREDIT	0	
DIFFICULTY OF PLAY	4	RECOMMENDED
LETTERS FOR HIGHEST SCORE NAME	20	RECOMMENDED
RESTORE FACTORY SETTINGS	NO	
CLEAR BOOKKEEPING TOTALS	NO	
HIGH SCORE TABLE RESET	NO	
AUTO CYCLE	NO	
SET ATTRACT MODE MESSAGE	NO	
SET HIGHEST SCORE NAME	NO	
USE JOYSTICK TO SELECT ADJUSTMENT		
USE BLAST AND THRUST TO CHANGE THE VALUE		
PRESS ADVANCE TO EXIT		

Figure 7. Adjustments screen showing factory settings for upright games

NOTE: Factory settings vary on the function CREDITS REQUIRED TO CONTINUE GAME. Upright games are set to 1. Cockpit games have a ROM-board jumper providing a 2.)

LETTERS FOR HIGHEST SCORE NAME

The number of letters allowed the highest-scoring player for entering his name can be varied from 3 to 20 and is recommended as 20. If objectionable words are entered as the signature name, you can change the lettered entry leaving the highest score the same. See SETTING HIGHEST SCORE NAME.

RESTORE FACTORY SETTINGS

1. Move the cursor to RESTORE FACTORY SETTINGS.
2. Press BLAST.
3. Press ADVANCE twice.

CLEAR BOOKKEEPING TOTALS

1. Move the cursor to CLEAR BOOKKEEPING TOTALS.
2. Press BLAST.
3. Press ADVANCE twice.

HIGH SCORE TABLE RESET

1. Move the cursor to HIGH SCORE TABLE RESET.
2. Press BLAST.
3. Press ADVANCE to enter Game-Over Mode.

AUTO CYCLE

This adjustment is actually a troubleshooting procedure. See Chapter 3.

1. Move the cursor to AUTO CYCLE.
2. Press BLAST to display a "YES".
3. Press ADVANCE to enter Auto-Cycle Mode. The coin door or hood must remain open for this test.
4. To exit Auto-Cycle Mode, turn the game off and on.

SET HIGHEST SCORE NAME

1. Move the cursor to SET HIGHEST SCORE NAME.
2. Press BLAST.
3. Press ADVANCE.
4. Enter the new signature.
5. Press ADVANCE to enter Game-Over Mode.

An alternate, simpler method enters the factory highest-score signature. In the Game-Over Mode hold down the HIGH SCORE RESET button. After a few seconds a sound is produced and the factory highest-score signature is activated.

a higher value to achieve your goal. Here are the rest of the functions as they should appear.

- "1" in the LEFT SLOT UNITS function
- "4" in the CENTER SLOT UNITS function
- "1" in the RIGHT SLOT UNITS function
- "1" in the UNITS PER CREDIT function
- "0" in the UNITS REQUIRED FOR BONUS CREDIT function
- "2" in the MINIMUM UNITS FOR ANY CREDIT function

These values allow one credit for a quarter, but ONLY when two or more credits are paid for at a time. Incidentally, the "4" in CENTER SLOT UNITS allows four credits per dollar coin (center slot only). See "2/50, 4/\$1" in Table 1 above.

GAMES : PRICES ratio to *start a game* is equivalent to the ratio:

$$X : VYS$$

where :

- X = SLOT UNITS
- V = COIN VALUE
- Y = UNITS PER CREDIT
- S = CREDITS REQUIRED TO START GAME

For example, at factory settings with quarter chutes the variables produce 1 : 25x1x2 or one starting game for 50¢

GAMES : PRICE ratio to *continue a game* is equivalent to the ratio:

$$X : VYC$$

where:

- X = SLOT UNITS
- Y = UNITS PER CREDIT
- C = CREDITS REQUIRED TO CONTINUE

For example, at factory settings for upright and plastic cabinet games the variables produce 1 : 25x1x1 or one continued game for 25¢.

CHAPTER 3 Troubleshooting Procedures

Introduction

Power-Up Tests

+ 5VDC Power Supply Adjustments

Self-Diagnostics

Diagnostic Mode Tests

Sound Board Diagnostics

CMOS RAM Data Test Protocol

INTRODUCTION

Certain types of game malfunctions may inhibit the game's diagnostic or display faculties. Troubleshooting procedures for most of these types of malfunctions as well as malfunctions that permit self-diagnosis are covered below. Our trouble-

shooting algorithm begins with *Power-Up* and continues until *Game-Over Mode*. All procedures can be performed with minimal test equipment or merely by observing the game itself.

POWER-UP TESTS

NO GENERAL ILLUMINATION	NO INITIAL VIDEO (RUG PATTERN)	CHECKING POWER SUPPLY BOARD
<ul style="list-style-type: none"> (1) Check fuse F2 on power supply board. (2) Check for proper installation of jumpers W1, W2, W3 and/or resistor R27. (Some machines MAY NOT have an R27. Refer to your drawing set.) (3) Check 4P1/J1, 4P3/J3, 6P2/J2 and 6P3/J3. (4) If all the above don't turn up the problem, check power supply board. 	<ul style="list-style-type: none"> (1) Press reset button on CPU Board. (2) Try RAM and ROM tests (see below). (3) If all the above don't turn up the problem, check power supply board. 	<ul style="list-style-type: none"> (1) Swap power supply board with one from known-good game. (2) If game plays, problem is on power supply board. (3) If game doesn't play, check power transformer with voltmeter. (4) If known-good power supply is unavailable for tests above, check +5V, -5V and +12V outputs on power supply in game. Each MUST BE within 2% of rated output with less than 0.1% AC hum.

MORE POWER-UP TESTS

TEST	ROM BOARD LEDS RECOGNIZE CONDITION	ROM BOARD LEDS IDENTIFY BAD CHIPS	VIDEO	REMEDY
GENERAL	"0" means all power-up tests passed	—	<ul style="list-style-type: none"> (1) scanning rug pattern (2) stationary rug pattern (3) "INITIAL TESTS INDICATE ALL SYSTEMS OPERATIONAL" (4) Game-Over Mode 	If any video (see left) is missing or error message is displayed, proceed to Diagnostic Mode tests.
CMOS (See Appendix A)	"0" means tests passed	—	<ul style="list-style-type: none"> "HIGH SCORE TABLE RESET" "BOOKKEEPING TOTALS CLEARED" "ADJUSTMENT FAILURE" "RESTORE FACTORY SETTINGS BY OPENING FRONT DOOR OR HOOD AND TURNING GAME ON AND OFF" 	(1) Open coin door or hood and turn power off and on.
	"0" means tests passed	—	"FACTORY SETTINGS RESTORED"	(2) Press ADVANCE. Game should return to Game-Over Mode.
BATTERY (See Appendix A)	"0" means tests passed	—	<ul style="list-style-type: none"> "HIGH SCORE TABLE RESET" "BOOKKEEPING TOTALS CLEARED" "ADJUSTMENT FAILURE" "RESTORE FACTORY SETTINGS BY OPENING FRONT DOOR OR HOOD AND TURNING GAME ON AND OFF" 	<ul style="list-style-type: none"> (1) Open coin door or hood and turn power off and on. Or: press ADVANCE. In either case, game should return to Game-Over Mode. (2) Check AA alkaline cells on CPU Board. (3) If problem persists, proceed with CMOS RAM test by putting the game into its Diagnostic Mode (see Self-Diagnostics).
MEMORY PROTECT INTERLOCK (See Appendix A)	"0" means tests passed	—	<ul style="list-style-type: none"> "HIGH SCORE TABLE RESET" "BOOKKEEPING TOTALS CLEARED" "ADJUSTMENT FAILURE" "RESTORE FACTORY SETTINGS BY OPENING FRONT DOOR OR HOOD AND TURNING GAME ON AND OFF" 	<ul style="list-style-type: none"> (1) Making and breaking memory protect interlock switch, check with VOM and replace if faulty. (2) Replace if faulty: Memory protect gates U56, U57, U59, Q1 or CMOS RAM U38.
SPECIAL CHIP	"0" means tests passed	—	<ul style="list-style-type: none"> (1) scanning rug pattern (2) blank screen instead of "INITIAL TESTS INDICATE ALL SYSTEMS GO" (3) high score table with no scores (4) intro blank, or program crash 	<ul style="list-style-type: none"> (1) Turn power off. (2) To find bad chip, replace 2 special chips one at a time with known good chips. (3) Turn machine on after each replacement and run through Power-Up Tests.

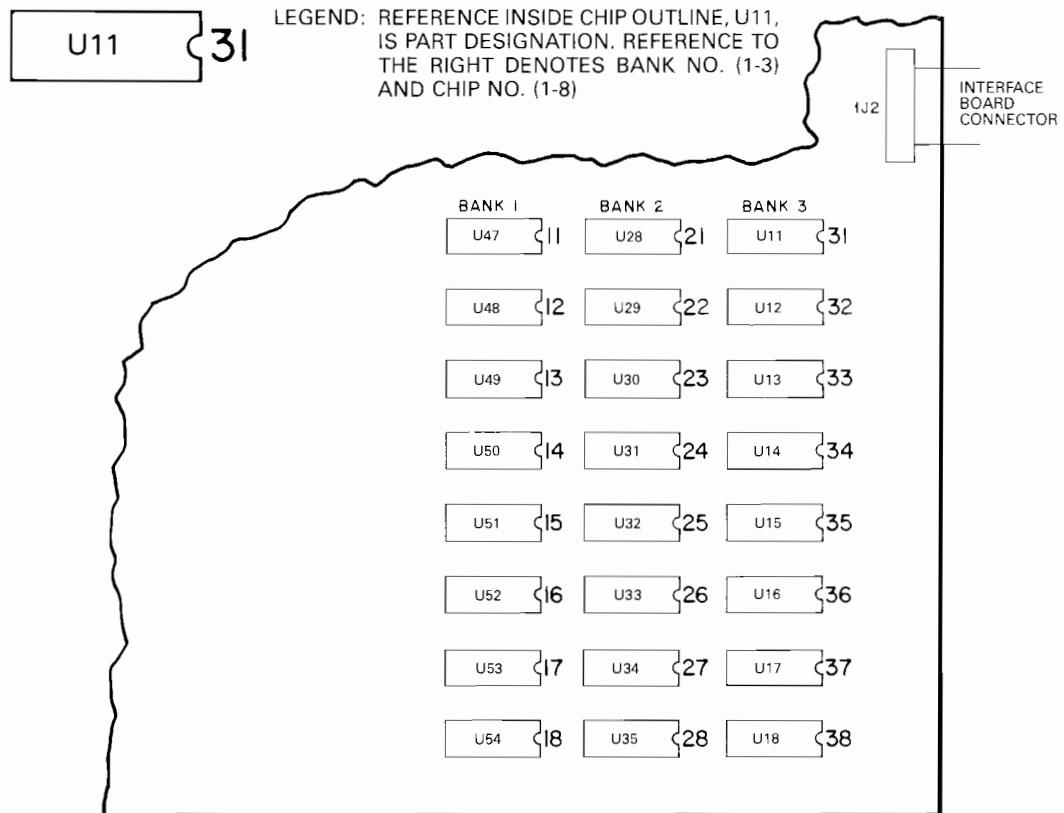


Figure 8. RAM Location and Numbering on CPU Board & ROM Board RAMS

+5VDC Power Supply Adjustments

BEFORE ADJUSTING THE VOLTAGE OUTPUT, always check at the output of the supply for AC hum. This hum should never rise above .005V on the +5VDC supply. If it does, consult your schematic drawing set for proper DC voltages throughout the circuit. Test for these with the DC setting of your multimeter. Make a second check using the AC setting. Pay particular attention to readings at TP5 (top of capacitor C10). If the voltage here is low (less than +11VDC) or if you find excessive ripple (more than 700mVrms), replace the capacitor.

If TP1 is less than +4.95VDC, then check precision resistors R25 and R26. If they are within the 1% tolerance, then check IC2.

Self-Diagnostics

If RAM or ROM failure messages are displayed on the CRT after the "rug pattern" proceed with self-diagnostics. Self-diagnostic procedures are controlled by the AUTO-UP/MANUAL-DOWN switch to the MANUAL-DOWN position and depress the ADVANCE pushbutton. The game is now in its Diagnostic Mode and a ROM test is performed. With

ROM test results present on the CRT display, set the AUTO-UP/MANUAL-DOWN switch to the AUTO-UP position. Depressing the ADVANCE pushbutton initiates the RAM test.

Further tests (CMOS, sounds, switch, color RAM and monitor test patterns) are initiated as the ADVANCE pushbutton is depressed (once more for each subsequent test).

MONITOR TEST PATTERNS ("19" Wood Cabinet Upright Games only). For ease in adjustments, the monitor may be slid back and the screen viewed in the CRT mirror on the inside-top of the cabinet. Remove the two bolts and carefully slide the monitor back in its shelf. Secure the monitor in the extended position by inserting the two bolts through holes provided at the left side of the monitor.

AUTO-CYCLE MODE. From the color bar pattern (or Game-Over with the switch set to AUTO-UP) depress ADVANCE two times to display GAME ADJUSTMENTS.


1. Position the cursor on AUTO CYCLE with the PLAYER 1 joystick and push the PLAYER 2 joystick right.
2. Depress ADVANCE.
3. The system will now sequence through ROM, RAM, and CMOS RAM tests repeatedly. The coin door or hood must be open during the Auto-Cycle test. If an error is detected, the test is terminated and the failure indication is displayed on the CRT.
4. To terminate the Auto-Cycle test, turn the game OFF and ON.


**TROUBLESHOOTING PROCEDURES:
DIAGNOSTIC MODE TESTS**

TEST	ROM BOARD LEDS RECOGNIZE CONDITION	ROM BOARD LEDS IDENTIFY BAD CHIPS	VIDEO	REMEDY
ROM	"2" means ROM error	2-digit ROM chip no.	"ROM ERROR" and ROM chip no.	(1) Turn power off. (2) Replace suspected chip.
RAM	"4" means RAM error	Bank no. first...then chip no. in bank (see figure 4)	"RAM ERROR" followed by RAM bank no. and chip no. (Note: with multiple RAM failures this display may not appear)	*(1) Check for these normal voltages on indicated RAM chip: -5/pin 1, +12/pin 8, +5/pin 9. (2) Turn power off. (3) Replace suspected chip. (4) With multiple RAM failures always check power supply. See POWER-UP TESTS.
CMOS (see CMOS RAM Test Protocol)	"3" means CMOS RAM error	--	"CMOS RAM ERROR OR WRITE PROTECT FAILURE"	(1) With power off, check pin 18 of CMOS RAM for 3.2VDC minimum. If present, replace CMOS chip U38. If absent, replace AA alkaline cells. (2) With new alkaline cells and power off, check for 3.2V minimum at pin 18. If still absent, replace diodes D1 and D2. (3) Upon power-up and reentry into diagnostics if CMOS error message persists, check CMOS RAM memory protect and address decoding circuits with a logic probe.

Tests 4 and 7 provide sequential subtests. To stop automatic cycling set switch to MANUAL-DOWN. Depress ADVANCE in MANUAL-DOWN to step through subtests. LED indications are not made for these tests.

TEST & PROCEDURES	VIDEO		REMEDY OR ADJUSTMENT					
SOUND (Test 4)	<p>"RIGHT SOUND LINE 1" "LEFT SOUND LINE 1" "RIGHT SOUND LINE 2" "LEFT SOUND LINE 2" "RIGHT SOUND LINE 3" "LEFT SOUND LINE 3" "RIGHT SOUND LINE 4" "LEFT SOUND LINE 4" "RIGHT SOUND LINE 5" "LEFT SOUND LINE 5" "RIGHT SOUND LINE 6" "LEFT SOUND LINE 6" (These appear one at a time.)</p>		MISSING 1 2 3 4 5 6 All Right All Left	CHECK 2P3/10P3/13P3 pin 3 2P3/10P3/13P3 pin 2 2P3/10P3/13P3 pin 5 2P3/10P3/13P3 pin 4 2P3/10P3/13P3 pin 8 2P3/10P3/13P3 pin 6 2P3/10P3 pin 7 2P3/13P3 pin 8				
SWITCH (Test 5)	<p>CRT indicates AUTO-UP closed and any stuck switches. CRT Display for each Switch...</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <th>ROM BOARD SW.</th> <th>INTERFACE BOARD SW.</th> </tr> <tr> <td>ADVANCE AUTO-UP HIGH SCORE RESET LEFT COIN (next to hinge) CENTER COIN RIGHT COIN SLAM SWITCH</td> <td>1-PLAYER START 2-PLAYER START UP-DOWN A UP-DOWN B UP-DOWN C UP-DOWN DIRECTION RIGHT-LEFT A RIGHT-LEFT B RIGHT-LEFT C RIGHT-LEFT DIRECTION THRUST (JOYSTICK) BLAST THRUST (PANNEL)</td> </tr> </table>		ROM BOARD SW.	INTERFACE BOARD SW.	ADVANCE AUTO-UP HIGH SCORE RESET LEFT COIN (next to hinge) CENTER COIN RIGHT COIN SLAM SWITCH	1-PLAYER START 2-PLAYER START UP-DOWN A UP-DOWN B UP-DOWN C UP-DOWN DIRECTION RIGHT-LEFT A RIGHT-LEFT B RIGHT-LEFT C RIGHT-LEFT DIRECTION THRUST (JOYSTICK) BLAST THRUST (PANNEL)	<p>NOTE: If any two sounds are the same, check for a short between the select lines with the same sound.</p> <p>(Refer to CABINET WIRING Diagram)</p> <p>(1) ROM BOARD SWITCH STUCK: Disconnect 2P3. (2) INTERFACE BOARD SWITCH STUCK: Disconnect 3P2 or 3P3.</p> <p>(3) ROM BOARD SWITCH DOES NOT OPERATE: Ground corresponding pin of 2P3. (4) INTERFACE BOARD SWITCH DOES NOT OPERATE: Ground corresponding pin of 3P2 or 3P3.</p> <p><input type="checkbox"/> SYMPTOM REMAINS SAME ... ROM Board or Interface Board Faulty.</p> <p><input type="checkbox"/> SYMPTOM CLEARS UP ... Problem is in switches or wiring.</p> <p>ADDITIONAL TESTS FOR OPTOSWITCHES:</p> <p>(5) Check that +5VDC is at pin 1 or 12P1. (6) With joystick in center position, check for 0.7V at base of ON transistor(s) (Q1 thru Q6) and 0.1V at pin(s) 2, 3, 4, 6, 7 and 8 of 12P1. (7) With joystick moved from center position, check for 0.1V at base of OFF transistor(s), and +5V at corresponding pins 2, 3, 4, 6, 7 and 8 of 12P1. (8) With joystick in center position, check for +5V at pins 5 and 9 of 12P1. With joystick in Down (Left) position, check for +5V at pin 5 (9) of 12P1. With joystick in Up (Right) position, check for 0V at pin 5 (9) of 12P1.</p>	
ROM BOARD SW.	INTERFACE BOARD SW.							
ADVANCE AUTO-UP HIGH SCORE RESET LEFT COIN (next to hinge) CENTER COIN RIGHT COIN SLAM SWITCH	1-PLAYER START 2-PLAYER START UP-DOWN A UP-DOWN B UP-DOWN C UP-DOWN DIRECTION RIGHT-LEFT A RIGHT-LEFT B RIGHT-LEFT C RIGHT-LEFT DIRECTION THRUST (JOYSTICK) BLAST THRUST (PANNEL)							

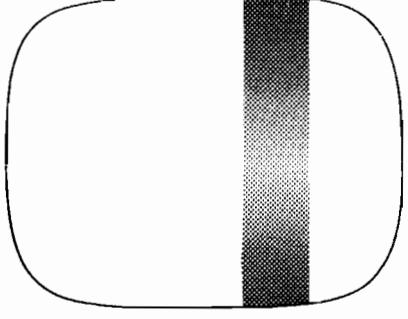MORE DIAGNOSTIC MODE TESTS			
TEST & PROCEDURES	VIDEO SEQUENCES	REMEDIY OR ADJUSTMENT	
COLOR RAM (Test 6) <p>Note that a blank sequence or two sequences with the same shade indicate a faulty U92 latch, U90 RAM or U91 RAM or a failure in the color analog circuit. Check voltages on Q10 (red transistor), Q11 (green transistor) and Q12 (blue transistor). During the eight full-screen color tests, the base voltage (center pin) on each transistor should vary between 3.8V (brightest color) and 4.4V (no color).</p> <p>Color RAM Check</p> <p>(1) CRT sequences through 8 colors, 2 seconds each.</p> <p>(2) Thick vertical band indicates color RAM fault.</p> 	1) light red screen 2) red screen 3) dark red screen	too-light or too-dark red or gray band	magenta band
	4) light green screen 5) green screen 6) dark green screen	yellow band	cyan band
	7) light blue screen 8) blue screen	magenta band	too-light or too-dark blue or gray band
	4) light green screen	green band	dark green band or gray band
	5) green screen	light green band	dark green band or gray band
	6) dark green screen	—	gray band
MONITOR & COLOR RAM (Test 7)	cross hatch pattern	Aids you in setting up vertical and horizontal linearity, convergence, and focus.	
	red screen green screen blue screen color pattern	Aid you in optimizing color purity and color balance.	
	color bars <ul style="list-style-type: none"> • double-width • half-width • transposed • missing 	If color RAM test 6 indicates no faults, symptoms at left suggest a fault in U77, U90, U91 or U92 chips.	

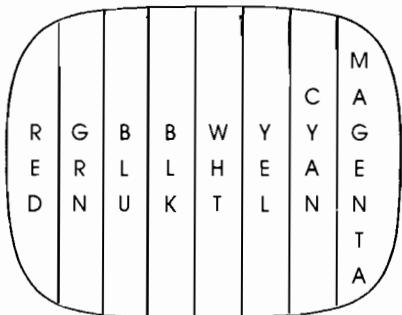

Color Bar Pattern

SOUND BOARD DIAGNOSTICS			
SYMPTOM	TEST & PROCEDURES		
MISSING SOUNDS; NO SOUND—STEP 1 (ASSUMPTION: INPUT SECTION FAILURE)	<input type="checkbox"/> CHECK SOUND-SELECT INPUTS		
TEST	TOOL	CONDITION & REMEDY	
Sound Board connector 10P3/13P3 pins 2 to 8	logic probe (game on and in Test 4)	<ul style="list-style-type: none"> • PULSING—proceed • LOW—check jacks, foils • STILL LOW—perform ROM BOARD checkbox. 	
SR1 DIP resistors R3-R9	VOM-reading ohms (game off)	<ul style="list-style-type: none"> • ALL 4.7K—proceed • ANY OPEN—replace SR1 	
C3-C9	VOM-reading ohms (game off)	<ul style="list-style-type: none"> • ALL OKAY—proceed • ANY SHORTED—replace bad 	
IC5-1, IC7-14 (power pins)	logic probe (game on and in Test 4)	<ul style="list-style-type: none"> • HIGH—proceed • LOW—replace C19 (IC5) or C21 (IC7) • STILL LOW—replace bad IC 	
IC5-2, 4, 6, 10, 12, 15; IC7-4, 6	logic probe (game on and in Test 4)	<ul style="list-style-type: none"> • PULSING—proceed • LOW—replace chip 	
IC10-18 and 19 (PIA)	logic probe (game on and in Test 4)	<ul style="list-style-type: none"> • PULSING—proceed • LOW—lift C20, retest • PULSING NOW—replace C20 • STILL LOW—replace IC6, retest 	
IC10-10 to 17 (PIA)	logic probe (game on and in Test 4)	<ul style="list-style-type: none"> • PULSING—proceed • SOME LOW—replace IC • ALL LOW—lift C31, retest • PULSING NOW—replace C31 • STILL LOW—replace IC 	


NOTE: In games where no sounds are produced from either sound board, disconnect both 9-pin connectors from one board and then the other. This isolates certain faults to a single Sound Board. If sounds are still not produced from either board, check ROM Board outputs on page 21 first.

MORE SOUND BOARD DIAGNOSTICS		
SYMPTOM	TEST & PROCEDURES	
MISSING SOUNDS; NO SOUND—STEP 2 (ASSUMPTION: OFF-BOARD FAILURE)	<p><input type="checkbox"/> CHECK ROM BOARD OUTPUTS</p> <p>(1) If you hear game sounds, disconnect and then reconnect Sound Board connectors 10P3 and 13P3.</p> <p>(2) You should hear one or more game sounds. If so, put game in Diagnostic Mode Test 4 and proceed with this checkbox. If not, go ahead to POWER SUPPLY checkbox below.</p>	
TEST	TOOL	CONDITION & REMEDY
ROM Board connector 2P4/J4-2 to 7	logic probe (game on and in Test 4)	<ul style="list-style-type: none"> • PULSING—repair cable to Sound Board • ANY LOW—repair jack or foil, proceed
U30 DIP resistors 2 to 8	VOM-reading ohms (game off)	<ul style="list-style-type: none"> • ALL 4.7K—proceed • ANY OPEN—replace U30
C40-53	VOM-reading ohms (game off)	<ul style="list-style-type: none"> • ALL OKAY—proceed • ANY SHORTED—replace bad
U29-10 to 17 (PIA)	logic probe (game on and in Test 4)	<ul style="list-style-type: none"> • PULSING—proceed • SOME LOW—replace U29
NO SOUND (ASSUMPTION: POWER SECTION FAILURE)	<p><input type="checkbox"/> CHECK ON-BOARD POWER SUPPLY</p> <p>(1) With power off, test for fuse continuity at F1 and F2.</p> <p>(2) With power on, check for +12V unregulated DC at TP1 and at pin 5 of IC1.</p> <p>(3) Now check for +5V regulated DC between TP4 and TP3. If voltages are absent or low, turn off game and lift one pin of filter capacitors C25, C26 and C27.</p> <p>(4) Check each with ohmmeter for possible shorts.</p> <p>(5) If capacitors are good and unregulated voltages test okay but you're missing +5V, replace regulator chip (IC8).</p>	
STILL NO SOUND (ASSUMPTION: AUDIO SECTION FAILURE)	<p><input type="checkbox"/> CHECK AUDIO (ANALOG) SECTION</p> <p>(1) Turn power on; turn up volume control. Momentarily place powered-up AC soldering pencil on final amplifier's input pin (IC1, pin 1 or 10P4, pin 2). If you hear low hum, audio IC, volume pot and speaker are okay.</p> <p>(2) Repeat test at Q2 emitter. If you hear hum, analog section is okay. Step (1) will also work if you simply touch amplifier's input pin. <i>However output level of hum will be much lower than with soldering iron.</i> DO NOT use a soldering pencil of over 40 watts. Cordless models will NOT work here.</p>	
MISSING SOUNDS; NO SOUND (ASSUMPTION: DIGITAL FAILURE)	<p><input type="checkbox"/> CHECK SOUND ROM (IC12) AND RELATED CIRCUITRY</p> <p>(1) Turn power on.</p> <p>(2) If you have no game sounds but power supply tests show normal voltages and no ripple on +5V, check crystal clock circuit. Using DVM or logic probe, test for pulsing AC across crystal. If clock signal's absent, replace crystal and associated capacitors.</p> <p>(3) Turn power off.</p> <p>(4) Swap sound ROM (IC12) and then microprocessor chip (IC9) with known-good chips.</p> <p>(5) Power-up and test Sound Board after each swap by pushing DIAGNOSTIC button.</p>	

CMOS RAM Data Test Protocol

The first sub-test of the CMOS RAM data is that of the ATTRACT MODE MESSAGE checksum. If the test does not pass, the factory ATTRACT MODE MESSAGE is restored. Next, the game adjustments are checked and restored to factory settings if an error is found. If game adjustments are found intact, the high score table is checked for any bad entries. Bad entries are replaced with a score of 4,000 points and no initials. If all entries check, the game returns to the Game Over Mode.




If game adjustments are restored to factory settings, the AUDIT TOTALS are checked. If 5 or more audit digits are other than 0-9 (that is hexadecimal A through F) all audit totals are cleared. This is followed by a check of the high score table and the table is reset to factory settings if errors are found. Finally, game adjustments are rechecked and either OPEN COIN DOOR or FACTORY SETTINGS RESTORED is displayed. With the former, open the coin door and turn the game OFF and ON and then FACTORY SETTINGS RESTORED will be displayed. Return to game over by depressing the ADVANCE pushbutton or by turning the game OFF and ON a second time.

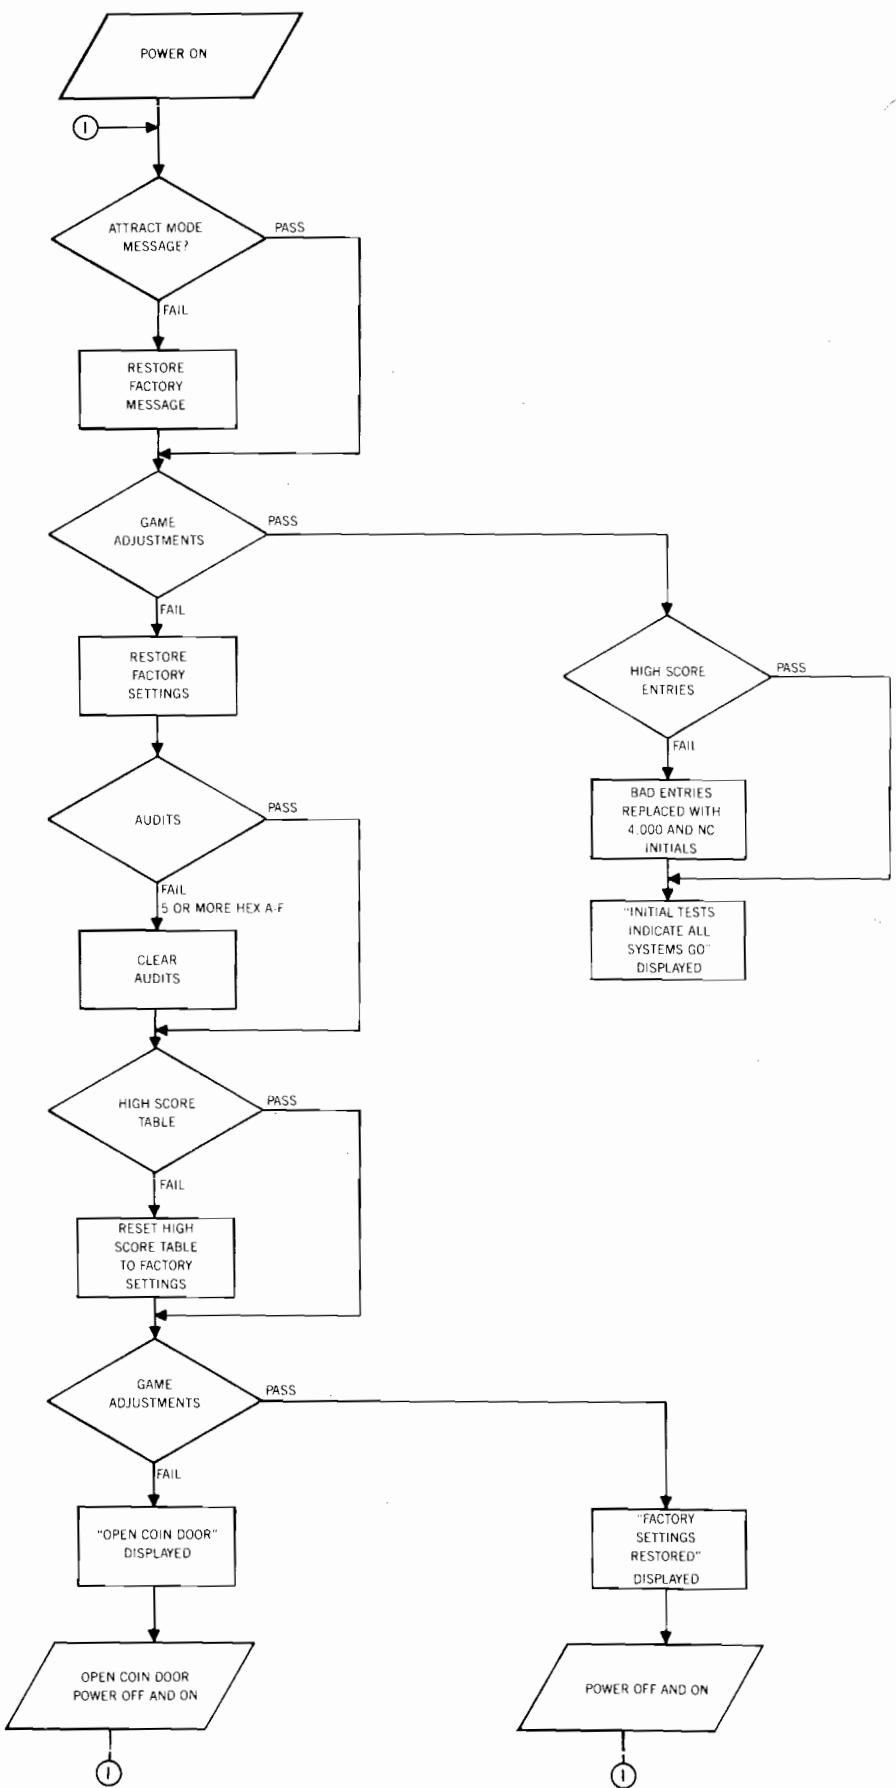


CHAPTER 4 Schematic and Logic Diagrams


<i>Interboard Wiring (Sheet 1 of 2)</i>	25
<i>Interboard Wiring (Sheet 2 of 2)</i>	26
<i>CPU Board Bill of Materials</i>	27
<i>CPU Board Assembly Drawing</i>	28
<i>CPU Board Logic Diagram (Sheet 1 of 3)</i>	29
<i>CPU Board Logic Diagram (Sheet 2 of 3)</i>	30
<i>CPU Board Logic Diagram (Sheet 3 of 3)</i>	31
<i>ROM Board Assembly Drawing</i>	32
<i>ROM Board Logic Diagram (Sheet 1 of 2)</i>	33
<i>ROM Board Logic Diagram (Sheet 2 of 2)</i>	34
<i>Interface Board Assembly and Logic Diagram</i>	35
<i>D-8784 Power Supply Assembly Drawing</i>	36
<i>D-8784 Power Supply Schematic Diagram</i>	37
<i>D-9444 Power Supply Assembly Drawing</i>	38
<i>D-9444 Power Supply Schematic Diagram</i>	39
<i>Power Wiring Diagram</i>	40
<i>Cabinet Wiring and Joystick Diagram</i>	41
<i>Sound Board Assembly Drawing</i>	42
<i>Sound Board Logic Diagram</i>	43




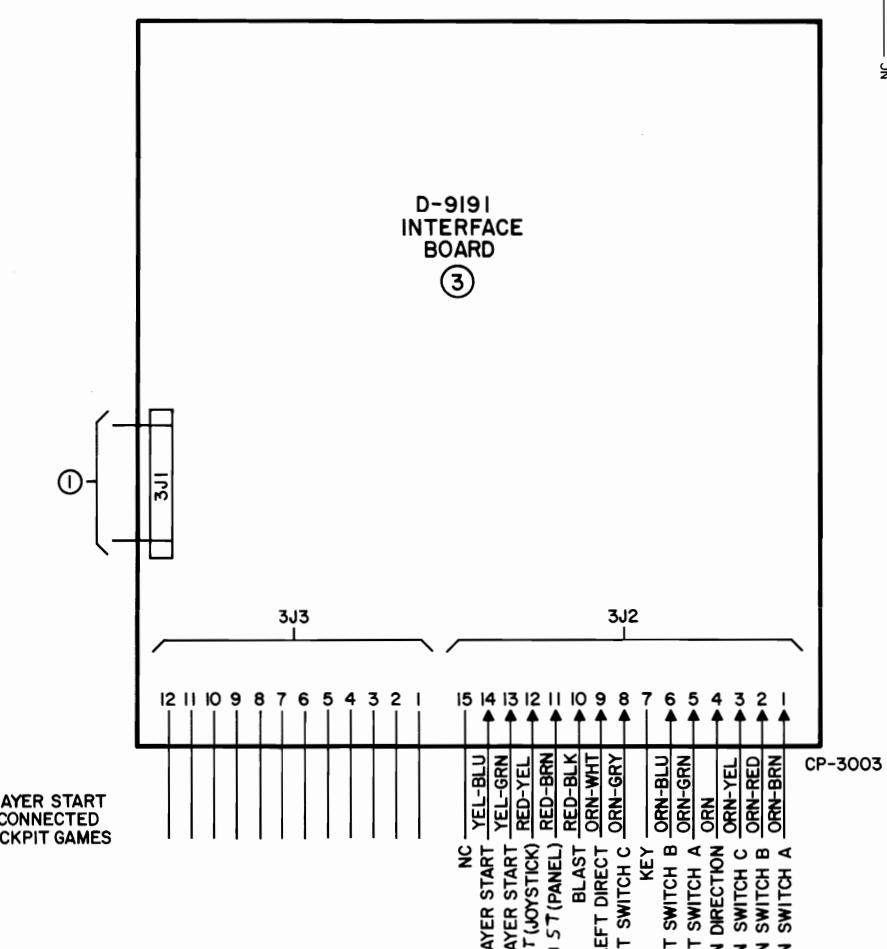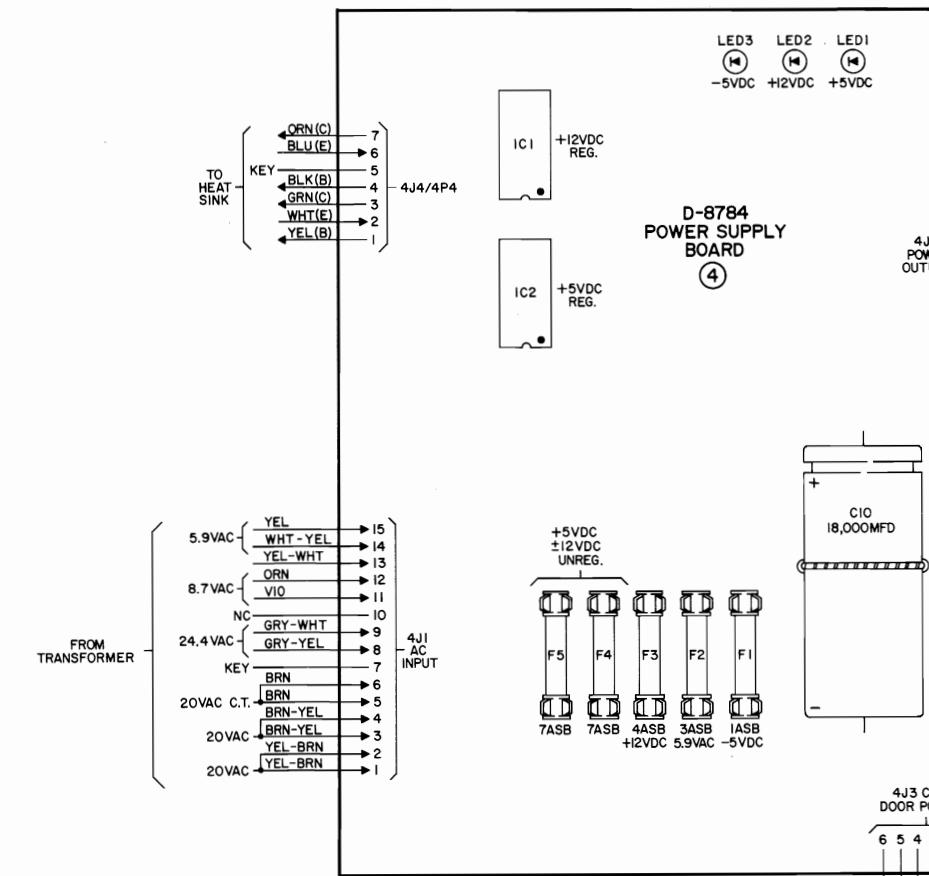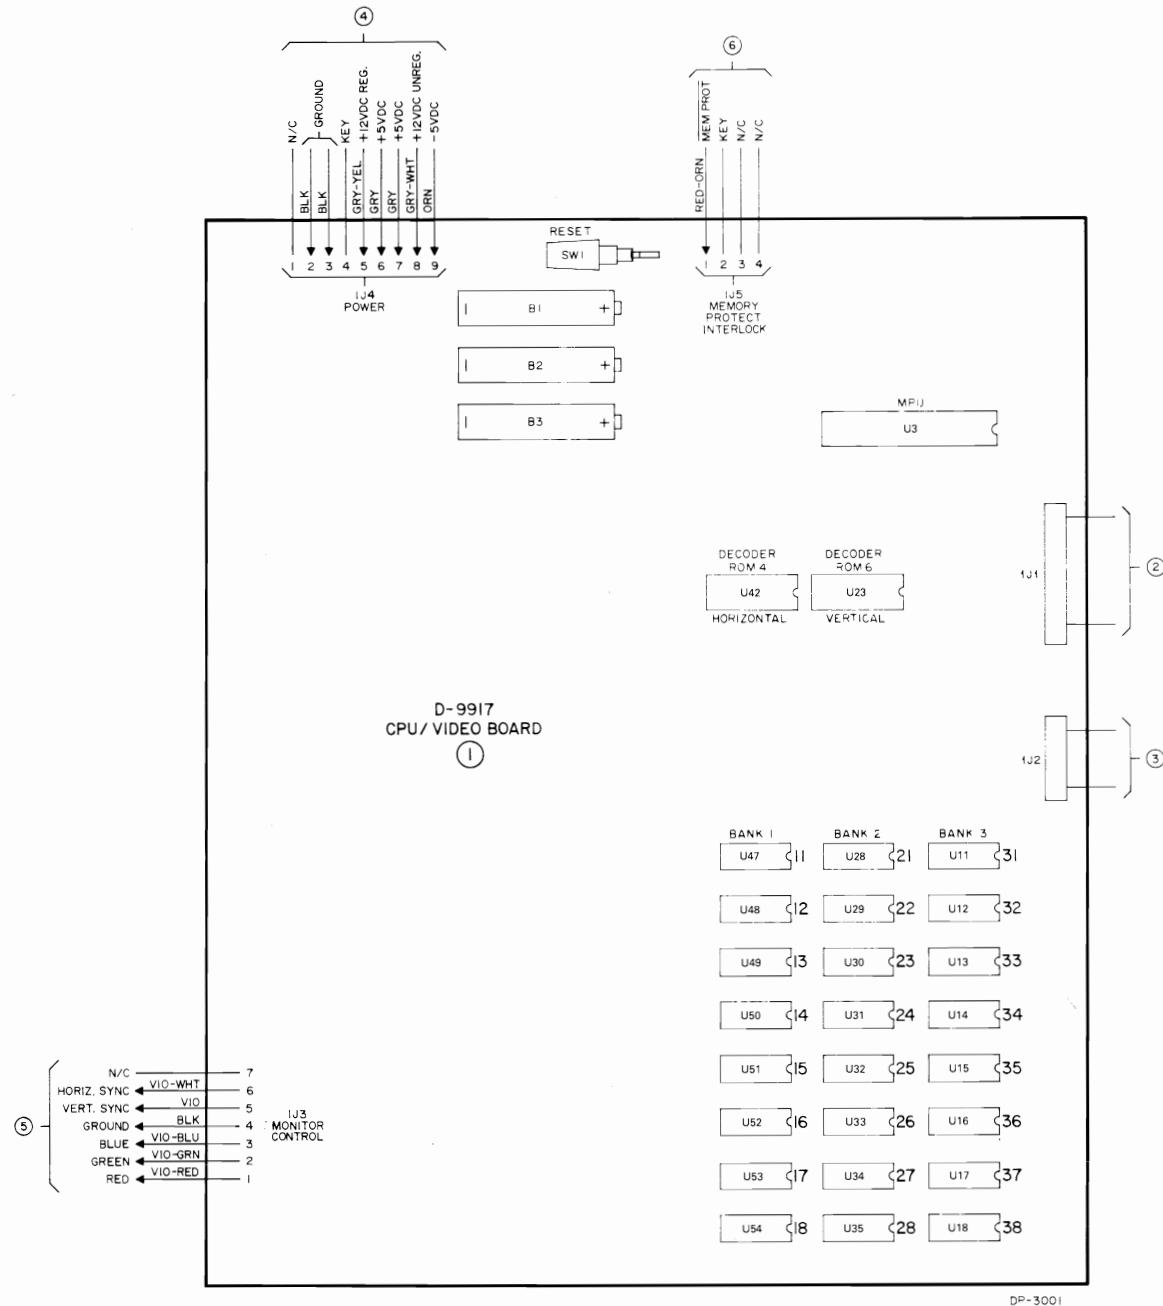


PLAYER PANEL (7)

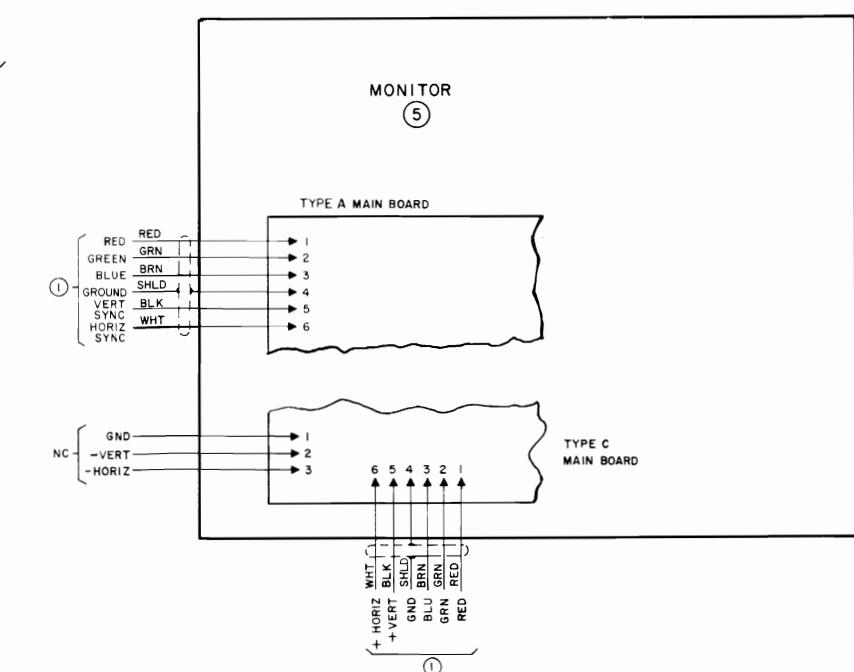

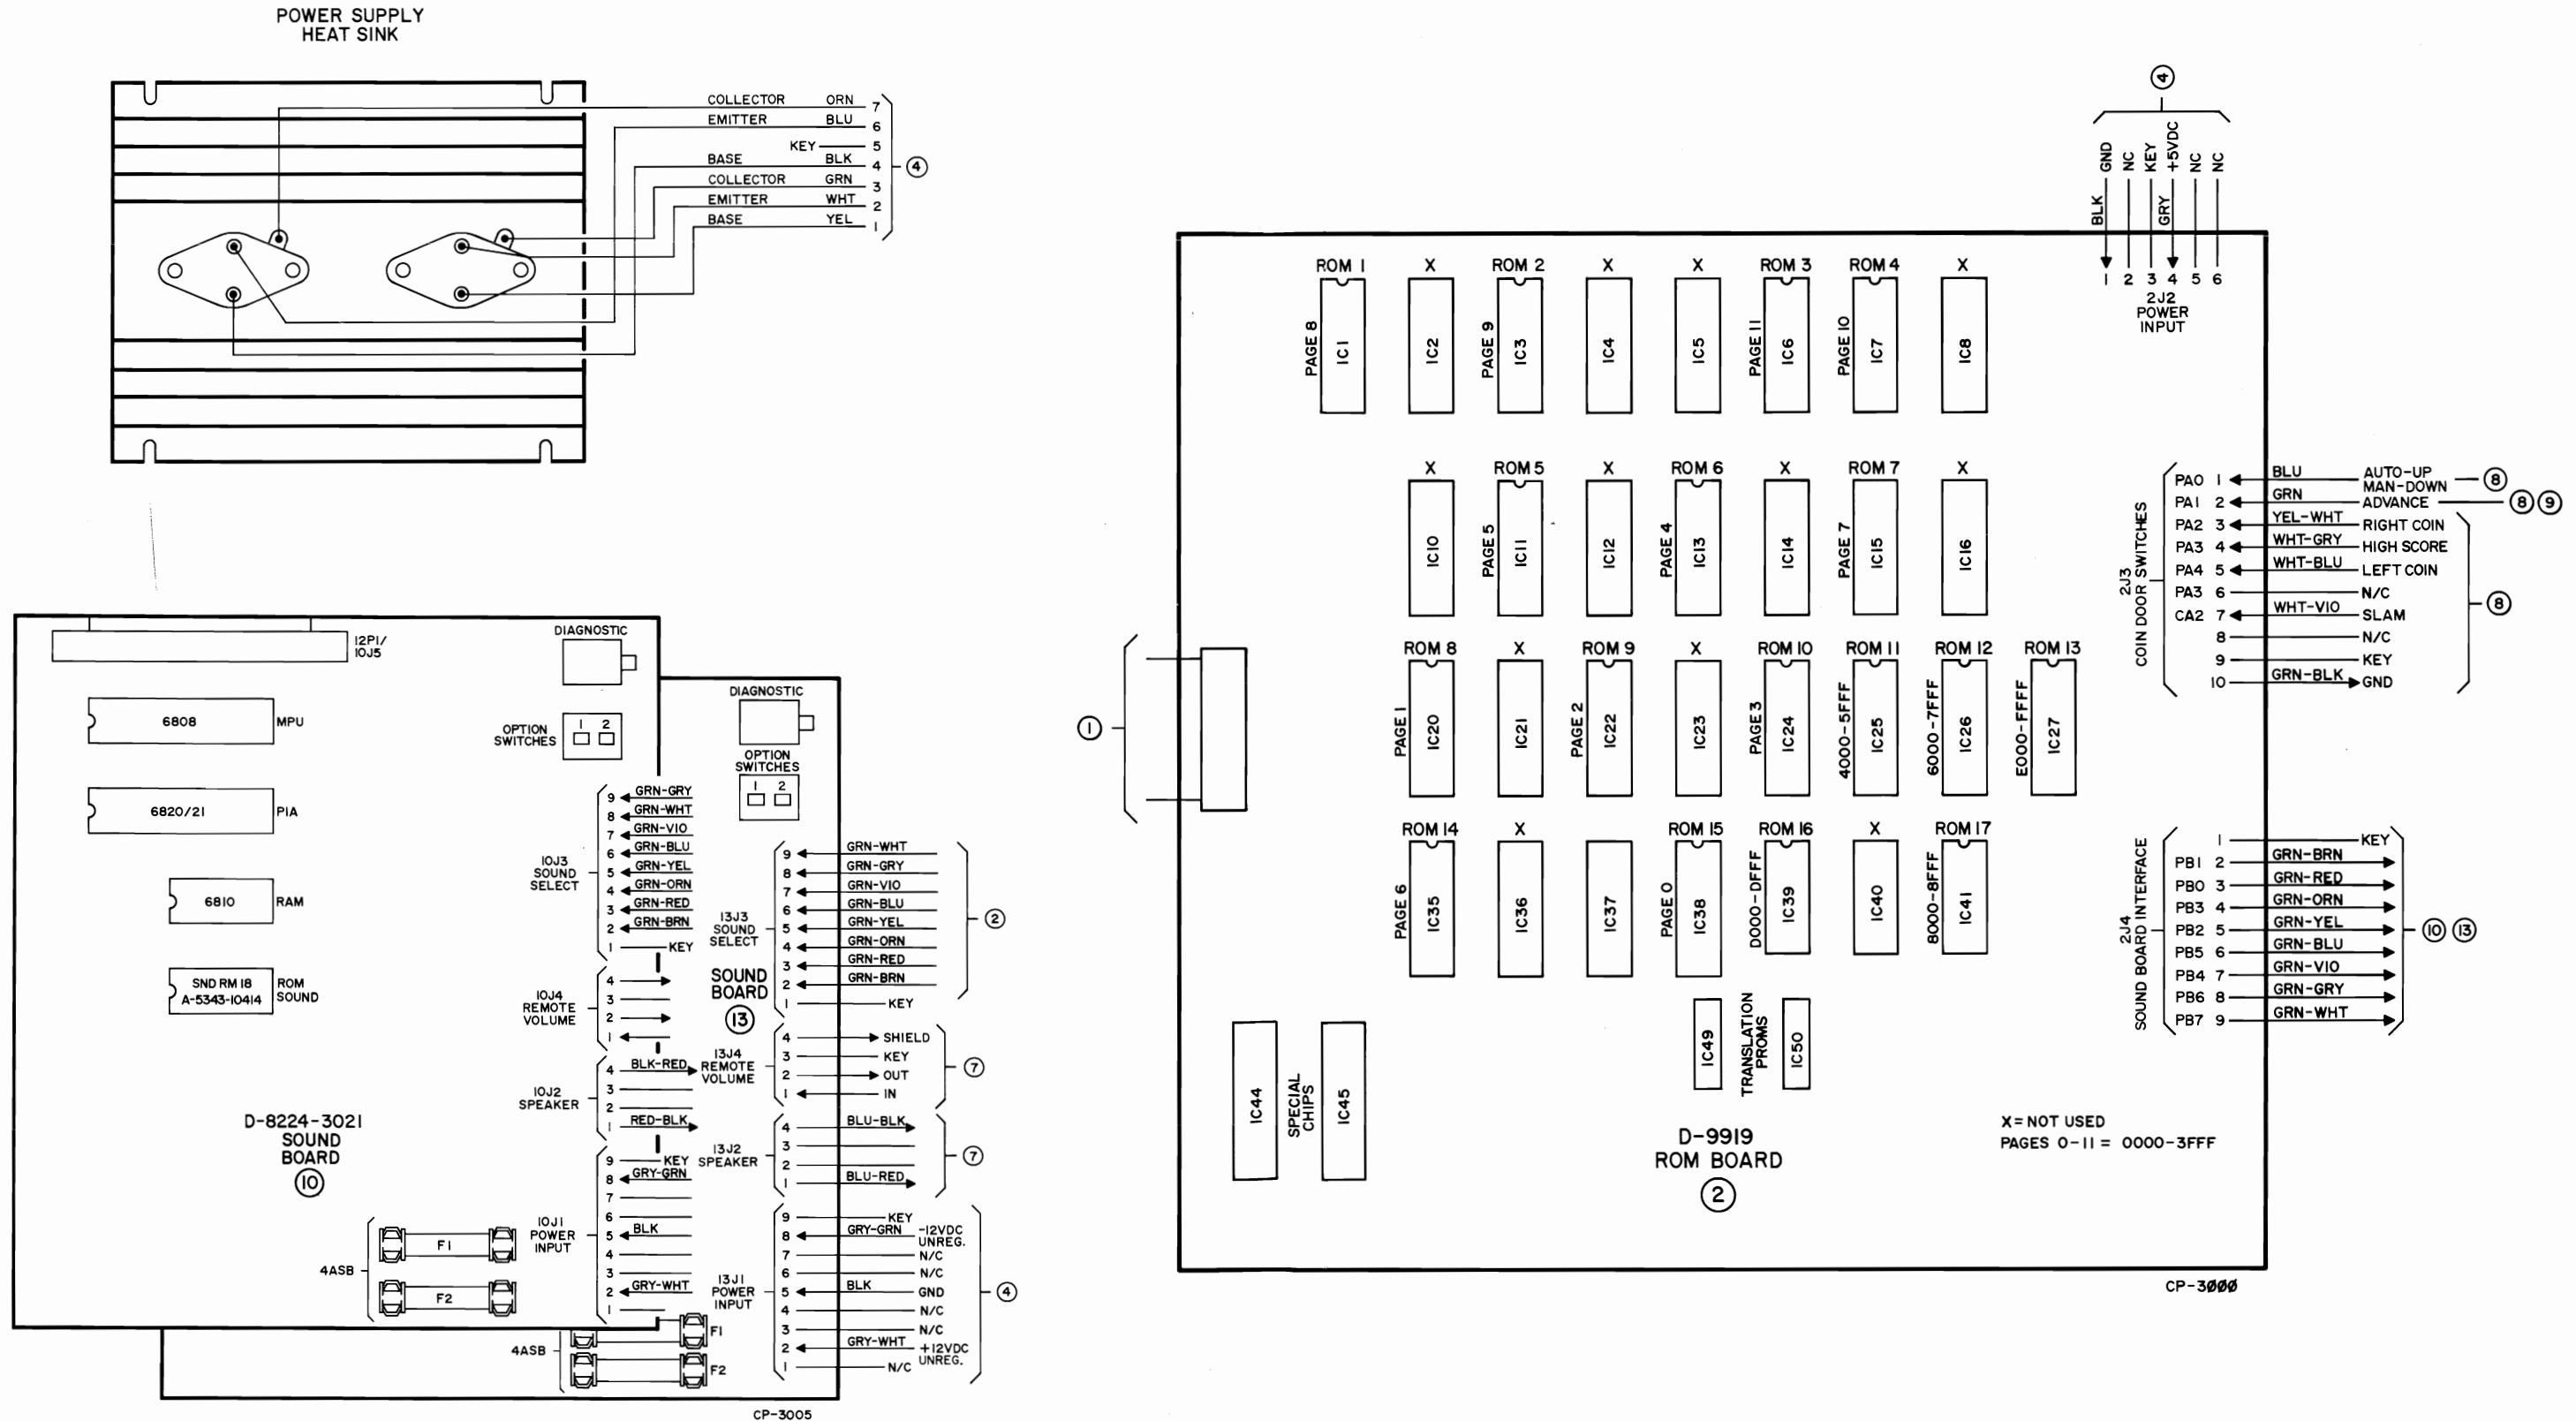

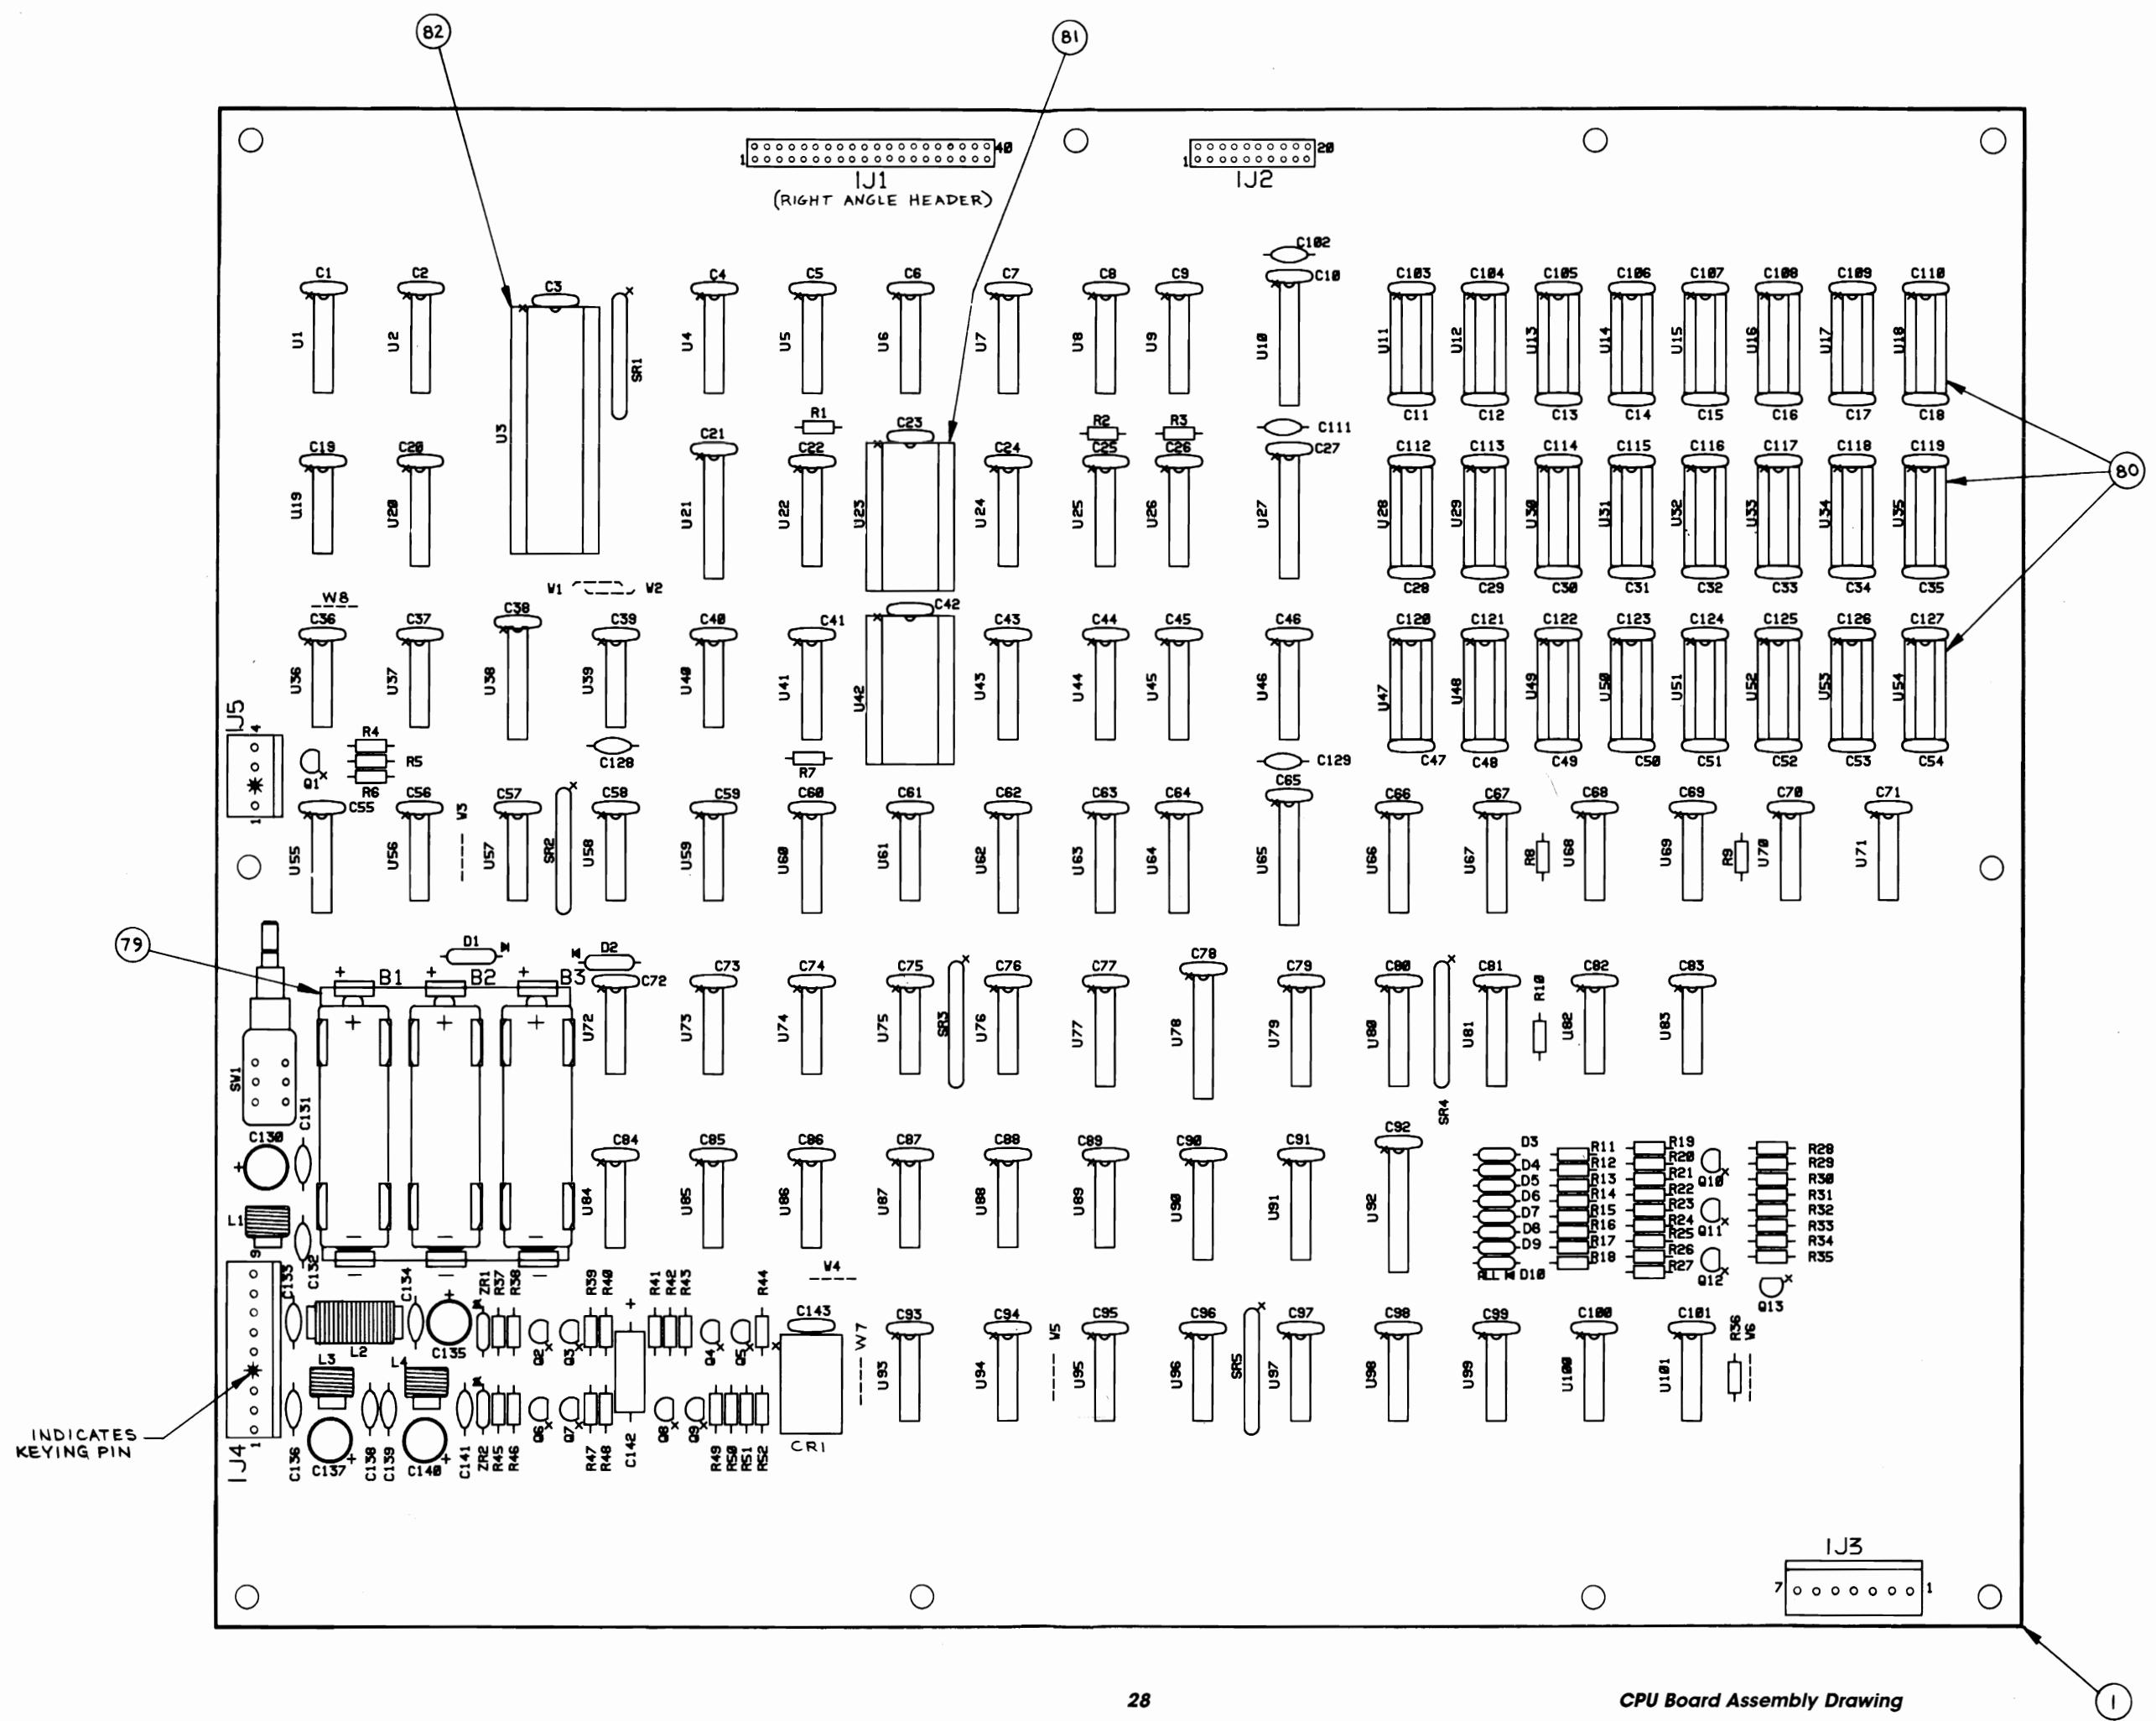

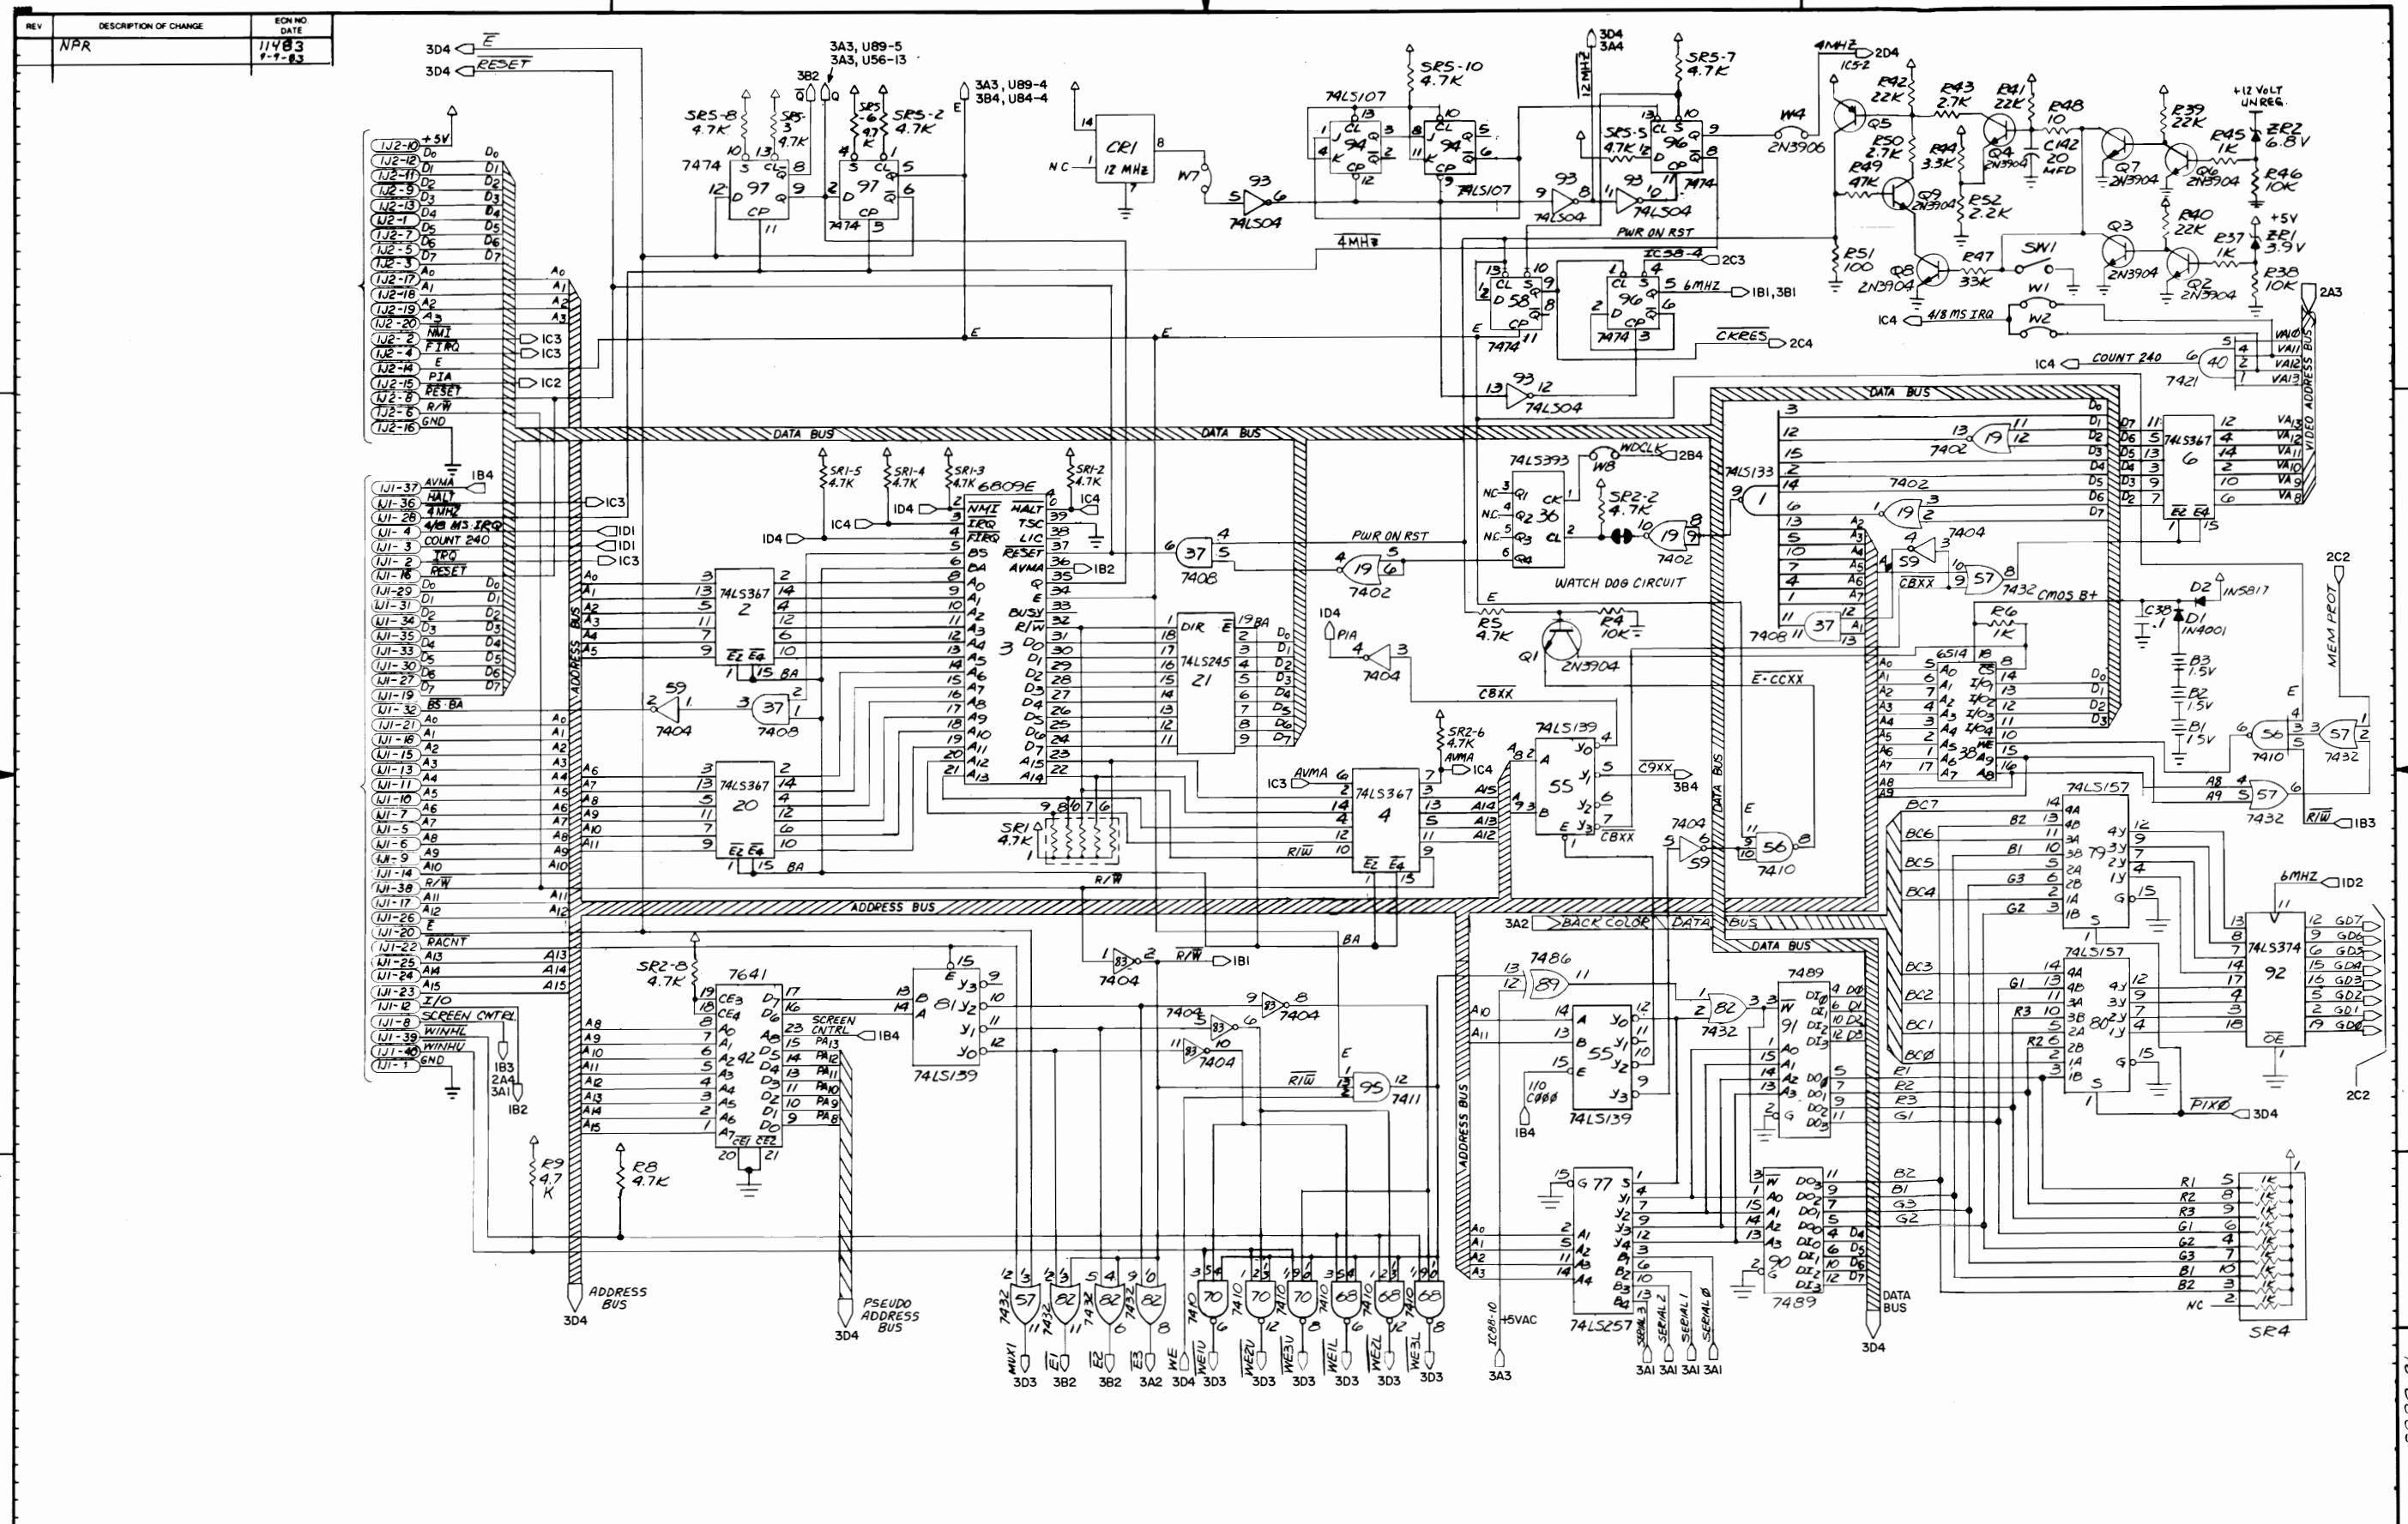


CPU Board Logic Diagram
(Sheet 1 of 3)


4

3


2

1

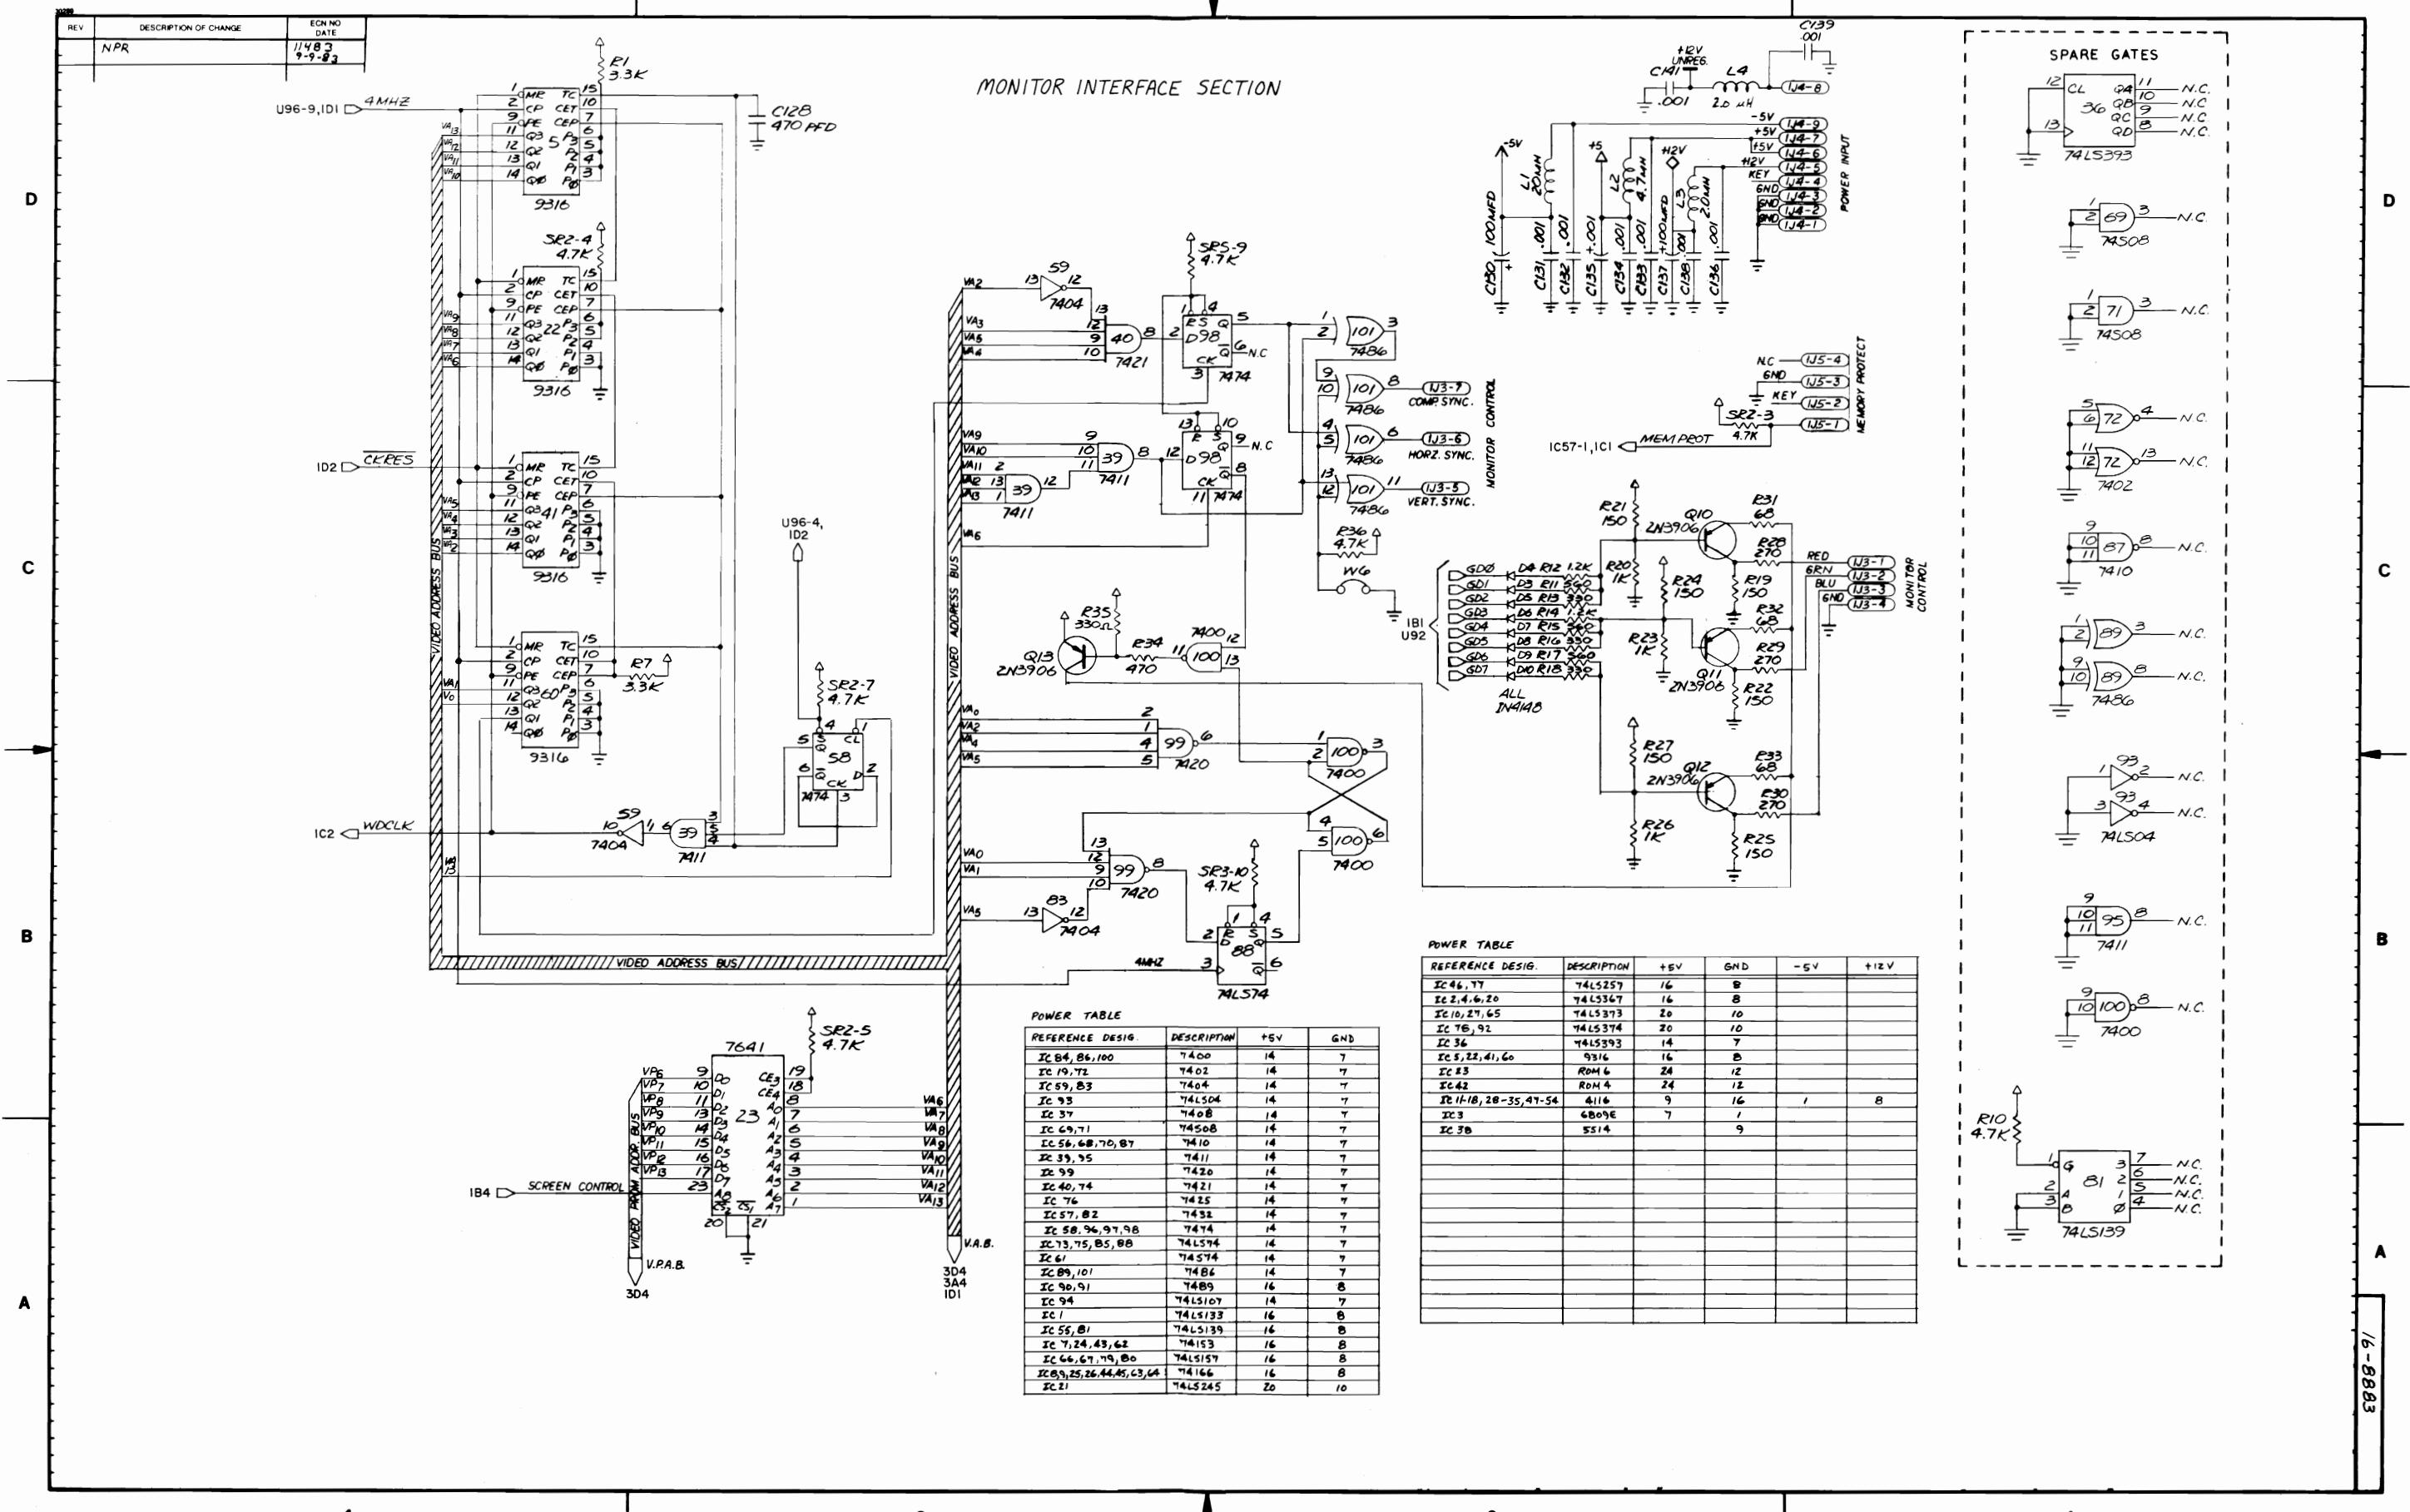

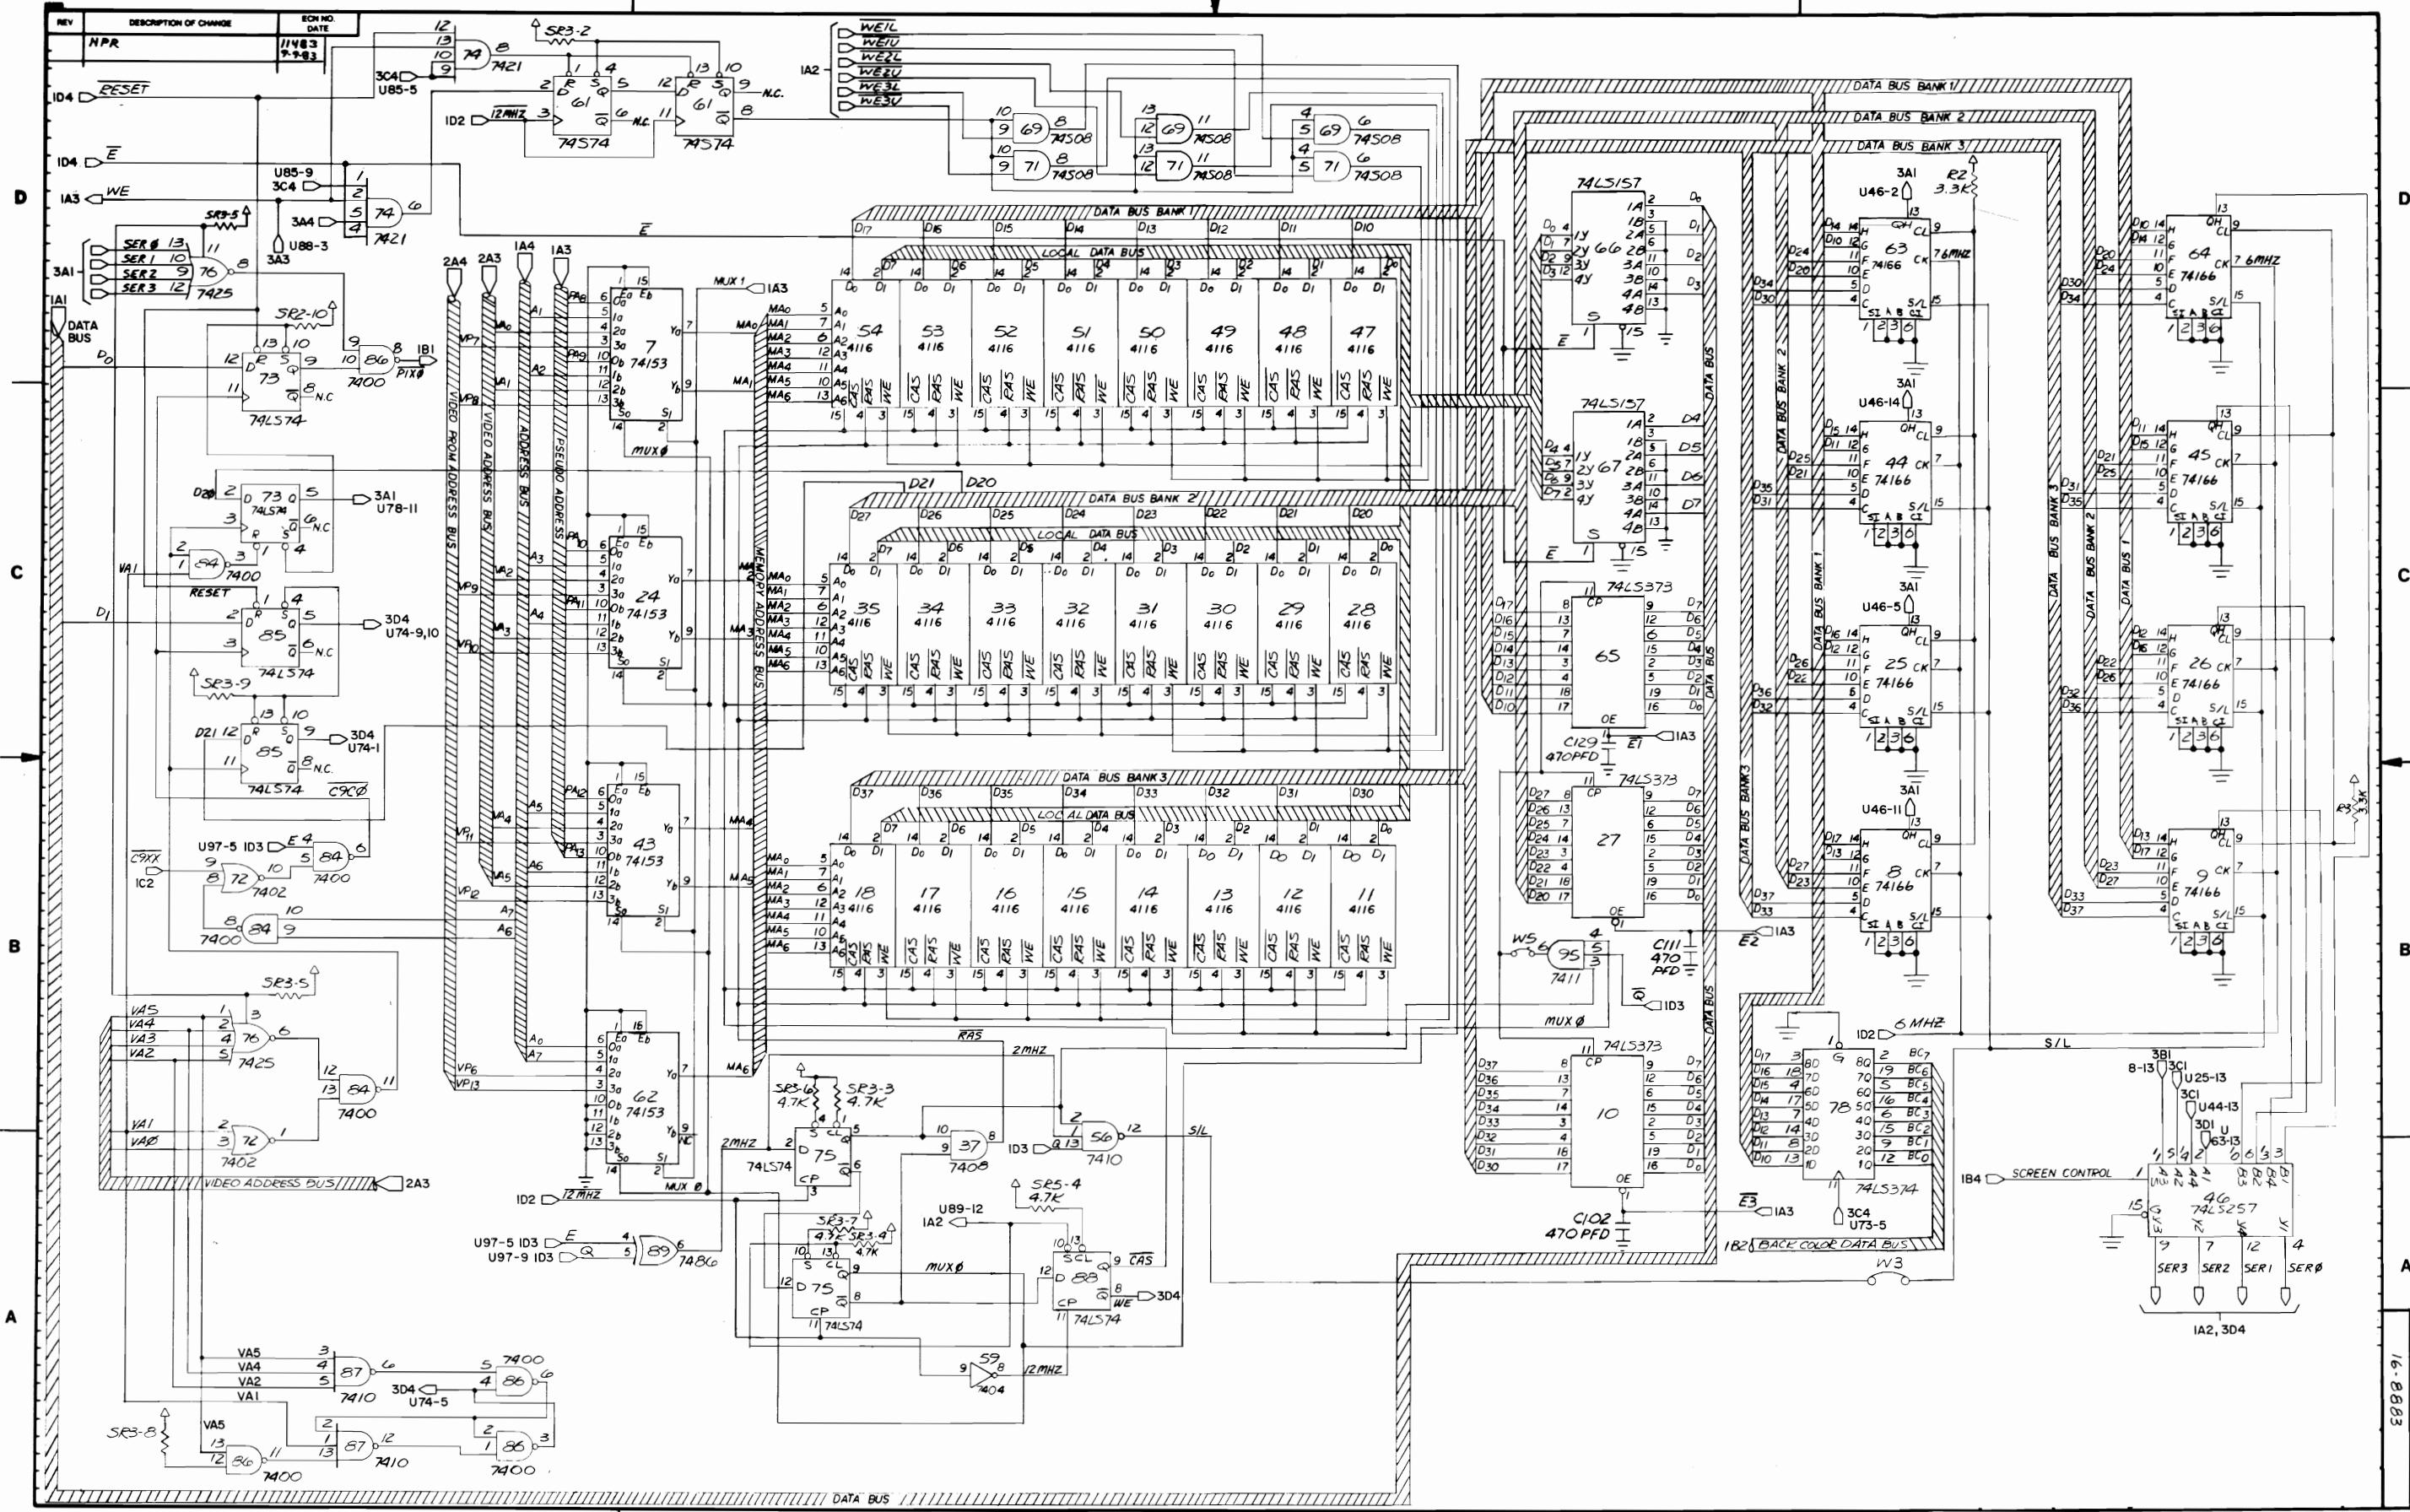


CPU Board Logic Diagram
(Sheet 3 of 3)

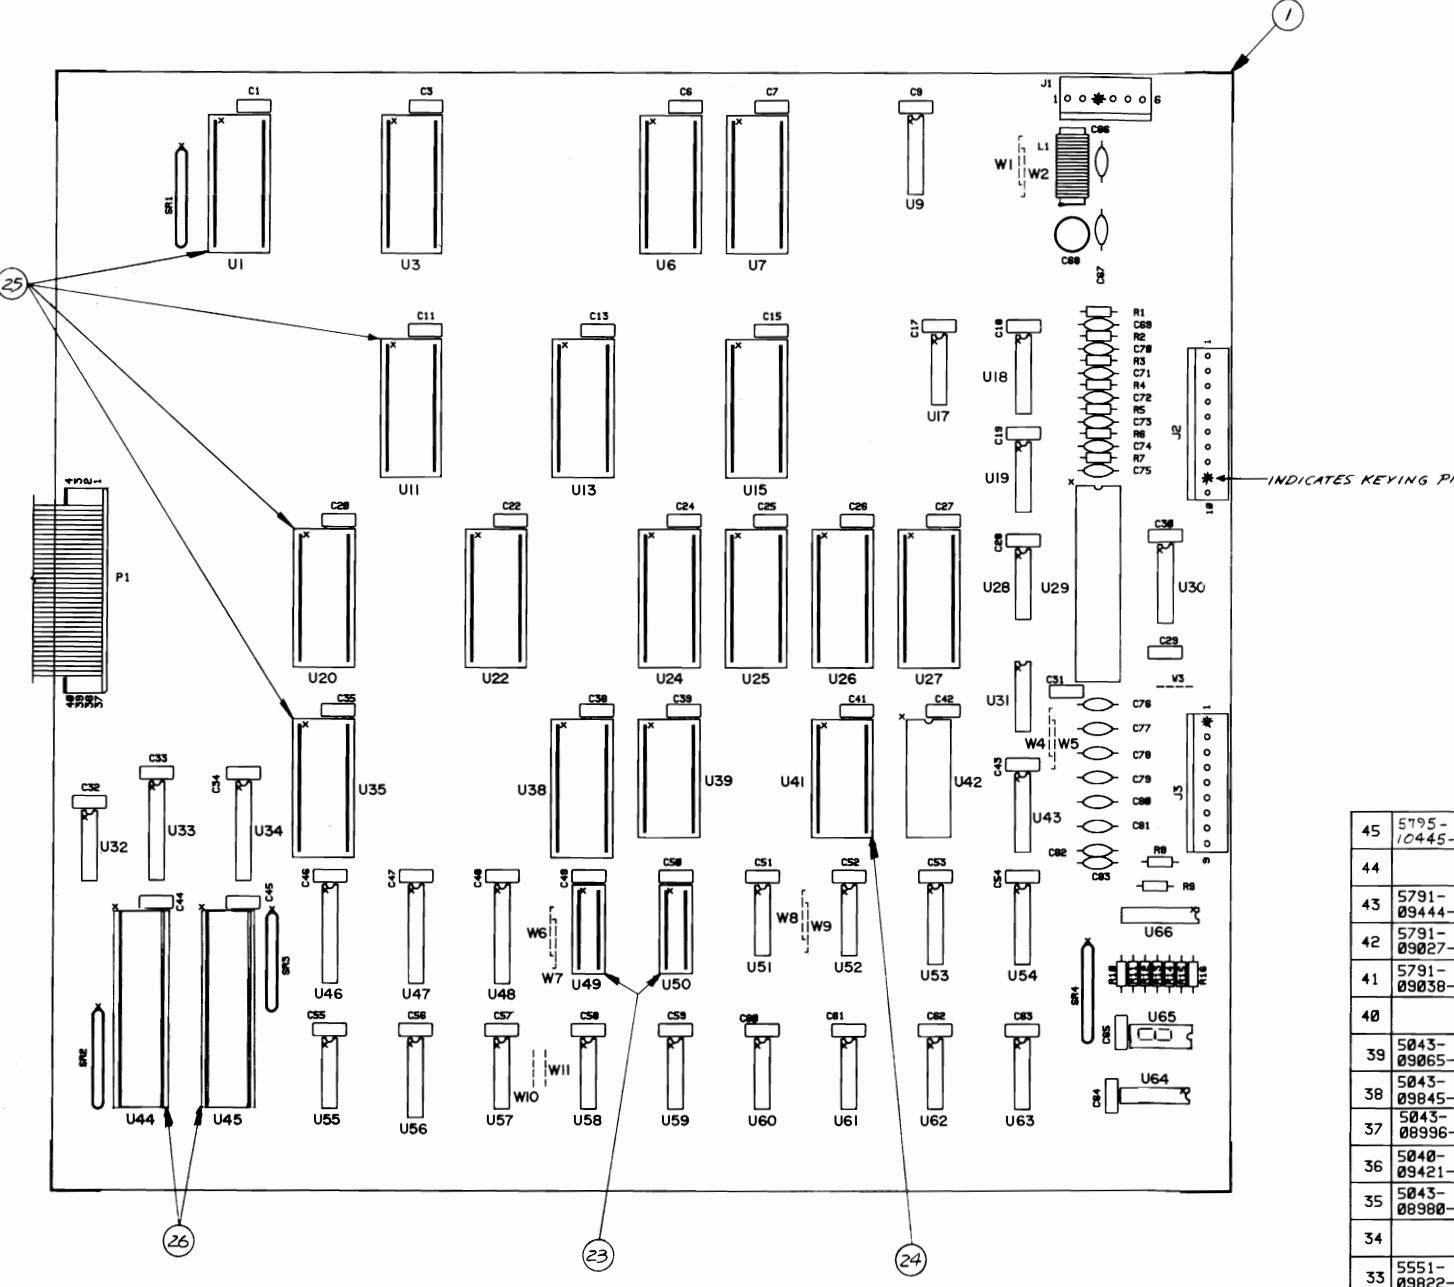


GAME NAME	BLASTER			
ASSY. NO.	D-9919			
U1	A-5343-10397			
U2	NOT USED			
U3	A-5343-10398			
U4	NOT USED			
U5	NOT USED			
U6	A-5343-10399			
U7	A-5343-10400			
U8	NOT USED			
U10	NOT USED			
U11	A-5343-10401			
U12	NOT USED			
U13	A-5343-10402			
U14	NOT USED			
U15	A-5343-10403			
U16	NOT USED			
U20	A-5343-10404			
U21	NOT USED			
U22	A-5343-10405			
U23	NOT USED			
U24	A-5343-10406			
U25	A-5343-10407			
U26	A-5343-10408			
U27	A-5343-10409			
U35	A-5343-10410			
U36	NOT USED			
U37	NOT USED			
U38	A-5343-10411			
U39	A-5343-10412			
U40	NOT USED			
U41	A-5343-10413			
U49	A-5282-10426			
U50	A-5282-10426			
30	5010-09534-00	W3	RESISTOR, C.F., 0 OHM 1/4 WATT	1
29	5010-08991-00	R8, R9	RESISTOR, C.F., 4.7K OHM 5x 1/4 WATT	2
28	5010-09187-00	R10 THRU R16	RESISTOR, C.F., 150 OHM 5x 1/4 WATT	7
27	5010-09358-00	R1 THRU R7	RESISTOR, C.F., 1K OHM 5x 1/4 WATT	7
26	5700-08985-00		SOCKET, 40 PIN	2
25	5700-10176-00		SOCKET, 28 PIN	15
24	5700-09004-00		SOCKET, 24 PIN	2
23	5700-10389-00		SOCKET, 18 PIN	2
22				
21	5019-09239-00	U30	DIP, 4.7K 15R 16 5x	1
20	5671-09411-00	U65	LED DISPLAY, 7-SEG.	1
19				
18	5430-08972-00	U29	I.C., 6820/6821 PIA	1
17	5310-08975-00	U18	I.C., 4049 HEX INVERTER	1
16	5281-09486-00	U48	I.C., 74LS74, OCTAL D-TYPE FLIP-FLOP	1
	5281-09398-00	U33	I.C., 74LS245 OCTAL BUS TRANSCIVER	1
	5281-09867-00	U34, 46, 47	I.C., 74LS244 OCTAL BUF	3
45	5795-10445-00	P1	RIBBON ASSY., 40P	1
44				
43	5791-09444-00	J2	CONNECTOR, 10P MALE 2391 09-65-1101	1
42	5791-09027-00	J3	CONNECTOR, 9P MALE 2391 09-06-1091	1
41	5791-09038-00	J1	CONNECTOR, 6P MALE 2391 09-65-1061	1
40				
39	5043-09065-00	C29, C30	CAPACITOR, 470PF SOV +/- 20	2
38	5043-09845-00	C66, C69-C83	CAPACITOR, 1000PF SOV +/- 20	16
37	5043-08996-00	C67	CAPACITOR, .1MF SOV +/- 20	1
36	5040-09421-00	C68	CAPACITOR, 100MFD 25V +50 -10	1
35	5043-08980-00	C1-C2B, SEE C31-C46 NOTE 2	CAPACITOR, .01MFD SOV +80 -20	50
34				
33	5551-09822-00	L1	INDUCTOR, 4.7UH, 3A	1
32				
31	5019-09362-00	SR1 THRU SR4	S.T.P. 4.7K 9R 10P 5%	4

ITEM	PART NUMBER	PART DESIGNATION	DESCRIPTION	QTY.	ITEM	PART NUMBER	PART DESIGNATION	DESCRIPTION	QTY.
BILL OF MATERIALS									

ITEM

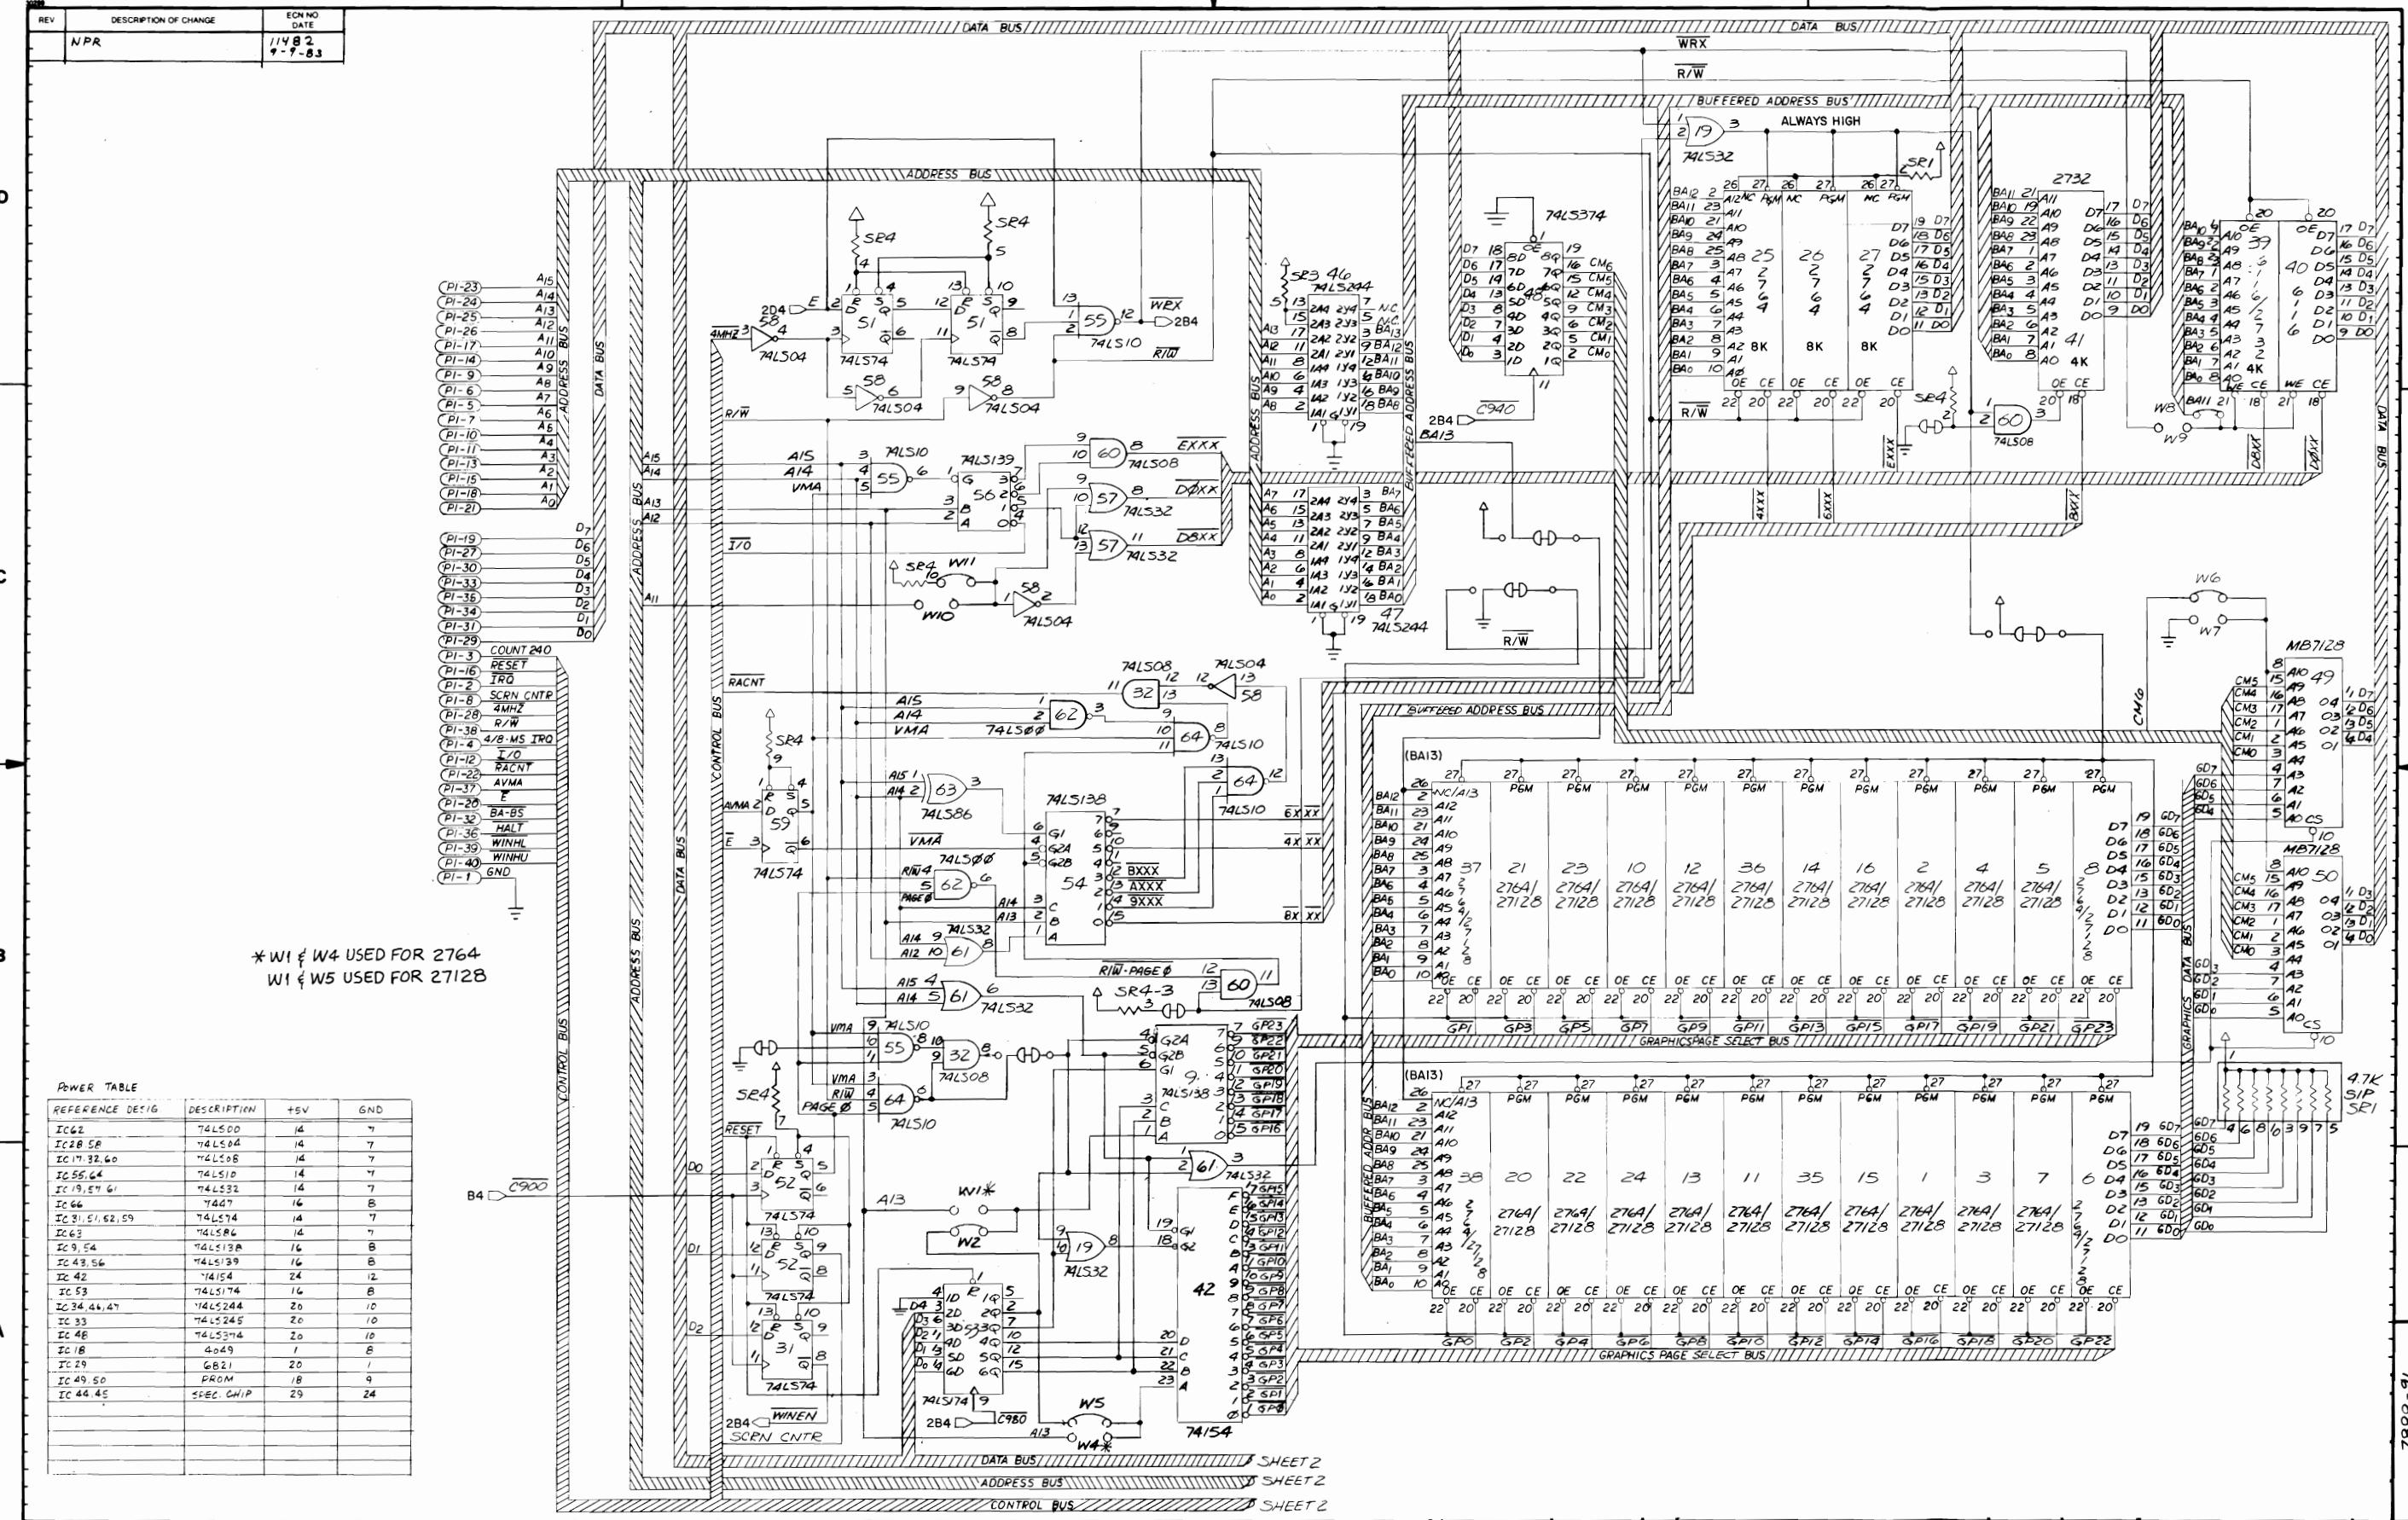

ROM Board Logic Diagram
(Sheet 1 of 2)

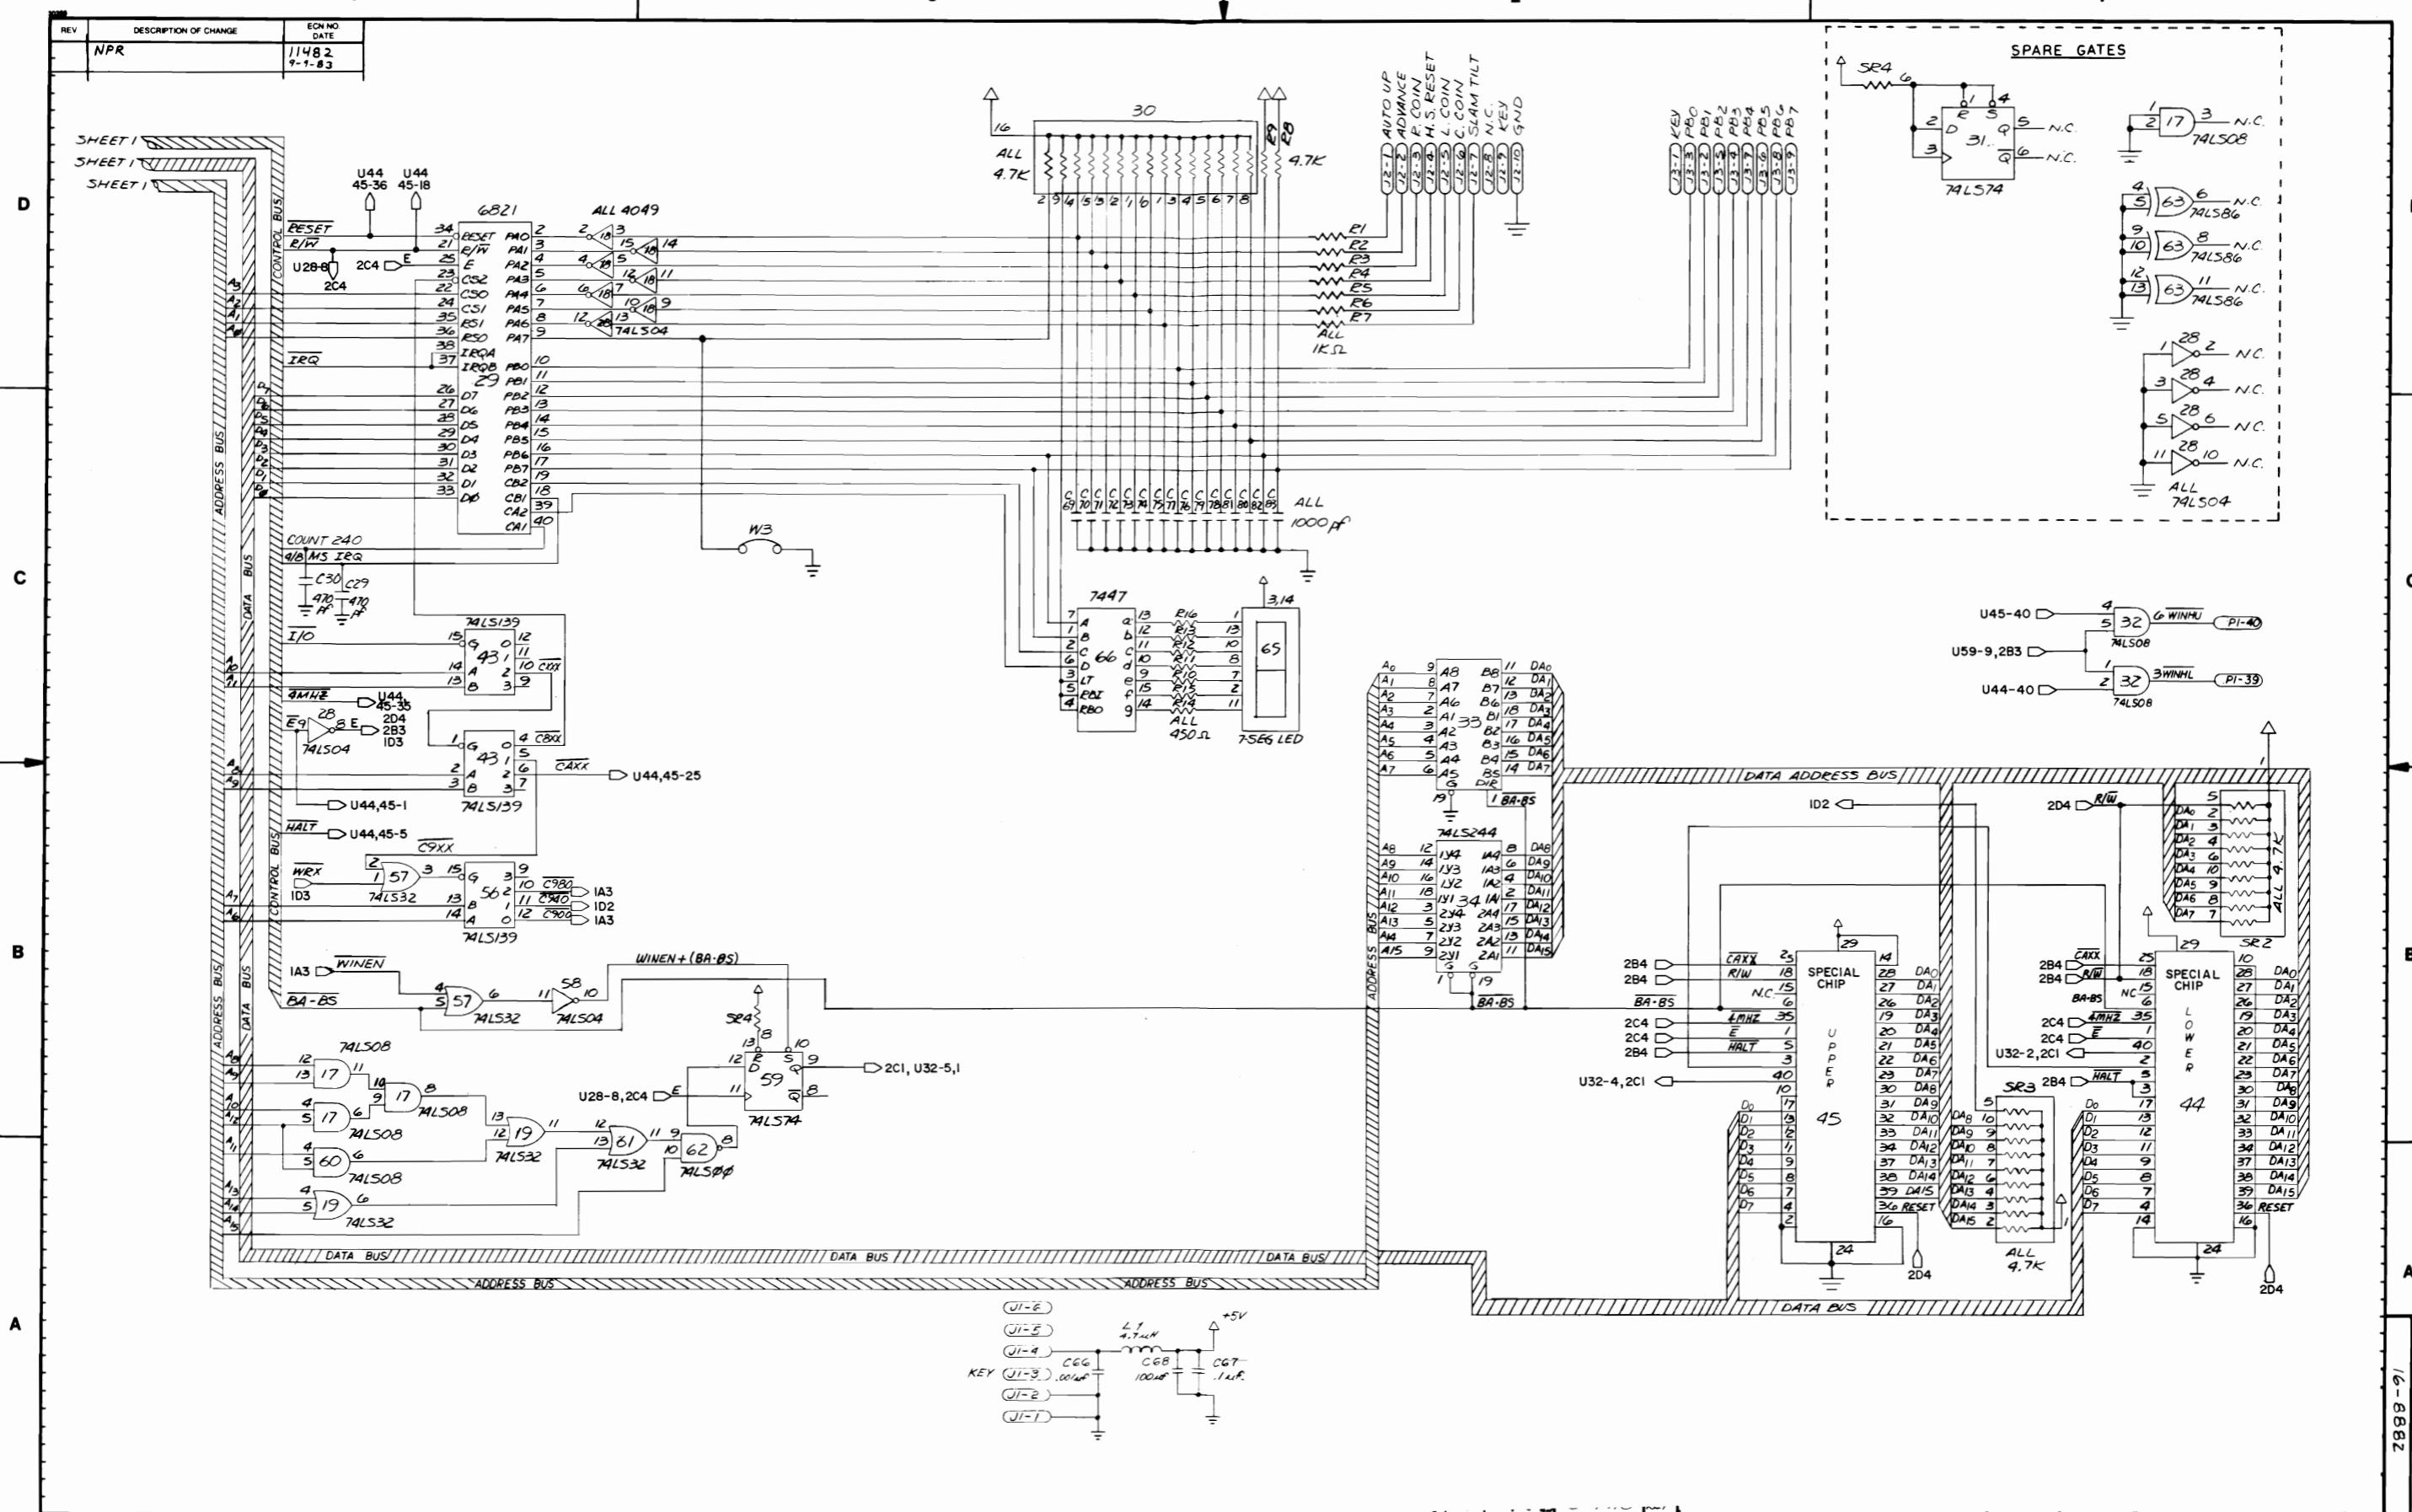

1 ALL RESISTORS ARE 1/4 WATT
UNLESS NOTED OTHERWISE
2 ALL CAPACITORS ARE MFD

* 2-PLAYER START NOT CONNECTED IN SIT DOWN GAMES.

NOTES:



1 ALL RESISTORS ARE 1/4 WATT

UNLESS NOTED OTHERWISE


2 ALL CAPACITORS ARE MFD


* 2-PLAYER START NOT CONNECTED IN SIT DOWN GAMES.


BILL OF MATERIAL			
ITEM NO.	PART NO.	PART DESIGNATION	RECD
1	5772-62-00	BARE P.C. BOARD	1
2	52580-00	I.C. 7404 HEX INVERTER	1
3	5430-12-00	I.C. MC6821 P.A.	1
4	52545-00	I.C. 74LS257	3
5	53010-1000-50V	IC, 4049 INV. H.E. BUFFER	4
6	50895-00	RESISTOR, 4.7KΩ 1/W 5%	3
7	50919-00	SRI	1
8	50919-00	SR2, SR3	2
9	50946-00	C10, C13	49
10	50946-00	THRU C60	1
11	50946-00	C11	1
12	50946-00	C12	1
13	50946-00	C13	1
14	51919-00	HEADER, 12-PIN	1
15	51919-00	HEADER, 15-PIN	1
16	51951-00	3PI	1
17	05980-00	C1 THRU C9	9
18	05980-00	W1	0

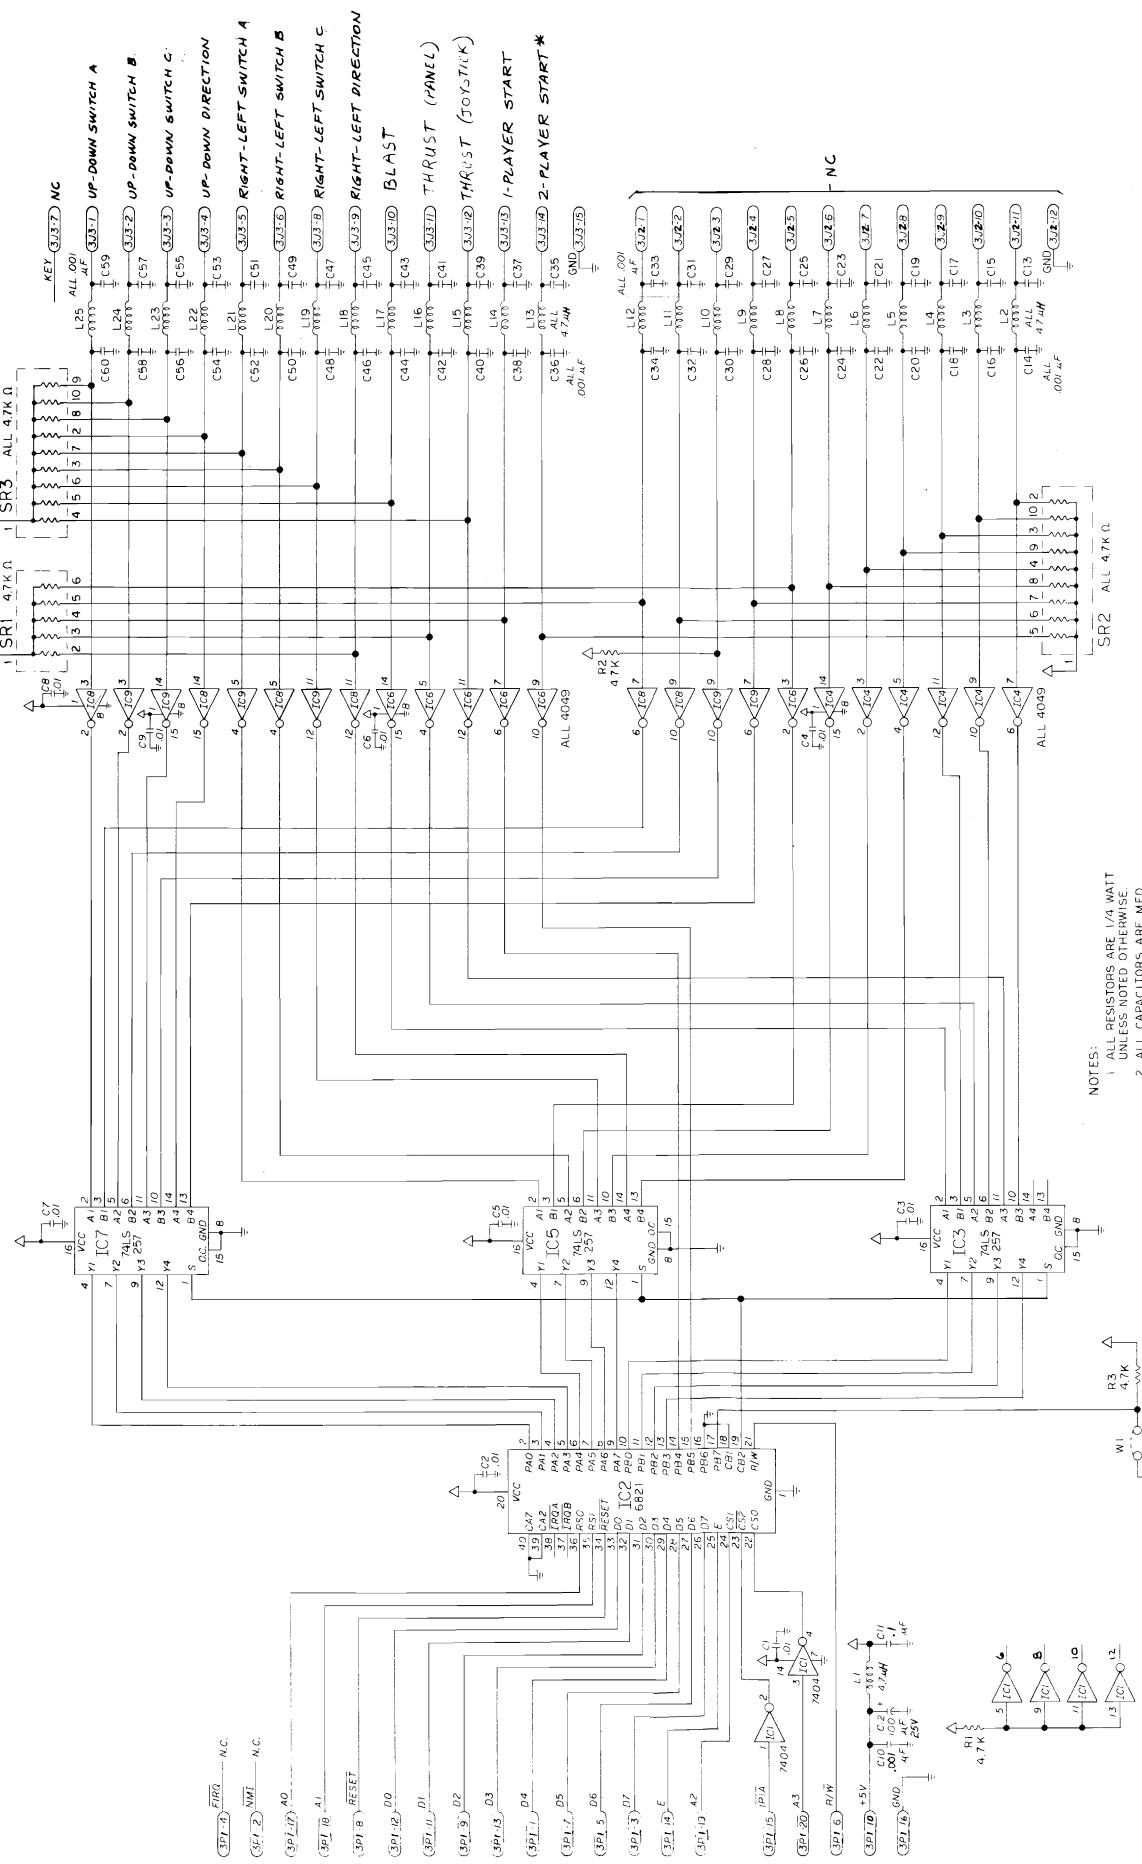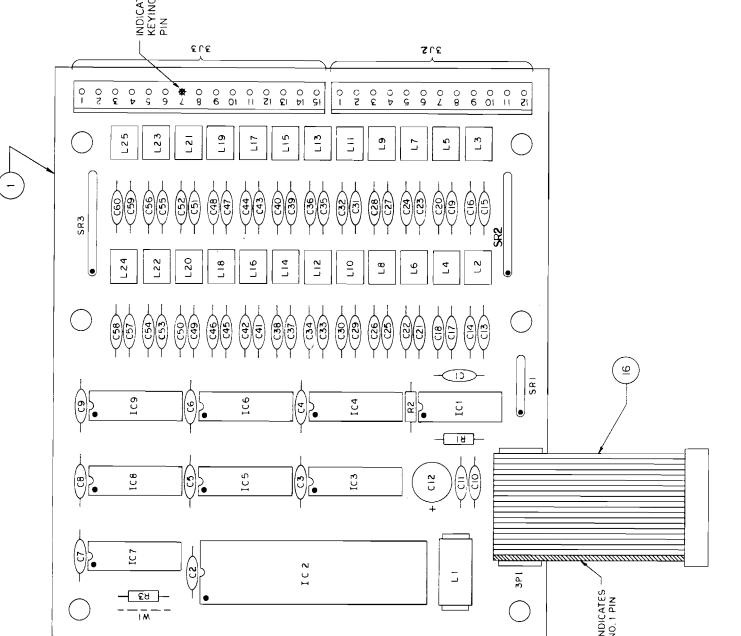


Interface Board Assembly
and Logic Diagrams


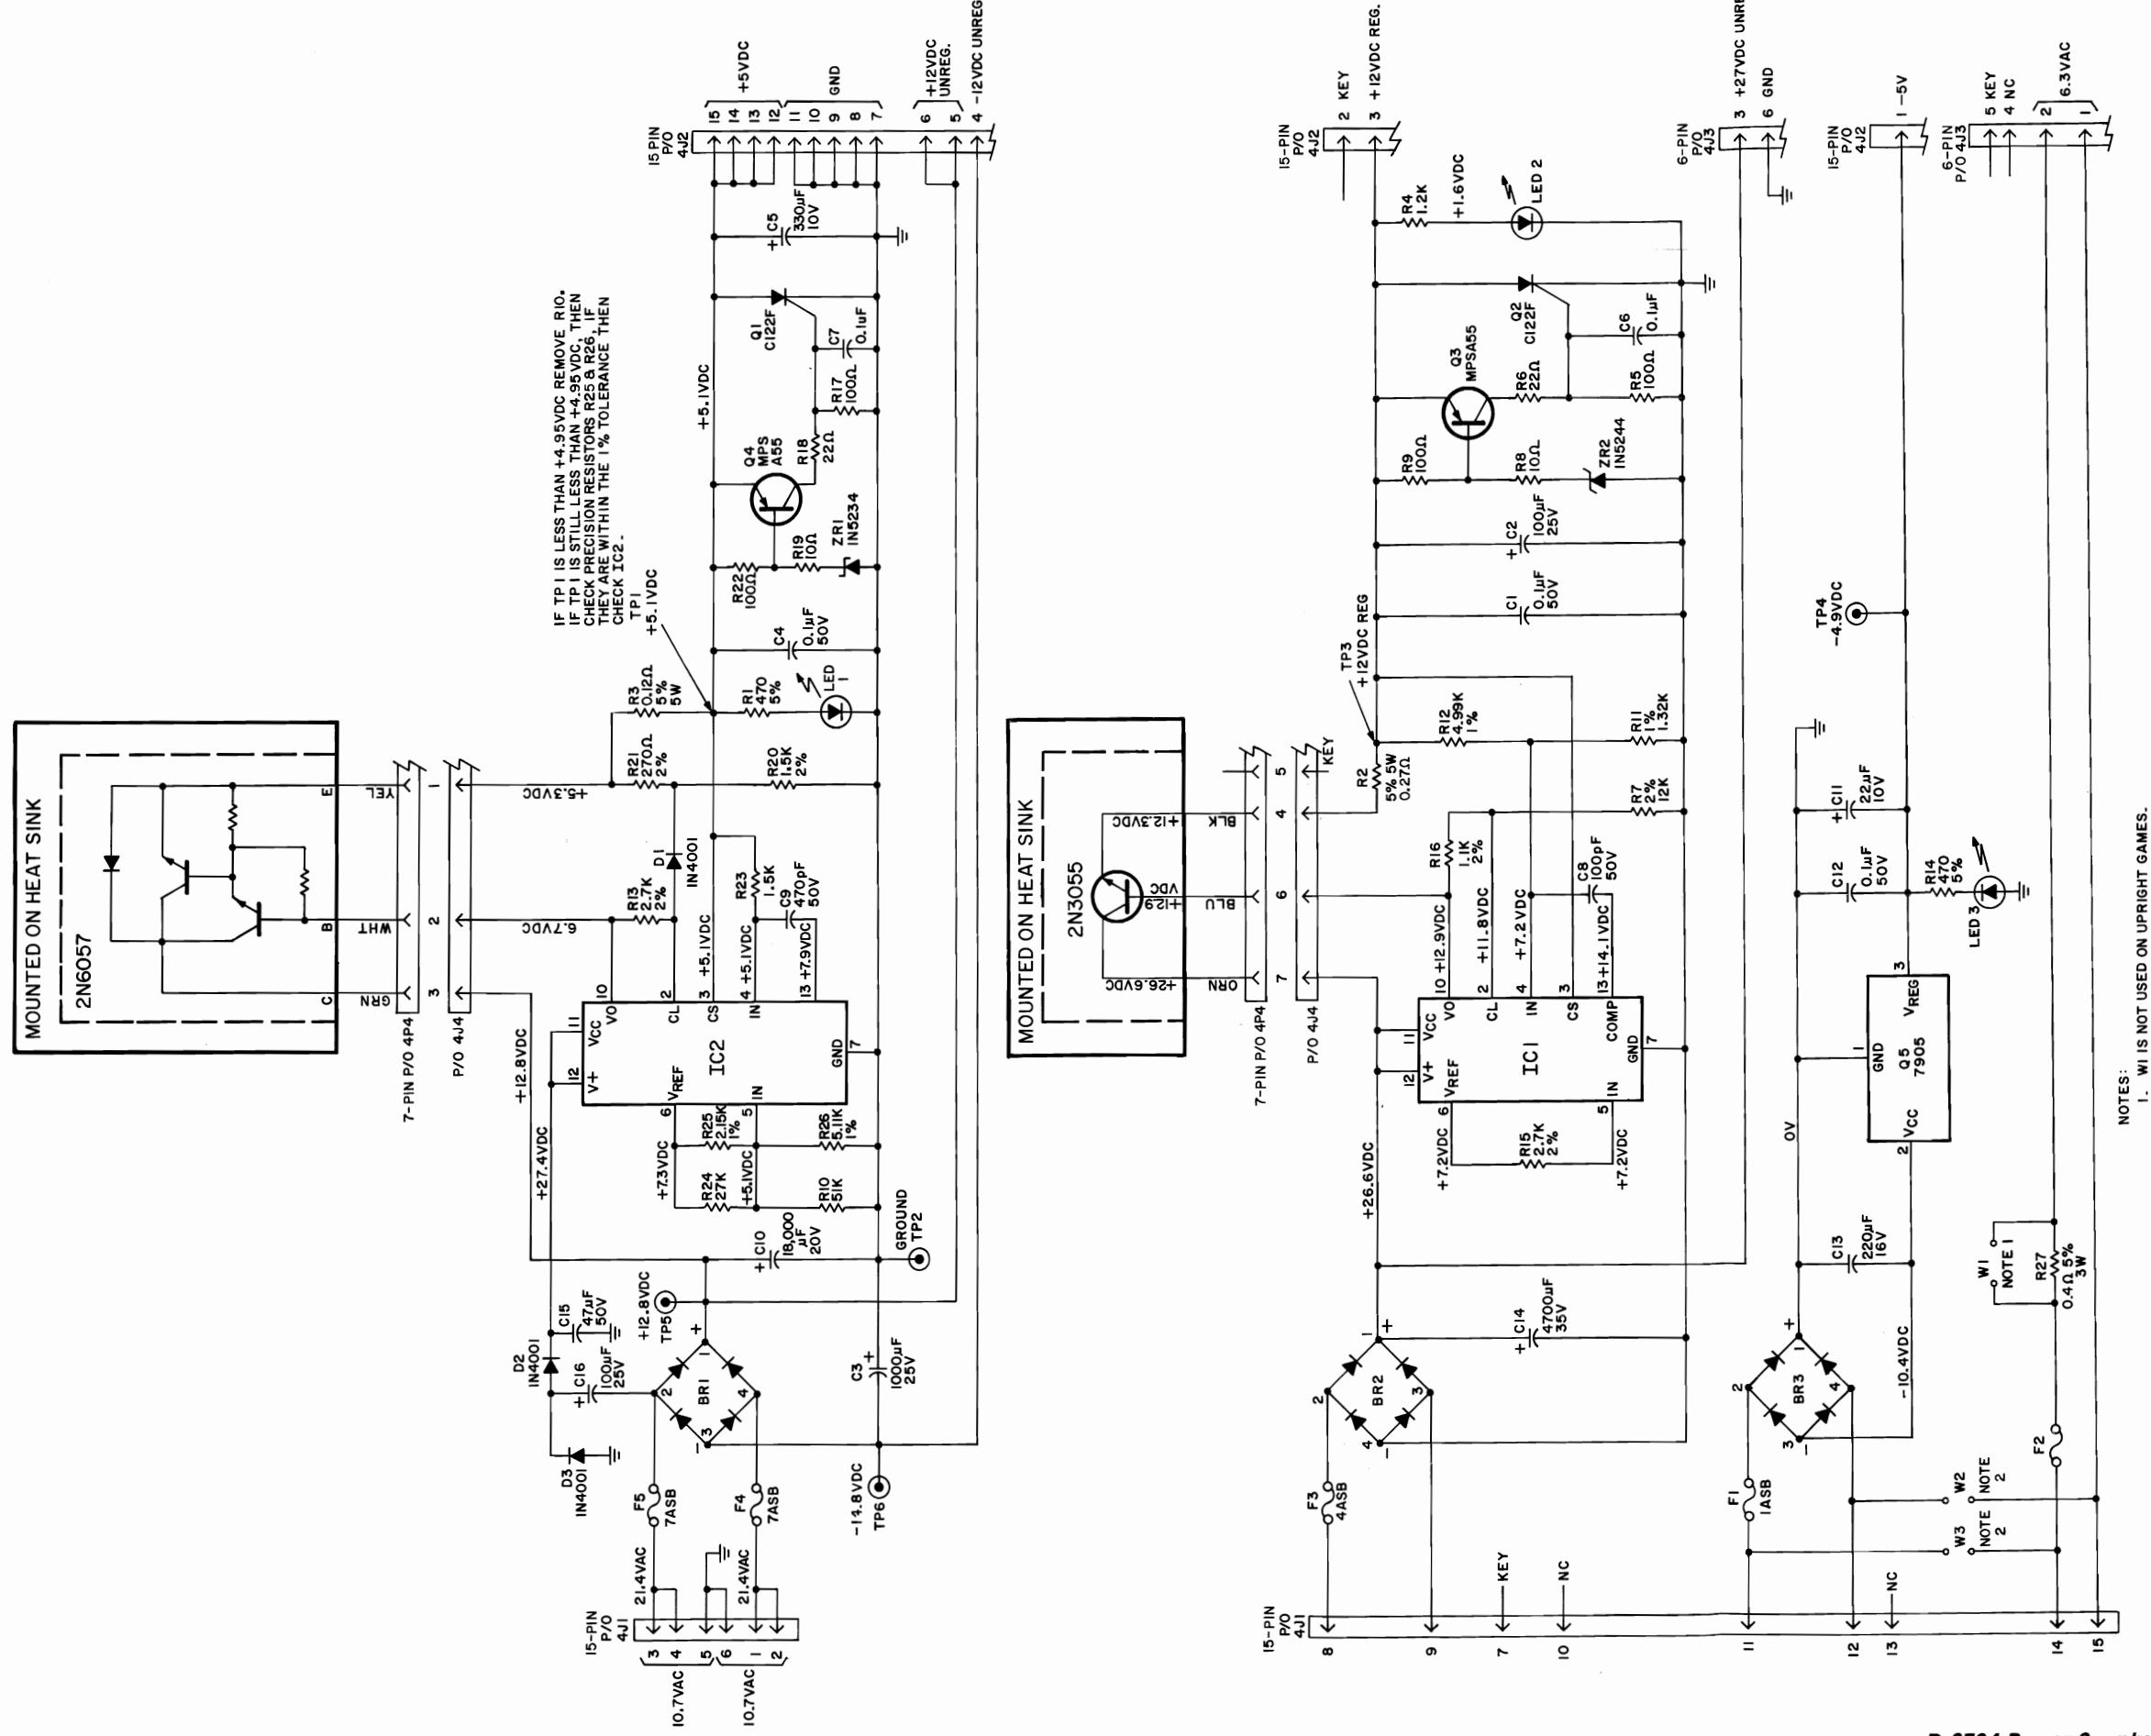


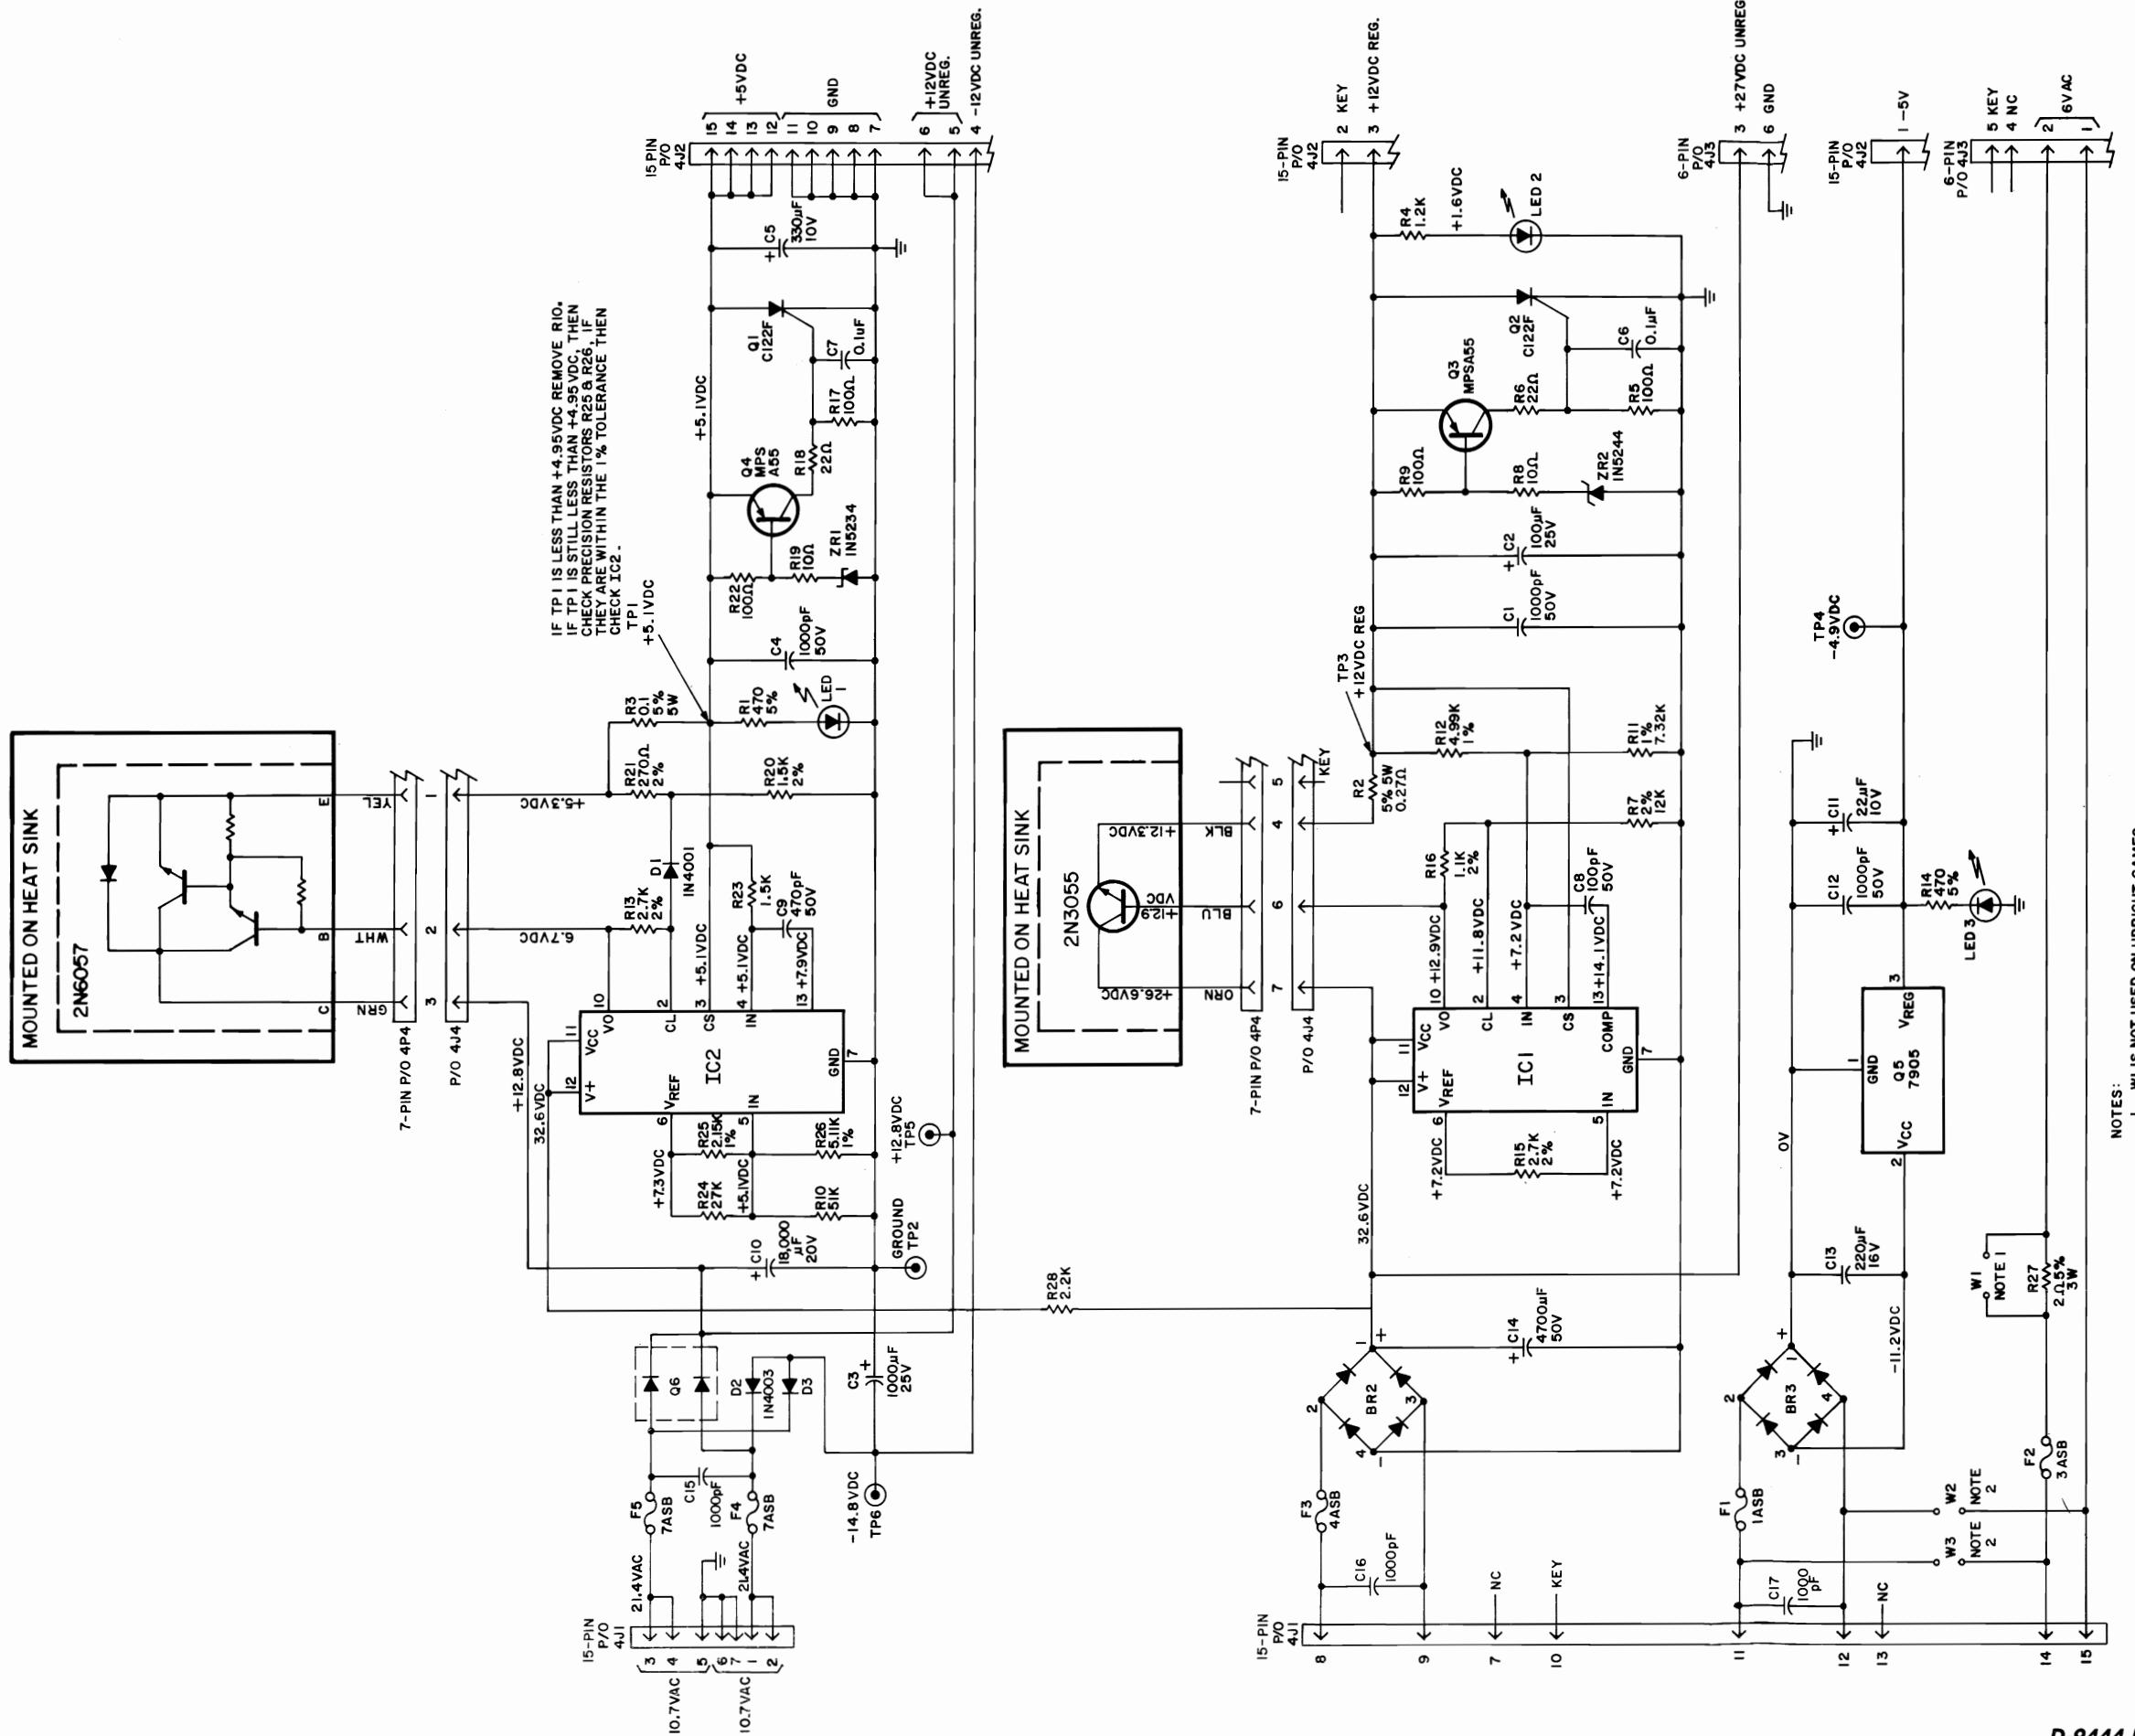

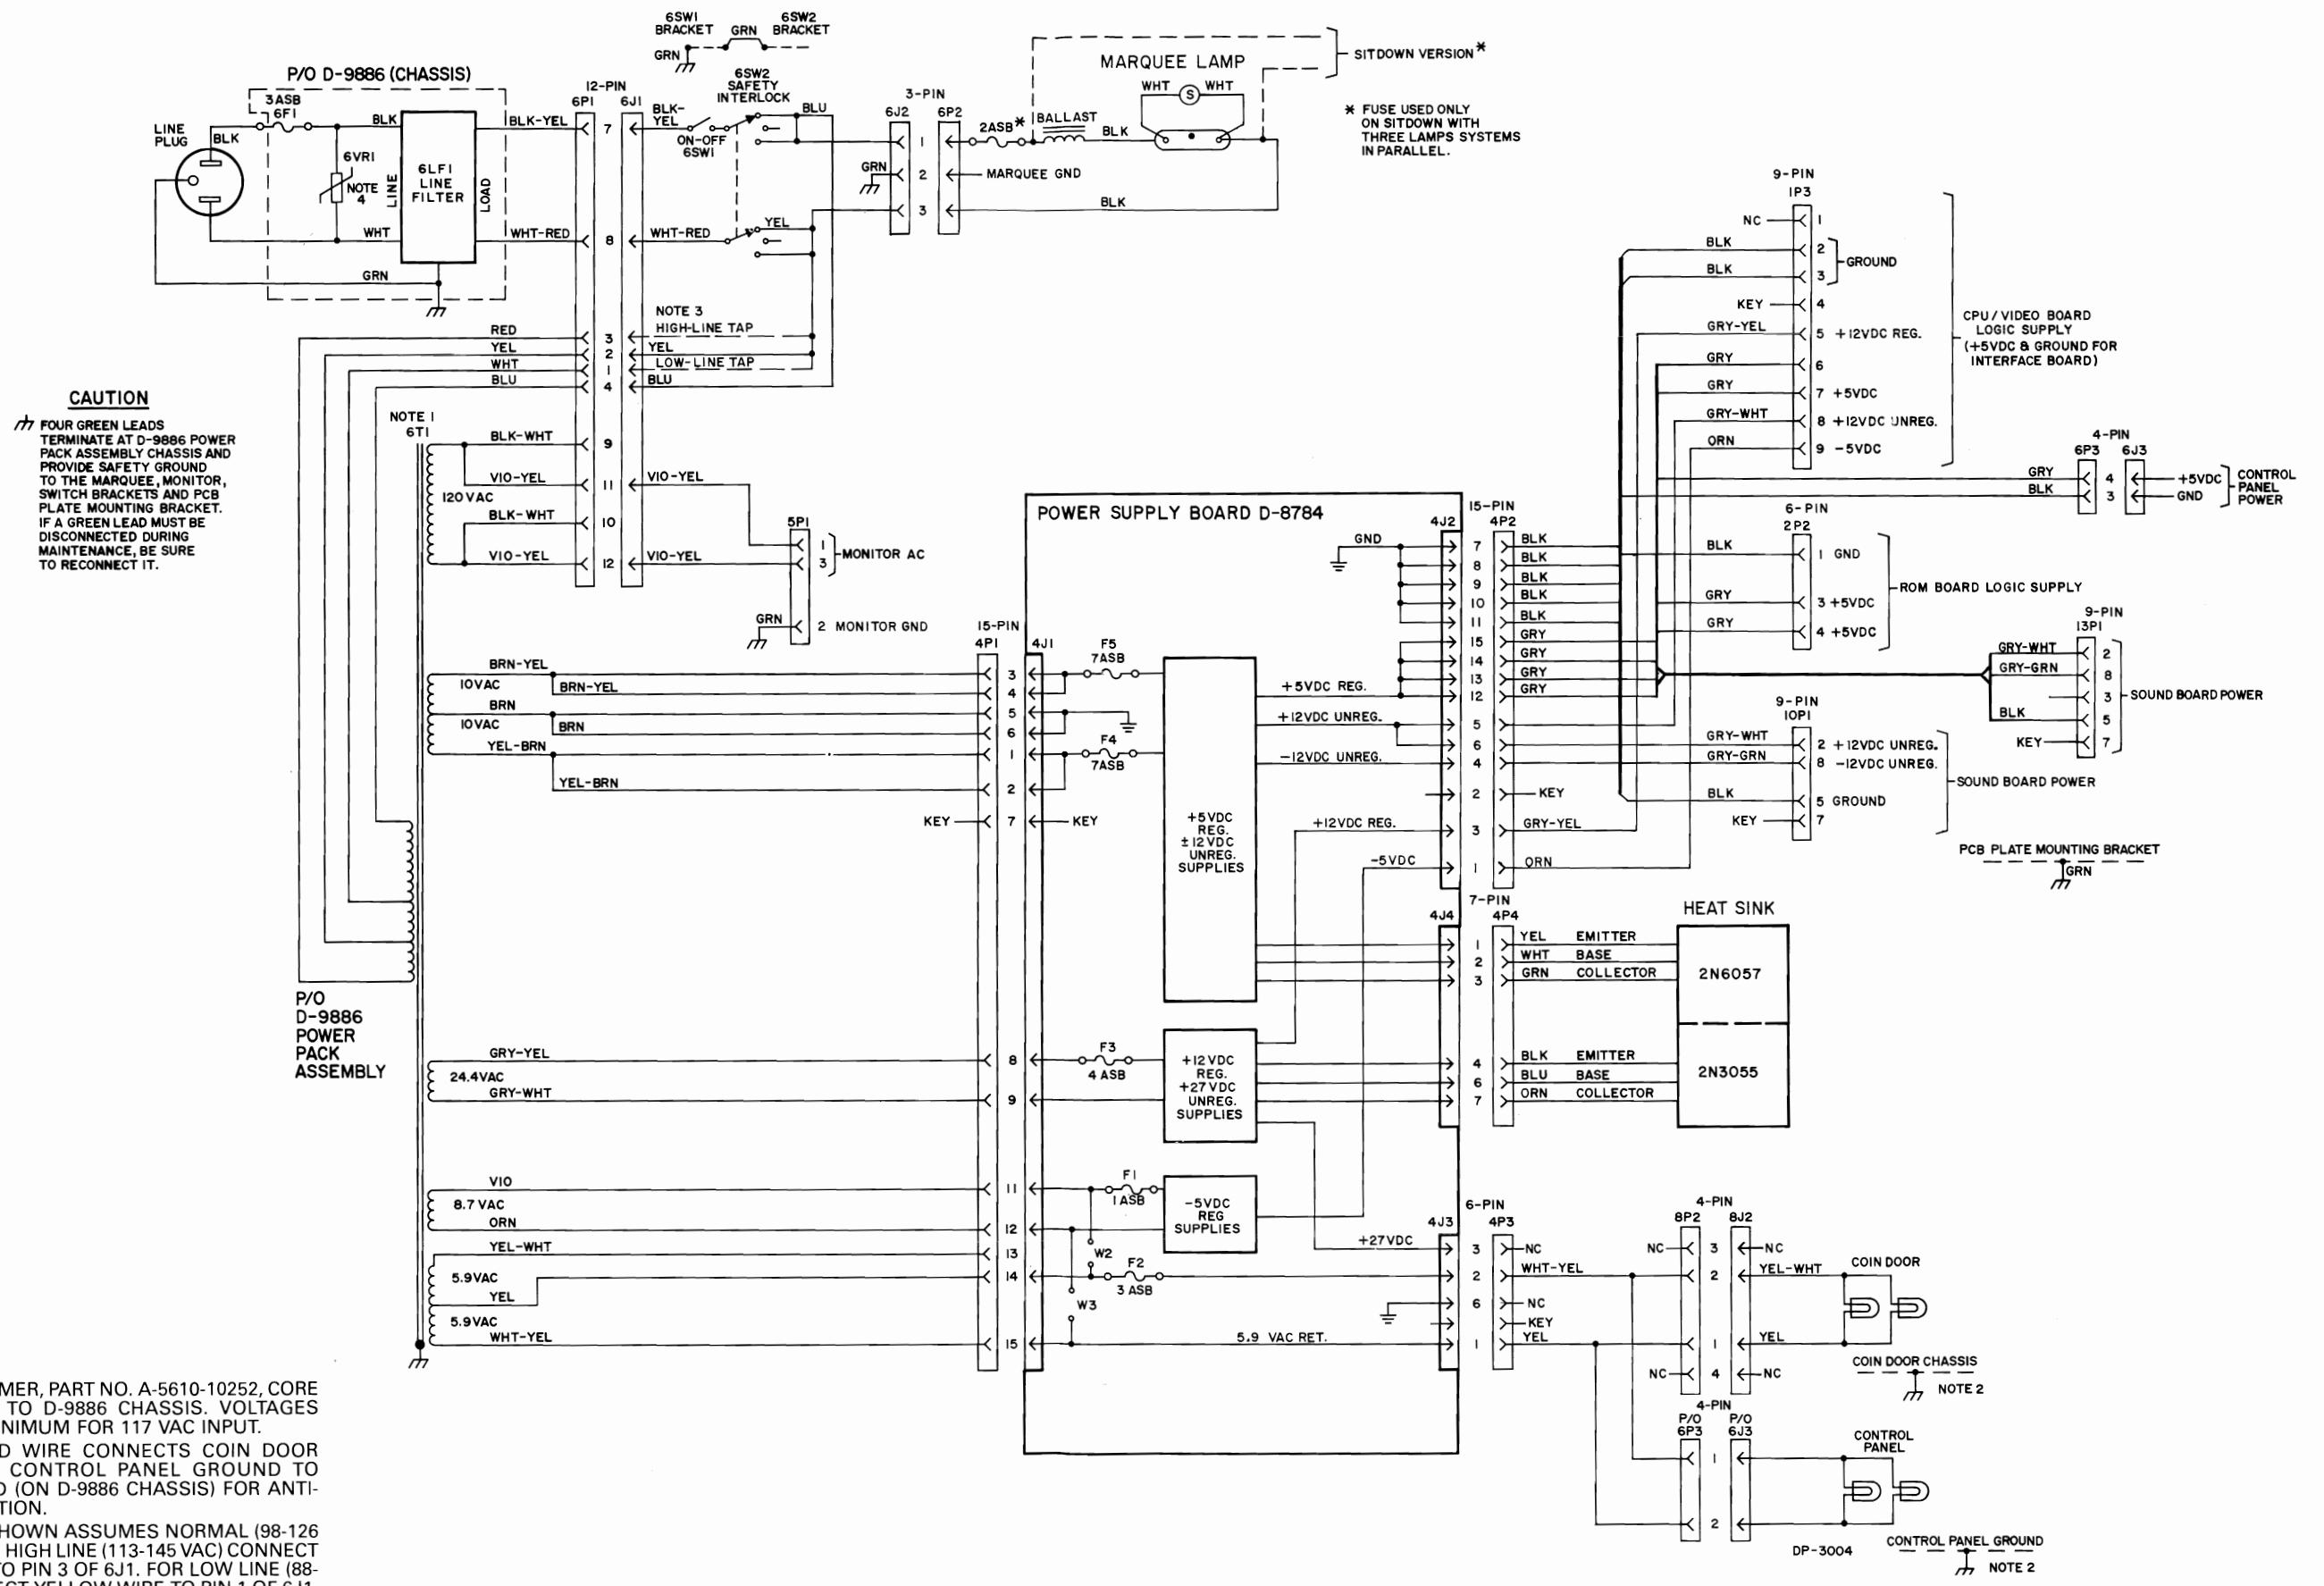


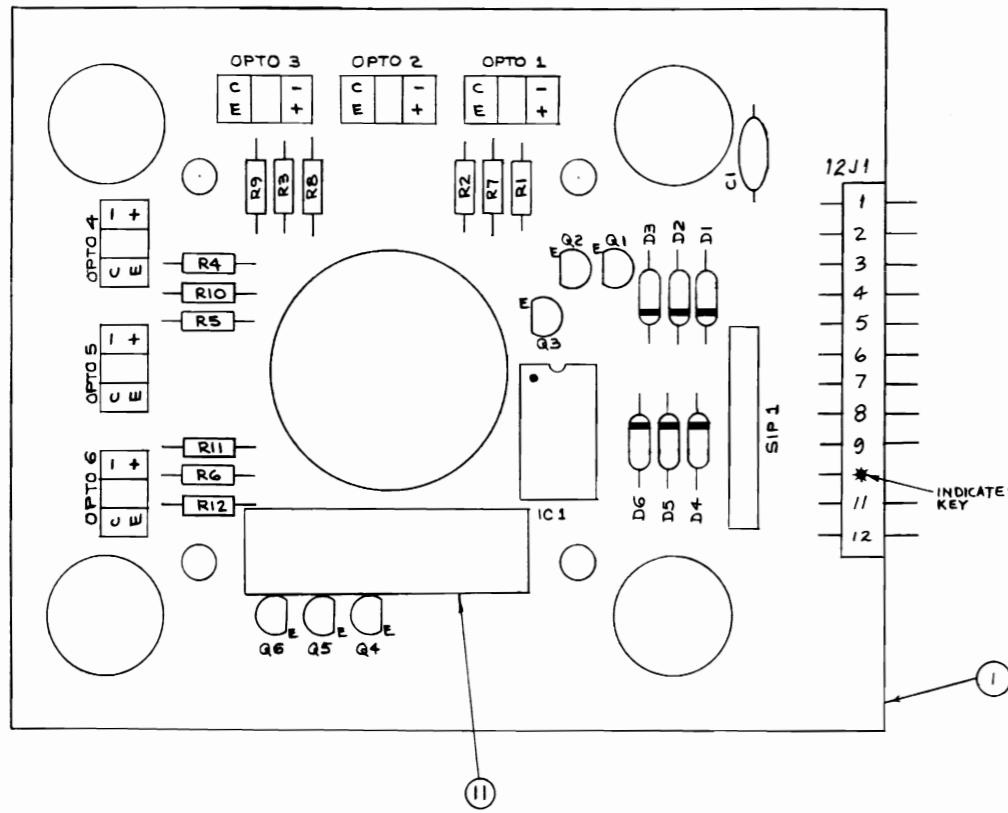

BILL OF MATERIAL				
ITEM NO.	PART NUMBER	PART DESIGNATION	DESCRIPTION	QTY. REQ'D
1	5772-10068-00		BARE P.C. BOARD	1
2	3490-09827-00	OPTO 1 THRU OPTO 6	OPTO INTER. MODULE SWITCH	6
3	5310-09155-00	IC 1	I.C., 4011B CMOS QUAD 2-INP/NAND GATE	1
4	5019-09362-00	SIP 1	10 PIN, 4.7K, SIP	1
5	5010-09768-00	R1 THRU RG	RESISTOR, 180ΩL, 1/4W	6
6	5160-08938-00	Q1 THRU Q6	TRANSISTOR, 2N4401 NPN	6
7	5070-08919-00	D1 THRU D6	DIODE, IN 4148	6
8	5791-10142-00	12 J1	12 PH 2420 09-75-1121	1
9	5010-09034-00	R7 THRU R12	RESISTOR, 10KΩL, 1/4W.	6
10	5043-08980-00	C1	CAP, AXIAL, CERAMIC, 0.1MF, ±0+20%	1
11	16-8850-59		LABEL - PCB ASSY ID	1

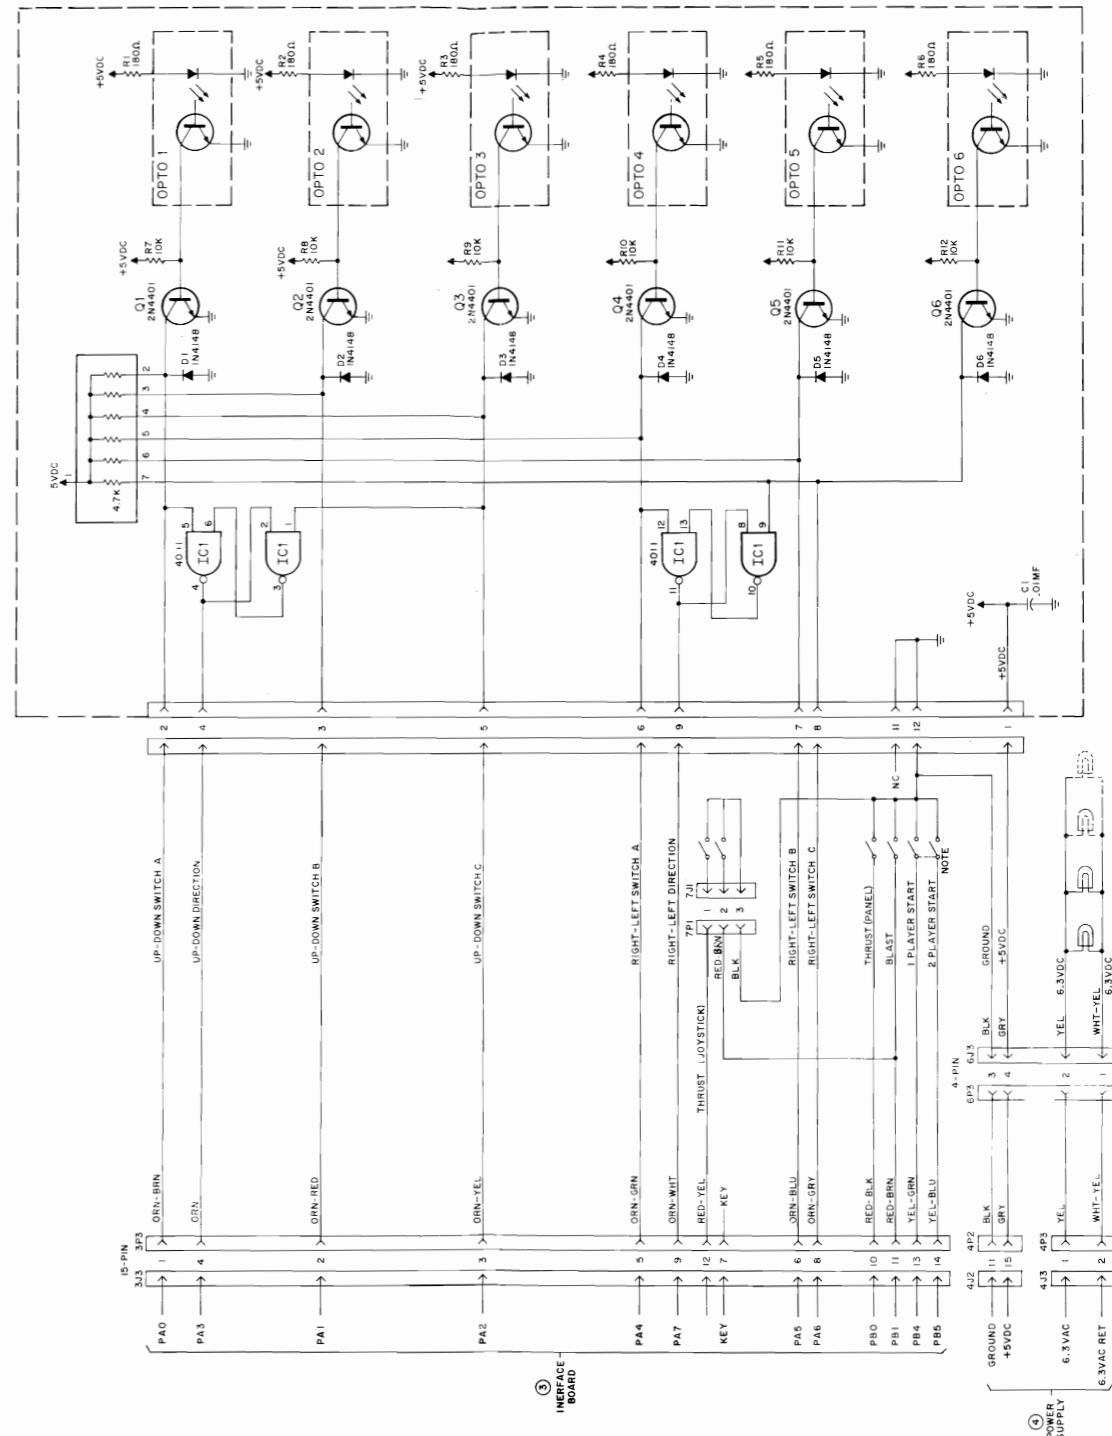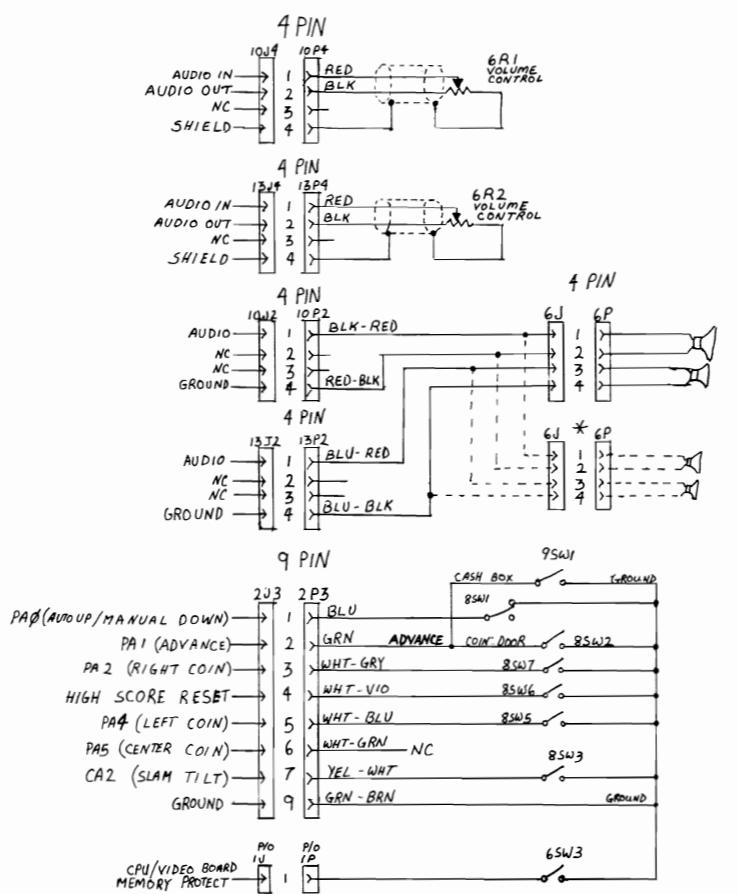

Cabinet Wiring and
Joystick Diagrams

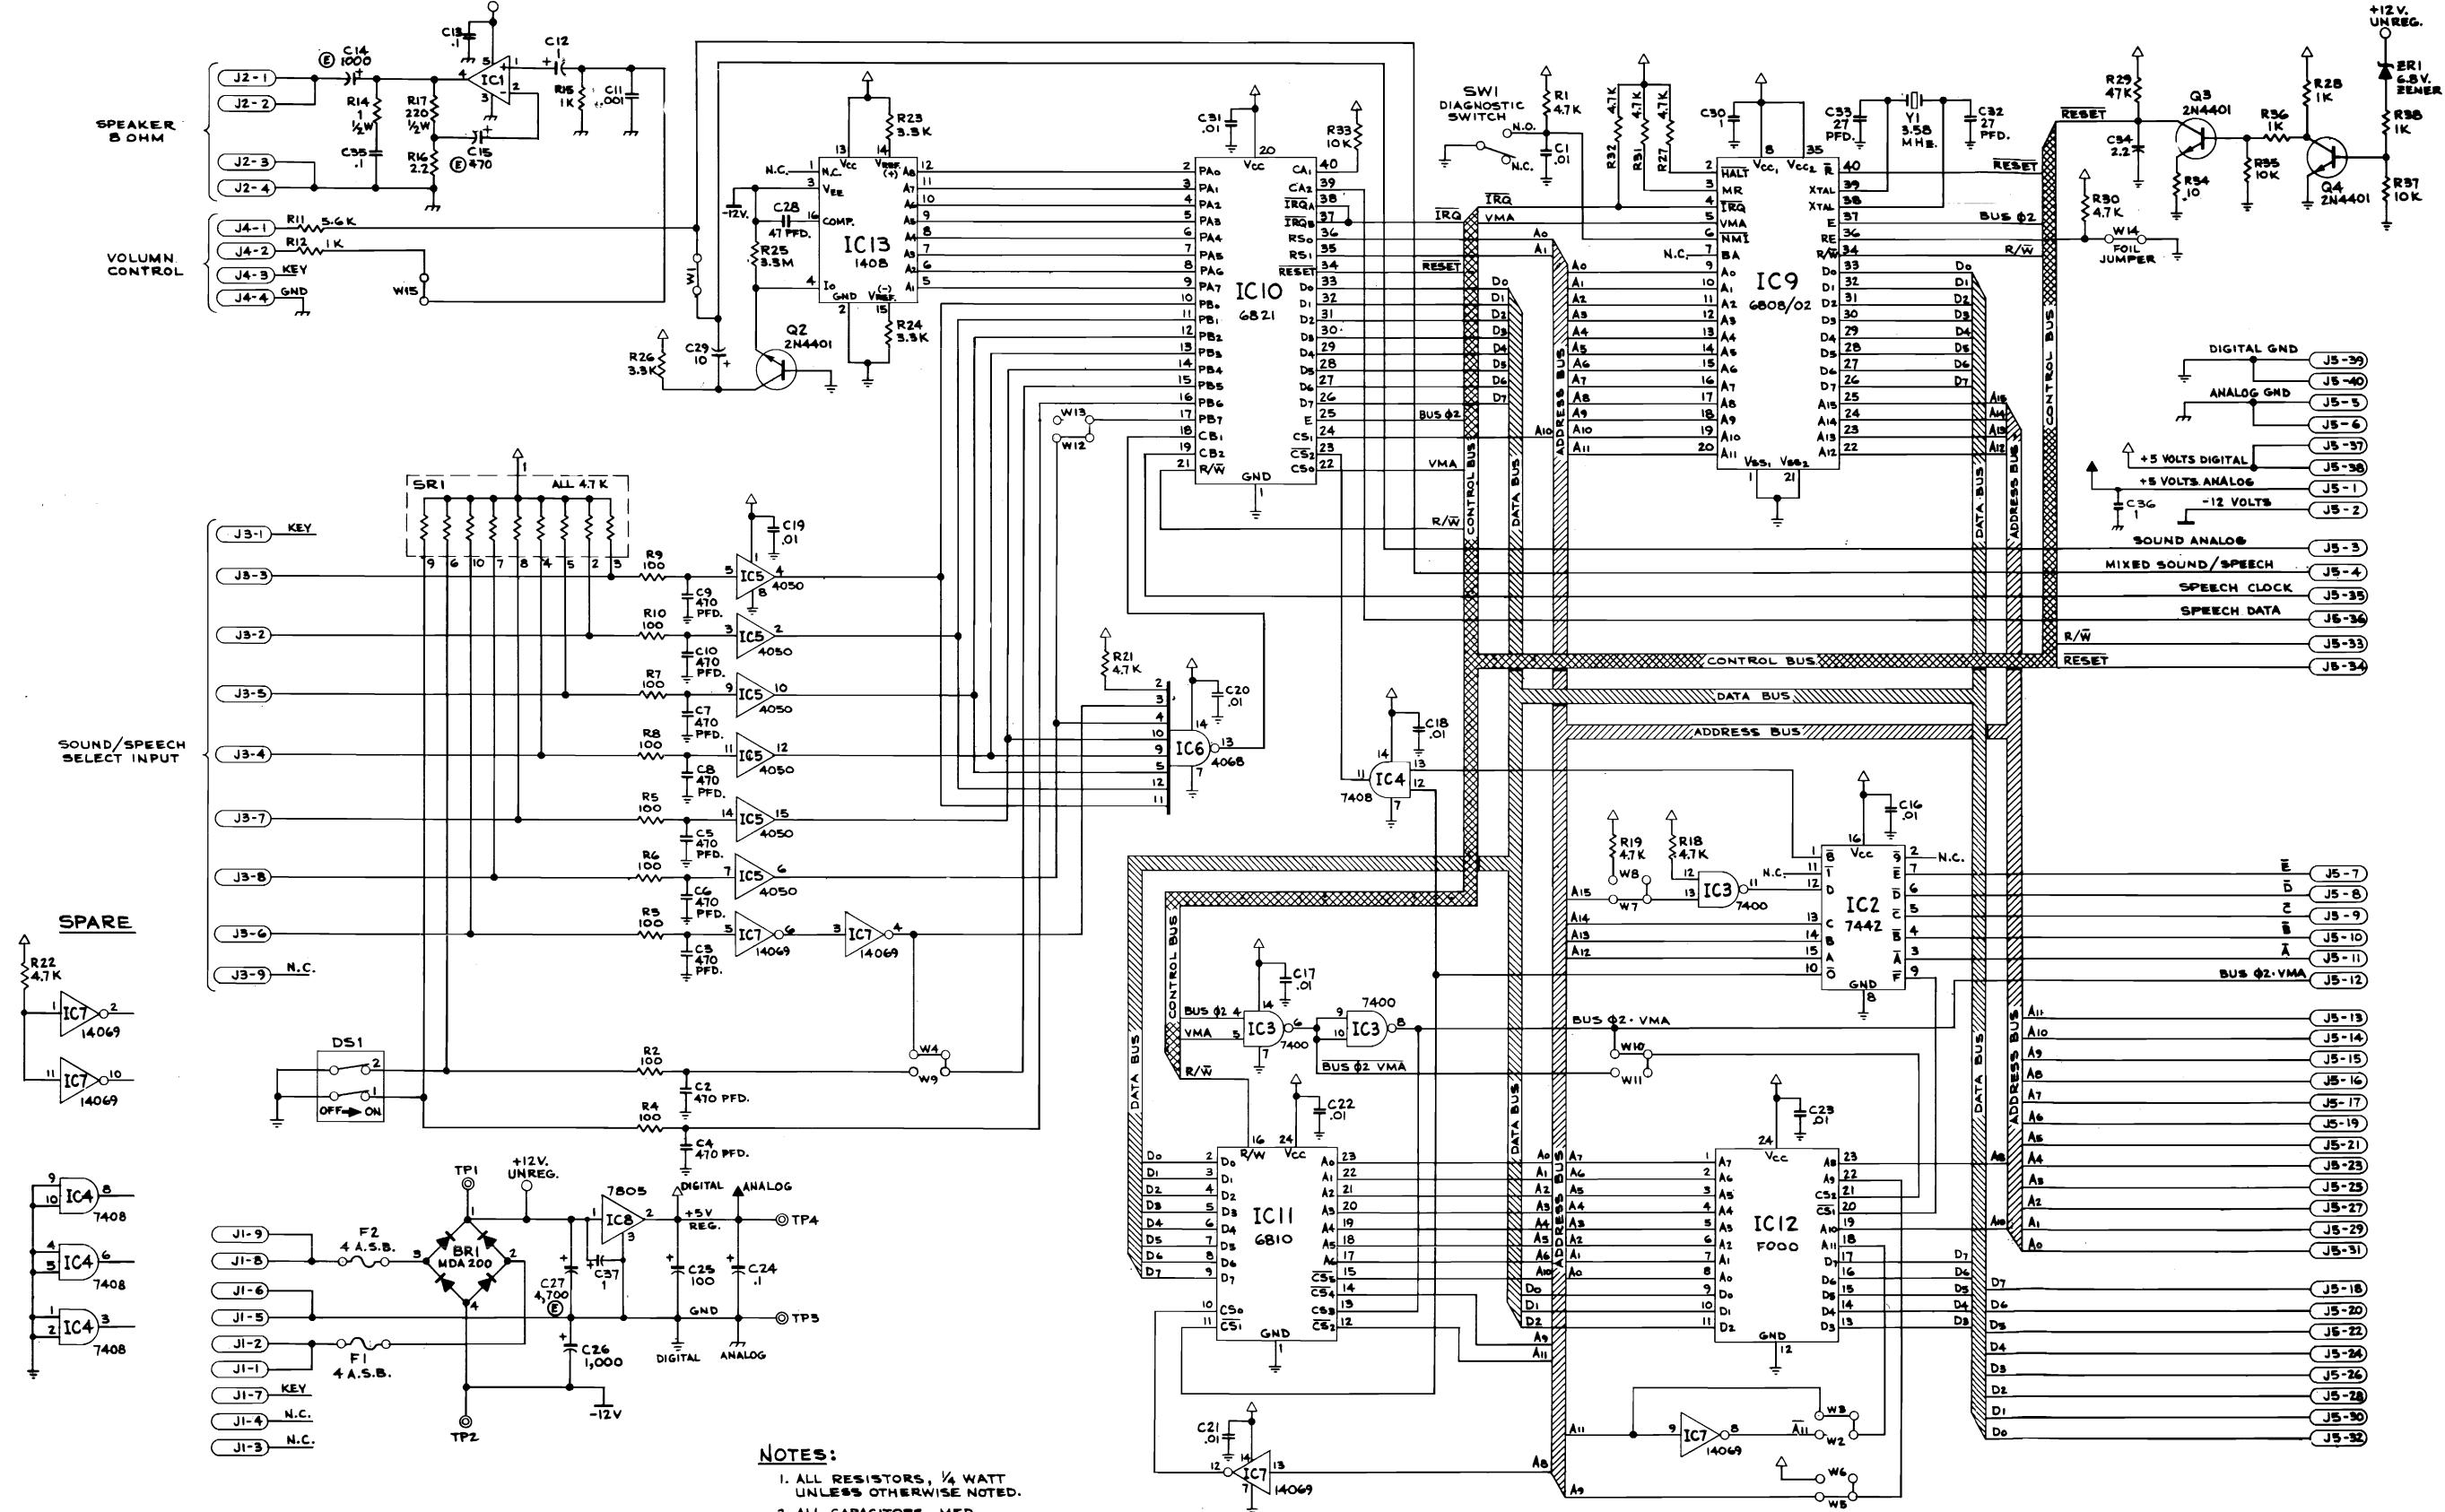

CHAPTER 5 Parts

PLASTIC CABINET

CABINET

PART NO.	DESCRIPTION
20-9374	Control Panel Twist Latch
01-7607	Speaker Grill
03-7695	Monitor Bezel
08-7416	Monitor Glass
31-1208-3021-UP	Screened Marquee
01-7745	Rear Door Locking Strip
5675-09516-00	19" Monitor

REAR DOOR


PART NO.	DESCRIPTION
20-9365	Lock
01-7670	Lock Plate
B-9742	Lock Cam
02-4160	Locking Rod
02-4161	Locking Rod Bushing
20-9364	Door Hinge


CONTROL PANEL


PART NO.	DESCRIPTION
D-10099	Complete Assembly
11-761	Wood Panel
31-1207-3021-UP	Screened Panel Overlay
03-7794	Molding Strip
01-7753	Twist Latch Receptacle
01-7717	Front Hold Down Bracket


POWER GRIP JOYSTICK

PART NO.	DESCRIPTION
C-9680	Complete Assembly
C-9620	Power Grip Handle Assembly
5647-10160-00	Power Grip Button Switch
5647-10163-00	Power Grip Trigger Switch
B-9475	Sliding Interrupter Assembly
C-9471	P.C. Board Assembly

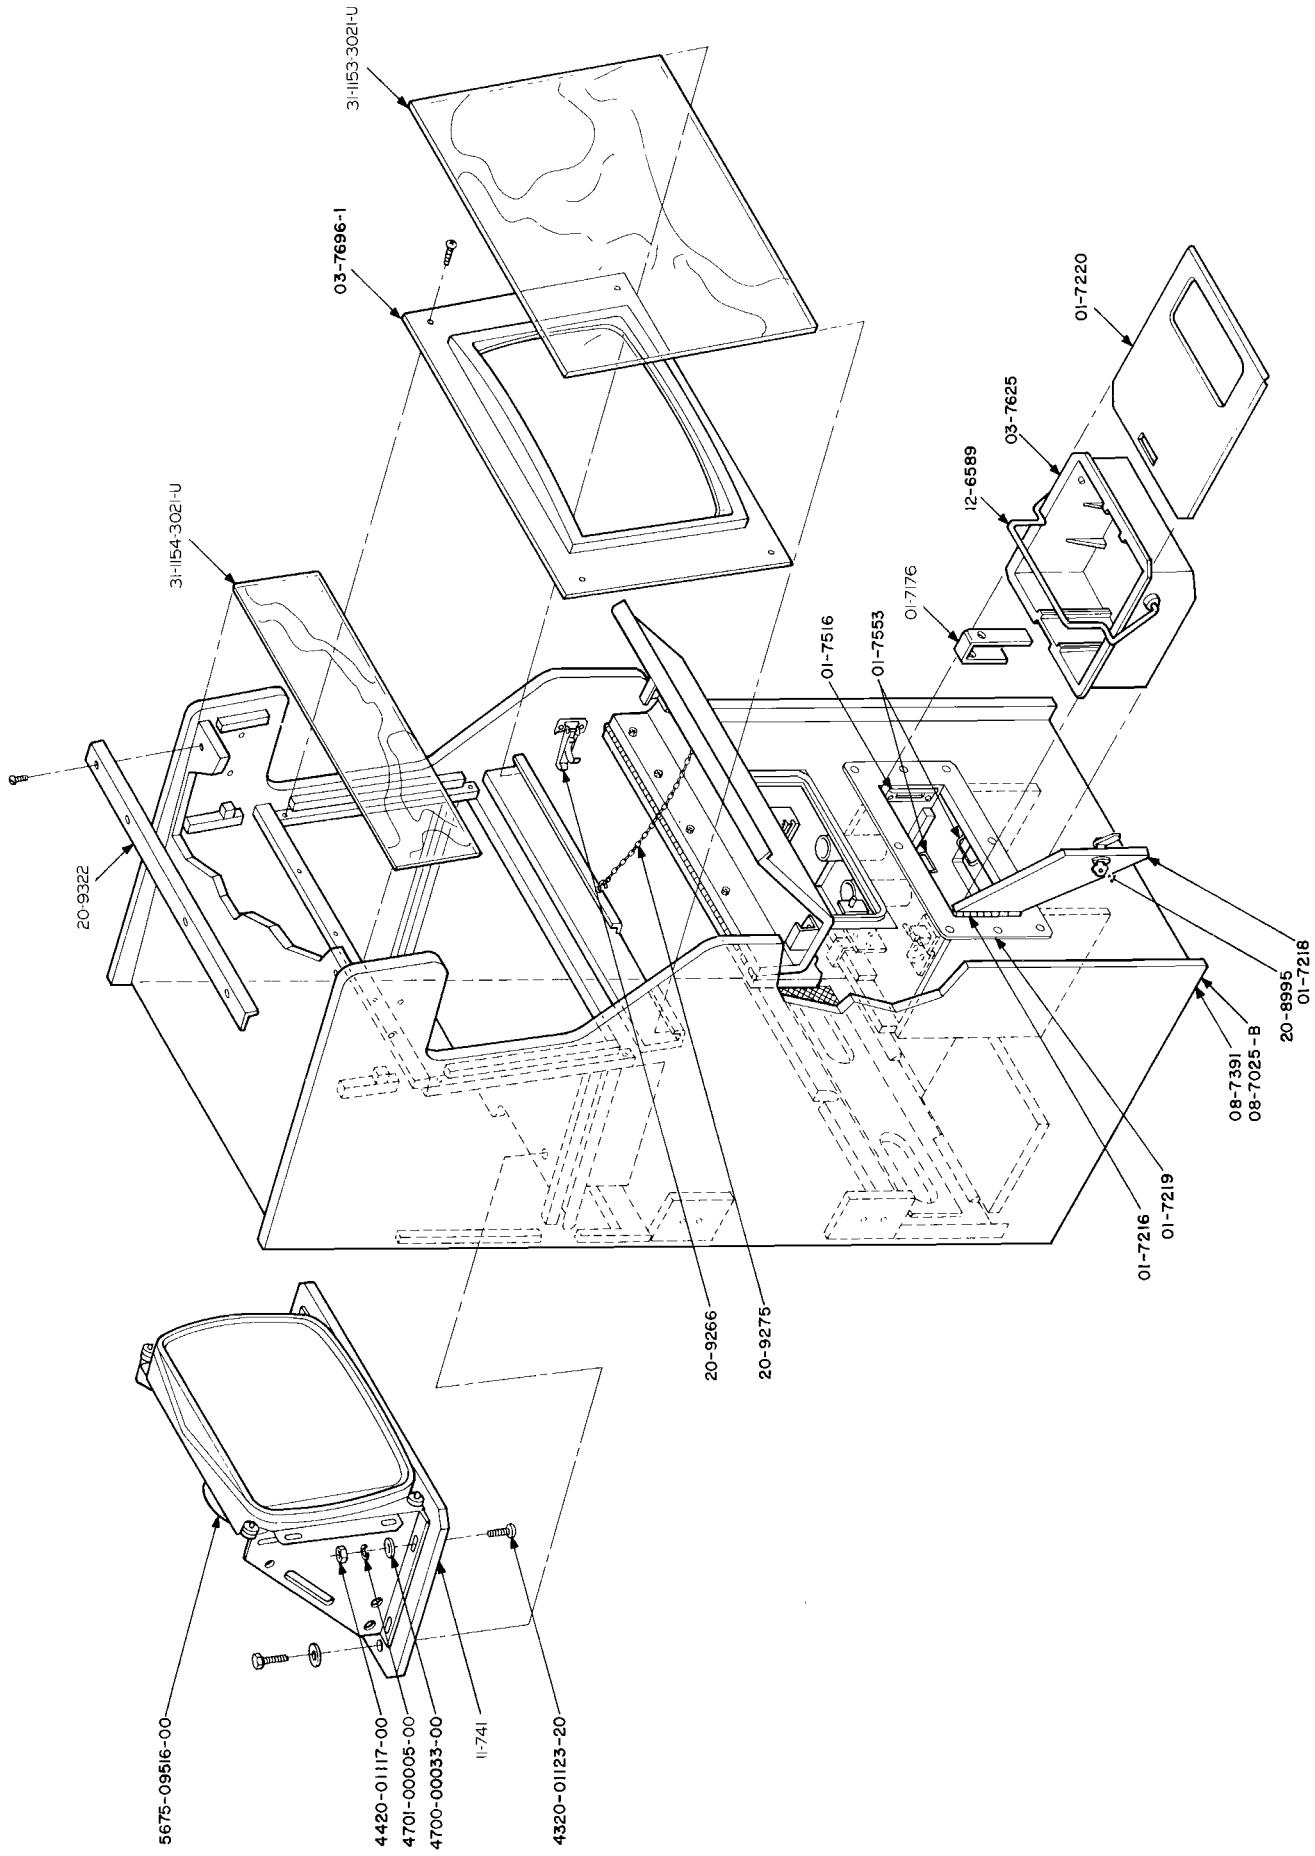

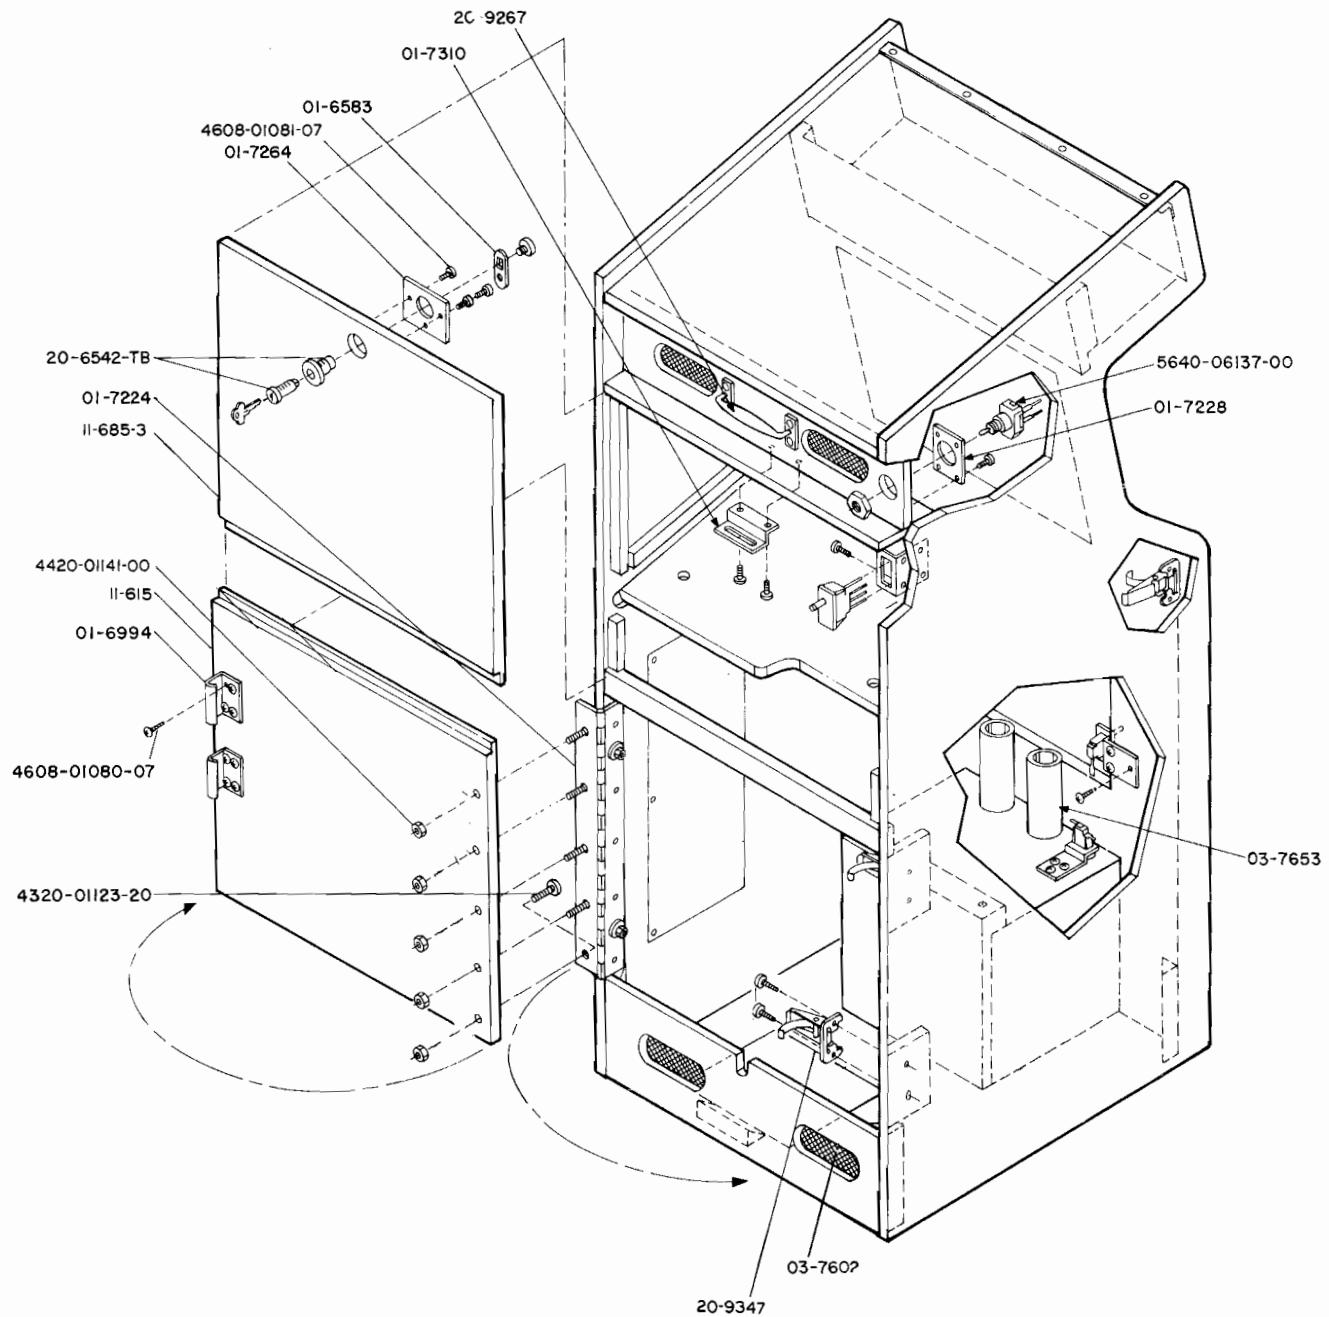


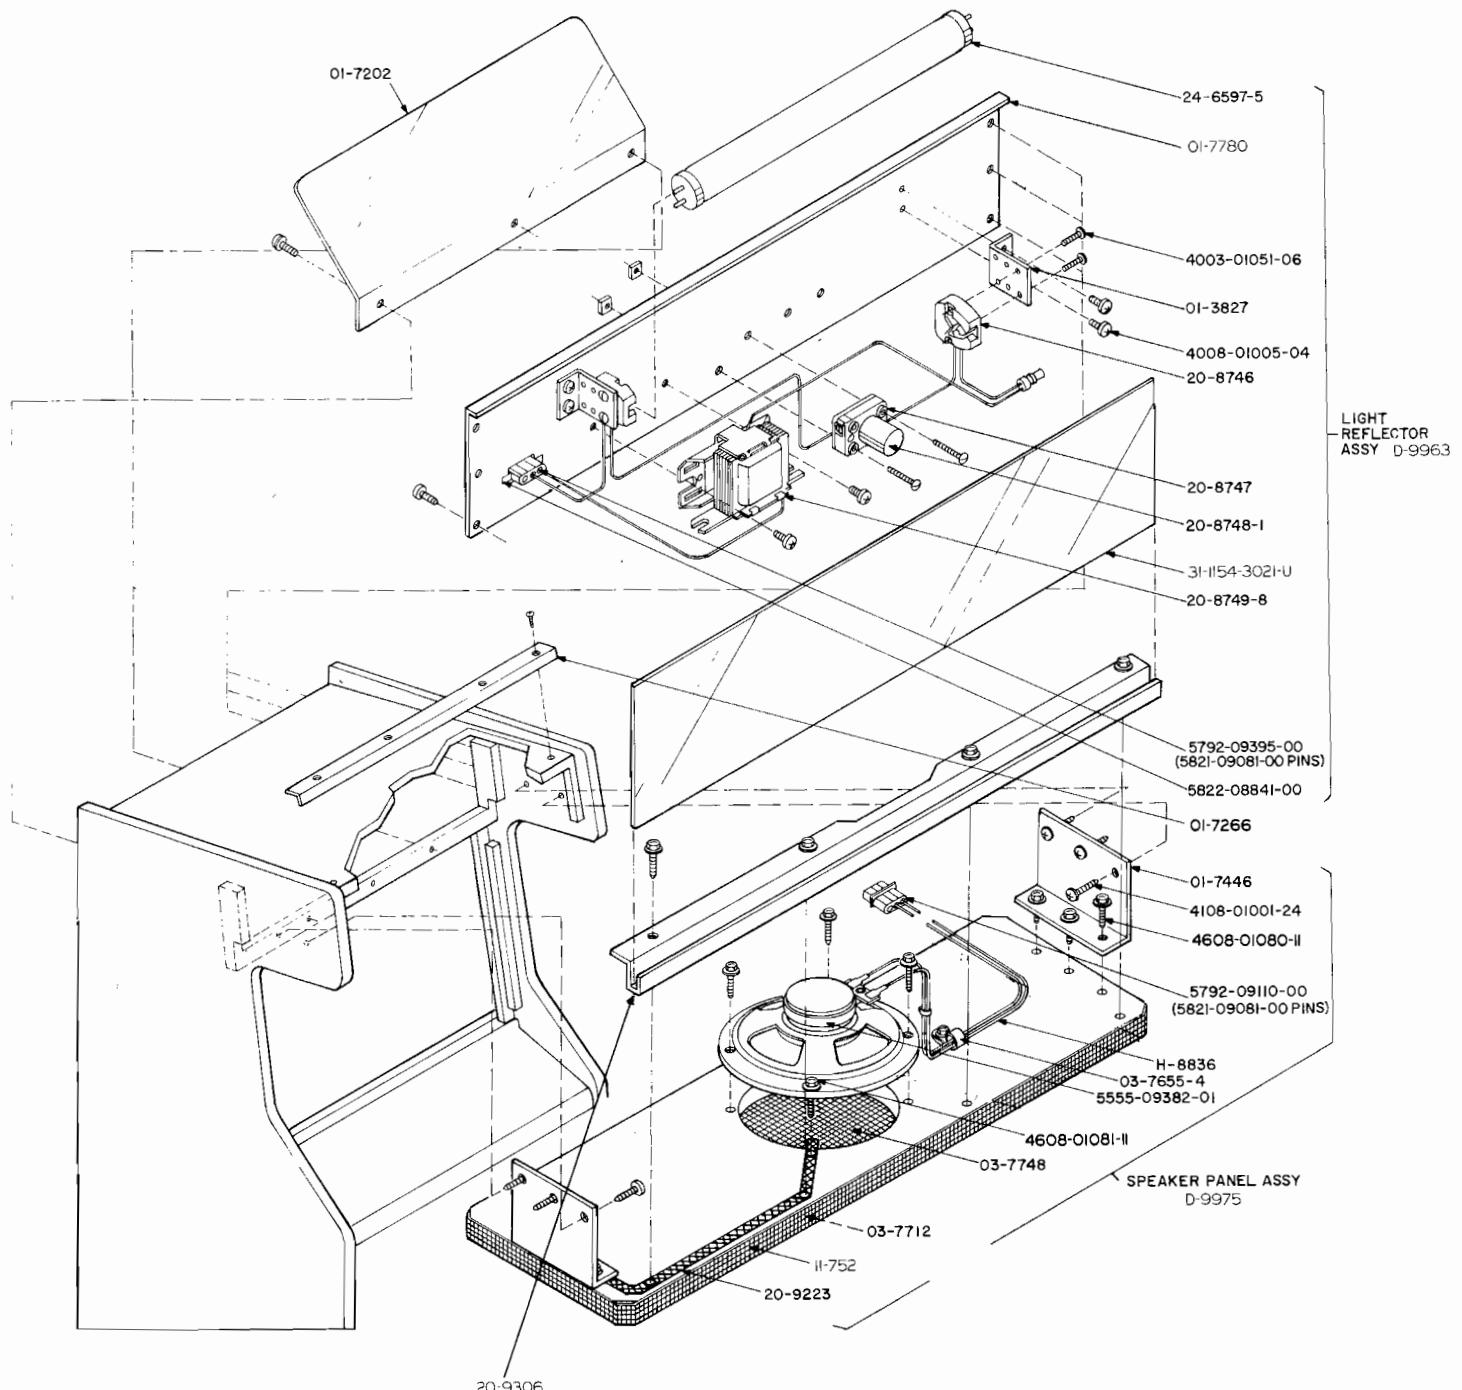

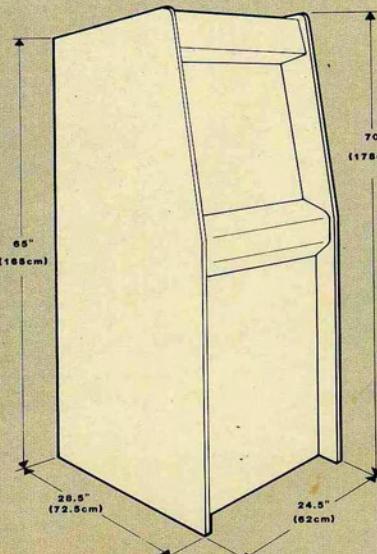

UPRIGHT

Weight
270 lbs. (122.5 kg.) uncrated
290 lbs. (131.5 kg.) crated

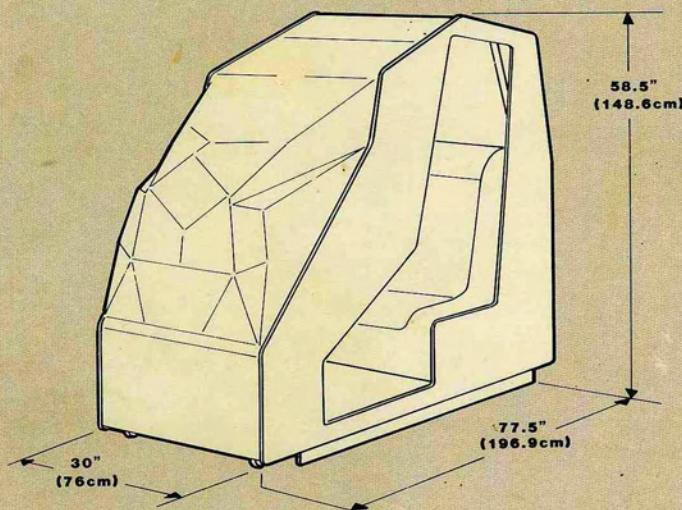

COCKPIT

Weight
342 lbs. (155 kg.) uncrated
402 lbs. (182.5 kg.) crated

POWER REQUIREMENTS

115/230VAC Nominal, 50/60Hz
@2.0/1.0A 230W
(20A surge for one cycle
at power turn on)

Normal Line = 98-126VAC
196-252VAC

High Line* = 113-145VAC
226-290VAC

Low Line* = 88-113VAC
176-226VAC

*Transformer jumpers required.
See service manual.

ENVIRONMENT

Operating Temperature
0° to +45°C ambient
(+32° to +113°F)

Storage Temperature
-40° to +65°C ambient
(-40° to +149°F)

90% RH at 40°C (104°F), non-condensing

MONITOR

19" Color Raster
non-interlaced
UL, CSA & DHHS Approved

VIDEO SYSTEM**

256 Colors, 340 x 240 PIXEL Resolution
6809E Microprocessor
ROM: 232K BYTES
Video and Scratch RAM: 50K BYTES
CMOS RAM: 1Kx4

SOUND SYSTEM**

2 Channel Stereo, 2- 6808 Microprocessors
ROM: 8K BYTES (2 Systems)

JOYSTICK**

Optical Sensing
49 discrete directions and degrees of movement
(6 separate speeds in 8 directions
plus center off position)

**Patent Pending

Specifications subject to change
without notice.

SERVICE

For the back-up that keeps you out-front,
call Williams toll-free at 800/621-1253.
In Illinois, call toll-free at 800/572-1324.

Warning—This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, may cause interference to radio communications. It has been certified to comply with the limits for a Class A computing device pursuant to Subpart J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to correct the interference.

NOTICE: "BLASTER" is a trademark of Williams Electronics, Inc.
BLASTER is designed and created by Vid Kidz.

Williams®
ELECTRONICS, INC.

3401 N. California Ave., Chicago, IL 60618
(312) 267-2240, Telex 253095