


# Service Bulletin N° 74

# SEGA™ PINBALL, INC.

1990 Janice Avenue  
Melrose Park, IL 60160  
• © Tel 708-345-7700 •

## Technical Support

- 1-800-KICKERS (800-542-5377) •
- Fax 708-345-7889 •

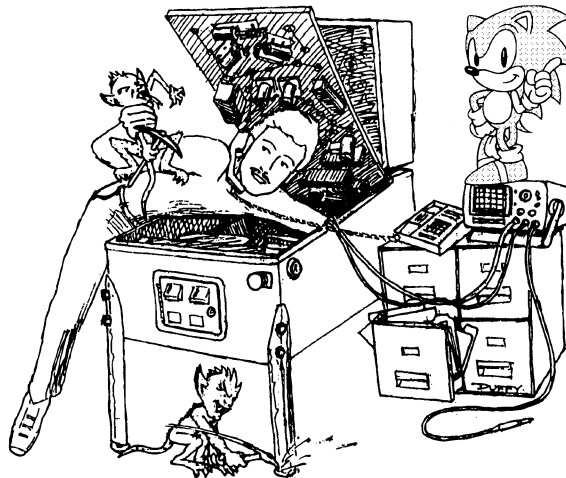

Joe Blackwell  
Technical Support Manager

Eric Winston  
Technical Support Engineer

Ted Kilpin  
Technical Support Engineer

Jay Alfer  
Tech. Doc. Administrator

**TO:** Parts & Service Managers

**DATE:** April 28, 1995

**RE:** Modification to **BAYWATCH™** Early Production Games

With the new introduction of **PORTALS™ SERVICE MENU** in Baywatch™ games, some early production games may experience the following symptom.

**SYMPTOM** — When entering the **Portals™ Service Menu**, the *Icons* may start to scroll immediately.

**EXPLANATION** —The **Green "SERVICE CREDITS/SELECT" Button** is more than likely, locked in the down position (it is still a "Toggle Up/Down" Button). By depressing this switch once, it will now pop up. The display should now be normal with one *Icon* only flashing.

**MODIFICATION**—To make sure this does not occur again, make the **Green "SERVICE CREDITS/SELECT" Button** a "Momentary" Button like the **Black "BEGIN TEST/ENTER" Button**.

### Step 1

Open the Coin Door and locate the Service Switch Set Bracket & Coin Door Mounting Bracket. (See Fig. 1)

### Step 2

Remove the 2 Phillips Screws securing the Switch Set Bracket to the Coin Door Bracket. (See Fig. 2)

### Step 3

The Switch Bracket will now be separated from the Coin Door Bracket still attached by the wires. (See Fig. 3)

### Step 4

Locate the Green Button Switch. Remove the silver "C" shape wire form from the switch. The switch is now a "non-interlocking" Momentary Switch. (See Fig. 3 & 4)

### Step 5

Reverse procedure to reassemble.

Fig. 1

Service Switch Set  
Bracket connected to  
Coin Door Mounting  
Bracket

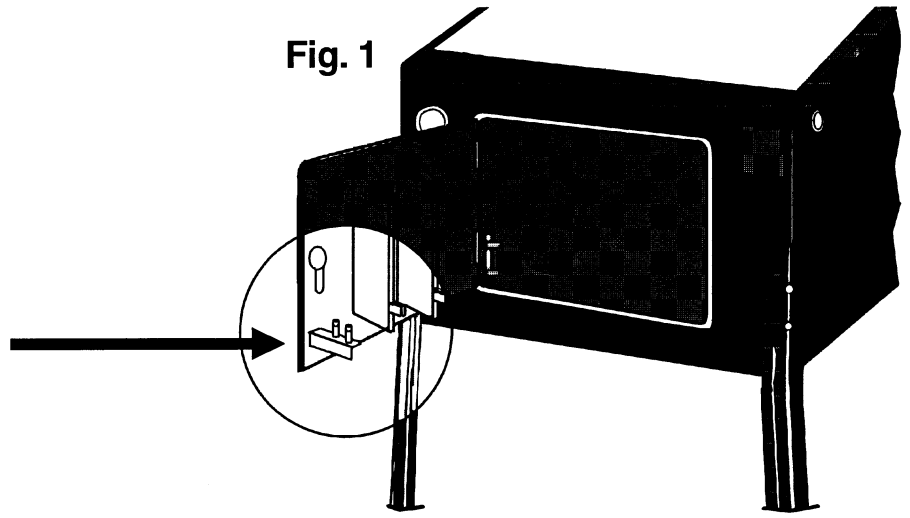


Fig. 2



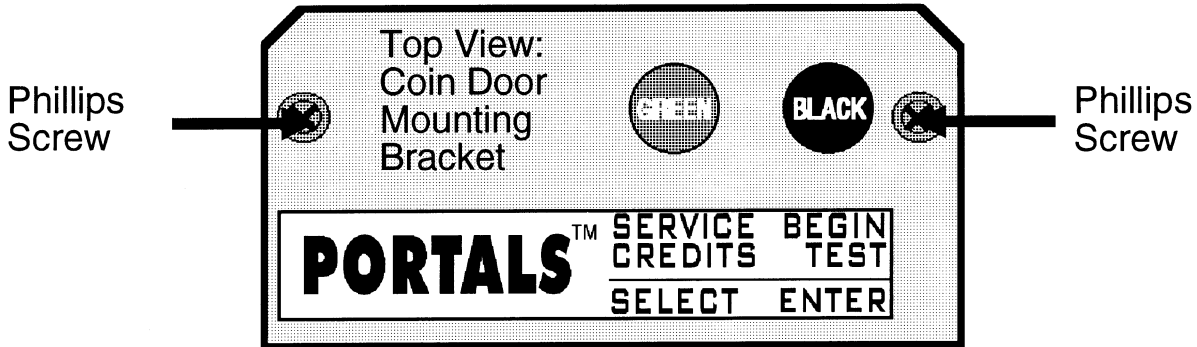


Fig. 3

 Top View:  
Switch Set Mounting Bracket




Front View:  
Switch Set Mounting Bracket

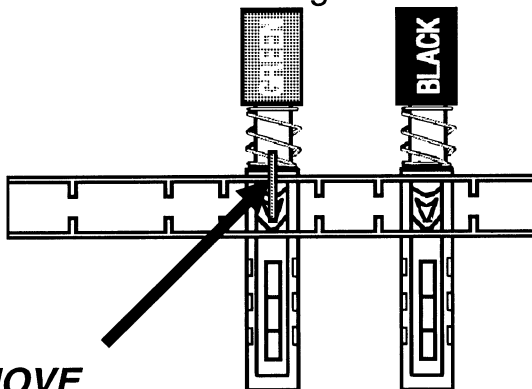

**REMOVE**  
Silver "C" Shape  
Wire Form

Fig. 4

Side View:  
Switch Set Mounting  
Bracket (Black  
Button Behind)

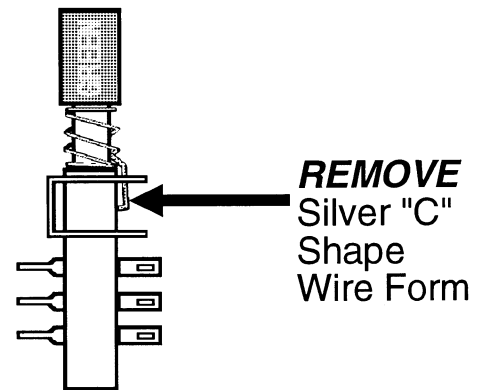

**REMOVE**  
Silver "C"  
Shape  
Wire Form