



Kurz-Kasch, Inc.


Electronics Division
 Box 1246 • 2271 Arbor Blvd.
 Dayton, Ohio 45439
 Telephone (513) 299-0990

Operating Instructions

For Model

362A/332B

WIZARD OF WOR/MIDWAY

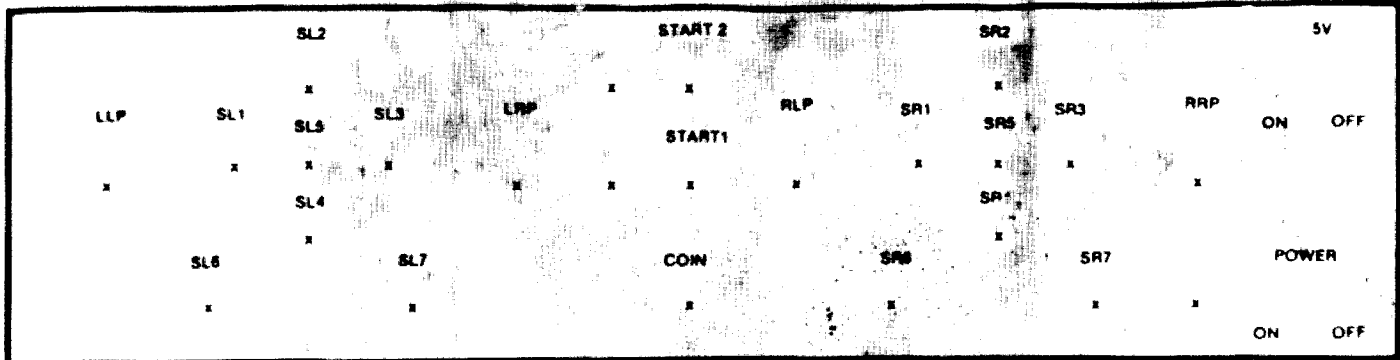

1. Insert 332B program card into "B" connector on TF-650 with number side up.
2. Connect ribbon cable connector from 332B card to GAME MOTHER BOARD cage connector.
3. Insert 362A program card into "A" connector on TF-650, with number side up.
4. Connect 23 and 24 pin ribbon cable connectors to GAME BOARD 23 and 24 pin headers.
5. Slide 5 VOLT switch to ON.
6. Slide POWER switch to ON.
7. Controls are:

COIN is COIN 1

SL6 is COIN 2

START 1 is 1 PLAYER SELECT

SR6 is 2 PLAYER SELECT

SR1 is PLAYER 1 LEFT

SL1 is PLAYER 2 LEFT

SR2 is PLAYER 1 UP

SL2 is PLAYER 2 UP

SR3 is PLAYER 1 RIGHT

SL3 is PLAYER 2 RIGHT

SR4 is PLAYER 1 DOWN

SL4 is PLAYER 2 DOWN

SR5 is PLAYER 1 FIRE

SL5 is PLAYER 2 FIRE

SR7 is PLAYER 1 MOVE

SL7 is PLAYER 2 MOVE

NOTE: SR7 and SL7 must be held down for its switch group before other movement controls are pushed.

8. TEST switch and TILT switches are on 362A.

<u>LOCATION</u>	<u>MARKING</u>	<u>TYPE</u>	<u>SIGNATURE</u>	<u>PERSONALITY BOARD</u>
X1	WIZ A	HN462532	UH62	TMS2532/L24
X3	WIZ B	HN462532	2080	TMS2532/L24
X5	WIZ C	HN462532	HA77	TMS2532/L24
X7	WIZ D	HN462532	8P64	TMS2532/L24
X11	WIZ E	HN462532	592P	TMS2532/L24
X13	WIZ F	HN462532	866P	TMS2532/L24
X15	WIZ G	HN462532	FH74	TMS2532/L24