CONVERTING WILLIAMS GAMES TO 2/25¢

CONVERTING FROM (10¢-25¢) PLAY TO (2/25¢ - 2/25¢) PLAY

REPLACE 10¢ COIN CHUTE WITH 25¢ COIN CHUTE.
REPLACE 10¢ COIN INSERT PLATE WITH (1A-4215) 25¢ COIN INSERT PLATE.
REPLACE 10¢ IDENTIFICATION PLATE WITH (16C-8640-100) 2 PLAYS-QUARTER.
REPLACE 10¢ COIN SWITCH WITH 25¢ COIN SWITCH (3M-3)

REMOVE MACHINE SCREW AND SPACER IN "COIN TRIP AND SWITCH ASSEMBLY "B-6853, TO ALLOW QUARTER TO PASS THRU.

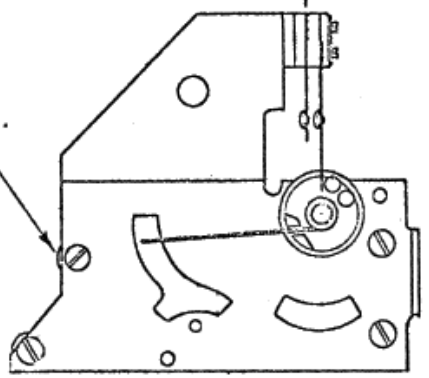

B-6853 COIN TRIP & SWITCH ASS'Y.

TO CONVERT FROM (5¢ 5¢ - 10¢ - 25¢) TO (2/25¢ - 2/25¢)

REPLACE (5¢ 5¢) COIN TRIP AND SWITCH ASSEMBLY WITH B-6853 (10¢) COIN TRIP AND SWITCH ASSEMBLY.
REPLACE 5¢ COIN CHUTE WITH 25¢ COIN CHUTE.
REPLACE 5¢ COIN INSERT PLATE WITH (1A-4215) 25¢ COIN INSERT PLATE.
REPLACE 5¢ IDENTIFICATION PLATE WITH (16C-8640-100) 2 PLAYS - QUARTER.
MAKE CHANGES ON B-6853 "COIN TRIP AND SWITCH ASSEMBLY" AS SHOWN ABOVE.
USE PART NO. 16A-8636 (DUMMY COIN ENTRY COVER) ON CENTER CHUTE.

WIRING INSTRUCTIONS

AT ORIGINAL 25¢ COIN SWITCH, UNSOLDER GREEN-ORANGE WIRE (A) AND TAPE IT. REMOVE TAPE FROM WHITE-BLUE WIRE AND SOLDER IN ITS PLACE.

AT NEW 25¢ COIN SWITCH, REMOVE TAPE FROM GREEN-ORANGE, WHITE-BLUE AND RED-ORANGE WIRES AND SOLDER AS SHOWN BY DOTTED LINES (A'), (B) AND (C).
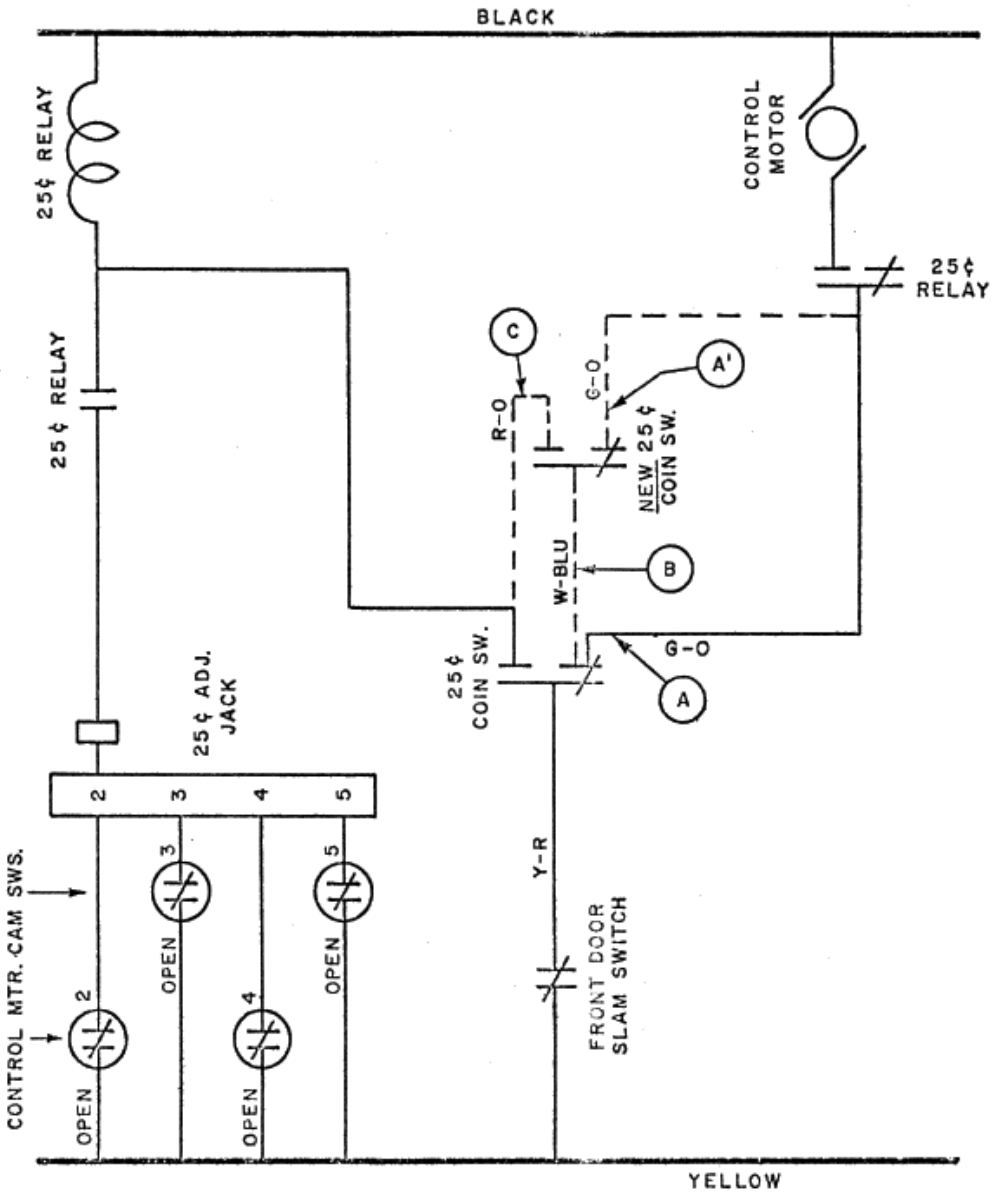
INSERT 25¢ ADJUSTMENT JACK INTO "2 PLAYS FOR QUARTER" POSITION.