


WOODWORK PRESTA

SERVICE INSTRUCTION

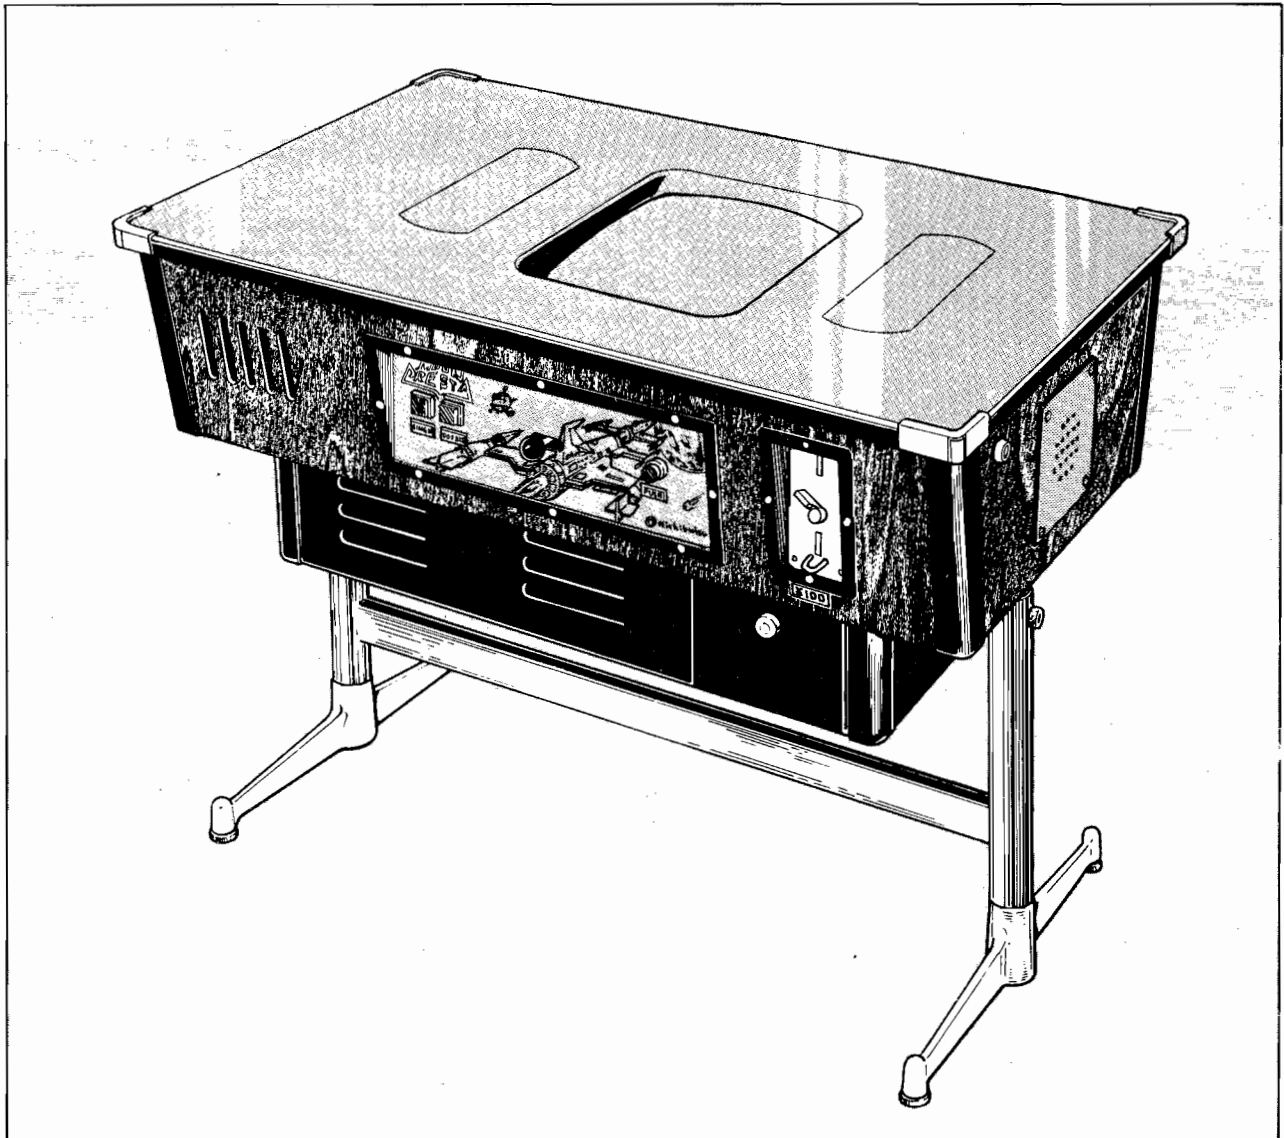

Nichibutsu

TABLE OF CONTENTS

GENERAL INFORMATION

1 Each Parts Name (Upright Model)	1
Each Parts Name (Table Model)	2
2 Specifications	3
3 Notes	3
4 How to Play	4

TECHNICAL INFORMATION

5 Operater Adjustments	5
6 Monitor Adjustments	6

PARTS LIST, ILLUSTRATIONS



7 Exterior Assembly	7, 8
8 Video Assembly	9, 10
9 Control Plate Assembly	11, 12
10 Printed Board Assembly	13, 14

SCHEMATICS, WIRING FIGURES

Schematics, Wiring Figures	15, 16
Schematic Monitor P.C.B. CM-C14HC	17
Schematic Monitor P.C.B. CM-A20HC	18
Schematic MC-1	19
Schematic AL-5, Schematic AL-12C	20
Wiring Figure MC-1	21
Wiring Figure MC-MB-1	22
Wiring Figure MC-MB-3	23

MOON CRESTA

EACH PARTS NAME (TABLE MODEL)

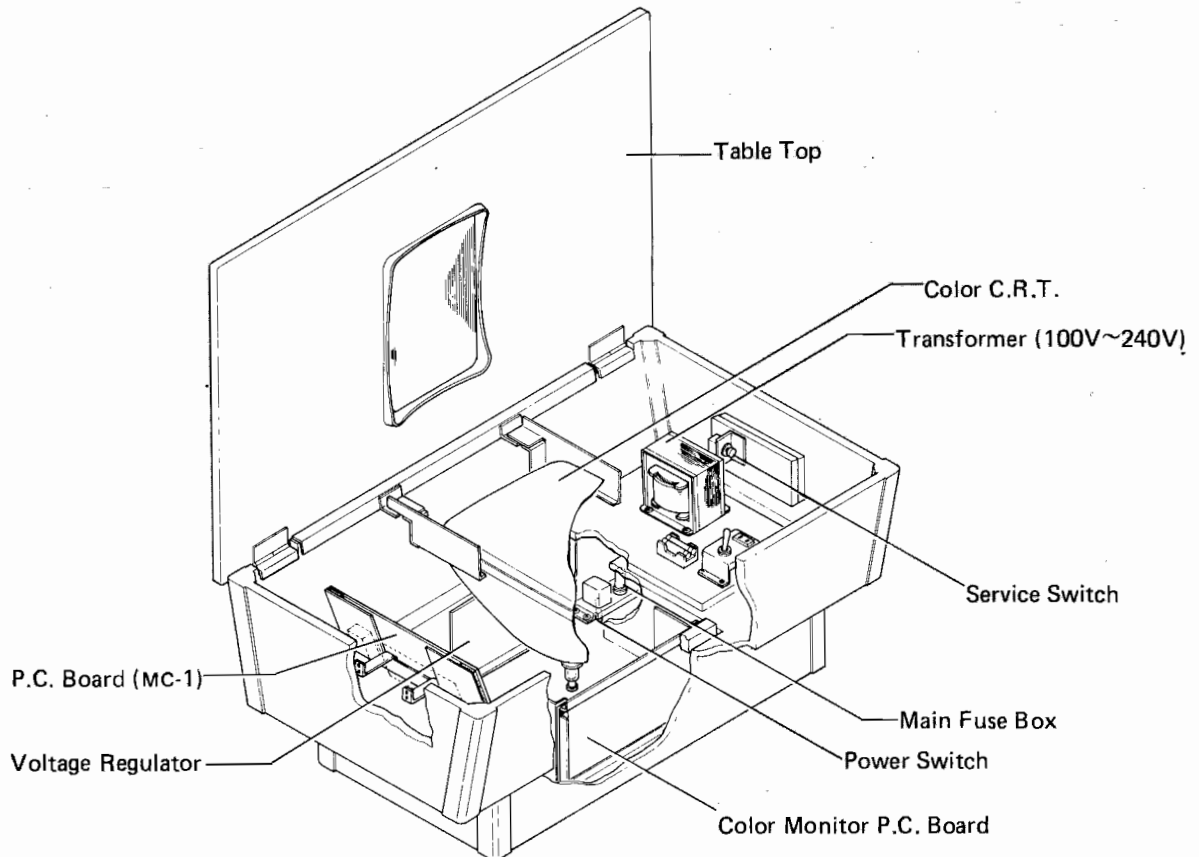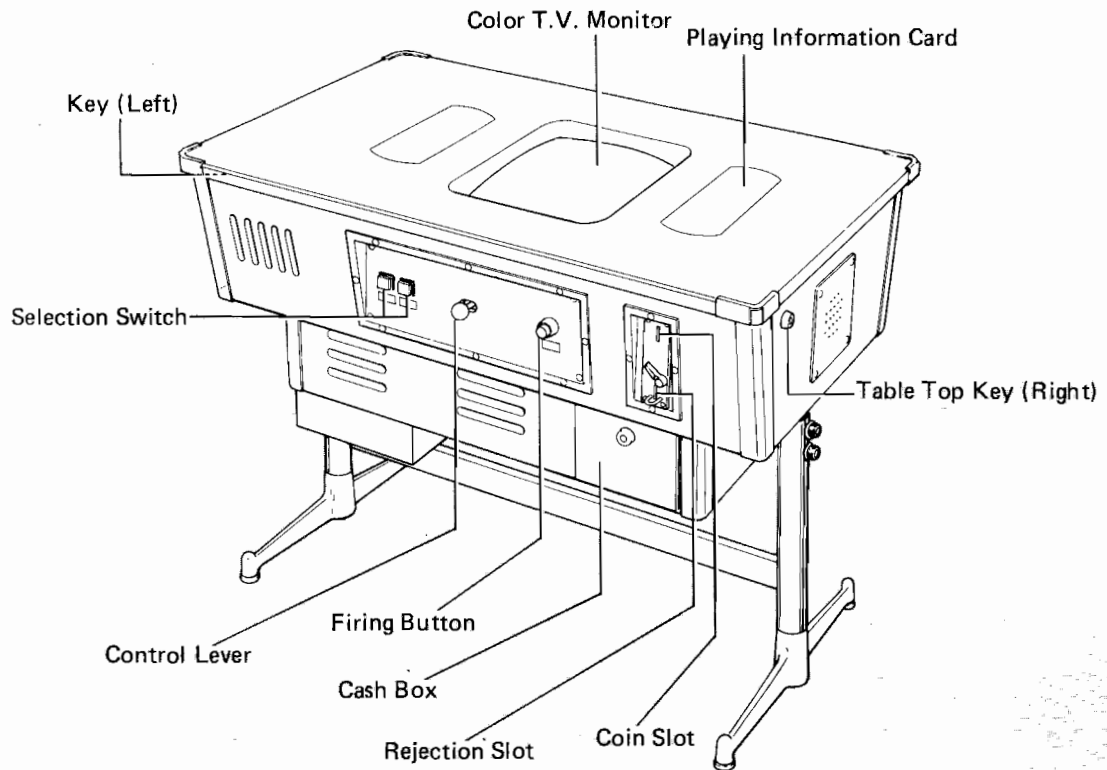

7

EXTERIOR ASSEMBLY

NO.	PARTS NO.	DESCRIPTION	UNIT PRICE (YEN)
1	MB-20001	Table Top Glass	12,000
2	TA-50002	Corner Bracket	900
3	MB-20002	Table Cabinet	29,000
4	TA-50004	Table Leg	18,000
5	TA-50015	TV Mask	640
5-1	TA-50015-1	Smoked Plate	1,200
6	MC50001	Playing Information Card	300
7	TA50004	Hinge	730
8	TA50046	Stay	550
9	PC50085	Key (Set)	1,800
10	TA50024A	Key Lock Bracket (Left)	250
	TA50024B	Key Lock Bracket (Right)	250
11	PC50081	Key Metal Fittings	100
12	TA50018	Key Lock Bracket (Left)	360
13	BP10004	Key Lock Bracket (Right)	360
14	TA50047	Corner Metal Fittings	120
15	TA50048	Build Metal Fittings	100
16	TA50092	Claw Nut (5mmφ)	40
17	TA50054	Six-angle Bolt	40
18	TA50055	Cap Bolt (Small)	100
18-1	TA50055-1	Cap Washer	50
19	TA50056	Cap Bolt (Big)	150
20	BP10048	Punching Board	320
22	AL20003A	C.R.T. Bottom Cover	600

* EX-Godown our office in Japanese YEN.

8

VIDEO ASSEMBLY

NO.	PARTS NO.	DESCRIPTION	UNIT PRICE (YEN)
23	AL20004	Color MONITOR Assy.	129,000
24	MB20004	C.R.T. Metal Bracket (Right, Left)	2,100
25	MB20005	C.R.T. Support Bracket (Front)	1,500
26	MB20006	C.R.T. Support Bracket (Rear)	1,400
27	AL20026	Transformer (100 ~ 240V)	10,000
28	MB20011	Electrolysis Capacitor	1,500
29	TA50033	Fuse Holder (2P)	280
30	MB20008	Fuse (10A)	50
31	PC50052	Fuse (2A)	50
32	TA50036	Noise Filter	4,000
33	TA50026	Service SW.	800
34	BP10011	Service SW. Bracket	140
35	BP50028A	Service SW. Button	100
36	BP10015	A.C. Service Socket	120
37	BP10016	Oil Capacitor	200
38	BP10017	Power Source Change SW.	380
39	BP10014	Service Outlet Bracket	430
40	MB20009	Rectifier	1,200
41	MB20010	Rectifier Fin	270
42	MC50002	Power Voltage Regulator Assy.	5,000
43	TA50046	Regulator Fin	1,200
44	TA50047	Regulator	3,200
45	TA50048	Cement Register	300
46	MC50003	Monitor Voltage Regulator Assy.	4,500
47	MC50004	Monitor Regulator Fin	1,000
48	MC50005	Monitor Regulator	3,000
49	MB20012	Fan	7,500
50	TA50020	Speaker	1,500
51	TA50023	Speaker Cover	900
52	PC50022	Ornament Speaker Bolt	20
53	PC50029	Nylon Clip (KD-2N)	40
54	PC50030	Nylon Clip (KD-4N)	50
55	PC50031	Nylon Clip (KD-7N)	60

* EX-Godown our office in Japanese YEN.

2

SPECIFICATIONS

- POWER SOURCE** : 100 ~ 240V (Variable)
- WATT CONSUMPTION** : 90W
- COINAGE** : 1 coin per play, 2 coins per play, 3 coins per play, 4 coins per play
* OPTION (Selector 2)
- PLAYER** : 1 coin per play, 1 coin per 2 plays, 1 coin per 3 plays
: 1 or 2 players
- GAME LIMIT** : 3 Rockets
- KEYS** : Table keys 2 sets
Cash box key 1 set
- FUSE RATINGS** : 1 at 10A, 1 at 5A, 1 at 2A


	Width	Depth	Height
TABLE	836mm · 32.91"	536mm · 21.1"	600~700mm (23.62"~29.13") (5 position adjustable)
MODEL	CASH BOX	240mm · 9.45"	140mm · 5.51"
UPRIGHT	BODY	630mm · 24.8"	1800mm · 70.87"
MODEL	CASH BOX	205mm · 8.07"	275mm · 10.83"

- These instructions and specifications may be changed without prior notification.
- If this machine is reconstructed without our permission, we can not take responsibility for the machine.

3

NOTES

- The MOON CRESTA has a T.V. monitor and care must be taken in moving this fragile machine.
- To prevent the cabinet over-heating do not place the MOON CRESTA directly in the sun or near heating.
- For a short time after connecting to power, the picture may be temporarily distorted.
- Do not check the solid state module with a TESTER even if you find out there is something wrong with it. The IC may be destroyed by the voltage of a TESTER.
- Disconnect the power supply before inserting or removing the P.C. board.

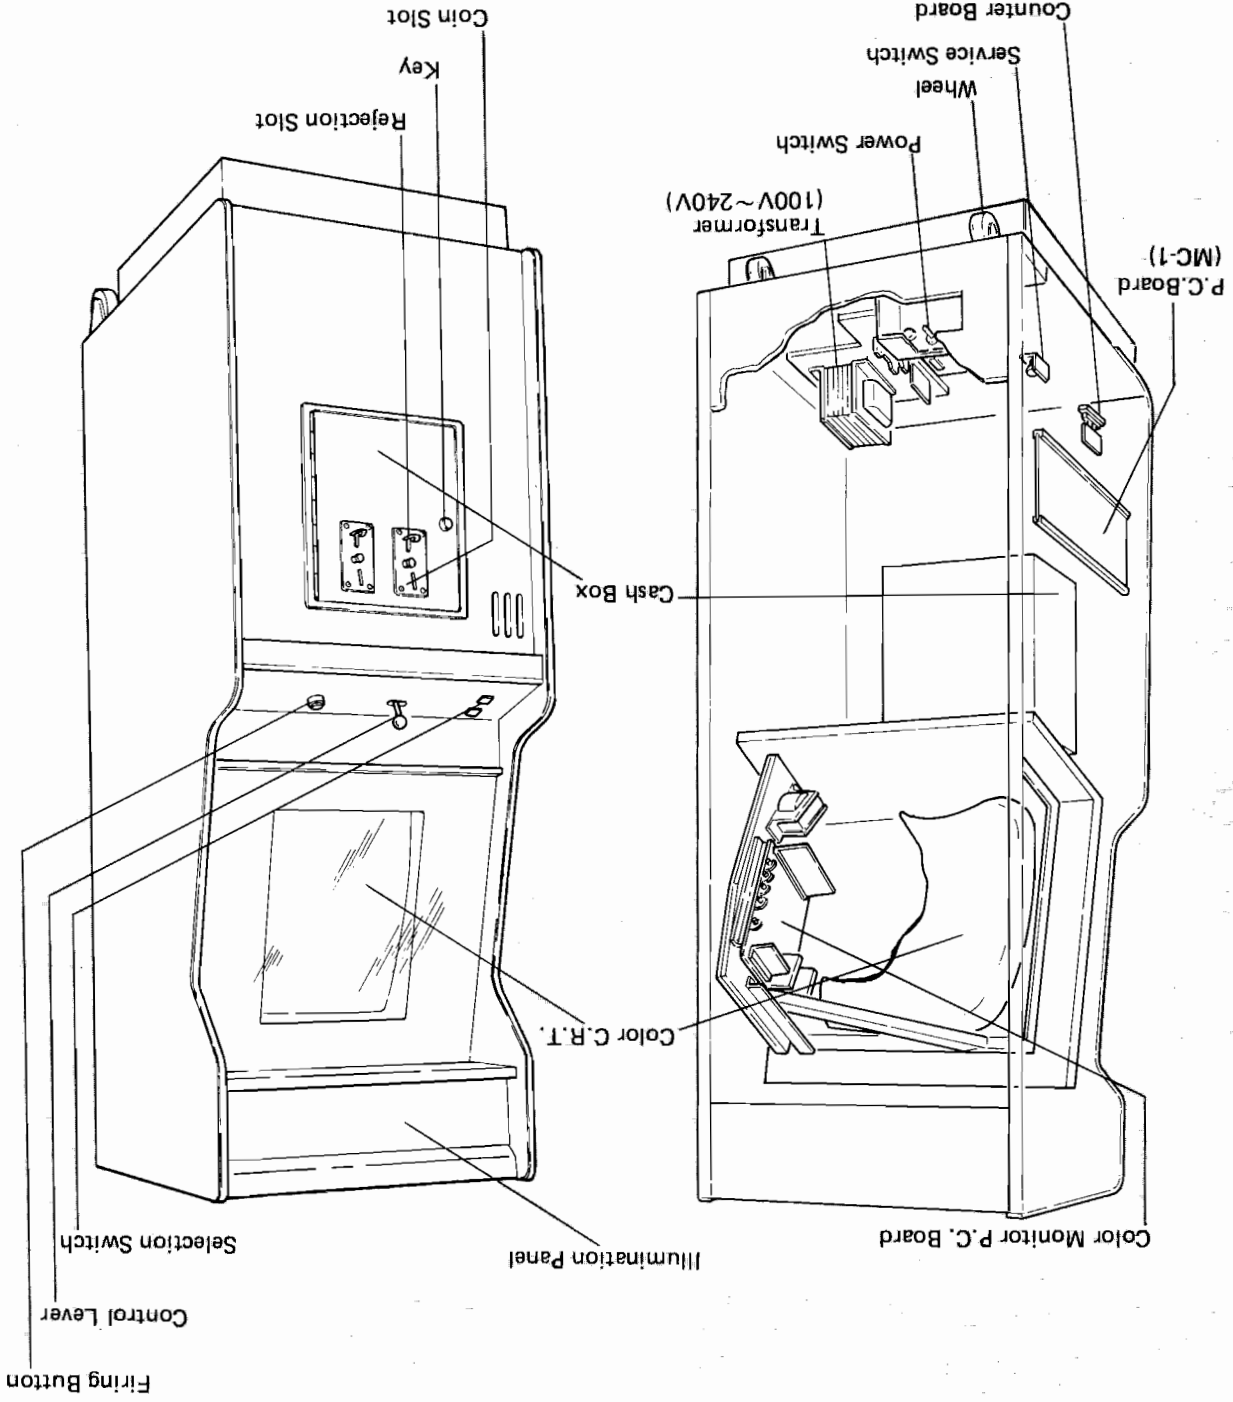

1 EACH PARTS NAME (UPRIGHT MODEL)

1

NO.	PARTS NO.	DESCRIPTION	UNIT PRICE (YEN)
56	MC50006	Control Plate A (Front)	2,000
57	MC50007	Control Plate B (Rear)	2,000
58	MB20015	Control Panel A (Front)	3,000
59	MB20017	Control Panel B (Rear)	2,500
60	AC20018	Coin Selector Bracket	1,600
61	AL20019	Coin Selector	6,000
62	TA50010	Micro SW.	1,200
63	MB20018	Control Knob	600
	MBA2018	Control Knob (Big)	700
64	MB20019	Firing Button Base	130
65	MB20020	Firing Button	110
66	TA50029	Selection SW. Assy.	1,700
67	TA50029A	Selection SW.	1,200
68	TA50029B	Selection SW. Base	280
69	TA50029C	Selection SW. Button	200
70	MB20028	Firing Micro SW.	1,200
71	MB20021	Control Shaft	1,200
	MBA2021	Control Shaft (Long)	1,300
72	MB20022	Control Lever	800
73	MB20023	Control Base Bracket	1,200
74	MB20024	Control Mounting Bracket	1,000
75	MB20025	Control Micro SW.	900
76	MB20026	Spring Plate	100
77	MB20027	Spring Board Bracket	80
78	PC50022	Ornament Bolt	20
79	AC20027	Nat	10
80	BP10042	Cash Box	3,000
	RC-10008B	Cash Box	4,500
81	PC50085	Key (For Set)	1,800
82	TA50013	Key Rock Plate	50
83	TA50038	Socket Housing (2R)	60
84	TA50037	Socket Housing (2P)	60
85	TA50039	Pin	30
86	TA50040	Pin	30
87	PC50046	Socket Housing (3R)	80
88	PC50045	Socket Housing (3P)	80
89	PC50042	Socket Housing (6R)	130
90	PC50041	Socket Housing (6P)	130
91	MB20046	Socket Housing (9R)	150
92	MB20045	Socket Housing (9P)	150


* EX-Godown our office in Japanese YEN.

10


PRINTED BOARD ASSEMBLY

NO.	PARTS NO.	DESCRIPTION	UNIT PRICE (YEN)
93	MC50008	M.C.P.C. Board Assy.	310,000
94	MC50009	MC-1 Board	200,000
95	MC50010	C.P.U-1 Board	27,000
96	MC50011	ROM-2 Board	30,000
97	MC50012	AL-12 Board	63,000
98	AL20021	P.C. Board Bracket (Horizontal Type)	1,500
	AL20022	P.C. Board Bracket (Vertical Type)	1,500
99	MC50013	Conversion P.C. Board Assy.	13,000
100	MC50014	Socket Housing (12P)	200
101	PC50035	Kel Connector (44P)	950
102	AL20023	Conversion P.C. Board (T)	5,000
103	AL20024	Conversion P.C. Board (U)	5,000
104	MC50015	Conversion P.C. Board (S)	10,000
105	MB20043	Counter Bracket	1,200
106	TA50035	Counter	2,600
107	PC50051	Fuse Holder	300
108	PC50052	Fuse (5A)	50
109	BP10041	Power SW.	380
110	AL20025	AL-5 P.C. Board	3,000
111	BP10042	Connector (10P)	600
112	BP10043	Connector Bracket	450


* EX-Godown our office in Japanese YEN.

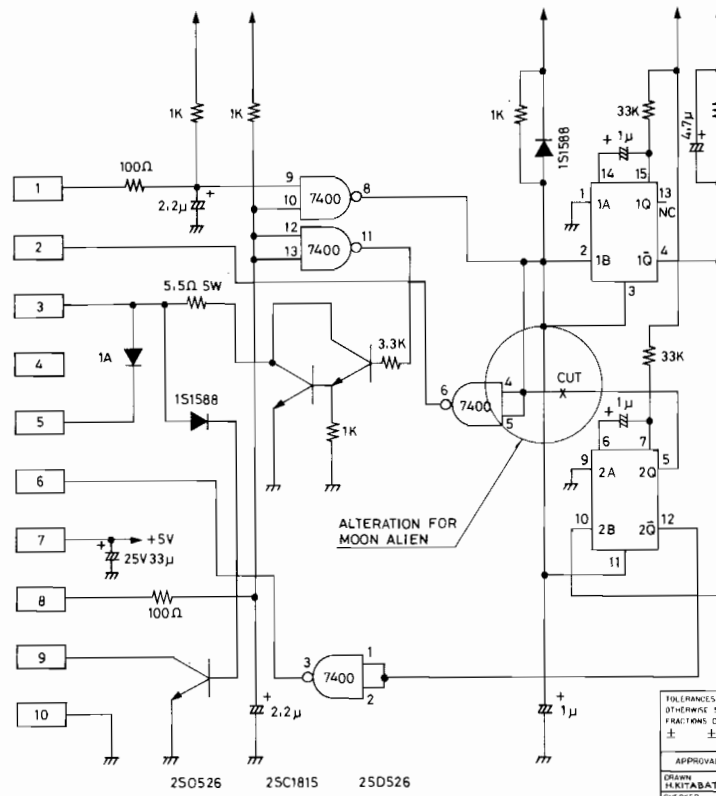

TOLERANCES UNLESS OTHERWISE SPECIFIED		© NIPPON BUSHAN CO., LTD.	
FRACTIONS DEC	ANGLES	12-9, 1-CHOME, TENJINBASHI, KITA-KU, OSAKA, JAPAN	
± ± ±	±	TELEPHONE: OSAKA (06) 353-9211	
APPROVALS		DATE	
DRAWN H. KITABATA		COIN COUNTER (MOON CREST) AL-5	
CHECKED	SCALE	SIZE	DRAWING NO.
SHEET			

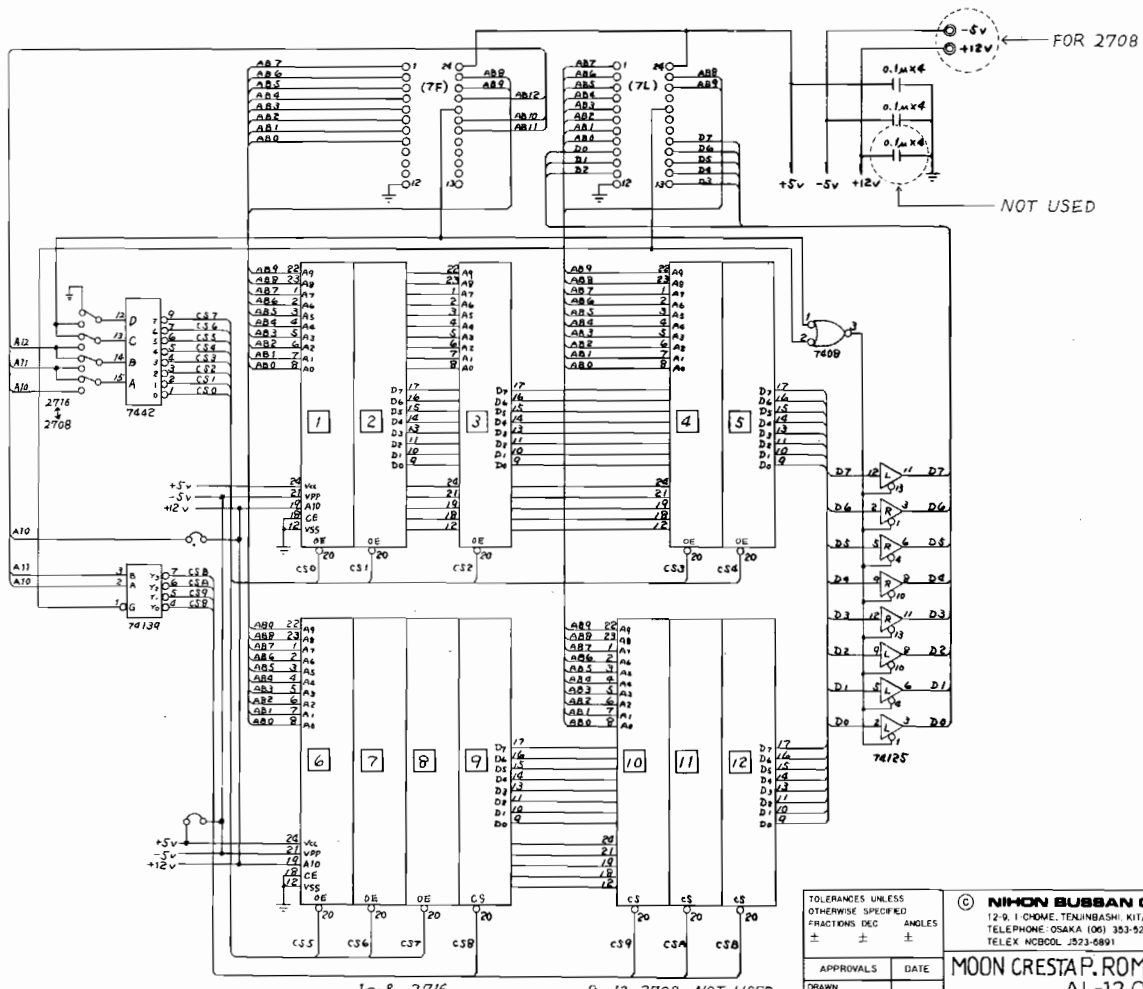

TOLERANCES UNLESS OTHERWISE SPECIFIED		© NIPPON BUSHAN CO., LTD.	
FRACTIONS DEC	ANGLES	12-9, 1-CHOME, TENJINBASHI, KITA-KU, OSAKA, JAPAN	
± ± ±	±	TELEPHONE: OSAKA (06) 353-9211	
APPROVALS		DATE	
DRAWN S. SAKURAI		27/3/1980	
CHECKED H. KITABATA	SCALE	SIZE	DRAWING NO.
SHEET			

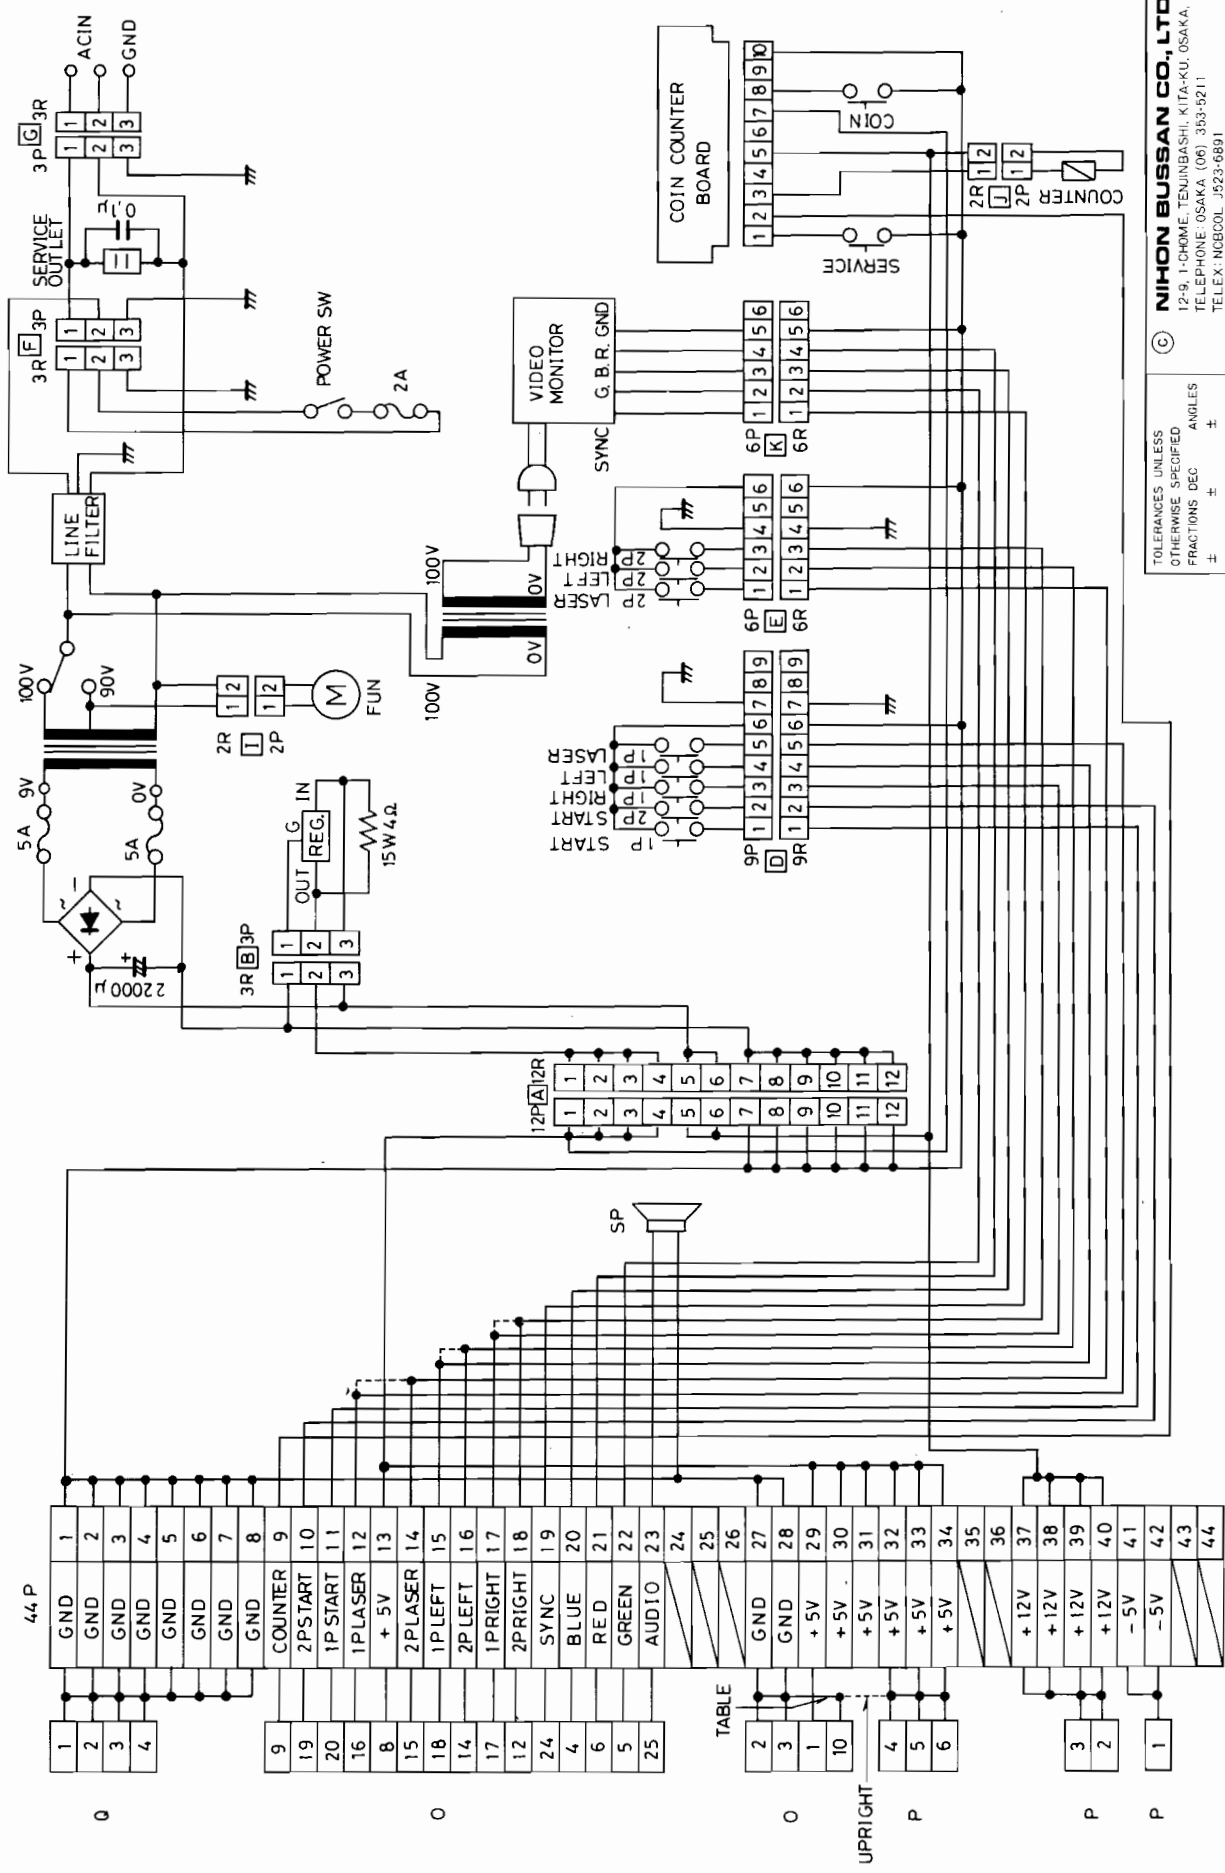


TOLERANCES UNLESS OTHERWISE SPECIFIED
 FRACTIONS DEC ANGLES
 ± ± ±

APPROVALS	DATE
DRAWN K. KITABATA	12.6.80
CHECKED	

© NIHON BUSSAN CO., LTD.
 12-9, 1-CHOME, TENJINBASHI, KITA-KU, OSAKA, JAPAN
 TELEPHONE: OSAKA (06) 353-9211
 TELEX: NCB00L J523-6891

MOON CRESTA
WIRING FIGURE MC-MB-1
 SCALE _____ SIZE _____ DRAWING NO. _____


----- UPRIGHT




Charles Baker

HEAD OFFICE : 12-9, 1-CHOME, TENJINBASHI,
 KITA-KU, OSAKA, JAPAN
 TELEPHONE (06) 353-5211
 TELEX 523-6891 NCBCOL J
 TOKYO BRANCH : TELEPHONE (03) 664-5271
 HIROSHIMA BRANCH : TELEPHONE (0822) 64-4531
 NARA BRANCH : TELEPHONE (0742) 33-6311
 SAPPORO BRANCH : TELEPHONE (011) 824-2571
 SENDAI BRANCH : TELEPHONE (0222) 65-5571
 NICHIBUTSU KYUSYU CO., LTD.
 : TELEPHONE (092) 472-7221
 NICHIBUTSU LEISURE SYSTEM CO., LTD.
 : TELEPHONE (03) 664-6774
 NICHIBUTSU U.S.A. : TELEPHONE (214) 750-6044

Nichibutsu
Nihon Bussan Co., Ltd.

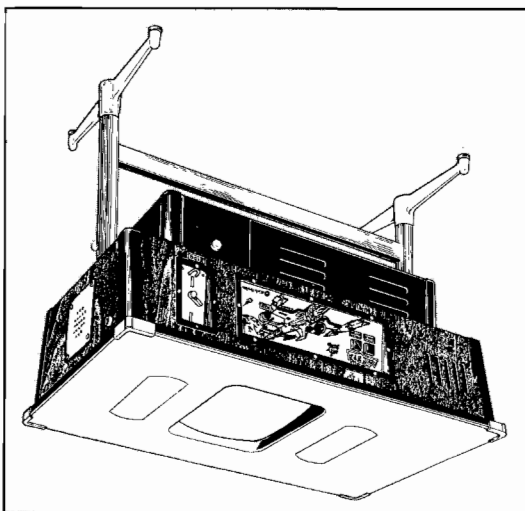

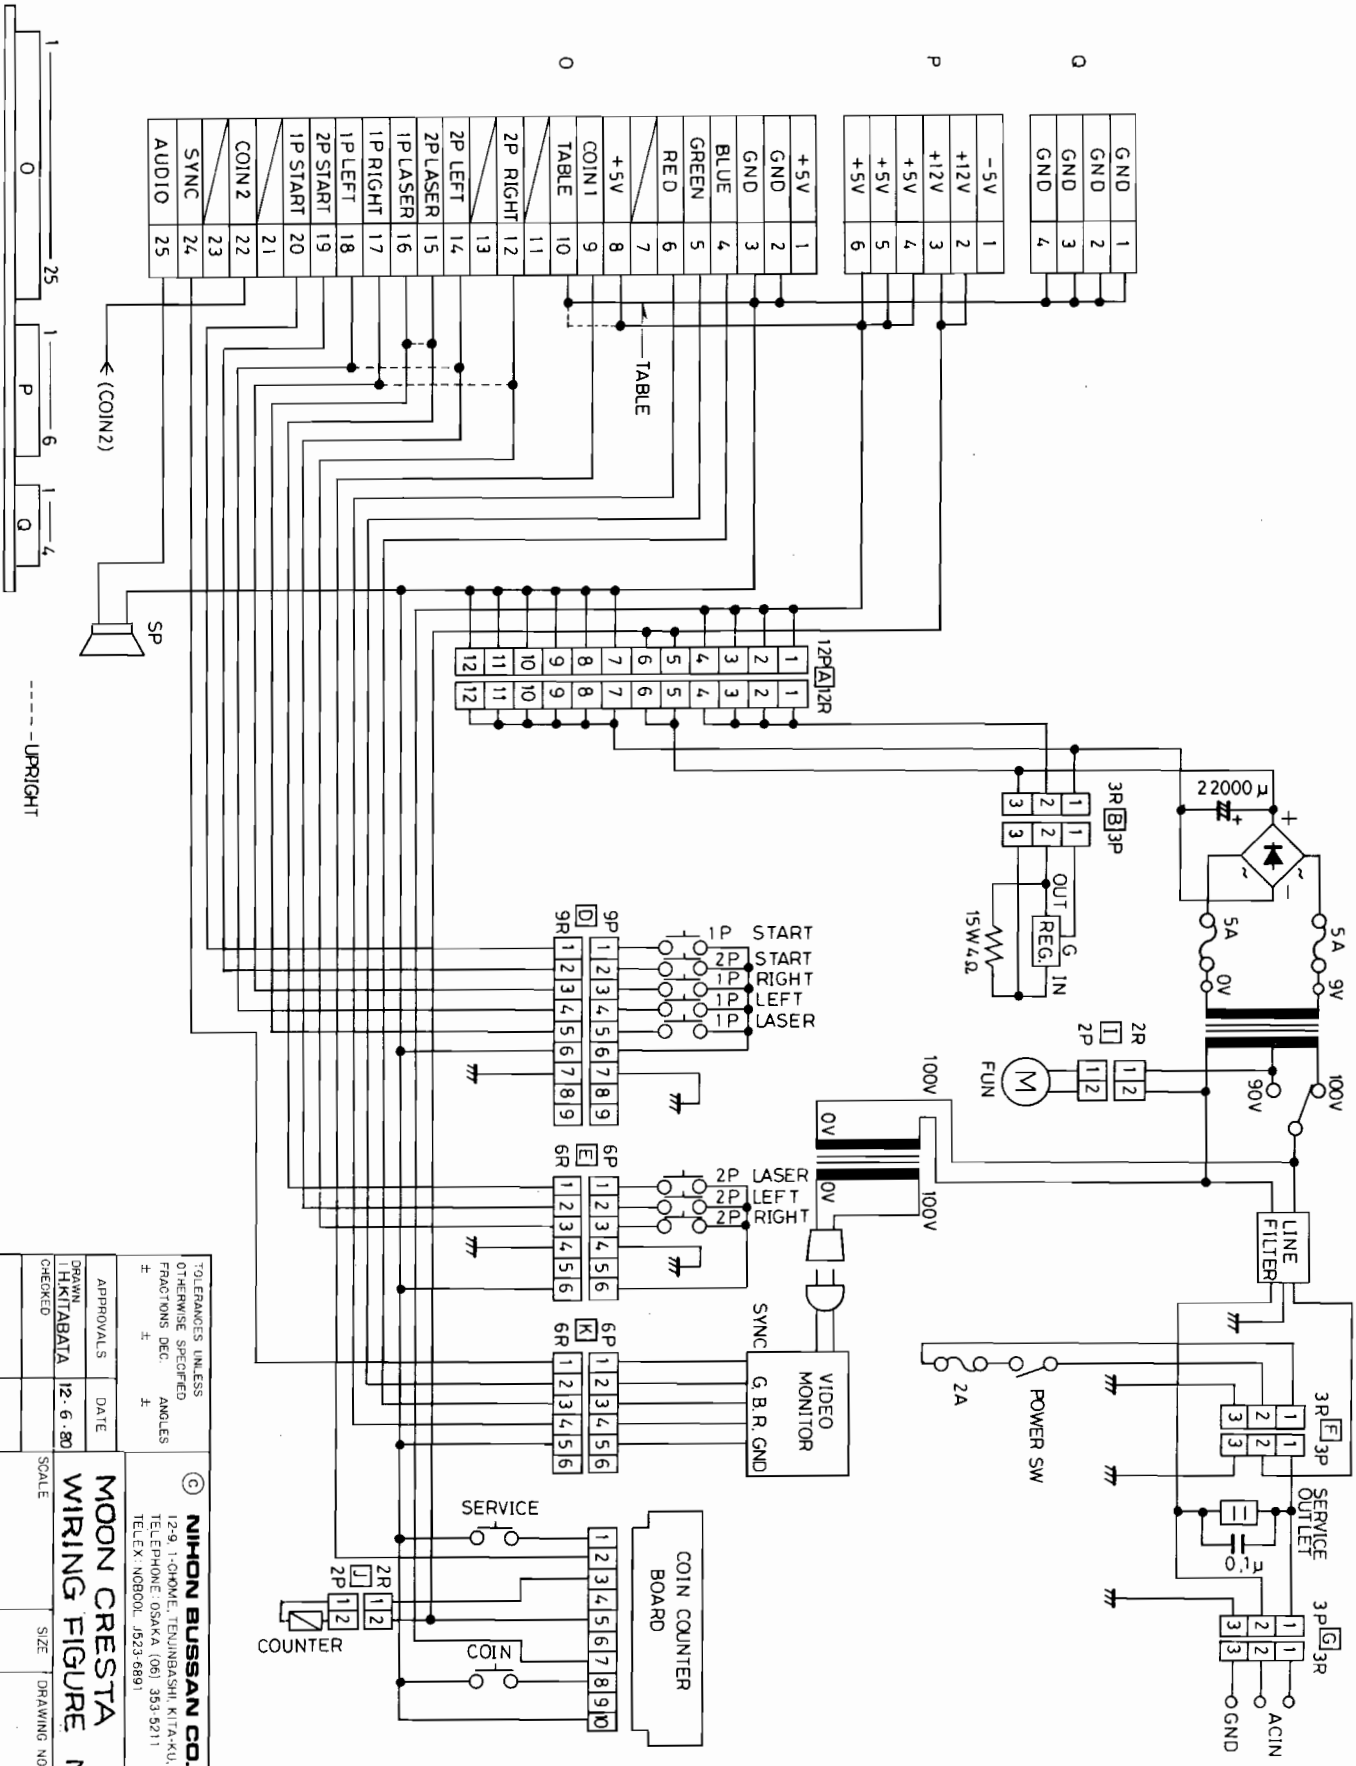


← (COIN2)
 ----- UPRIGHT


TOLERANCES UNLESS OTHERWISE SPECIFIED FRACTIONS DEC. ANGLES ±

© **NIHON BUSSAN CO., LTD.**
 12-9, 1-CHOME, TENJINBASHI, KITA-KU, OSAKA, JAPAN
 TELEPHONE: OSAKA (06) 353-5011
 TELEEX: N08900, J523-6891

MOON CRESTA
WIRING FIGURE MC-1

APPROVALS	DATE	SCALE	SIZE	DRAWING NO	SHEET
DRAWN HIKITABATA	12-6-80				
CHECKED					

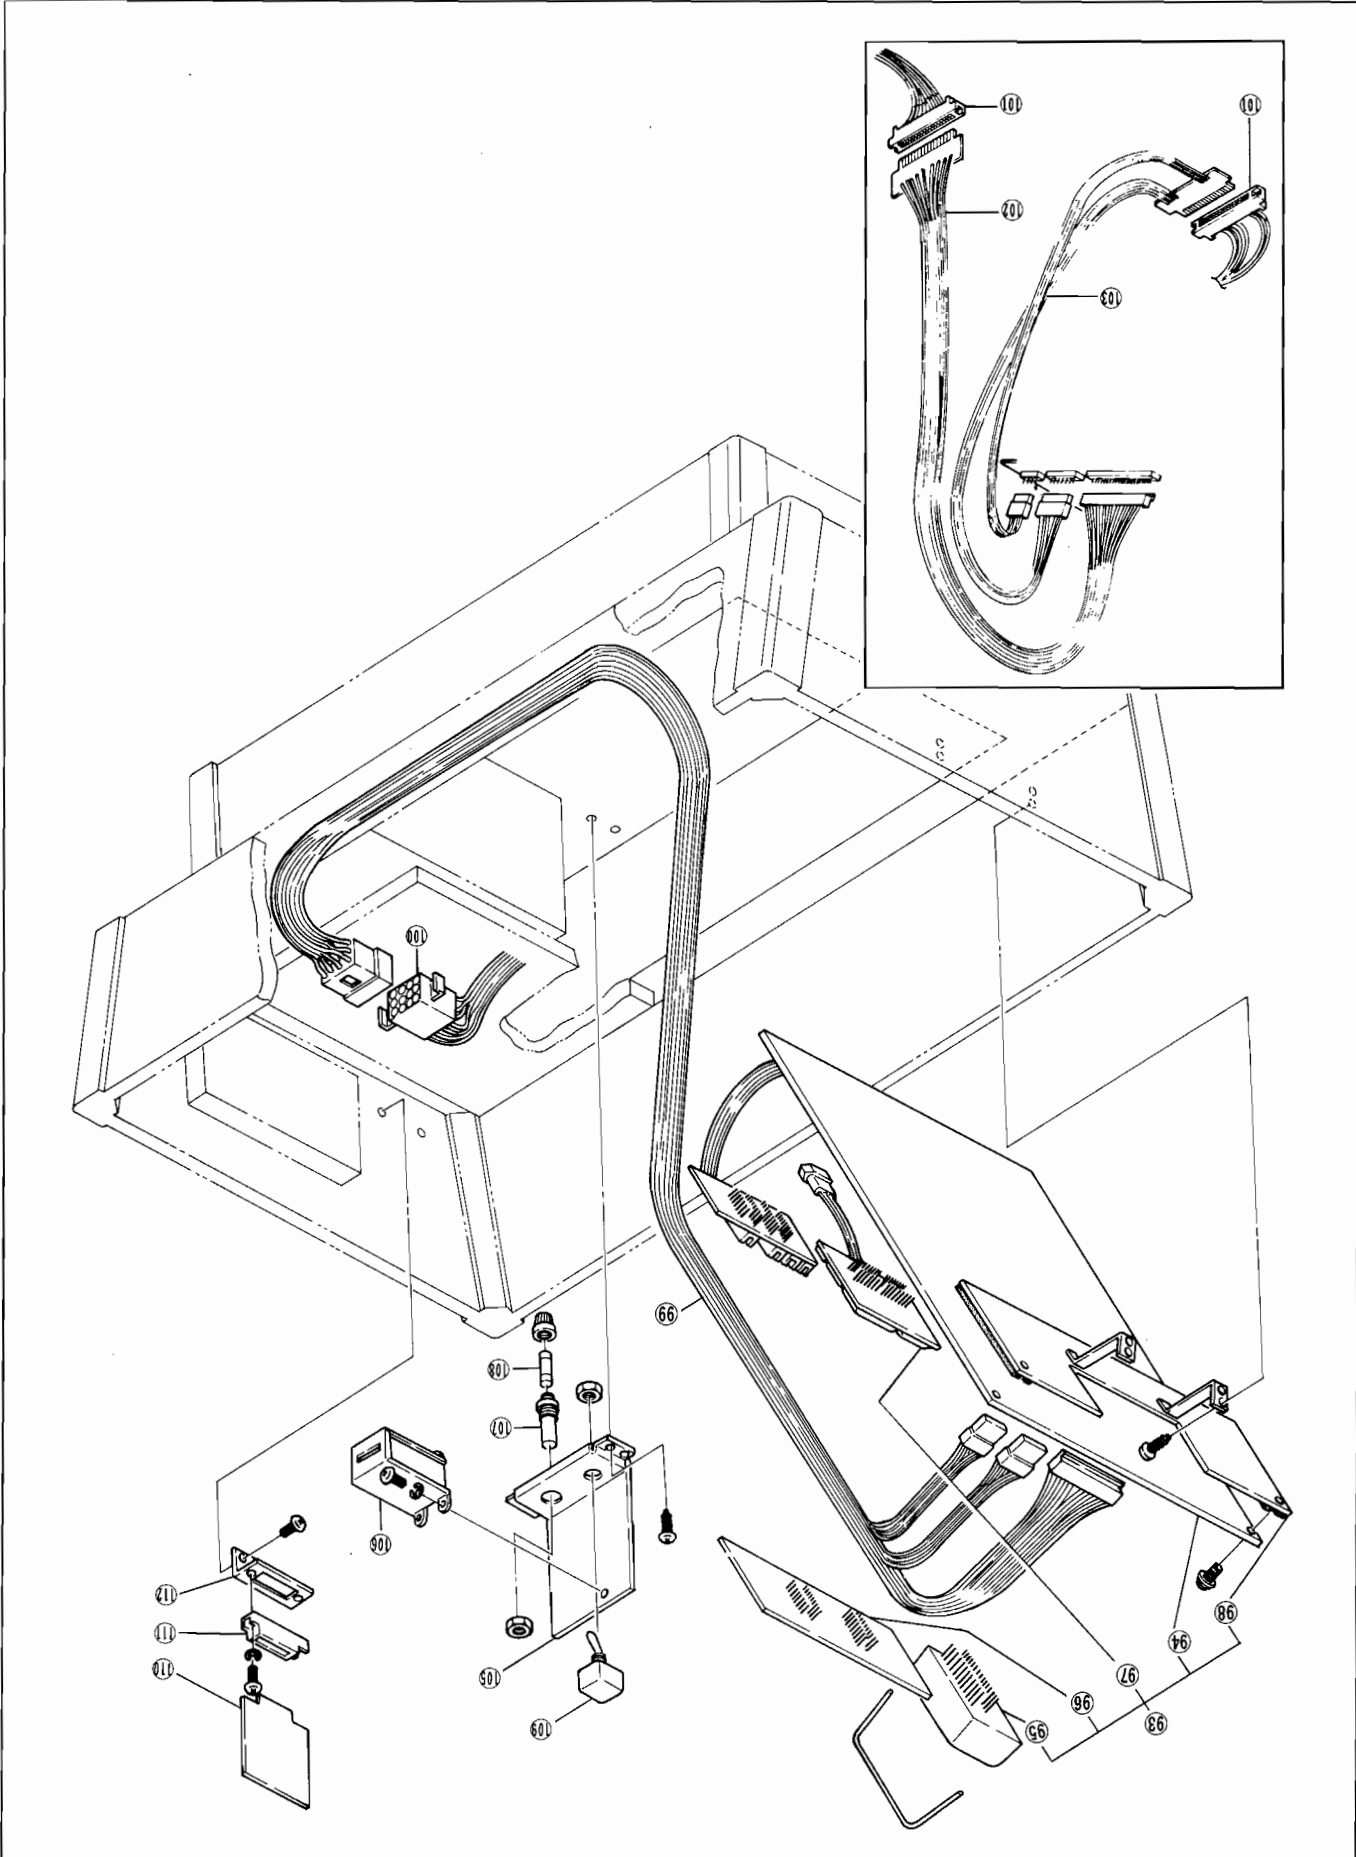

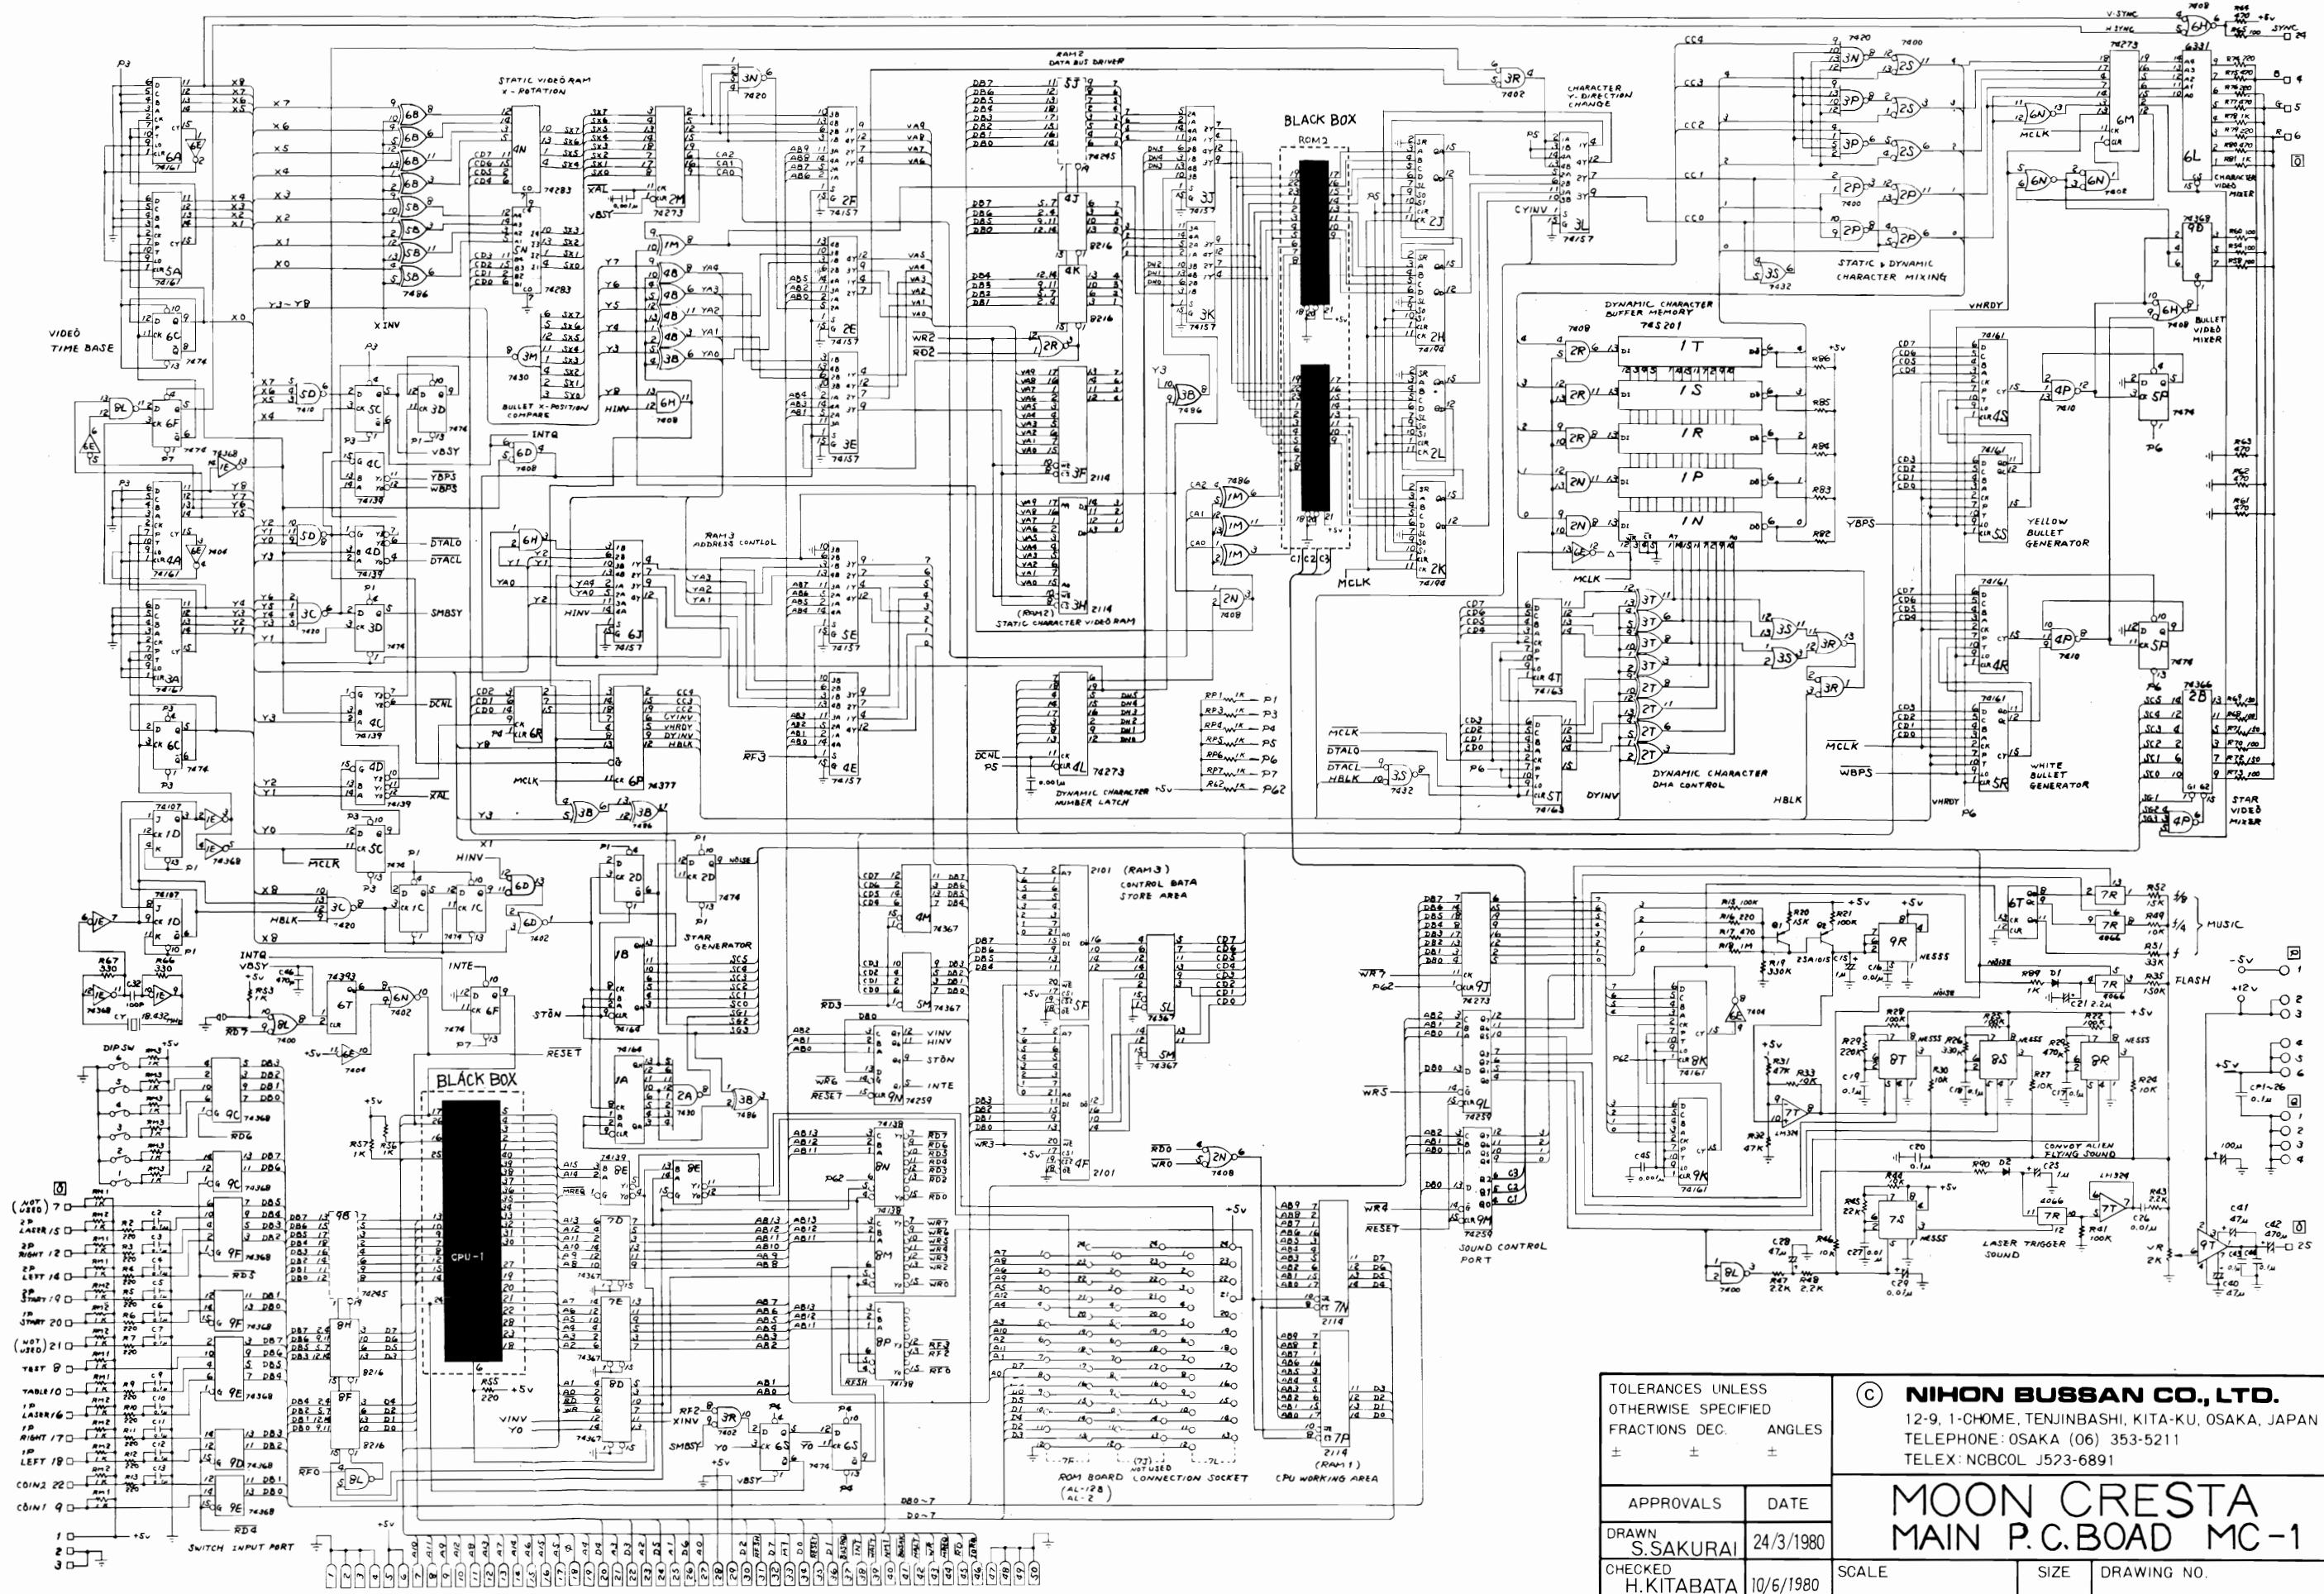

TOLERANCES UNLESS OTHERWISE SPECIFIED		FRACTIONS DEC.		ANGLES	
±		±		±	
APPROVALS		DATE		SCALE	
DRAWN S.SAKURAI		24/3/1980		SIZE	
CHECKED H.KITABATA		10/6/1980		DRAWING NO.	
				SHEET	

© Nihon Bussan Co., Ltd.
 12-9, 1-CHOME, TENJINBASHI, KITA-KU, OSAKA, JAPAN
 TELEPHONE: OSAKA (06) 353-5211
 TELEX: NCBOL J523-6891

MOON CRESTA MAIN P.C. BOARD MC-1

TOEI COLOR MONITOR CM-A20 HC

12-9-1 CHOMEI, TENJINBASHI, KITA-KU, OSAKA, JAPAN
 TELEPHONE: OSAKA (06) 353-5211
 TELEX: NCBOOL J523-6891

NIHON BUSSAN CO., LTD.

TOLERANCES UNLESS OTHERWISE SPECIFIED
 FRACTIONS DEC. ANGLES = = =

APPROVALS


DATE

DRAWN MIKAMI

SCALE 17 1 80


CHECKED H.KITABATA

19 4 80

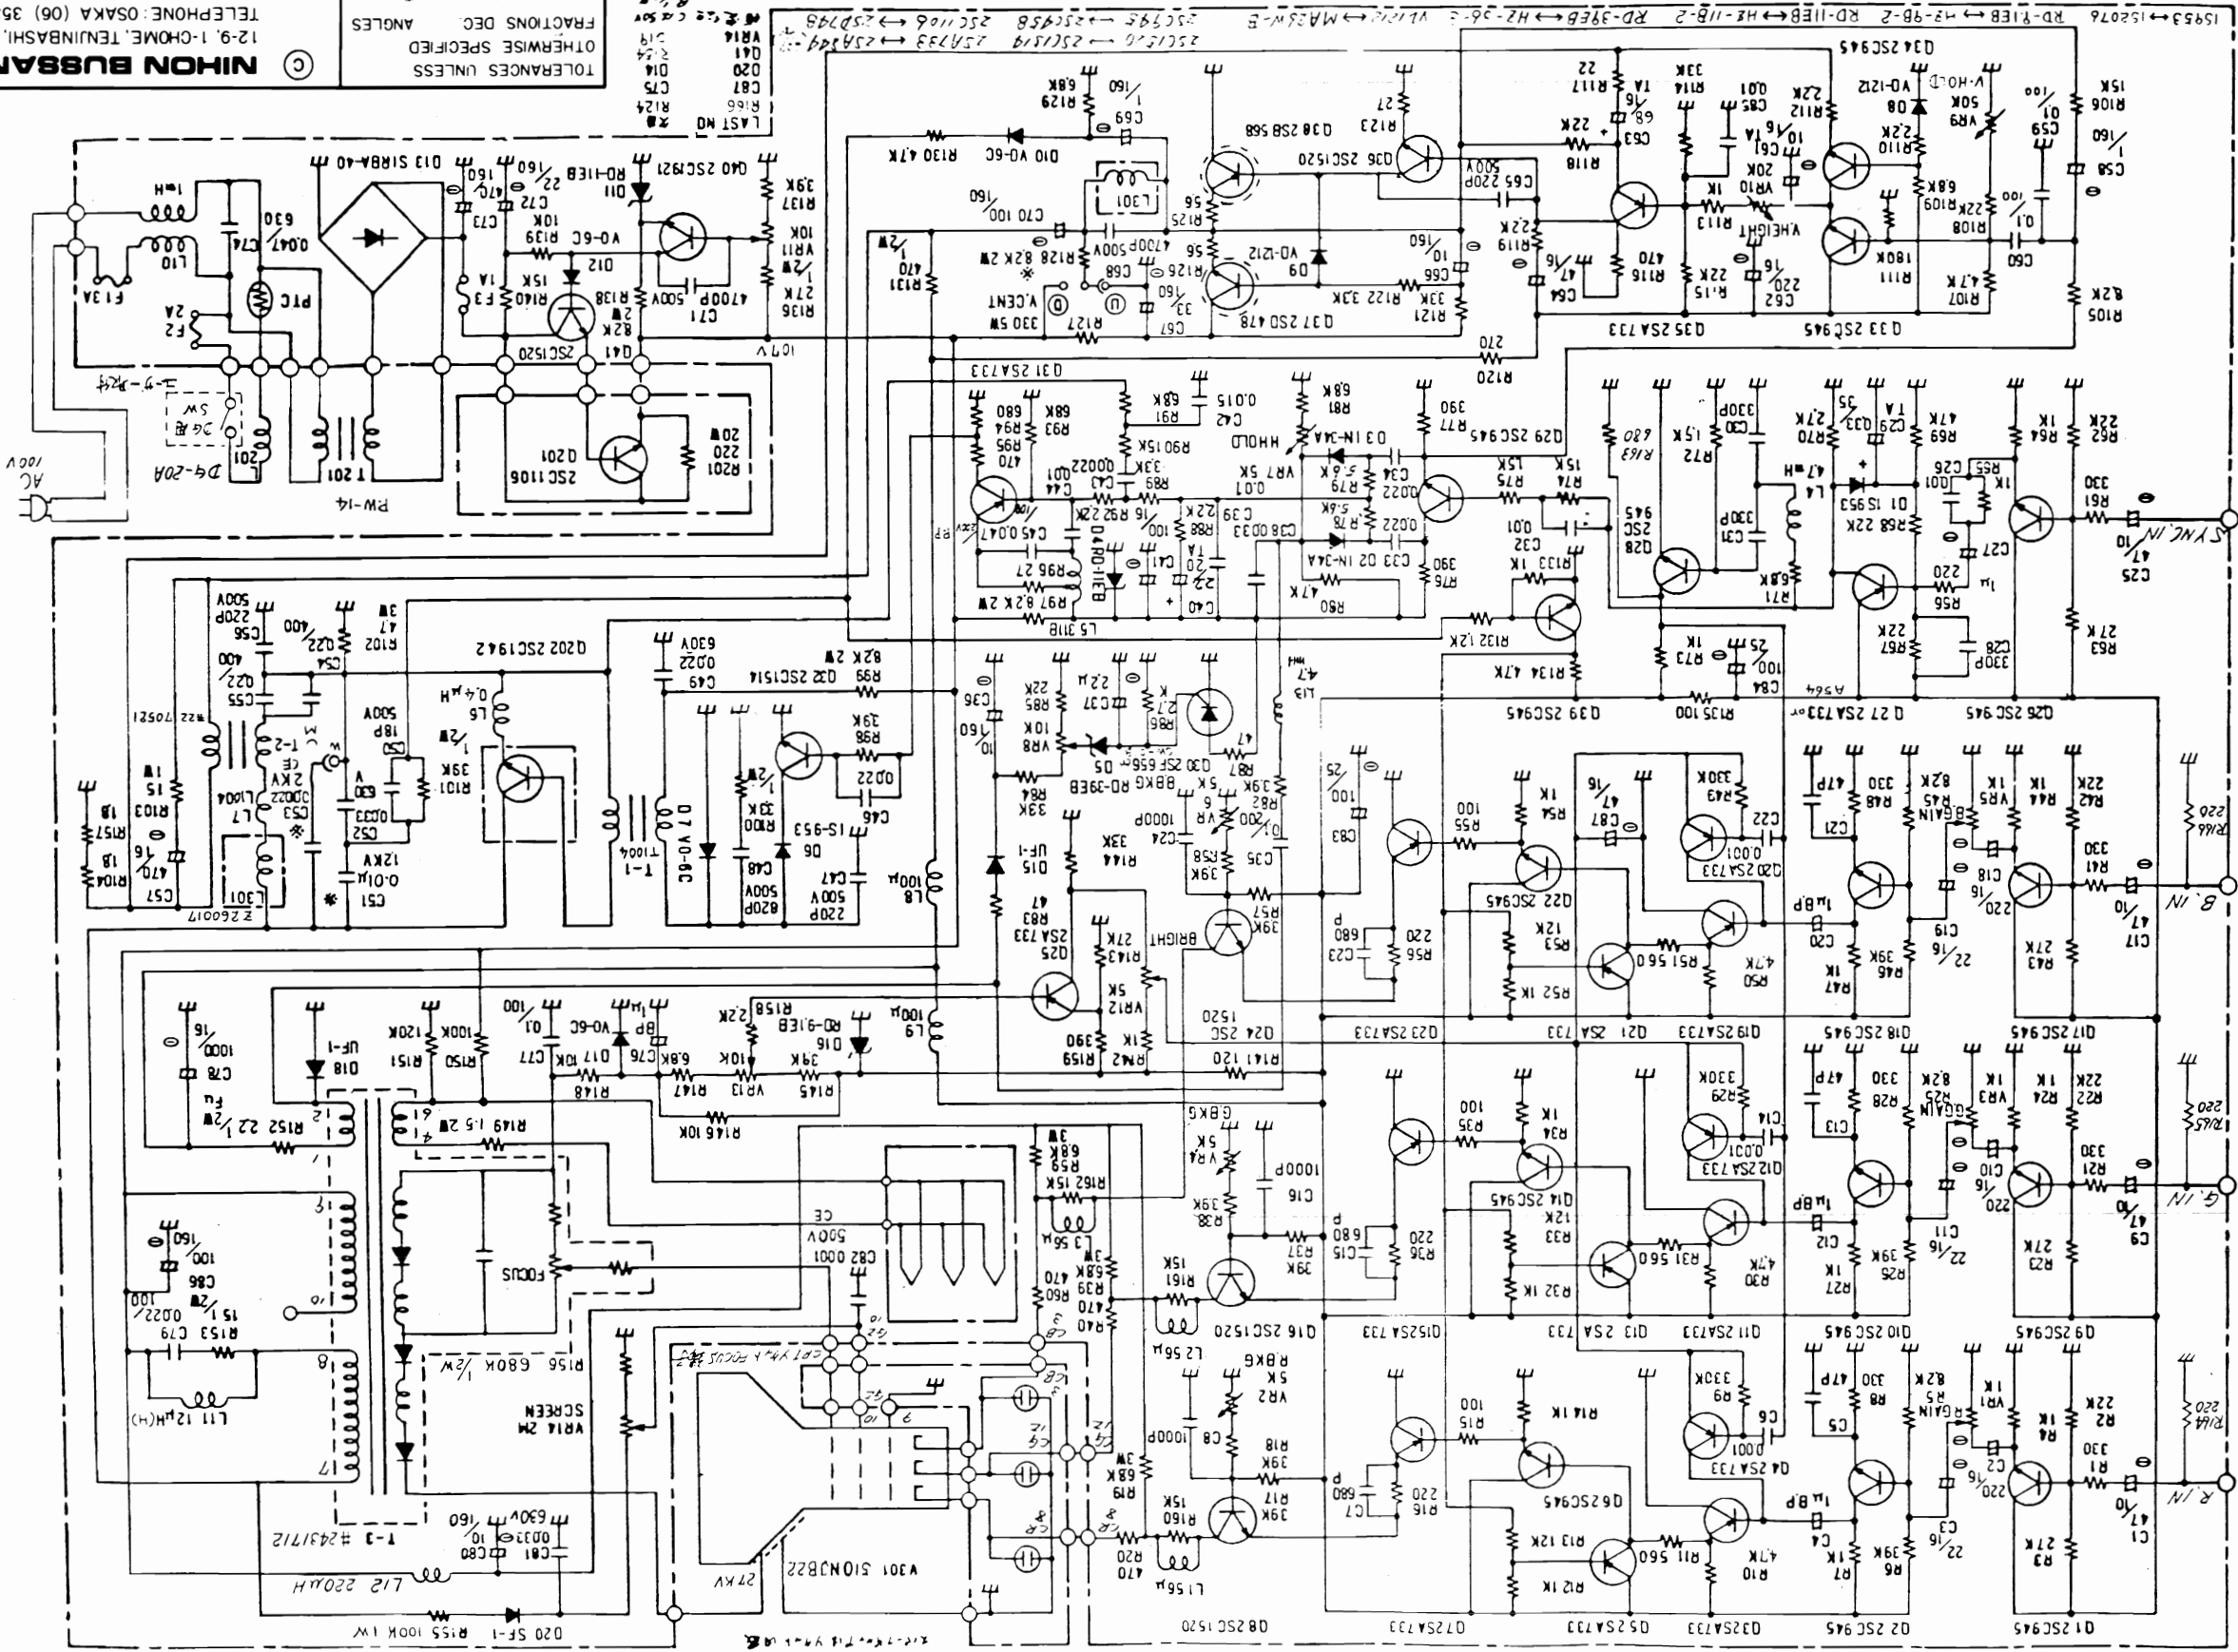

15953 → 152076 RD-11EB → HZ-9B-2 RD-11EB → HZ-11B-2 RD-39EB → HZ-26-E V1112 → MASW-E
 25C116 → 25C118 25N733 → 25N734 25C116 → 25C118 25C116 → 25C118
 LAST NO. R166 R124 R125 R126 R127 R128 R129 R130 R131 R132 R133 R134 R135 R136 R137 R138 R139 R140 R141 R142 R143 R144 R145 R146 R147 R148 R149 R150 R151 R152 R153 R154 R155 R156 R157 R158 R159 R160 R161 R162 R163 R164 R165 R166 R167 R168 R169 R170 R171 R172 R173 R174 R175 R176 R177 R178 R179 R180 R181 R182 R183 R184 R185 R186 R187 R188 R189 R190 R191 R192 R193 R194 R195 R196 R197 R198 R199 R200 R201 R202 R203 R204 R205 R206 R207 R208 R209 R210 R211 R212 R213 R214 R215 R216 R217 R218 R219 R220 R221 R222 R223 R224 R225 R226 R227 R228 R229 R230 R231 R232 R233 R234 R235 R236 R237 R238 R239 R240 R241 R242 R243 R244 R245 R246 R247 R248 R249 R250 R251 R252 R253 R254 R255 R256 R257 R258 R259 R260 R261 R262 R263 R264 R265 R266 R267 R268 R269 R270 R271 R272 R273 R274 R275 R276 R277 R278 R279 R280 R281 R282 R283 R284 R285 R286 R287 R288 R289 R290 R291 R292 R293 R294 R295 R296 R297 R298 R299 R300 R301 R302 R303 R304 R305 R306 R307 R308 R309 R310 R311 R312 R313 R314 R315 R316 R317 R318 R319 R320 R321 R322 R323 R324 R325 R326 R327 R328 R329 R330 R331 R332 R333 R334 R335 R336 R337 R338 R339 R340 R341 R342 R343 R344 R345 R346 R347 R348 R349 R350 R351 R352 R353 R354 R355 R356 R357 R358 R359 R360 R361 R362 R363 R364 R365 R366 R367 R368 R369 R370 R371 R372 R373 R374 R375 R376 R377 R378 R379 R380 R381 R382 R383 R384 R385 R386 R387 R388 R389 R390 R391 R392 R393 R394 R395 R396 R397 R398 R399 R400 R401 R402 R403 R404 R405 R406 R407 R408 R409 R410 R411 R412 R413 R414 R415 R416 R417 R418 R419 R420 R421 R422 R423 R424 R425 R426 R427 R428 R429 R430 R431 R432 R433 R434 R435 R436 R437 R438 R439 R440 R441 R442 R443 R444 R445 R446 R447 R448 R449 R450 R451 R452 R453 R454 R455 R456 R457 R458 R459 R460 R461 R462 R463 R464 R465 R466 R467 R468 R469 R470 R471 R472 R473 R474 R475 R476 R477 R478 R479 R480 R481 R482 R483 R484 R485 R486 R487 R488 R489 R490 R491 R492 R493 R494 R495 R496 R497 R498 R499 R500 R501 R502 R503 R504 R505 R506 R507 R508 R509 R510 R511 R512 R513 R514 R515 R516 R517 R518 R519 R520 R521 R522 R523 R524 R525 R526 R527 R528 R529 R530 R531 R532 R533 R534 R535 R536 R537 R538 R539 R540 R541 R542 R543 R544 R545 R546 R547 R548 R549 R550 R551 R552 R553 R554 R555 R556 R557 R558 R559 R560 R561 R562 R563 R564 R565 R566 R567 R568 R569 R570 R571 R572 R573 R574 R575 R576 R577 R578 R579 R580 R581 R582 R583 R584 R585 R586 R587 R588 R589 R590 R591 R592 R593 R594 R595 R596 R597 R598 R599 R600 R601 R602 R603 R604 R605 R606 R607 R608 R609 R610 R611 R612 R613 R614 R615 R616 R617 R618 R619 R620 R621 R622 R623 R624 R625 R626 R627 R628 R629 R630 R631 R632 R633 R634 R635 R636 R637 R638 R639 R640 R641 R642 R643 R644 R645 R646 R647 R648 R649 R650 R651 R652 R653 R654 R655 R656 R657 R658 R659 R660 R661 R662 R663 R664 R665 R666 R667 R668 R669 R670 R671 R672 R673 R674 R675 R676 R677 R678 R679 R680 R681 R682 R683 R684 R685 R686 R687 R688 R689 R690 R691 R692 R693 R694 R695 R696 R697 R698 R699 R700 R701 R702 R703 R704 R705 R706 R707 R708 R709 R710 R711 R712 R713 R714 R715 R716 R717 R718 R719 R720 R721 R722 R723 R724 R725 R726 R727 R728 R729 R730 R731 R732 R733 R734 R735 R736 R737 R738 R739 R740 R741 R742 R743 R744 R745 R746 R747 R748 R749 R750 R751 R752 R753 R754 R755 R756 R757 R758 R759 R760 R761 R762 R763 R764 R765 R766 R767 R768 R769 R770 R771 R772 R773 R774 R775 R776 R777 R778 R779 R780 R781 R782 R783 R784 R785 R786 R787 R788 R789 R790 R791 R792 R793 R794 R795 R796 R797 R798 R799 R800 R801 R802 R803 R804 R805 R806 R807 R808 R809 R810 R811 R812 R813 R814 R815 R816 R817 R818 R819 R820 R821 R822 R823 R824 R825 R826 R827 R828 R829 R830 R831 R832 R833 R834 R835 R836 R837 R838 R839 R840 R841 R842 R843 R844 R845 R846 R847 R848 R849 R850 R851 R852 R853 R854 R855 R856 R857 R858 R859 R860 R861 R862 R863 R864 R865 R866 R867 R868 R869 R870 R871 R872 R873 R874 R875 R876 R877 R878 R879 R880 R881 R882 R883 R884 R885 R886 R887 R888 R889 R890 R891 R892 R893 R894 R895 R896 R897 R898 R899 R900 R901 R902 R903 R904 R905 R906 R907 R908 R909 R910 R911 R912 R913 R914 R915 R916 R917 R918 R919 R920 R921 R922 R923 R924 R925 R926 R927 R928 R929 R930 R931 R932 R933 R934 R935 R936 R937 R938 R939 R940 R941 R942 R943 R944 R945 R946 R947 R948 R949 R950 R951 R952 R953 R954 R955 R956 R957 R958 R959 R960 R961 R962 R963 R964 R965 R966 R967 R968 R969 R970 R971 R972 R973 R974 R975 R976 R977 R978 R979 R980 R981 R982 R983 R984 R985 R986 R987 R988 R989 R990 R991 R992 R993 R994 R995 R996 R997 R998 R999 R1000

SCHEMATICS
WIRING FIGURES

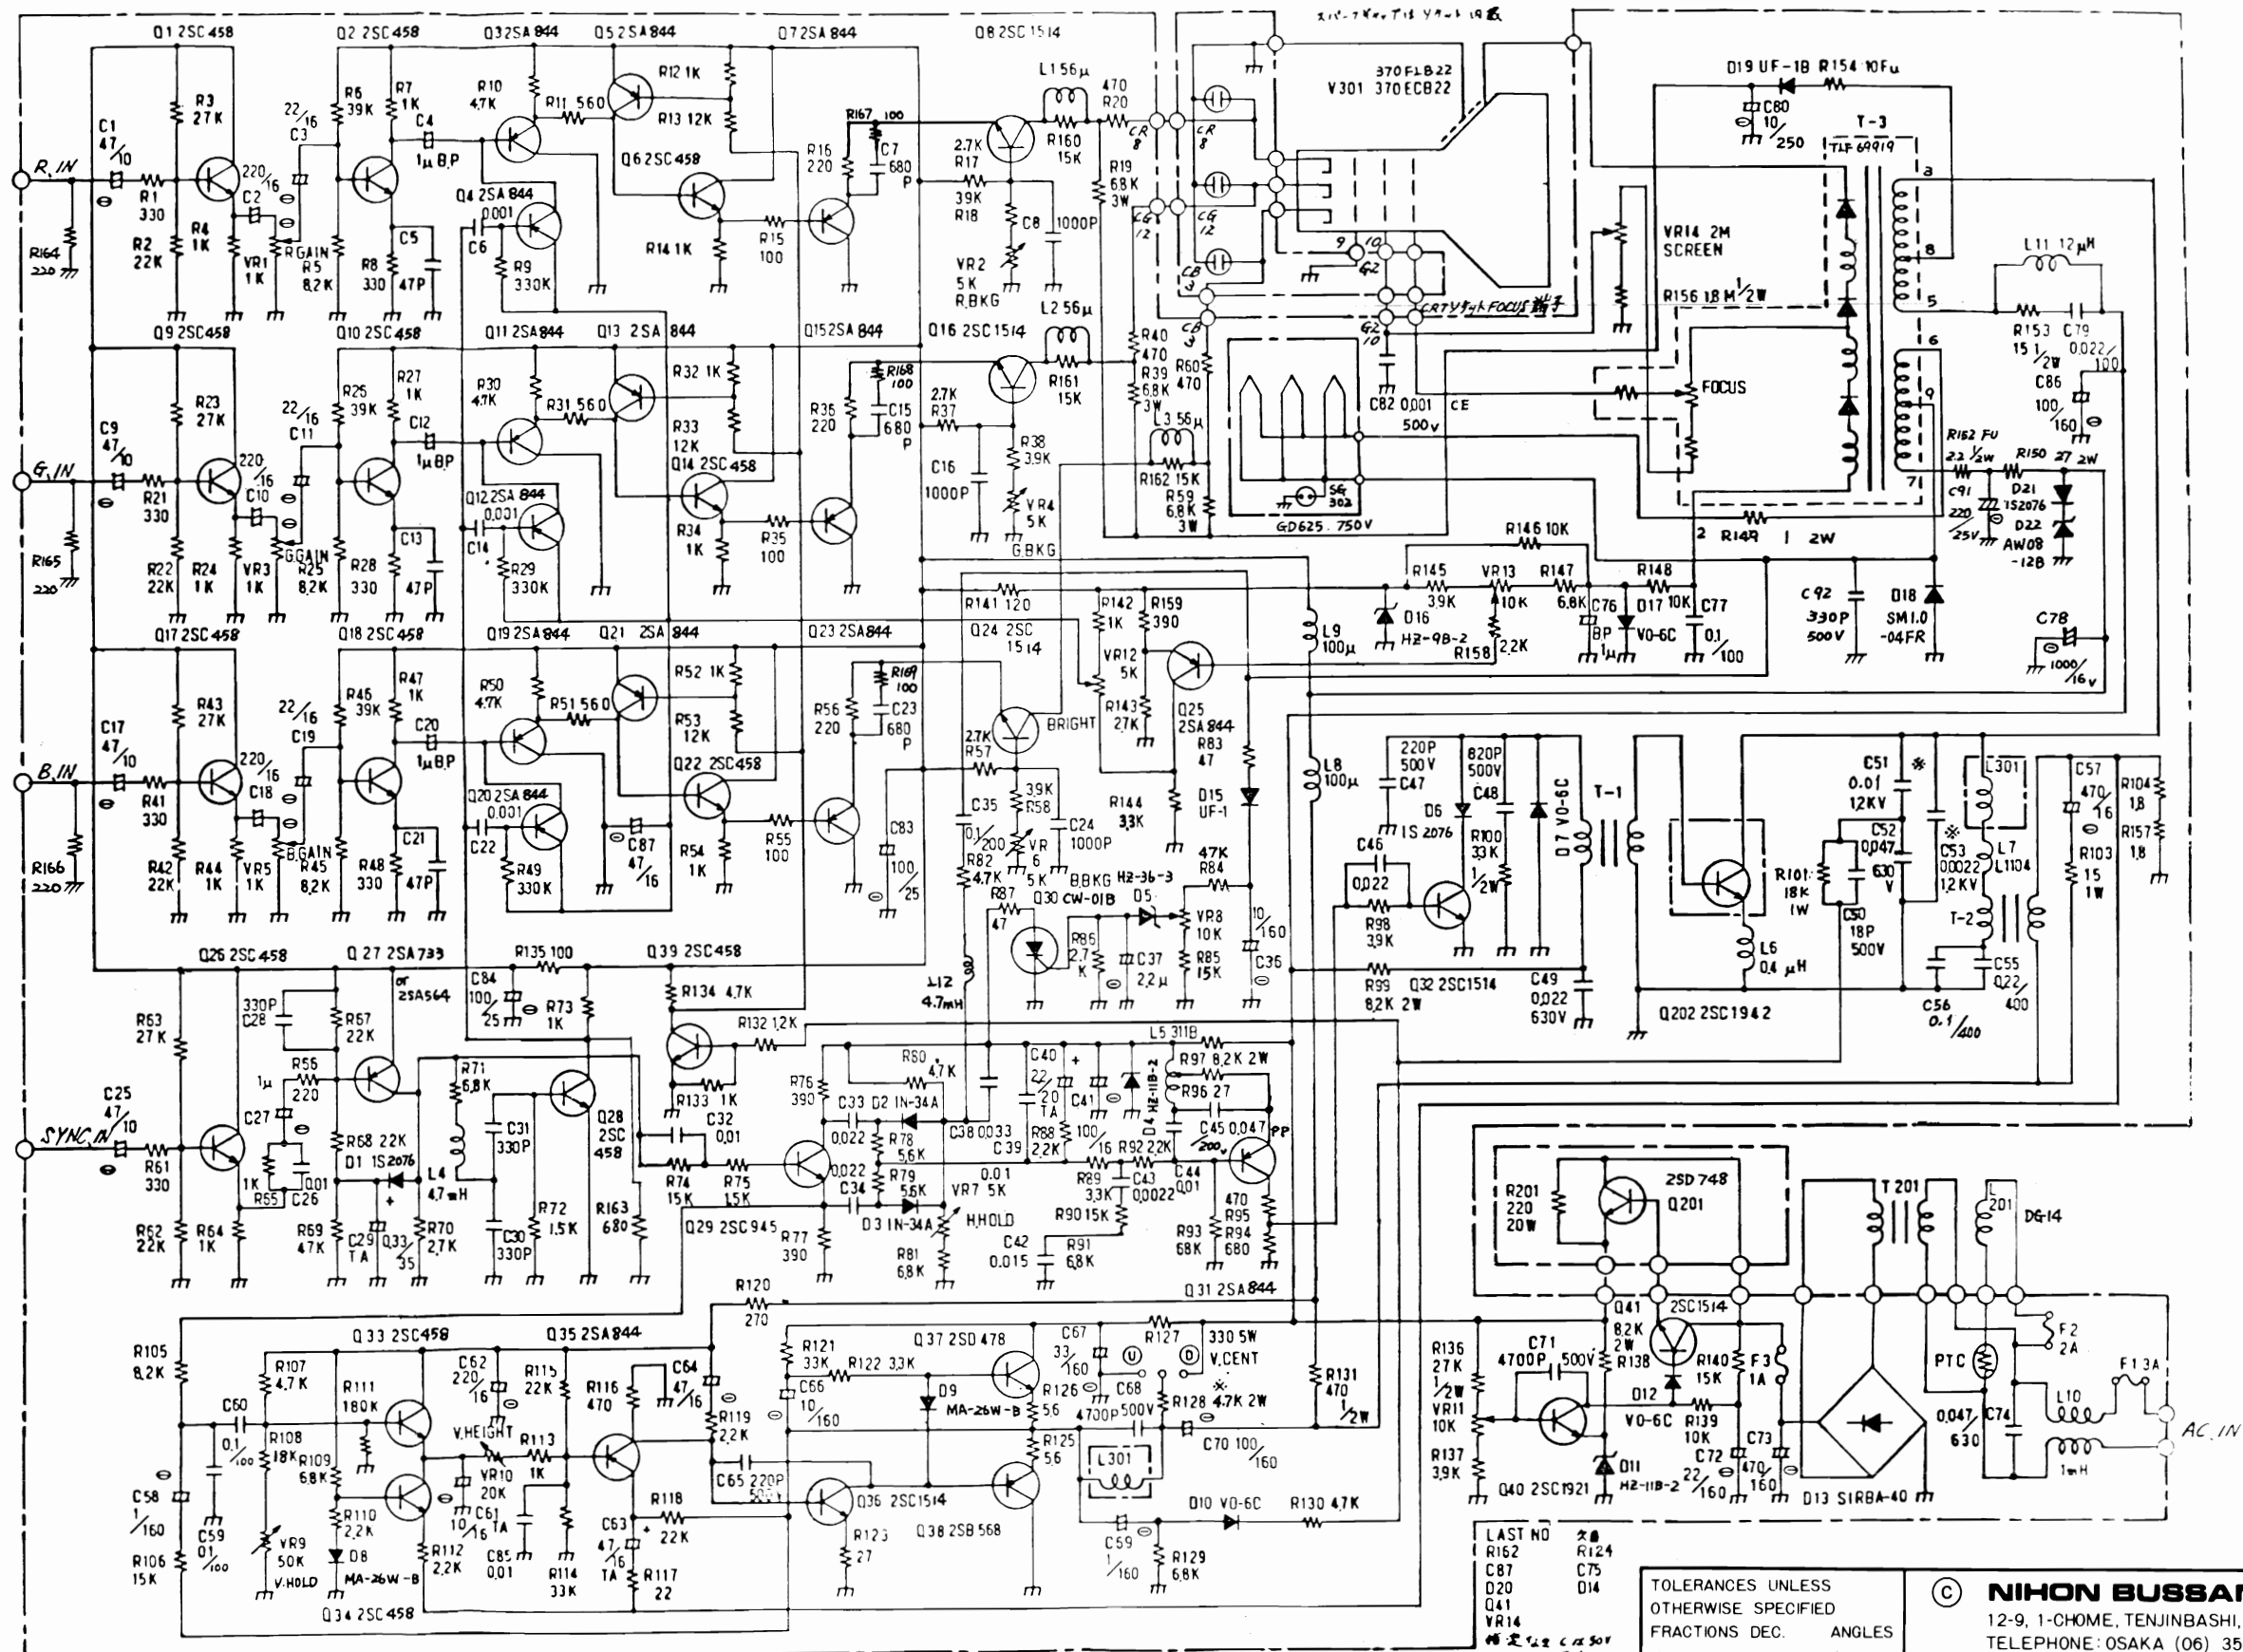

LAST NO
 R152 28
 C87 C75
 D20 C75
 Q41 D14
 VR14


TOLERANCES UNLESS OTHERWISE SPECIFIED
 FRACTIONS DEC. ANGLES
 ± ± ±

© **NIHON BUSSAN CO., LTD.**
 12-9, 1-CHOME, TENJINBASHI, KITA-KU, OSAKA, JAPAN
 TELEPHONE: OSAKA (06) 353-5211
 TELEX: NCBOL J523-6891


APPROVALS	DATE	TOEI COLOR MONITOR		SCALE	SIZE	DRAWING NO.
DRAWN MIKAMI	13/3/80	CM-C14 HC				
CHECKED H.KITABATA	19/4/80					
						C-476
						SHEET

MONITOR ADJUSTMENTS

The monitor is adjusted in best condition when shipping. If there is need to adjust it, do it as follows.

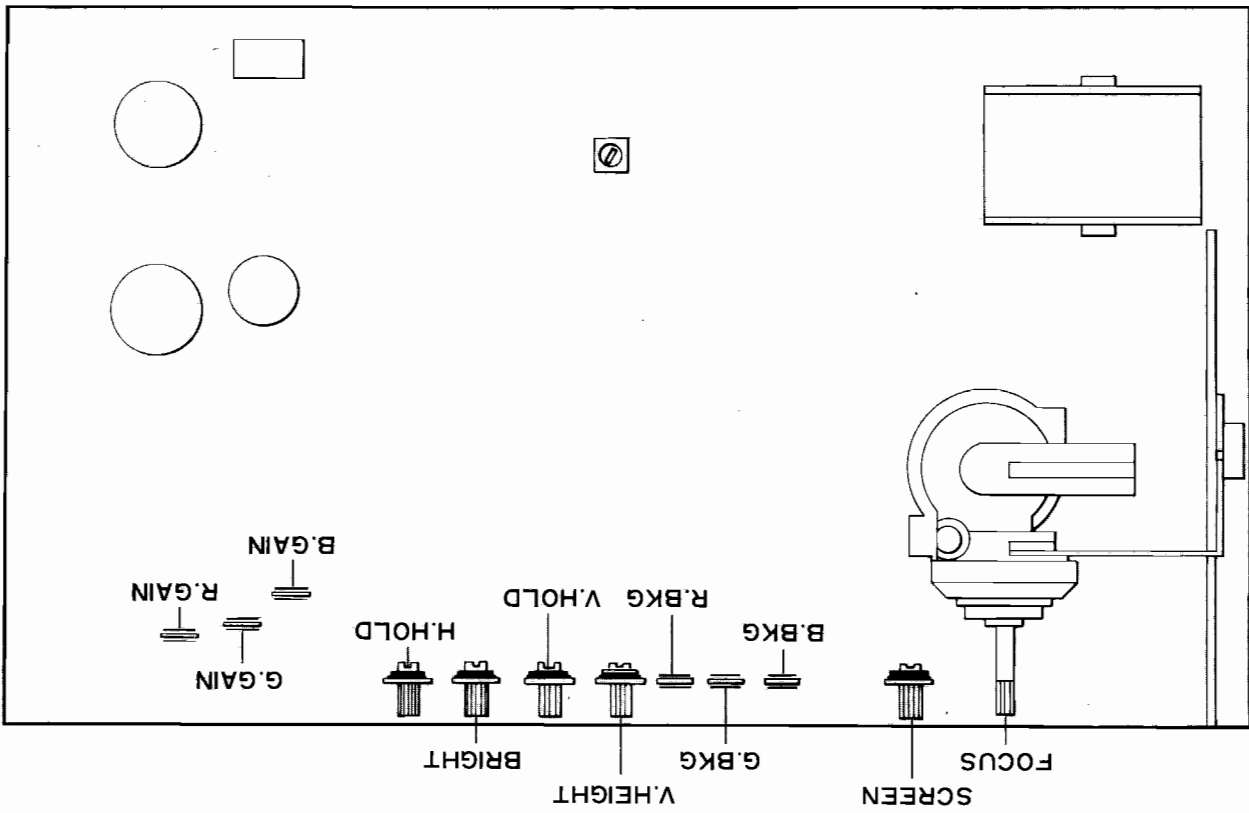


- **H. HOLD:** Adjustment for keeping the picture horizontally.
- **V. HEIGHT:** Adjustment for vertical height.
- **V. HOLD:** Adjustment for keeping the picture vertically.
- **BLUE BKG, RED BKG, GREEN BKG:** Adjustment for white balance in bright picture.
- **BLUE, GREEN, RED, GAIN:** Adjustment for white balance in dark picture.
- **FOCUS:** Adjustment for focus on picture.

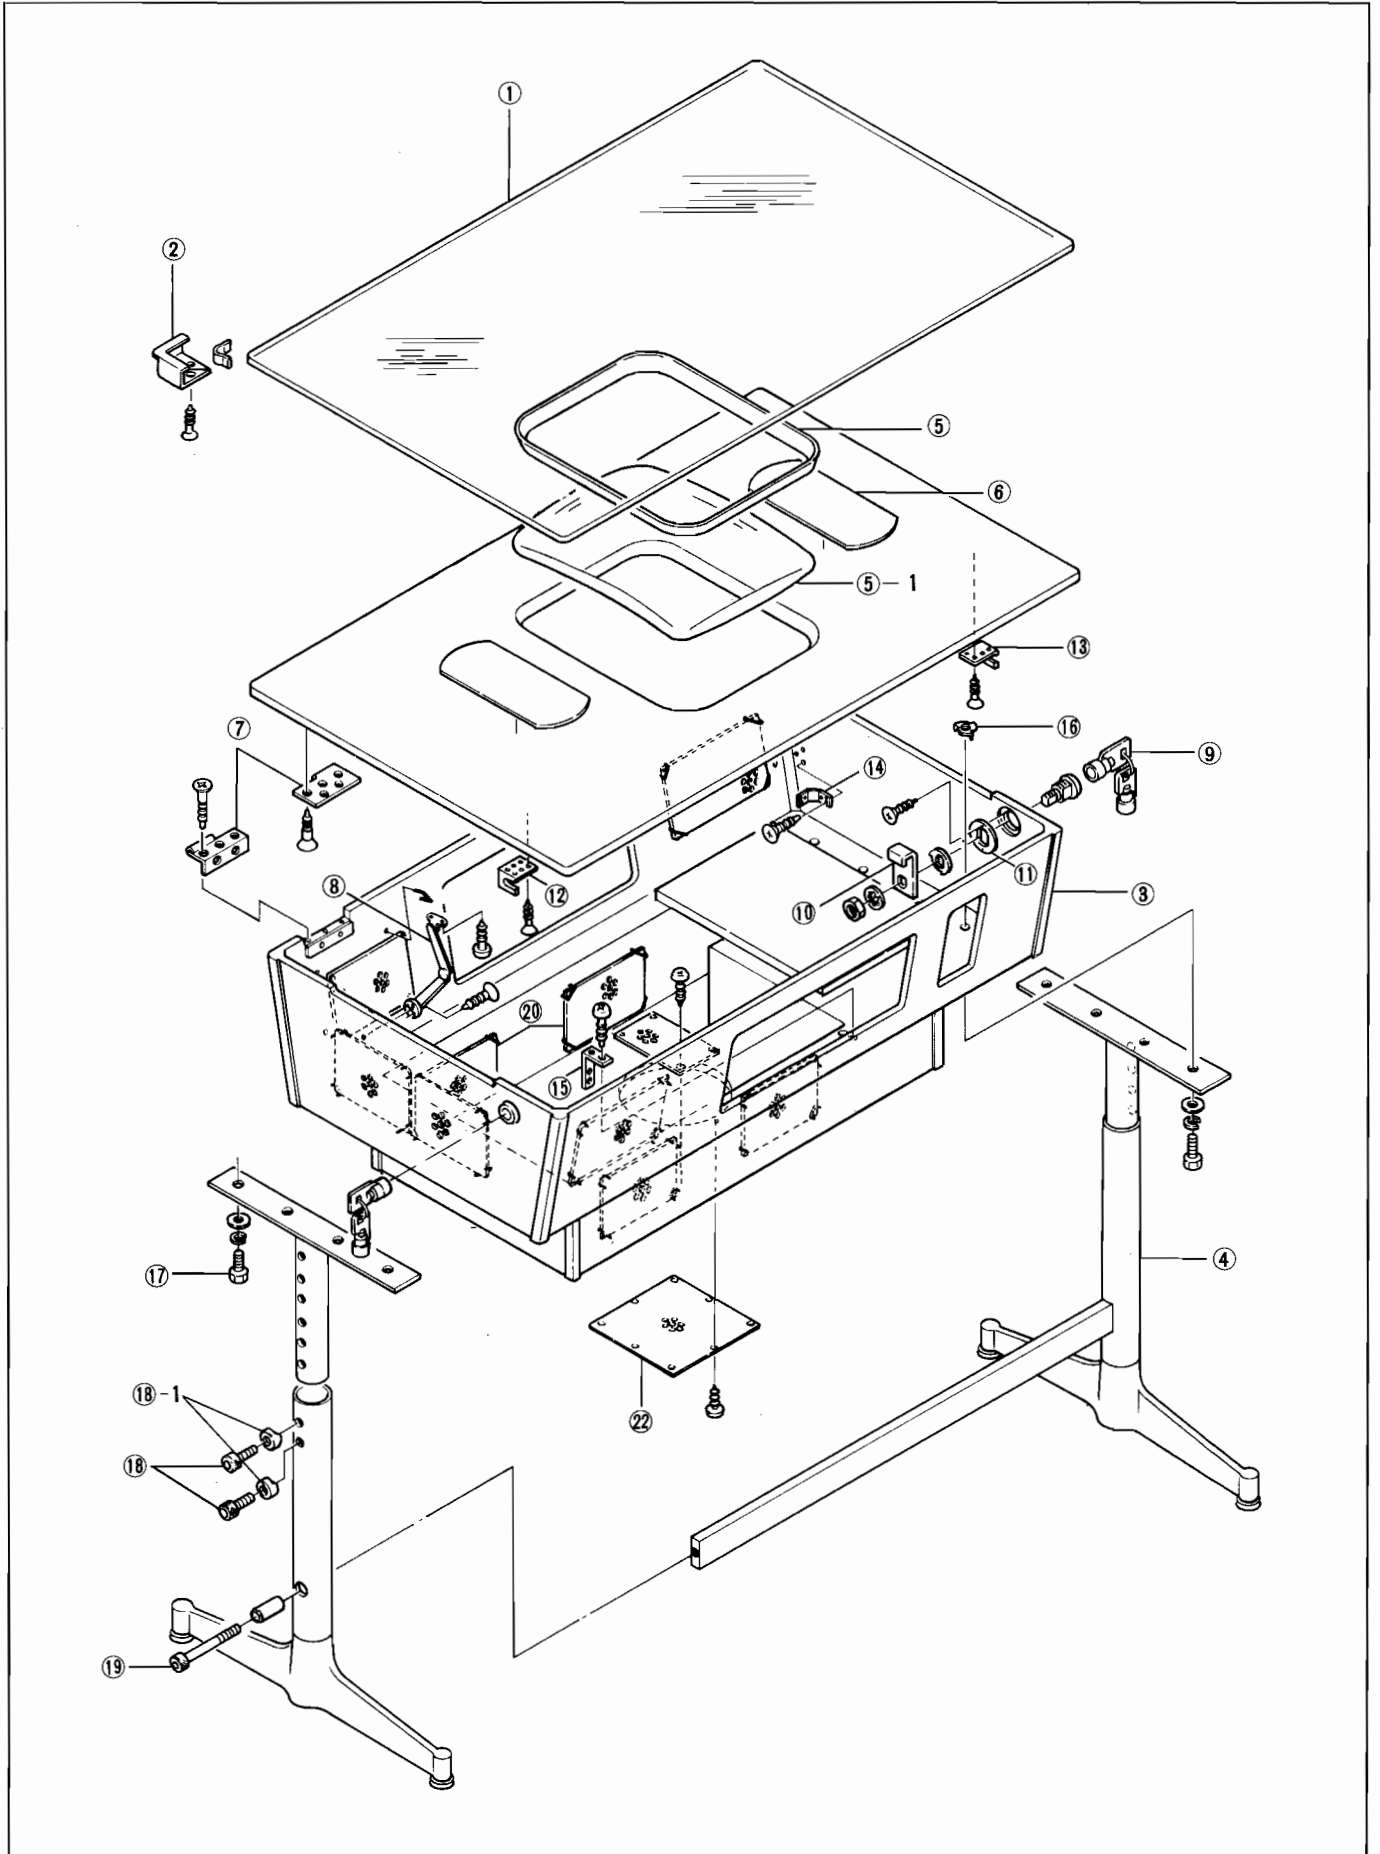

5 OPERATER ADJUSTMENTS

- V.R. (A)

V.R. for the adjustment of sound volume. It will become smaller in turning it to the arrow mark.

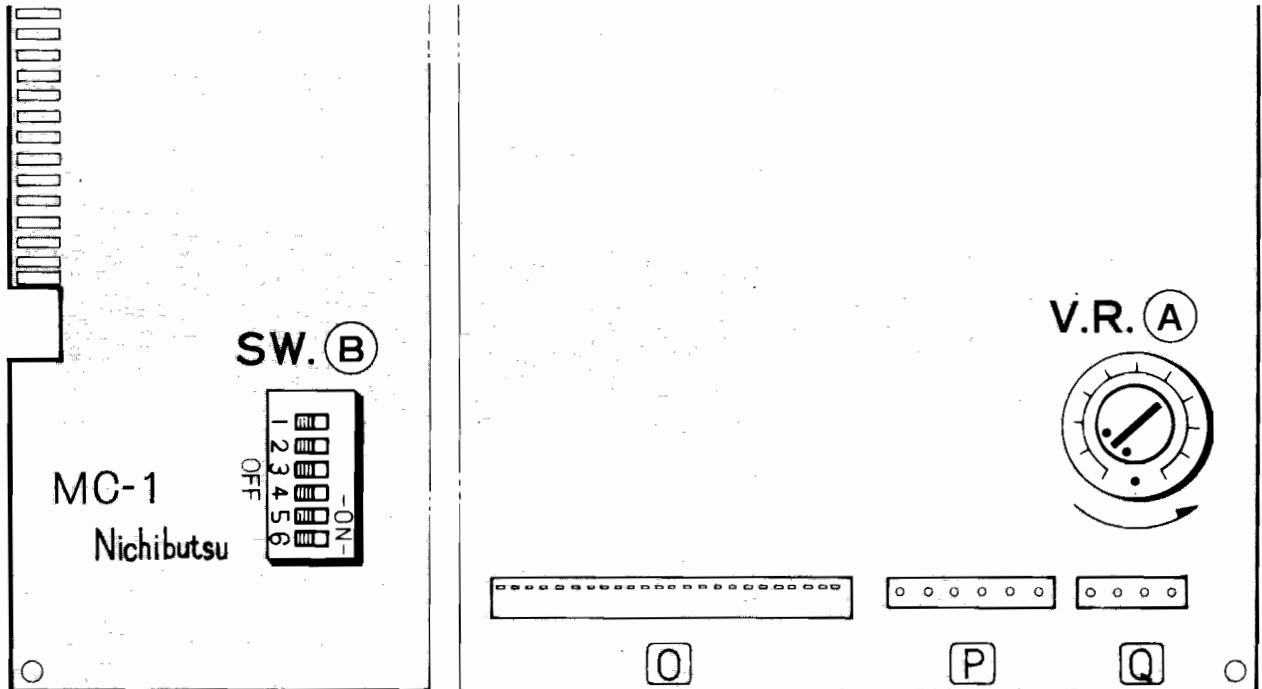

- SW (B)

DESCRIPTION	SW POSITION					
	1	2	3	4	5	6
Extended ROCKET score	30000 pts.	<u>OFF</u>				
	50000 pts.	ON				
Instructions	Japanese		OFF			
	English		<u>ON</u>			
Coinage	(Selector 1)					
	1 Coin/1 play		<u>OFF</u>	<u>OFF</u>		
	2 Coin/1 play		ON	OFF		
	3 Coin/1 play		OFF	ON		
	4 Coin/1 play		ON	ON		
	(Selector 2)					
	1 Coin/1 play				<u>OFF</u>	<u>OFF</u>
	1 Coin/2 plays				ON	OFF
1 Coin/3 plays				OFF	ON	
FREE PLAY				ON	ON	

NOTE:

- Switch adjustment have to be done after disconnect the power supply.
- Switches are set as underlined position when the machine is shipped.

- SERVICE BUTTON (Ref. P1)

When you repair or adjust the set, it is for use in the case of increasing credit numbers without raising up the counter.


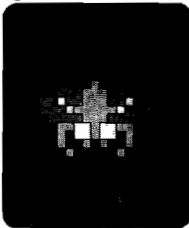
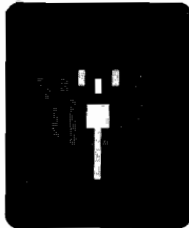
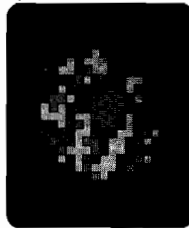
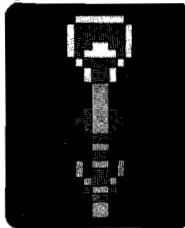
HOW TO PLAY

The war has begun from Galaxy to Galaxy. The almighty ALIENS are advancing to planet Earth. The horrific battle is with us.

COLD-EYE will distract them divide when wounded, SUPER-FLY is testing our weaponry systems, as FOUR-D and METEOR are directing punishing attacks and ATOMIC-PILE will surely destroy us. Wave after wave they increase their fearsome invasion.

Earth's only weapon capable of success is MOON CRESTA a three stage MULTI-FIRE rocket.

SCORE


50 Points	30 Points	60 Points	200 Points	100 Points
				
Cold Eye	Super Fly	Four-D	Meteor	Atomic Pile

PLAYING RULES

- * The game may be played by 1 or 2 people.
- * Insert coin.
- * Select 1 or 2 player button.
- * Shoot down the attacking enemy by pushing the firing button, slide the ROCKET to the right or left by moving the control lever.
- * Extra ROCKETS (No. 1, 2, 3) will be awarded if the score gained exceeds the pre-set points.
- * The game is over when all ROCKETS have been destroyed.
- * You can leave your name (5 highest scores) on the screen to register your success (MIN.5000 pts.) against the invading aliens.

Docking

- * The object of the mission is to succeed in docking the first stage ROCKET with the 2nd and 3rd stage.
- * The highest score is obtained by completing the docking operation in the shortest time.
- * When the docking is successfully completed a high rate of fire will produce a high score.

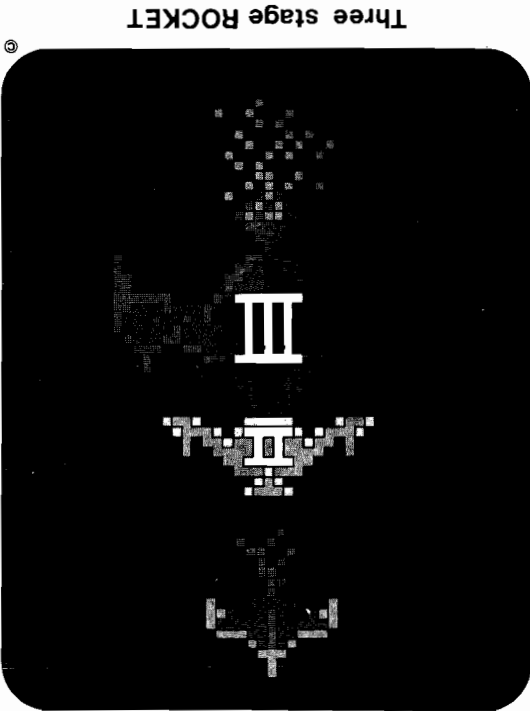

If you complete 2 or 3 stage docking successfully, you will have MULTI-FIRE power.

Three stage ROCKET