


# VS.GOLF

## (Operation Manual)


### I. How to install Software ROMs

Each Software ROM is labeled with a Location Number shown on it (  Shaded Portion illustrated below), which indicates the corresponding location on the P.C. Board where it should be installed.



(Label on Software ROM)

“VS.GOLF” contains 6 Software ROMs, and 1 Custom IC, which have location numbers, 6A(1A), 6B(1B), 6C(1C), 6D(1D), 8A(2A), 8B(2B) and 8F(2F). Each ROM and IC must be mounted into the proper IC Socket.

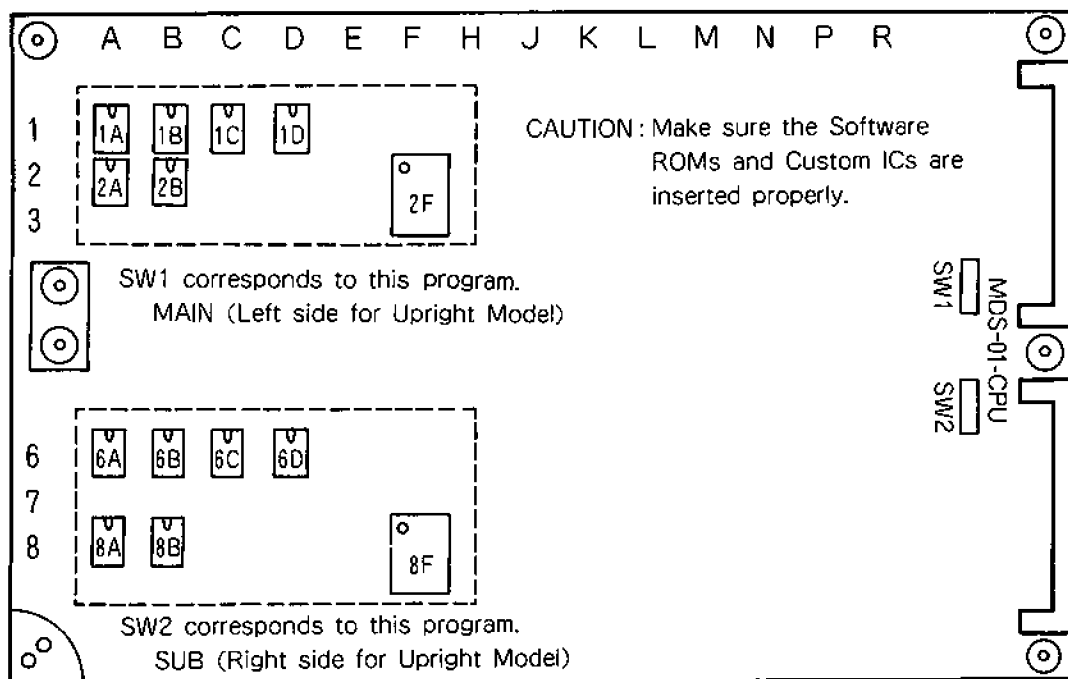

ROM and IC Location on P.C. Board

NOTE: ALL Software ROMs and Custom ICs must be inserted in both portions on the P.C. Board as shown above.


“VS.GOLF” can be interchanged between left and right side.

## 2. Points and methods of adjustment

### Game Option Settings MDS P.C. Board

062

MDS FOR VS. GOLF

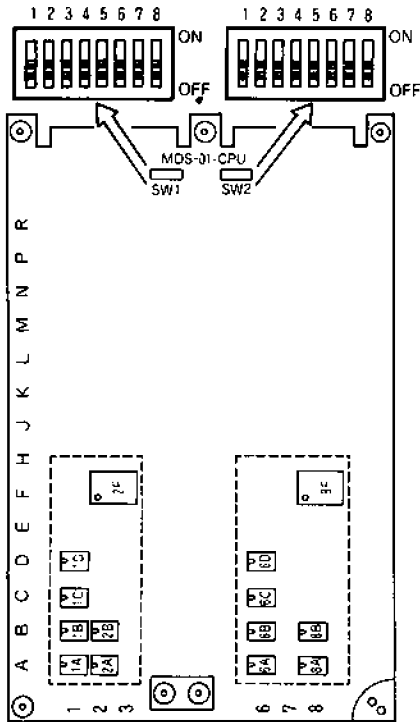

CAUTION: Make sure the Software ROMs and Custom ICs are inserted properly.

SW1 corresponds to this program.  
MAIN (Left side for Upright Model)  
SW2 corresponds to this program.  
SUB (Right side for Upright Model)



		SW2 (SW1)							
		1	2	3	4	5	6	7	8
Credit/Coin	1/4	ON	ON	ON					
	1/3	ON	ON	OFF					
	1/2	ON	OFF	ON					
	1/1	ON	OFF	OFF					
	2/1	OFF	ON	ON					
	3/1	OFF	ON	OFF					
	4/1	OFF	OFF	ON					
	Free	OFF	OFF	OFF					
Hole Size	Large				OFF				
	Small				ON				
Points					OFF				
Starting Points	10					OFF	OFF		
	13					OFF	ON		
	16					ON	OFF		
	20					ON	ON		
Match Play	Easy								OFF
	VS. Computer Hard								ON

Stroke Play	OFF	ON
Hole in One	+5	+4
Double Eagle	+4	+3
Eagle	+3	+2
Birdie	+2	+1
Par	+1	-0-
Bogey	-0-	-1
Double Bogey & Over	-0-	-2
Match Play		
Win the Hole	+1	+2
Even	-0-	-0-
Lose the Hole	-1	-2

# CAUTION

The suggested factory settings for VS. Golf™ are listed below. It is recommended that you carefully check the dip switch settings prior to operation. For the VS. DualSystem™, the dip switch settings will be on either SW1 or SW2, depending on which side of the p.c. board you install the EPROM's and custom IC. Refer to the operation manual for further instructions. For the VS. UniSystem™, the EPROM's and the custom IC must be installed in the "sub" side of the p.c. board, and then SW2 is used.

SW1 or SW2							
1	2	3	4	5	6	7	8
on	off	off	off	off	on	off	off

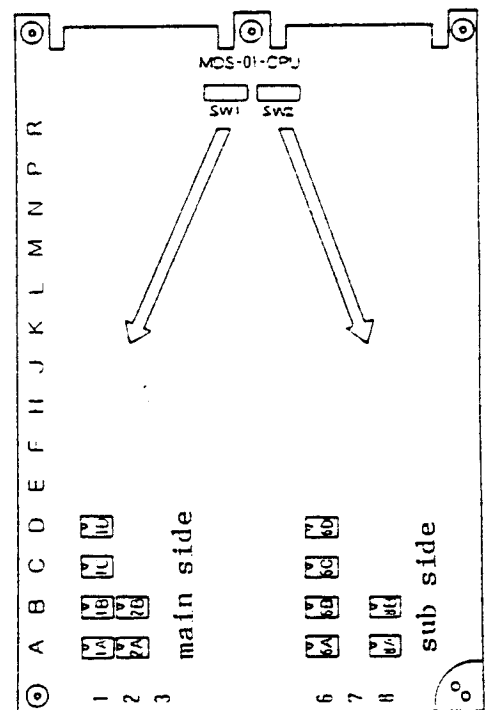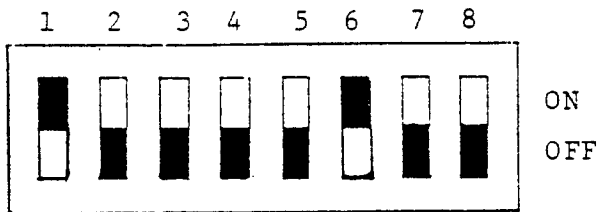

Please refer to the dip switch settings label and the VS.-PAK™ Operation Manual for further information.

Nintendo of America Inc.