#### WARRANTY

Seller warrants that its printed circuit boards and parts thereon are free from defects in material and workmanship under normal use and service for a period of ninety (90) days from date of shipment. Seller warrants that its television monitors are free from defects in material and workmanship under normal use and service for a period of thirty (30) days from date of shipment. None of the Seller's other products or parts thereof are warranted.

If the products described in this manual fail to conform to this warranty, Sellers' sole liability shall be, at its option, to repair, replace, or credit Buyer's account for such products which are returned to Seller during said warranty period, provided:

- (a) Seller is promptly notified in writing upon discovery by Buyer that said products are defective;
  - (b) Such products are returned prepaid to Sellers' plant; and
- (c) Seller's examination of said products discloses to Seller's satisfaction that such alleged defects existed and were not caused by accident, misuse, neglect, alteration, improper repair, installation or improper testing.

In no event shall Seller be liable for loss of profits, loss of use, incidental or consequential damages.

EXCEPT FOR ANY EXPRESS WARRANTY SET FORTH IN A WRITTEN CONTRACT BETWEEN SELLER AND BUYER WHICH CONTRACT SUPERSEDES THE TERMS OF THIS ORDER, THIS WARRANTY IS EXPRESSED IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON THE SELLER'S PART, AND IT NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR THE SELLER ANY OTHER LIABILITIES IN CONNECTION WITH THE SALE OF PRODUCTS UNDER THIS ORDER.


This document is and contains confidential trade secret information of Atari, Inc.

This document is loaned under confidential custody for the sole purpose of operation, maintenance or repair of Atari equipment and may not be used by or disclosed to any person for any other purpose whatever, and remains the property of Atari, Inc.

Neither it nor the information it contains may be reproduced, used, or disclosed to persons not having a need to know consistent with the purpose of the loan, without written consent of Atari, Inc.

# Triple Hunt illustrated parts catalog

ATARI INC
1265 BORREGAS AVENUE
P.O. BOX 9027
SUNNYVALE, CALIFORNIA 94086
408/745-2000 • TELEX 35-7488

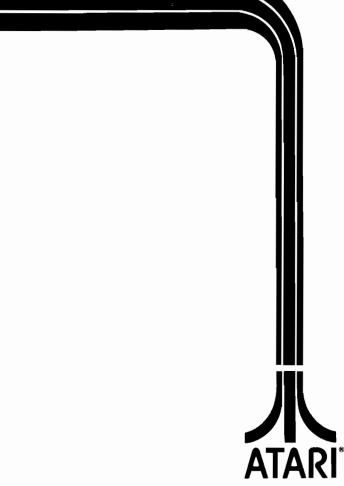

This catalog is a supplement to the Triple Hunt™ Operation, Maintenance and Service Manual, Atari Publication Number TM-091. The purpose of this catalog is to provide you with the necessary information for ordering replacement parts for the Triple Hunt game.

When ordering parts from your distributor, give the part number, part name, applicable page number of this catalog, and the serial number of your Triple Hunt game. This will help to avoid confusion and mistakes in your order. We hope the results will be less downtime and more profit from your Triple Hunt game.

If there are any questions about this catalog, please contact our Customer Service Department. You may call them Monday through Friday from 7:30 am to 4:00 pm Pacific Time at one of the following numbers:

from <u>outside</u> California, call toll free (800) 538-6892

from <u>inside</u> California, Alaska or Hawaii, call (408) 984-1900

All rights reserved. Copyright © 1977 by Atari, Inc. No part of this publication may be reproduced by any mechanical, photographic, or electronic process, or in the form of a phonographic recording, nor may it be stored in a retrieval system, transmitted, or otherwise copied for public or private use, without permission from the publisher.

Table of Contents for Single Cabinet Triple Hunt

| Figure Number | Figure Title                              | Page Number |
|---------------|---|-------------|
| 1A            | Triple Hunt Single Cabinet Final Assembly | 2           |
| 2             | Single Cabinet Final Assembly             | 6           |
| 5             | Electronics Tray Assembly                 | 18          |
| 6             | Power Supply Assembly                     | 20          |
| 8             | Tape Deck Assembly                        | 24          |
| 9             | RF Shield PCB Assembly                    | 26          |
| 10            | Triple Hunt Game PCB Assembly             | 28          |
| 11            | Single Cabinet Top Black Light Assembly   | 34          |
| 12            | Single Cabinet Lower Black Light Assembly | 36          |
| 15            | Single Cabinet TV Shelf Assembly          | 42          |
| 17            | Rifle and Pot Mount Assembly              | 46          |
| 18            | Coin Door Final Assembly                  | 50          |
| 19            | Coin Door Assembly                        | 52          |
|               |   |             |

#### Table of Contents for Two-Cabinet Triple Hunt

| Figure Number | Figure Title                           | Page Number |
|---------------|--|-------------|
| 1B            | Triple Hunt Two-Cabinet Final Assembly | 4           |
| 3             | Gun Mount Cabinet Final Assembly       | 10          |
| 4             | CRT Cabinet Assembly                   | 16          |
| 6             | Power Supply Assembly                  | 20          |
| 7             | Tape Deck and Shelf Assembly           | 22          |
| 8             | Tape Deck Assembly                     | 24          |
| 9             | RF Shield PCB Assembly                 | 26          |
| 10            | Triple Hunt Game PCB Assembly          | 28          |
| 13            | Two-Cabinet Top Display Assembly       | 38          |
| 14            | Two-Cabinet Bottom Display Assembly    | 40          |
| 16            | Two-Cabinet TV Shelf Assembly          | 44          |
| 17            | Rifle and Pot Mount Assembly           | 46          |
| 18            | Coin Door Final Assembly               | 50          |
| 19            | Coin Door Assembly                     | 52          |
| 20            | Brace Assembly                         | 54          |

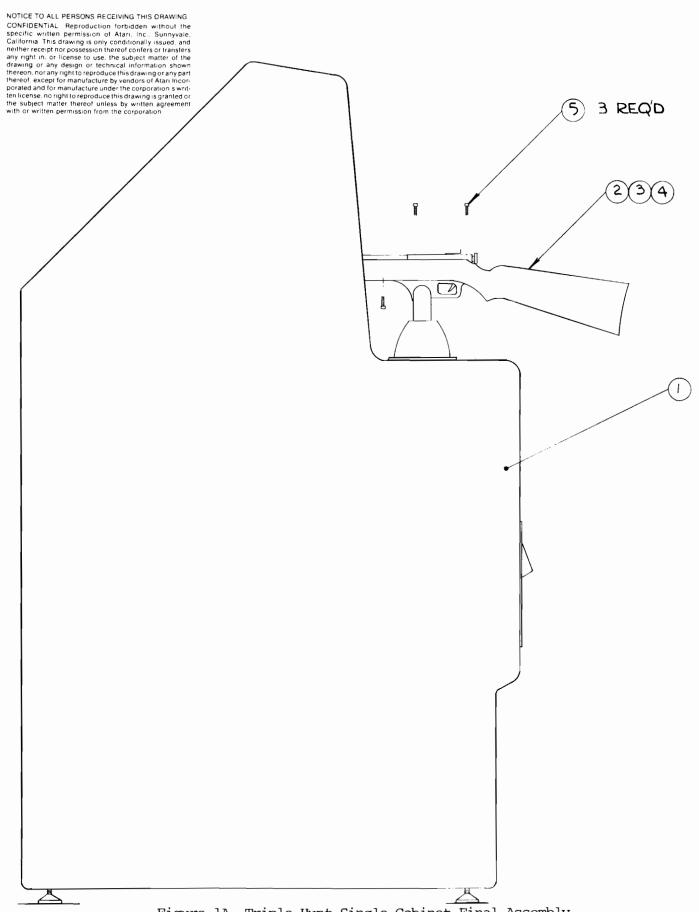


Figure 1A Triple Hunt Single Cabinet Final Assembly A009376-01 A



Figure lA Triple Hunt Single Cabinet Final Assembly Parts List

| Item   | Part Number   | Qty.                             | Description   |
|--------|---|----------------------------------|---|
| Item 1 | Part Number  A009372-01 008317-01 008319-01 008320-02 72-8524 | 1 Ref<br>1 Ref<br>1 Ref<br>1 Ref | Description  Single Cabinet Final Assembly - See Figure 2 Rifle Stock Receiver Barrel Scr., Mach., \(\frac{1}{2}\)-20 x l\(\frac{1}{2}\) Lg. Soc, Hd. |
|        |   |                                  |   |

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING CONFIGENTIAL. Reproduction forbidden without the specific written permission of Mari, Inc. Sunnywale, California This drawing is only conditionally issued, and neither receipt nor possession thereof confers or transfers any right in, or flicense to use the subject matter of the drawing or any design or technical information shown thereon nor any right to produce this oftawing or any part thereon, nor any right to reproduce this oftawing or any part thereon except for manufacture by vendors of Alari Incorporates and for manufacture under the corporations written license, no right to reproduce this drawing is granted or the subject matter thereof unless by written agreement with or written permission from the corporation.


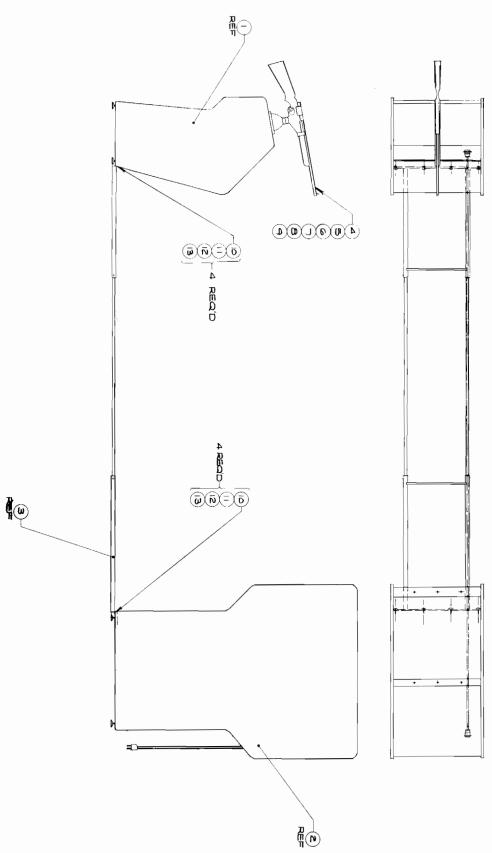


Figure 1B Triple Hunt Two-Cabinet Final Assembly A008334-01 B


4





| Item   | Part Number  | Qty. | Description   |
|--|--|------|---|
|  | A007939-01   |      |   |
| lA   | A007939-01   | Ref  | Gun Mount Cabinet Final Assembly - Used only on early production models.  |
| <b>1</b> B   | A007939-02   | Ref  | Gun Mount Cabinet Final Assembly - Used only on later production models.  See Figure 3  |
| 2<br>3<br>4<br>5<br>6<br>7<br>8<br>9<br>10<br>11<br>12<br>13 | A008370-01 A008456-01 008316-01 008320-01 008319-01 72-8528 72-8520 72-8536 75-5524N 75-935 75-015S 75-045 |      | CRT Cabinet Assembly - See Figure 4  Brace Assy - See Figure 20 Rifle Stock Barrel Receiver Screw, Socket Hd ½-20 x 1.75 Lg.  " " 1.25 Lg.  " " 2.25 Lg.  Carriage Bolt, #¼-20 x 1½" Lg.  Wing Nut, #¼-20 Flat Washer, #¼  Washer, Split Lock, #¼  NOTE: ONLY DIFFERENCE BETWEEN ITEM JA  AND JB IS TAPE DECK ASSEMBLY AS  INDICATED IN FIGURE 7. |

W A Warner Communications Company

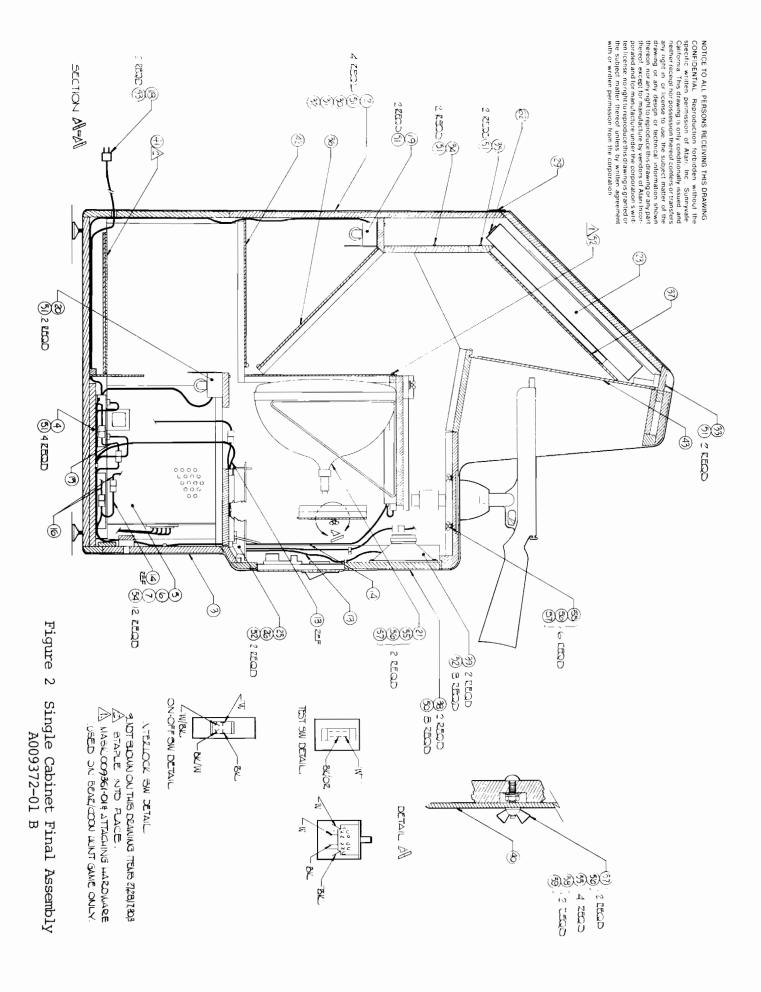

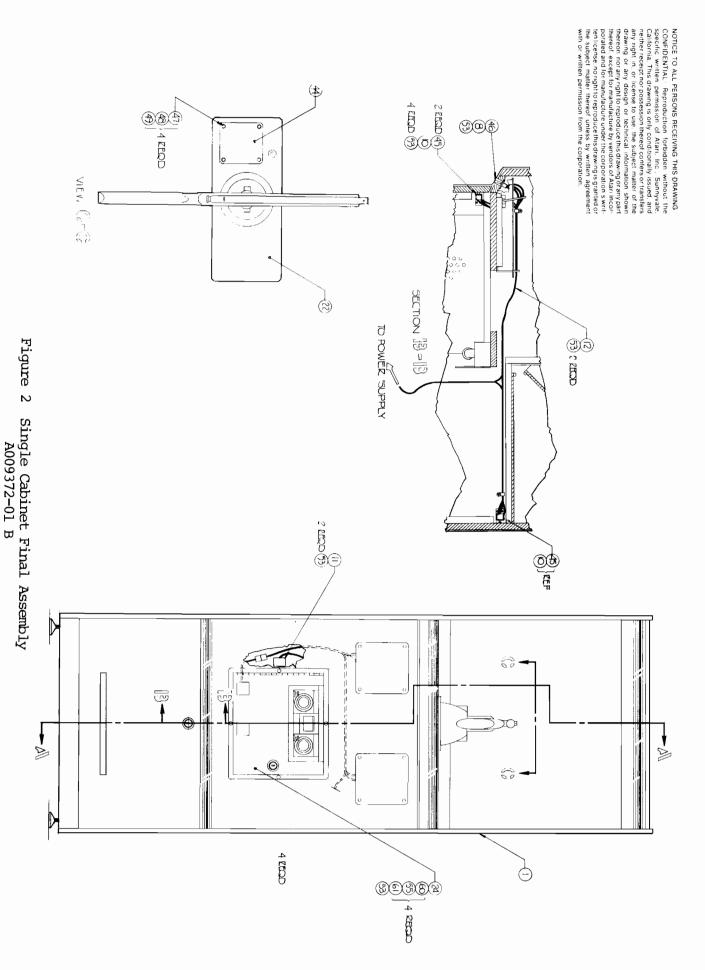




Figure 2 Single Cabinet Final Assembly Parts List

| Item | Part Number | Qty. | Description                                       |
|------|-------------|------|---|
| 1    | A009324-02  | 1    | Cabinet Assy W/Graphics                           |
| 2    | A009334-01  | 1 1  | Rear Door W/Lock Assy                             |
| 3    | A009328-01  | 1 1  | Front Door W/Lock Assy                            |
| 4    | A009329-01  | 1    | Electronics Tray Assy - See Figure 5              |
| 5    | A005912-02  | 1 1  | R.F. Shield Box Assy                              |
| 6    | A008335-01  | 1    | R.F. Shield PCB Assy - See Figure 9               |
| 7    | A007532-02  | 1    | Triple Hunt Game PCB Assembly - See Figure 10     |
| 8    | A006449-01  | 1    | Power On/Off Switch                               |
| 9    |             |      |   |
| 10   | 000268-01   | 2    | Interlock Sw. BKT                                 |
| l ii | A006458-01  | 1 1  | Slide Sw. Assy                                    |
| 12   | A009355-01  | 1 1  | Power Sw. Harness                                 |
| 13   | A008304-02  | 1    | Main Harness                                      |
| 14   | A008305-01  | 1    | CRT Harness Assy                                  |
| 15   | A009356-01  | 1 1  | Main Interconnect Harness                         |
| 16   | A005396-02  | 1    | Tape Deck ''                                      |
| 17   | 008303-03   | 1    | Harness Schematic                                 |
| 18   | A007784-02  | 1    | Strain Relief Power Cord Assy                     |
| 19   | A009357-01  | 1    | Assy, Top Black Light - See Figure ll             |
| 20   | A009337-01  | 1    | Assy, Lower Black Light - See Figure 12           |
| 21   | A009336-01  | 1    | TV Shelf Assy See Figure 15                       |
| 22   | A008315-02  | 1    | Rifle and Pot Mount - See Figure 17               |
| 23   | A009358-01  | 1    | Plex Storage Box Assy                             |
| 24   | A006794-01  | 1    | Coin Door Assy. for American Quarter Only         |
|      | A006794-02  | Ref. | Coin Door Assy. for Belgian 5 Francs Only         |
|      | A006794-03  | Ref. | Coin Door Assy. for German Mark Only              |
|      | A006794-04  | Ref. | Coin Door Assy. for Swedish Krona Only            |
|      | A006794-05  | Ref. | Coin Door Assy. for Japanese 100 Yen Only         |
|      | A006794-06  | Ref. | Coin Door Assy. for English 10 Pence Only         |
|      | A006794-07  | Ref. | Coin Door Assy. for Australian 20-Cent Piece Only |
| 25   | A007902-01  |      | Coin Box Assy.                                    |
| 26   | 006870-01   | 1    | Coin Box Bracket                                  |
| 27   | 009371-01   |      | Rifle Shipping Container                          |
| 28   | A009375-XX  | 1    | Shipping Container                                |
| 29   | 005233-01   | 1    | Rear Door Seal                                    |
| 30   | 006305-01   |      | Printed Poly Bag                                  |
| 31   | IPC-091     |      | Illustrated Parts Catalog                         |
| 32   | TM-091      |      | Tech. Manual                                      |
| 33   | 009312-01   |      | Wood Plex Retainer                                |
| 34   | 009299-01   |      | Panel Access                                      |
| 35   | 009298-01   |      | Retainer Mirror                                   |



Figure 2 Single Cabinet Final Assembly Parts List

| Part Number   | Qty.  | Description   |
|---|---|---|
| 009359-01<br>009360-01<br>005419-01<br>48-009<br>009327-01<br>008454-01   | 1<br>1<br>2<br>2<br>1   | Transparent Mirror Rework Top Mirror Speaker Grill Speaker 8" Shield Monitor Cardboard Graphics (Witch Hunt)  |
| 008374-01<br>007957-01<br>007950-01<br>68-002<br>007103-01<br>75-99090006 | 1<br>1<br>2<br>1<br>4   | Main Display (Witch Hunt) Witch Hunt Front Plex (Silk Screen) Instruction Plex (Witch Hunt) Interlock Switch (AC Powered) On/Off Switch Cover Wellnut Blind Hole Fastener                       |
| 75-07021<br>73-77004<br>72-6620<br>72-6812<br>72-6610                     | 4<br>8<br>20<br>8<br>21   | Screw BH Socket #10-32x1.00LG Washer Flat Black Nylon #10 Rivet 3/16" ODx.68LG Screw SM PH Phil #6x1\frac{1}{4}"LG Screw SM PH Phil #8x3/4"LG Screw SM PH Phil #6x5/8" Screw SM PH Phil #6x5/8" |
| 75-015,8<br>75-045<br>75-935<br>75-5524N<br>75-915,8                      | 16<br>10<br>10<br>2<br>2  | Washer, Flat ½" Washer, Split Lock ½" Nut Wing ½"-20 Bolt Carriage ½"-20xl½"LG Nut Hex ½"-20 Bolt Carriage ¼"-20xl.00LG   |
| 75-990505,S<br>002191-01  | 1   | Nut Lock Shallow Pat Nylon 4"-20<br>Bracket   |
|   | 009359-01<br>009360-01<br>005419-01<br>48-009<br>009327-01<br>008454-01<br>008374-01<br>007957-01<br>007950-01<br>68-002<br>007103-01<br>75-99090006<br>82-8016<br>75-07021<br>73-77004<br>72-6620<br>72-6812<br>72-6610<br>72-6608<br>75-015,\$<br>75-045<br>75-915,\$<br>75-915,\$<br>75-915,\$<br>75-915,\$<br>75-915,\$<br>75-990505,\$ | 009359-01   |

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING CONFIDENTIAL: Reproduction forbidden without the specific written permission of Atari. Inc., Sunnyvale California, This drawing is only conditionally issued, and neither receipt not possession thereof confers or transfers any right in, or license to use, the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce this drawing or any part thereof, except for manufacture by wendors of Atari Incorporated and for manufacture under the corporation's written license, no right to reproduce this drawing is granted or the subject matter thereof unless by written agreement with or written permission from the corporation.

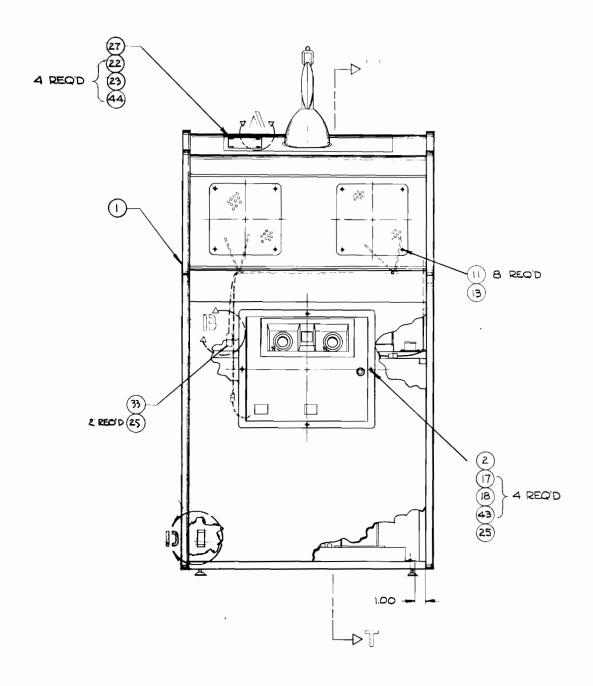


Figure 3 Gun Mount Cabinet Final Assembly A007939-01 B and -02 A

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING CONFIDENTIAL. Reproduction forbidden without the specific written permission of Atai, Inc., Sunnyvale, California This drawing is only conditionally issued, and neither receipt nor possession thereof confess or transfers any right in or license to use, the subject matter of the drawing or any design or technical information shown thereon, not any right to reproduce this drawing or any part thereof, except for manufacture by vendors of Atan incorporated and for manufacture under the composition's written agreement the subject matter thereof unless by written agreement with or written permission from the corporation.

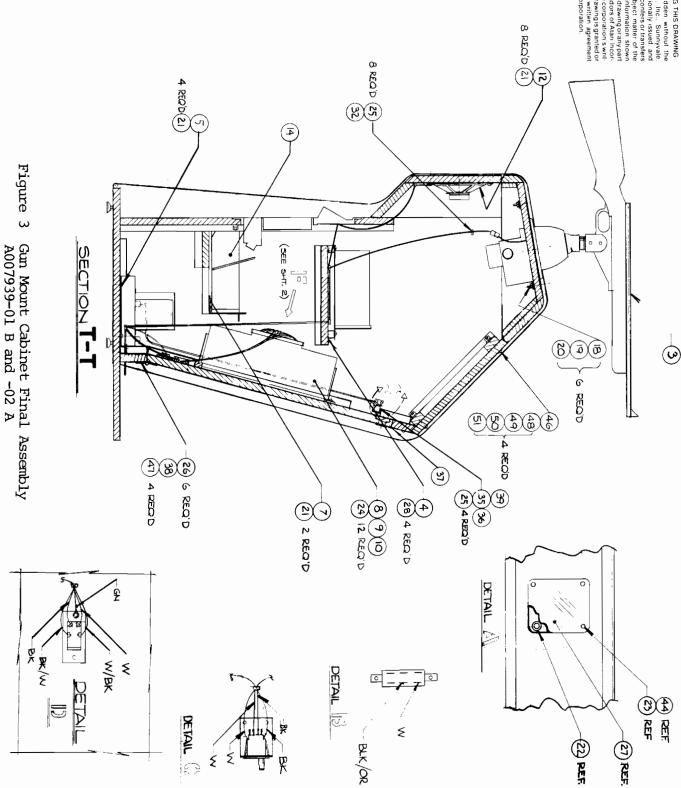


Figure 3 Gun Mount Cabinet Final Assembly A007939-01 B and -02 A



Figure 3 Gun Mount Cabinet Final Assembly Parts List

| Item     | Part Number         | Qty. | Description   |  |  |
|----------|---------------------|------|---|--|--|
| 1        | A007940-02          | 1    | Gun Mount, Cab., Assy W/Graphics  |  |  |
| 2        | A009083-01          | 1    | Coin Door Assy. for American Quarter Only - See Figure                      |  |  |
|          | A009083-02          | Ref. | Coin Door Assy. for Belgian 5 Francs Only - See Figure                      |  |  |
|          | A009083-03          | Ref. | Coin Door Assy. for German Mark Only - See Figure 18.                       |  |  |
|          | A009083-04          | Ref. | Coin Door Assy. for Swedish Krona Only - See Figure 18.                     |  |  |
|          | A009083-05          | Ref. | Coin Door Assy. for Japanese 100 Yen Only - See Figure 1                    |  |  |
|          | A009083-06          | Ref. | Coin Door Assy. for English 10 Pence Only - See Figure 1                    |  |  |
|          | A009083-07          | Ref. | Coin Door Assy. for Australian 20-Cent Piece Only - See                     |  |  |
|          | 11003003 07         | Ner. | Figure 18.  |  |  |
| 3        | A008315-02          | 1 1  | Rifle and Pot Mount Assembly - See Figure 17                                |  |  |
| 4 A      | A007947-01          | 1    | Tape Deck and Shelf Assy.   |  |  |
|          |                     | -    | Used only on early production Gun Mount                                     |  |  |
|          |                     |      | Cabinet Final Assembly, part number   |  |  |
|          |                     |      | A007939-01.   |  |  |
| 4B       | A007947-02          |      | Tape Deck And Shelf Assembly  |  |  |
| 4.5      | 1001741 02          | 1    | •   |  |  |
|          |                     |      | Used only on later production Gun Mount                                     |  |  |
|          |                     |      | Cabinet Final Assembly, part number   |  |  |
| 5        | A007197-01          | ١,   | A007939-02. See Figure 7.   |  |  |
| 7        | 006870-01           | 1    | Power Supply Assembly - See Figure 6 Bracket, Coin Box                      |  |  |
| 8        | A005912-02          | 1    | R.F. Shield Box Assy (without Stops)  |  |  |
| 9        | A008335-01          | 1 1  | R.F. Shield Box Assy (without Stops) R.F. Shield P.C.B. Assy - See Figure 9 |  |  |
| 10       | A007532-02          | 1 1  | Triple Hunt Game PCB Assembly - See Figure 10                               |  |  |
| 11       |                     | _    |   |  |  |
|          | 73-77004            | 8    | Rivets, 3/16" O.D. x .68 Lg   |  |  |
| 12       | 48-009              | 2    | 8" Speaker  |  |  |
| 13       | 005419-01           | 2    | Speaker Grill   |  |  |
| 14<br>17 | A007902-01          | 1 4  | Coin Box Assembly   |  |  |
| I .      | 75-5516B<br>75-015S | 10   | Bolt, Carriage, #¼-20 x 1.00" Lg. Washer Flat ½                             |  |  |
| 18       |                     |      | Washer Split Lock, 4  |  |  |
| 19       | 75-045              | 6    | Nut, Hex 1/4-20   |  |  |
| 20       | 75 <b>-</b> 915S    | 6    | ·   |  |  |
| 21       | 72-6812             | 14   | Screw, SM #8 x 3/4 Lg, Phil. Pan Hd.<br>Well - Nut Blind Hole Fasterner     |  |  |
| 22       | 75-990090006        | 4    |   |  |  |
| 23       | 82-8012             | 4    | 10-32 Button Hd Screw .75 Lg.   |  |  |
| 24       | 72-6608             | 12   | Screw, SM., Pan Hd., Phil #6 x ½" Lg.                                       |  |  |
| 25       | 72-6610             | 15   | Screw, SM., Pan Hd., Phil #6 x 5/8" Lg.                                     |  |  |
| 26       | 82-1810             | 6    | Screws, Wood, Flat - Hd. Phil. #8   |  |  |
| 27       | 007950-01           | 1    | Instruction Plex (Witch Hunt)   |  |  |
| 28       | 72-6620             | 4    | Screw, SM., Pan Hd., Phil #6 x 1.25" Lg.                                    |  |  |
| 30       | A007953-XX          | 1 1  | Shipping Container  |  |  |
| 31       |                     |      |   |  |  |
| 32       | A008304-01          |      | Main Harness  |  |  |
| 33       | A006548-01          | 1    | Slide Switch Assy   |  |  |
| 34       | A006449-01          | 1    | Power On/Off Switch Assy  |  |  |
| 35       | 68-002              | 1    | Interlock Switch (AC Power)   |  |  |
| 36       | 000268-02           | l 1  | Interlock Switch Brkt   |  |  |



Figure 3 Gun Mount Cabinet Final Assembly Parts List

| Item   | Part Number  | Qty.                            | Description   |
|--|--|---------------------------------|---|
| 37<br>38<br>39<br>40<br>41<br>42<br>43<br>44<br>45<br>46<br>47<br>48<br>49<br>50<br>51 | Part Number  005233-01 A007937-01 A008309-01 79-3104 90-406 46-202302 75-990505 S 75-07021 007103-01 A009151-01 82-1824 75-5132B 75-010S 75-040 75-931 | Qty•  1 1 1 3 2 4 4 1 Ref 4 4 4 | Description  Rear Door Seal Rear Door Assy (Lock&Hinge) Power Switch Harness Battery Holder (Chitose #33-3) Alkaline Bartery (Mallory or eqv.) size AA Fuses 3 AMP (Slow Bjow) #½-20 Shallow Pattern Nylon Lock Nut Nyon Flat Washers - Black On/Off Switch Cover Top/Rear Angle Screw, Wood Flat Head, Phil., #8 x 1 x ½" Lg. Bolt, Carriage, #10-24 x 2.00" Lg. Blk Washer Flat #10 Washer Split Lock #10 #10-24 Wing Nut |
|  |  |                                 |   |

| • |  |  |  |
|---|--|--|--|
| • |  |  |  |
|   |  |  |  |
|   |  |  |  |
|   |  |  |  |
|   |  |  |  |
|   |  |  |  |
|   |  |  |  |
|   |  |  |  |
|   |  |  |  |
|   |  |  |  |
|   |  |  |  |
|   |  |  |  |
|   |  |  |  |
|   |  |  |  |

CONFIDENTIAL Reproduction forbidden without the specific written permission of Alari, Inc. Surinyvale. California This drawing is only conditionally issued and neither receipt nor possession thereof confers or transfers any right in or license to use, the subject matter of the drawing or any design or technical information shown thereon nor any right to reproduce this drawing or any part thereof, except for manufacture by vendors of Atari Incorporated and for manufacture under the corporation's written tien tiense, no right to reproduce this drawing is granted or the subject matter thereof unless by written agreement with or written permission from the corporation. (24) A REQU 0

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING

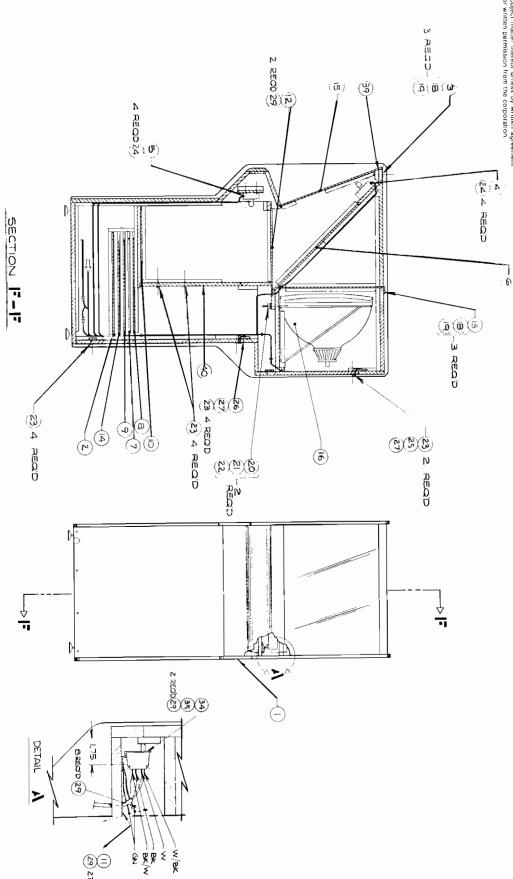


Figure 4 CRT Cabinet Assembly A008370-01 B

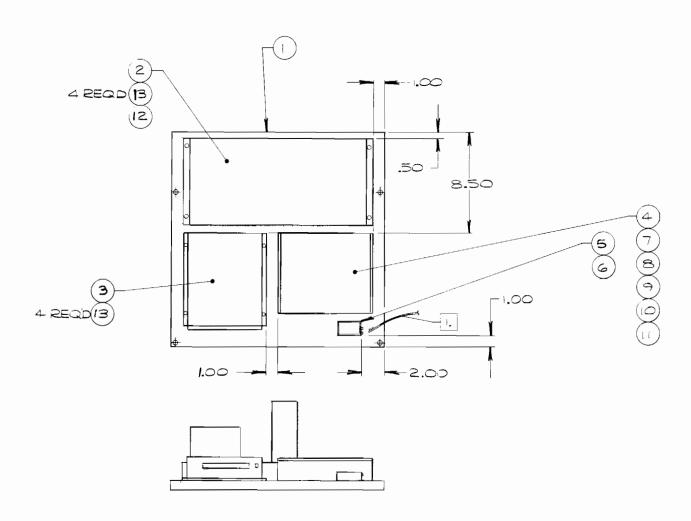


Figure 4 CRT Cabinet Assembly Parts List

| Item | Part Number         | Qty.       | Description   |
|------|---------------------|------------|---|
| 1    | A007960-02          | 1          | Cabinet Assy W/Graphics                               |
| 2    | 008361-01           | 1          | HIT THE BEAR Front Plex (Silkscreen)                  |
| 3    | 006819-01           | 1          | Plex Retainer   |
| 4    | A008364-01          | 1          | Top Display Assy (BlackLight) - See Figure 13         |
| 5    | A008363-01          | 1          | Bottom Display Assy (BlackLight) - See Figure 14      |
| 6    | 008369-01           | 1          | Transparent Mirror                                    |
| 7    | 008377-01           | 1          | Mask (Hit Bear/Coon Hunt)                             |
| 8    | 008453-01           | 1          | Card Board Graphics (Bear/Coon Hunt)                  |
| 9    | 008373-01           | 1          | Main Display (Hit Bear/Raccoon)                       |
| 10   | 008454-01           | 1          | Card Board Graphics (WITCH HUNT)                      |
| 11   | A006222-04          | 1          | Strain Relief Power Cord, Assy                        |
| 12   | 008374-01           | 1          | Main Display (WITCH HUNT)                             |
| 13   | 008376-01           | 1          | Cover Cap (mask)                                      |
| 14   | 008362-01           | 1          | Raccoon Hunt Front Plex (Silkscreen)                  |
| 15   | 007957-01           | 1          | Witch Hunt Front Plex (Silkscreen)                    |
| 16   | A008365-01          | 1          | T.V. Shelf Assy - See Figure 16                       |
| 17   |                     |            |   |
| 18   | 75-99090006         | 6          | Well Nut, Blind Hole Fastener                         |
| 19   | 82-8016             | 6          | Screw, Button Hd., Socket #10-32 x 1.00" Lg.          |
| 20   | 75-015S             | 2          | Flat Washer #1/4                                      |
| 21   | 75-045              | 2          | Lock Washer #1/4                                      |
| 22   | 75-915S             | 2          | Hex Nut #¼-20   |
| 23   | 82-1824             | 10         | Screw, Wood, #8 x 1. <sup>50</sup> " Lg. Flat Hd Phil |
| 24   | 72-6620             | 8          | Screw, SM., Pan Hd., Phil., #6 x 1.25 Lg.             |
| 25   | A008351-01          | 1          | Top Rear Door Assy w/Lock                             |
| 26   | A008353-01          | 1          | Lower Rear Door, Assy w/Lock                          |
| 27   | 005233-01           | 2          | Rear Door Seal  |
| 28   | A008305-01          | 1          | CRT Harness   |
| 29   | 72-6610             | 1 <b>4</b> | Screw, SM., Pan Hd., Phil. #6 x 5/8" Lg.              |
| 30   |                     |            |   |
| 31   | A007955-XX          | 1          | Shipping Container (Main Cab.)                        |
| 32   | 006319-01           | 1          | Copy Right Decal                                      |
| 33   | TM-091              | 1          | Tech. Manual.   |
| 34   | 68-002              | 1          | Interlock Switch                                      |
| 35   | 007227-01           | 1          | Interlock Switch Brkt                                 |
| 36   | 008303-01           | 1.         | Harness Schematic                                     |
| 37   |                     |            |   |
| 38   |                     |            |   |
| 39   | 78 <b>-</b> 6601216 | A/R        | Alum. Foil  |
| 40   | 008340-01           | 1          | Inner Door  |
| 41   | 006305-01           | 1          | Printed Poly Bag                                      |
|      |                     |            |   |

A Warner Communications Company

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING CONFIDENTIAL. Reproduction forbidden without the specific written permission of Atari Inc... Sunnyvale. California. This drawing is only conditionally issued, and neither receipt not possession thereof confers or transfers any right in, or license to use the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce this drawing or any part thereof, except for manufacture by vendors of Atari Incorporated and for manufacture drawing is granted or the subject matter thereof unless by written agreement with or written permission from the corporation



I. DISCONECT BATTERY CLIP DURING STORAGE AND SHIPMENT.

Figure 5 Electronic Tray Assembly A009329-01 A



### Figure 5 Electronic Tray Assembly Parts List

| Part Number | Qty.  | Description   |
|-------------|---|---|
| 009302-01   | 1   | Electronic Tray   |
| A007197-01  | 1   | Power Supply Assembly - See Figure 6  |
| A008962-02  | 1   | Tape Deck Assembly - See Figure 8   |
| 81-701      | 1   | Box, Cardboard (All Good Industries)  |
| 79-3104     | 1   | Battery Holder (Chitose #33-3)  |
| 90-406      | 3   | Alkaline Battery (Mallory or Equiv.) Size AA  |
| A008944-01  |   | Bear/Raccoon Tape   |
| A008943-01  |   | Witch Hunt Tape   |
| 007949-01   | 1   | Raccoon Instruction Plex  |
| 007948-01   |   | Hit The Bear Instruction Plex   |
| 008792-01   | 1   | Extended Play Scores  |
| 46-202302   |   | Fuses 3 AMP (Slow Blow)   |
| 72-6812     | 8   | Screw, Sht. Met. Phil. Pan Hd. #8 x 3/4" Lg.  |
|             |   |   |
|             | A008962-02<br>81-701<br>79-3104<br>90-406<br>A008944-01<br>A008943-01<br>007949-01<br>007948-01<br>008792-01<br>46-202302 | A007197-01 1 A008962-02 1 81-701 1 79-3104 1 90-406 3 A008944-01 1 A008943-01 1 007949-01 1 007948-01 1 008792-01 1 46-202302 2 |

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING NOTICE TO ALL PERSONS RECEIVING THIS DRAWING CONFIDENTIAL. Reproduction forbidden without the specific written permission of Alari, Inc. Sunnyale, California. This drawing is only conditionally issued, and neither receipt not possession thereof confers or transfers any right in, or ticense to use, the subject matter of the drawing or any design or technical information shown thereon, or any right to reproduce this drawing orany part thereof, except for manufacture under the corporation's written license, no right to reproduce this drawing is granted or the subject matter thereof unless by written agreement with or written permission from the corporation • ♦ • 0 0 0  $\circ$ ... ⟨⟨⟩ (4)(e)(T) 0 0 1 2 **(3**) 4 20) (9) 0 0 0 0 0 8 -(3)

Figure 6 Power Supply Assembly A007197-01 D



Figure 6 Power Supply Assembly Parts List

| Item  | Part Number  | Qty.  | Description   |
|---|--|---|---|
| 1<br>2<br>3<br>4<br>5<br>6<br>7<br>8<br>9<br>10<br>11<br>12<br>13<br>14<br>15<br>16<br>17<br>18<br>19<br>20 | A009266-01 A006886-01 29-053 78-70501SC A006555-01  79-4411004 41-2003 A006958-02 A006958-03 A006958-04 78-2708 72-1808S 72-1812S 75-058 75-918S A007192-01 A007444-01 | 1<br>1<br>1<br>1<br>2<br>1<br>A/R<br>"<br>"<br>1<br>3<br>6<br>9<br>9<br>4<br>1<br>1 | Power Supply Base Weldment Assembly Transformer Termination Assembly Cap., Sprague Electrolytic 26,000µf @ 15V Br\t., Cap. Mtg. Sprague #4586-48 P.C. Board Rectifier  Fuse Holder, Panel Mounting Filter, Power Line, 5 AMP Volt Sel Block 95V Volt Sel Block 110V Volt Sel Block 205V Volt Sel Block 220V Grommet, Plastic Screw, Pan Hd., #8-32 x ½" Lg. Screw, Pan Hd., #8-32 x 3/4" Lg. Washer, Lock, Internal Star #8 Nut, Hex #8 Washer, Flat #8 Power Switch Termination Power In Harness |

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING CONFIDENTIAL Reproduction forbidden without the specific written permission of Alari. Inc. Surinyale California. This drawing is only conditionally issued and neither receipt nor possession thereof confers or transfers any right in or license to use the subject matter of the drawing or any design or technical information shown thereon nor any right to reproduce this drawing or any part thereof, except for manufacture by wordors of Alari facor-porated and for manufacture under the corporations written license on cright to reproduce this drawing is granted or the subject matter thereof unless by written agreement with or written permission from the corporation.

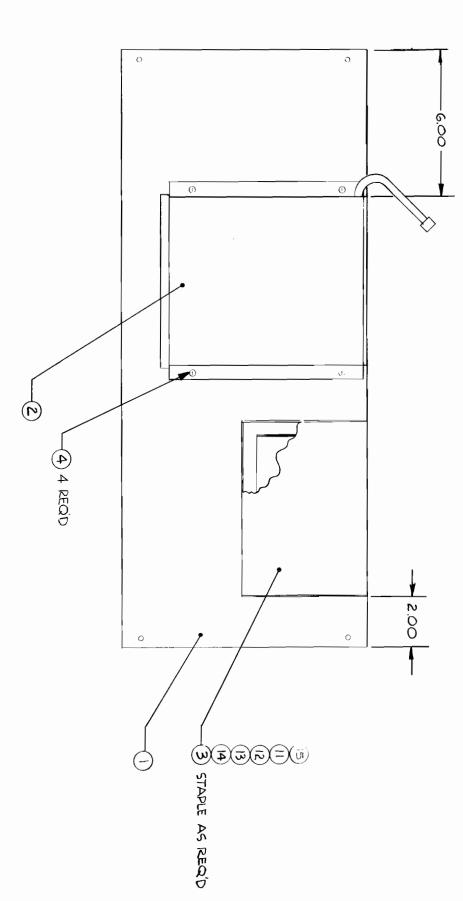



Figure 7 Tape Deck and Shelf Assembly A007947-02 C



Figure 7 Tape Deck and Shelf Assembly
Parts List

| Item | Part Number | Qty. | Description  |  |  |  |  |  |  |
|------|-------------|------|--|--|--|--|--|--|--|
| 1    | 007929-01   | 1    | Shelf Tape Deck  |  |  |  |  |  |  |
| 2A   | A008962-01  | 1    | Tape Deck Assy   |  |  |  |  |  |  |
|      |             |      | Tape Deck Assembly. Used only on early production Two Cabinet Games. No piece parts are available. Replace entire Tape Deck Assembly with item 2B. |  |  |  |  |  |  |
| 2B   | A008962-02  | 1    | Tape Deck Assembly - See Figure 8  |  |  |  |  |  |  |
| 3    | 81-701      | 1    | Box, Cardboard (All Good Industries)   |  |  |  |  |  |  |
| 4    | 72-6612     | 4    | Screw, Sm, Pan Hd, Phil # 6 X 3/4" Lg.   |  |  |  |  |  |  |
| 5    |             |      |  |  |  |  |  |  |  |
| 6    |             |      |  |  |  |  |  |  |  |
| 7    |             |      |  |  |  |  |  |  |  |
| 8    |             |      |  |  |  |  |  |  |  |
| 9    |             |      |  |  |  |  |  |  |  |
| 10   |             |      |  |  |  |  |  |  |  |
| 11   | A008944-01  | 1    | Bear/Raccoon Tape  |  |  |  |  |  |  |
| 12   | A008943~01  | 1    | Witch Hunt Tape  |  |  |  |  |  |  |
| 13   | 007949-01   | 1    | Raccoon Instruction Plex   |  |  |  |  |  |  |
| 14   | 007948-01   | 1    | Hit The Bear Instruction Plex  |  |  |  |  |  |  |
| 15   | 008792-01   | 1    | Extended Play scores   |  |  |  |  |  |  |
|      |             |      |  |  |  |  |  |  |  |

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING CONFIDENTIAL Reproduction forbidden without the specific written permission of Atari, Inc. Sunnywale California This drawing is only conditionally issued and neither receipt nor possession thereof confess of transfers any right in or ilicense to use, the subject matter of the drawing or any design or technical information shown thereon not any right in orproduce this drawing or any part thereof, except for manufacture under the corporation is written license in oright to reproduce this drawing is grainted or the subject matter thereof unless by written agreement with or written permission from the corporation.

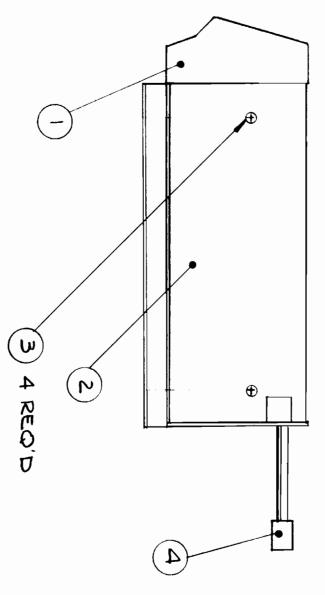

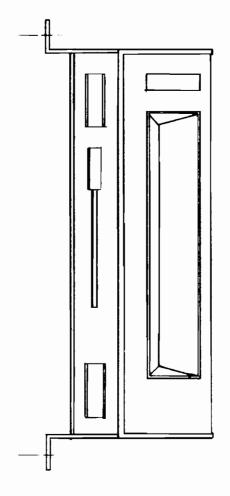


Figure 8 Tape Deck Assembly A008962-02 A



## Figure 8 Tape Deck Assembly Parts List

| Item  | Part Number                        | Qty.  | Description   |
|-------|------------------------------------|-------|---|
| 1 2 3 | A008310-02<br>008961-02<br>72-6606 | 1 1 4 | Mecca Tape Deck, Wiring Assembly Tape Deck Cover (ABS) #6 x 3/8" Lg. SMS Screws |


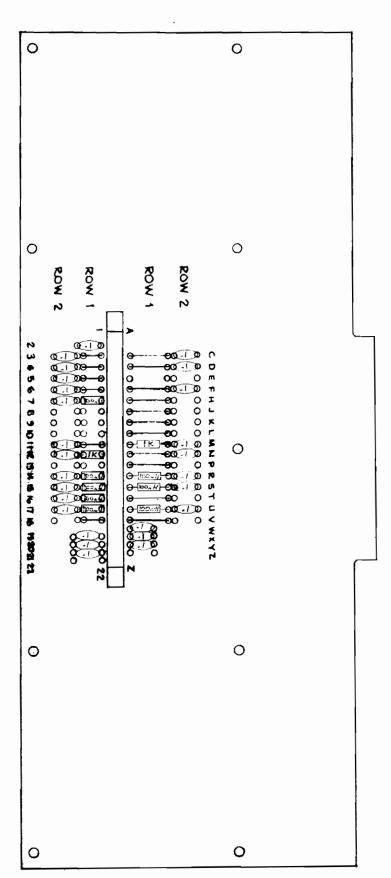


Figure 9 RF Shield PCB Assembly A008335-01 B



### Figure 9 RF Shield PCB Assembly Parts List

| Item                                 | Part Number  | Qty.                               | Description   |
|--------------------------------------|--|------------------------------------|---|
| 1<br>2<br>3<br>4<br>5<br>6<br>7<br>8 | 006549-01<br>79-517222<br>27-250104<br>52-003<br>52-004<br>41-3003<br>41-3004<br>10-5102 | 1<br>26<br>13<br>11<br>3<br>5<br>2 | P.C. Board Connector, 44Pin P.C. Mount Cap, Cer. Disc, 0.1 µf 25V Jumper, .60 Centers Jumper, .30 Centers Inductor, 100 µh, Large Case Inductor, 100 µh, Small Case Res, Carb. Comp., ₹W, 5% 1K OHM |
|                                      |  |                                    |   |

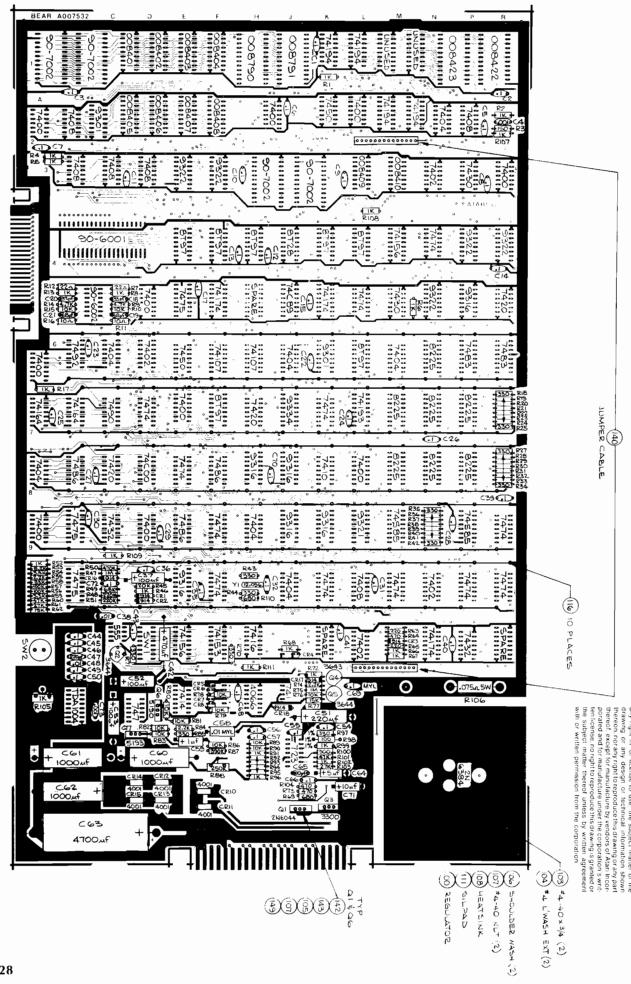

CONFIDENTIAL: Reproduction forbidden without the specific written permission of Atan, Inc., Sunnyvale California, This drawing is only conditionally issued and neither receipt nor possession thereof confers or transfers any right in or license to use, the subject matter of the drawing or any design or technical information shown thereof, norany right to reproduce this grawing or any part thereof, and provided the produce of the produce of the provided and for manufacture under the corporation's written and the produce of the VOTICE TO ALL PERSONS RECEIVING THIS DRAWING



Figure 10 Triple Hunt Game PCB Assembly Parts List

| Item | Part Number          | Qty. | Description           |    |    |            |         |  |  |
|------|----------------------|------|-----------------------|----|----|------------|---------|--|--|
| 1    | 007533-01            | 1    | PRINTED CIRCUIT BOARD |    |    |            |         |  |  |
| 2    | 10-5100              | 2    | i                     |    |    |            | TO OHM  | R11, 16  |  |
| 3    | 10-5102              | 25   | 11                    | 11 | H  | "          | 1K "    | R1,2, 4-6,8,13,17,<br>46,52,66-68,<br>72,102,91-96,107-109,111 |  |
| 4    | 10-5103              | 13   | 11                    | 11 | н  | н          | 10K "   | R10,15,45, 76,78,79,81-83,<br>86,89-90,80                      |  |
| 5    | 10-5104              | 2    | 11                    | 11 | 11 | 11         | 100K '' | R56,57   |  |
| 6    | 10-5105              | 2    | 11                    | н  | П  | ti         | IMEG "  | R47,75   |  |
| 7    | 10-5151              | 1    | 11                    | 11 | 11 | 11         | 150     | R3   |  |
| 8    | 10-5153              | 2    | 11                    | н  | 11 | 11         | 15K ''  | R62,77   |  |
| 9    |                      |      |                       |    |    |            |         |  |  |
| 10   | 10-5220              | 2    | 11                    | 11 | П  | 11         | 22      | R7,12  |  |
| 11   | 10-5221              | 2    | 11                    | 11 | 11 | H          | 220 "   | R <b>63,</b> 65  |  |
| 12   | 10-5222              | 3    | 11                    | 11 | 11 | 11         | 2.2K    | R55,74,84  |  |
| 13   | 10-5224              | 2    | 11                    | 11 | 11 | 11         | 220K '' | R48,51   |  |
| 14   | 10-5273              | 2    | 11                    | 11 | 11 | H          | 27K ''  | R61,103  |  |
| 15   | 10-5301              | ī    | 11                    | 11 | 11 | <b>i</b> 1 | 300 ''  | R100   |  |
| 16   | 10-5331              | 29   | 11                    | 11 | 11 | H          | 330 ''  | R43,44,70,71,85,18-25,   |  |
| 17   | 10-5332              | 1    | £1                    | 11 | 11 | 11         | 3.3K "  | R59  |  |
| 18   | 10-5333              | 1    | 11                    | 11 | 11 | н          | 33K ''  | R58  |  |
| 19   | 10-5392              | 1    | 11                    | 11 | 11 | 11         | 3.9K "  | R54  |  |
| 20   | 10-5394              | 1    | <b>†1</b>             | 11 | 11 | 11         | 390K '' | R87  |  |
| 21   | 10-5471              | 3    | 11                    | 11 | 11 | 11         | 470 11  | R64, 73,104  |  |
| 22   | 10-5472              | 2    | 1)                    | 11 | 11 | 11         | 4.7K "  | R9,14,   |  |
| 23   | 10 <del>-</del> 5473 | 2    | 11                    | 11 | 11 | 11         | 47K ''  | R60,101  |  |
| 24   | 10-5203              | 1    | 11                    | 11 | ** | **         | 20K ''  | R45  |  |

W A Warner Communications Company



Figure 10 Triple Hunt Game PCB Assembly Parts List

| Item     | Part Number            | Qty. Description |       |          |      |      |        |      |   |
|----------|------------------------|------------------|-------|----------|------|------|--------|------|---|
| 25       | 10-5474                | 1                | Res   | Carbon,  | 5%   | 1/4W | 470K   | ОНМ  | R50   |
| 26       | 10-5681                | 2                | Res   | Carbon,  | 11   | 11   | 680    | 11   | R110 ,69  |
| 27       | 10-5683                | 1                | - 11  | 11       | (1   | 11   | 68K    | 11   | R49   |
| 28       | 10-5822                | 1                | - 11  | 11       | н    | 11   | 8.2K   | 11   | R53   |
| 29       | 14-1101                | 1                | - 11  | 11       | 1%   | 11   | 100    | 11   | R98   |
| 30       | 14-1102                | 1                | 11    | п        | 11   | 11   | 1 K    | н    | R99   |
| 31       | 14-1331                | 1                | 11    | 11       | 11   | 11   | 330    | 11   | R97   |
| 32       | 19 <b>-</b> 315102     | 1                | Trin  | npot,    |      |      | 1 K    |      | R105  |
| 33       | 19 <del>-</del> 315254 | 1                | Trin  | npot,    |      |      | 250K   |      | R88   |
| 34       | 19-851WP075            | 1                | Res,  | Wirewou  | nd   | 5W   | .075   | ОНМ  | .R106   |
| 35<br>36 | 21-101103              | 1                | Cap,  | Mylar,   |      |      | .01µf  |      | C 58  |
| 37       | 24 250105              | 1                | Cap E | lectroly | tic  |      | 1µf    | 25V  | C59,  |
| 38       | 24-250505              | 1                | 11    | Ħ        |      |      | 5µ f   | H    | C64   |
| 39       | 24-250107              | 3                | 11    | 11       |      |      | 100µf  | 11   | C52,53,37   |
| 40       | 24-250227              | 1                | ш     | 11       |      |      | 220µf  | 11   | C51   |
| 41       | 24-250477              | 1                | 11    | 11       |      |      | 470µf  | н    | C42   |
| 42       | 24-250108              | 3                | 11    | 11       |      |      | 1000µf | 11   | C60,61,62   |
| 43       | 24-250478              | 1                | 11    | 11       |      |      | 4700µf | 11   | C63   |
| 44       | 27 <b>-</b> 250102     | 2                | Cap,  | Ceramic  | Disc |      | .001µf | 11   | C4, ,73   |
| 45       | 27-250103              | 2                | - 11  | н        | 11   |      | .01µf  | 11   | C38,48  |
| 46       | 27-250104              | 45               | - 11  | 11       | 11   |      | .1µf   | 11   | C1-3, 5-15, 17,   |
|          |                        |                  |       |          |      |      |        |      | 22-32,35,36,<br>39-41,44,45,<br>46,49,50,54,<br>55,56,57,68,<br>66,43,70,72 |
| 47       | 28-101330              | 2                | Cap,  | Dipped M | ica  |      | 33pf   | 100V | C18,20  |
| 48       | 28-101680              | 2                | 11    | 11       | ti   |      | 68pf   | 100V | C19,21  |
| 49       | 28-101101              | 1                | 11    | 11       | П    | 1    | 00pf   | 11   | C65   |



Figure 10 Triple Hunt Game PCB Assembly Parts List

| Item | Part Number       | Qty. |             | Desc        | ription | _  |   |
|------|-------------------|------|-------------|-------------|---------|----|---|
| 50   | 28-101221         | 1    | 11 11       | 11          | 200pf   | 11 | C47   |
| 51   | 31-1N4001         | 6    | Diode, IN40 | 01          |         |    | CR10-15   |
| 52   | 31-IN914          | 6    | '' IN91     | 4           |         |    | CRl-3, 16-18                                      |
| 53   | 31-MBD501         | 5    | " MBI       | <b>5</b> 01 |         |    | CR4-8   |
| 54   | 33-2N3644         | 2    | Transistor  | 2N3644      |         |    | Q2, Q5  |
| 55   | 33-2N5193         | 1    | 11          | 2N5193      |         |    | Q7  |
| 56   | 34-2N3643         | 1    | Transistor  | 2N3643      |         |    | Q4  |
| 57   | 34-2N5190         | 1    | П           | 2N5190      |         |    | Q6  |
| 58   | 34-MJE3300        | 1    | 11          | MJE3300     |         |    | Q3  |
| 59   | 37-7400           | 10   | Integrated  | Circuit     | 7400    |    | A2,A6,A9,D5,D9<br>E7,H/J2,L8,R3                   |
| 60   | 37 <b>-</b> 74C00 | 1    | 11          | 11          | 74C00   |    | D8  |
| 61   | 37-7402           | 4    |             | 11          | 7402    |    | D6,L11,N3,N10                                     |
| 62   | 37-7404           | 7    | 11          | н           | 7404    |    | A8,C6,H9,J6,J10<br>N2,M6                          |
| 63   | 37-7408           | 6    | 11          | · · ·       | 7408    |    | B2,B3,C3,D3,L10<br>P2                             |
| 64   | 37-7410           | 1    | 11          | 11          | 7410    |    | κ8  |
| 65   | 37-7414           | 1    | 11          | H           | 7414    |    | E12   |
| 66   | 37-7416           | 1    | 11          | 11          | 7416    |    | H11   |
| 67   | 37-7420           | 3    | 11          | 11          | 7420    |    | C8,H7,R5  |
| 68   | 37-7430           | 2    | 11          | 11          | 7430    |    | M5,P3   |
| 69   | 37-7432           | 2    | 11          | H           | 7432    |    | C9,P11  |
| 70   | 37-7450           | 2    | 11          | 11          | 7450    |    | E6,K2   |
| 71   | 37-7474           | 12   | 11          | 11          | 7474    |    | D7, E8,F9,F10,<br>K7,K10,L5,M10,<br>N4,P10,R9,R10 |
| 72   | 37-7475           | 3    | 11          | ti          | 7475    |    | B9,B10,E5   |
| 73   | 37-7483           | 2    | 11          | 11          | 7483    |    | P6,R6   |
| 74   | 37-74\$85         | 2    | 11          | 11          | 74885   |    | M9,P9   |
| 75   | 37-7486           | 3    | 11          | (1          | 7486    |    | B8,E9,F8  |

A Warner Communications Company



Figure 10 Triple Hunt Game PCB Assembly Parts List

| Item | Part Number       | Qty. | Description |             |              |                          |  |  |  |  |
|------|-------------------|------|-------------|-------------|--------------|--------------------------|--|--|--|--|
| 76   | 37 <b>-</b> 74c89 | 1    | 11          | 11          | 74089        | J5                       |  |  |  |  |
| 77   | 37-7490           | 1    | 11          | 11          | 7490         | C7                       |  |  |  |  |
| 78   | 37 <b>-</b> 7492  | 1    | 11          | П           | 7492         | в6                       |  |  |  |  |
| 79   | 37-74107          | 2    | 11          | 11          | 74107        | F6,H6                    |  |  |  |  |
| 80   | 37-74153          | 1    | 11          | 11          | 74153        | F11                      |  |  |  |  |
| 81   | 37 <b>-</b> 74156 | 1    | 11          | 11          | 74156        | Ell                      |  |  |  |  |
| 82   | 37-74164          | 2    | 11          | 11          | 74164        | A7,87                    |  |  |  |  |
| 83   | 37-74166          | 1    | 11          | 11          | 74166        | м4                       |  |  |  |  |
| 84   | 37-74174          | 3    | 11          | H           | 74174        | F5,K5,N11                |  |  |  |  |
| 85   | 37-74193          | 1    | 11          | П           | 74193        | L7                       |  |  |  |  |
| 86   | 37-74194          | 4    | 11          | FI          | 74194        | K1, L1, M2, M/N2         |  |  |  |  |
| 87   | 37-9301           | 2    | П           | 11          | 9301         | C2,K6                    |  |  |  |  |
| 88   | 37-9316           | 6    | 11          | п           | 9316         | E10,H8,K9,J8,            |  |  |  |  |
| 89   | 37-9321           | 1    | Integrated  | Circuit     | 9321         | J9,P5 1                  |  |  |  |  |
| 90   | 37-9322           | 5    | 11          | 11          | 9322         | E3,F3,N5,P4,R4           |  |  |  |  |
| 91   | 37-9334           | 1    | 11          | 11          | 9334         | J7                       |  |  |  |  |
| 92   | 37-723            | 1    | 11          | 11          | 723          | J13                      |  |  |  |  |
| 93   | 37-741            | 1    | 11          | 11          | 741          | J12                      |  |  |  |  |
| 94   | 37-747            | 1    | 11          | 11          | 747          | D12                      |  |  |  |  |
| 95   | <b>37-</b> 4066   | 1    | 11          | 11          | 4066         | H12                      |  |  |  |  |
| 96   | 37 <b>-</b> 555   | 1    | 11          | 11          | 555          | C11                      |  |  |  |  |
| 97   | 37 <b>-</b> 8T97  | 7    | 11          | 11          | 8Т97         | E4,F4,F7,H4,             |  |  |  |  |
|      |                   |      |             |             |              | K4,L4,L6                 |  |  |  |  |
| 98   | 37-8225           | 7    | 11          | н           | 8225         | N6,M7,M8,N7,N8,<br>P7,P8 |  |  |  |  |
| 99   | 37-TDA1004        | 1    | 11          | 11          | TDA1004      | B12                      |  |  |  |  |
| 100  | 34-2N6384         | 1    | Regulator   |             | 2N6384       |                          |  |  |  |  |
| 101  | 62-001            | 1    | Switch, Mor | mentary SPS | ST SW2       |                          |  |  |  |  |
| 102  | 66-118PIT         | 1    | Switch, DI  | P 8 Statio  | ons SPST SW1 | Dll                      |  |  |  |  |



Figure 10 Triple Hunt Game PCB Assembly Parts List

| Item       | Part Number                 | Qty.                                   | Description                                   |                |
|------------|-----------------------------|--|---|----------------|
| 103        | 72-1412C                    | 2                                      | Screw, Machine, Pan HD. PH. #4-40             | 0 X 3/4 Cres   |
| 104        | 72-034                      | 2                                      | Washer Lock, External Star #4                 |                |
| 105        | 75 <b>-</b> 05 <del>1</del> | 2                                      | Washer, Lock, Internal Star #4                |                |
| 106        | 75-09014T                   | 2                                      | Washer, Shoulder                              |                |
| 107        | 75 <b>-</b> 9146            | 4                                      | Nut, Hex, #4-40, Cres                         |                |
| 108        | 008412-01                   | 1                                      | Heatsink, 2N6055                              |                |
| 109        | <b>78-</b> 06022            | 1                                      | Heatsink, TDA1004                             |                |
| 110        | 78-13016                    | AR                                     | Cement, Heatsink                              |                |
| 111        | 78-16005                    | 1                                      | Silpad  |                |
| 112        | 90-102                      | 1                                      | Crystal, 12.096 MH₂                           | Y1             |
| 113        | 90-6001                     | 1                                      | I.C., Microprocessor                          | C 4            |
| 114        | 90-6002                     | 1                                      | 1.C.  | B/C5           |
| 115        | 90-7002                     | 4                                      | I.C.  | A1,B1,H3,K3    |
| 116        | 007749                      | 10                                     | Bus Bar, 13-Post                              |                |
| 133        | 008409-01                   | 1 [                                    | Bear Character PROM 1 L3                      | 3              |
| 134        | 008410-01                   | 1                                      | 11 11 11 2 M3                                 | 3              |
| 135        | 008422-01                   | 1                                      | Bear Picture Rom A R1                         |                |
| 136        | 008423-01                   | 1 1                                    | Bear Picture Rom B N/I                        |                |
| 137<br>138 | 008790-01<br>008791-01      | $\begin{vmatrix} 1 \\ 1 \end{vmatrix}$ | Bear Program Rom 1 H-3 Bear Program Rom 2 J-3 |                |
| 139        | 37-8 T28                    | $\begin{vmatrix} 1 \\ 1 \end{vmatrix}$ | Intergrated Circuit 8T28 J4                   | -              |
| 140        | 008789-01                   | 1                                      | Jumper Cable, 14 Position                     |                |
| 141        | 34-2N6044                   | 1                                      | Transistor, 2N6044                            | Q1.            |
| 142        | 78-06017                    | 2                                      | Heatsink                                      | Q1 <b>,</b> Q6 |
| 143        | 72-1406                     | 2                                      | Screw, Mach, Pan Hd Ph, #4-40x3/8             |                |
| 144        |                             |  |   |                |
| 145        | 79-42040                    | 1                                      | Socket, 40 Pin, Med. Insertion                | C4             |
| 146        | 24-250106                   | 1                                      | Cap, Electrolytic, 10µf, 25V                  | C71            |
| 147        | 21-101104                   | 1                                      | Cap, Mylar 0.luf, 100V                        | C69            |
| 148        |                             |  |   |                |
| 149        | 78-16001                    | A/R                                    | Silicon Compound                              | Q1 <b>,</b> Q6 |
|            |                             |  |   |                |

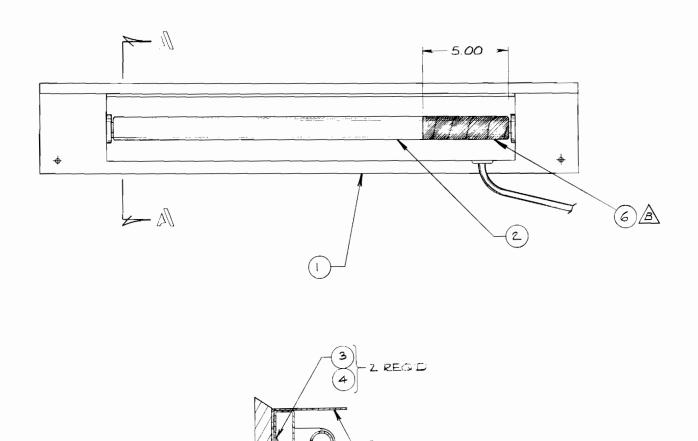


Figure 11 Single Cabinet Top Black Light Assembly A009357-01 C



Figure 11 Single Cabinet Top Black Light Assembly Parts List

| Item | Part Number      | Qty. | Description                       |
|------|------------------|------|-----------------------------------|
| 1    | 009311-01        | 1    | Top Mount Board, Black-Lite       |
| 2    | A006917-73       | 1    | Type A Fluorescent Light Assembly |
| 3    | 72-6610          | 2    | Screw, Sht. Met., #6 x 5/8" Lg.   |
| 4    | 75 <b>-</b> 010S | 2    | Washer, Flat, #10                 |
| 5    | 009363-01        | 1    | Metal Light Shield                |
| 6    | 78-67032         | A/R  | Black Phototape 2" wide           |
|      |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |
| 1    |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |
|      |                  |      |                                   |


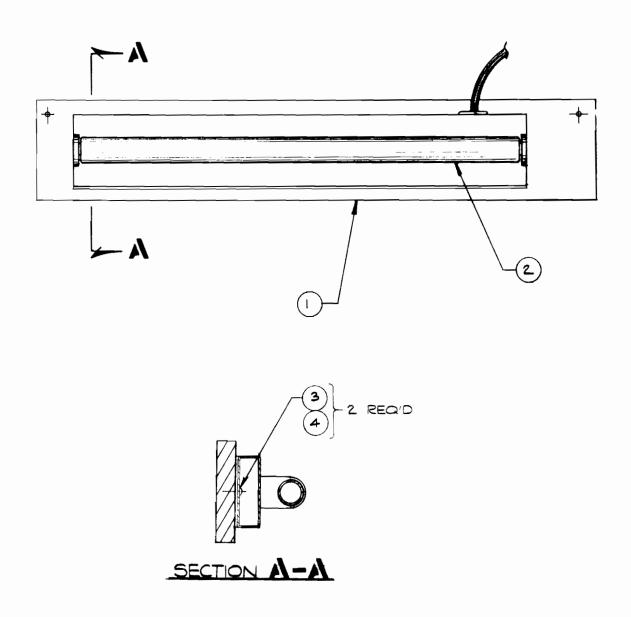


Figure 12 Single Cabinet Lower Black Light Assembly A009337-01 B



Figure 12 Single Cabinet Lower Black Light Assembly Parts List

| Item | Part Number      | Qty. | Description                                 |
|------|------------------|------|---|
| ı    | 009300-01        | 1    | Lower Mount Board, Black-Lite               |
| 2    | A006917-11       | 1    | Fluorescent Light Assy Type A (18" Harness) |
| 3    | 72-6610          | 2    | Screw, Sht. Met., #6 x 5/8" Lg.             |
| 4    | 75 <b>-</b> 010S | 2    | Washer, Flat, #10                           |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
| İ    |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |
|      |                  |      |   |

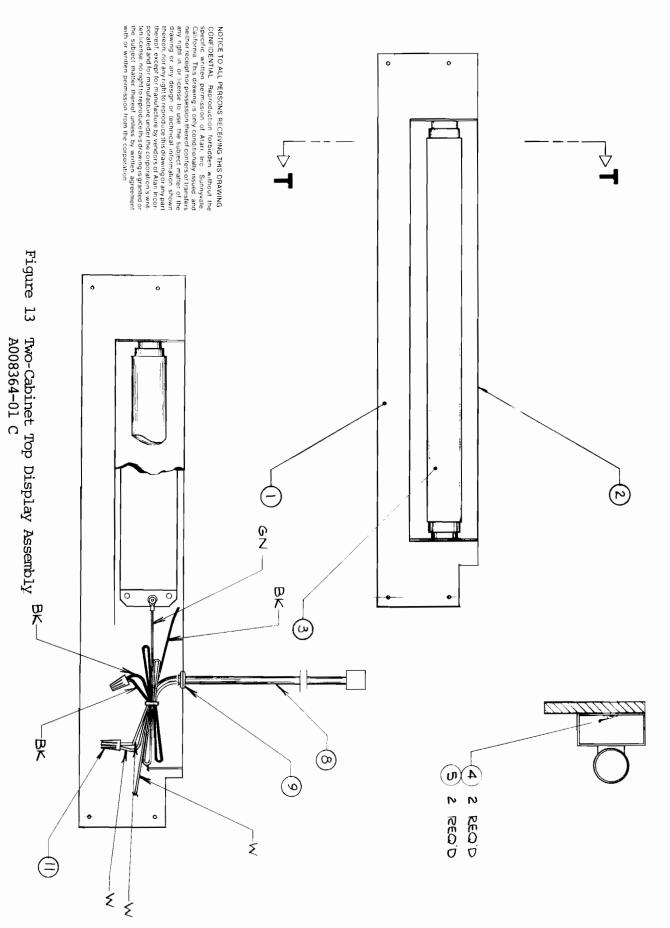



## Figure 13 Two-Cabinet Top Display Assembly Parts List

| Item | Part Number          | Qty. | Description                      |
|------|----------------------|------|----------------------------------|
| 1    | 007967-01            | 1    | Board, Light Mount, Top          |
| 2    | 93-104               | 1    | Simkar Fluorescent Fixture 18"   |
| 3    | 70- 308              | 1    | Fluorescent Tube 18" (F15T8/BLB) |
| 4    | 7 <sup>2</sup> -6610 | 2    | #6 x 5/8 Screw sms               |
| 5    | 75 <b>-</b> 010S     | 2    | Washer, Flat #10                 |
| 6    |                      |      |                                  |
| 7    |                      |      |                                  |
| 8    | A009062-0 <b>2</b>   | 1    | Fluorescent Harness 100" Lg.     |
| 9    | 78-2652              | 1    | Grommet, Rubber                  |
| 10   | 78-24001             | A/R  | Tie Wrap                         |
| 11   | 79-561816            | 2    | Wire Nut, Ideal 71-B             |
|      |                      |      |                                  |
|      |                      |      |                                  |
|      |                      |      |                                  |
|      |                      |      |                                  |
|      |                      |      |                                  |
|      |                      |      |                                  |
|      |                      | [    |                                  |
|      |                      |      |                                  |
|      |                      |      |                                  |
|      |                      |      |                                  |
|      |                      |      |                                  |
|      |                      |      |                                  |
|      |                      |      |                                  |
|      |                      |      |                                  |
|      |                      |      |                                  |
|      |                      |      |                                  |
|      |                      |      |                                  |

A Warner Communications Company


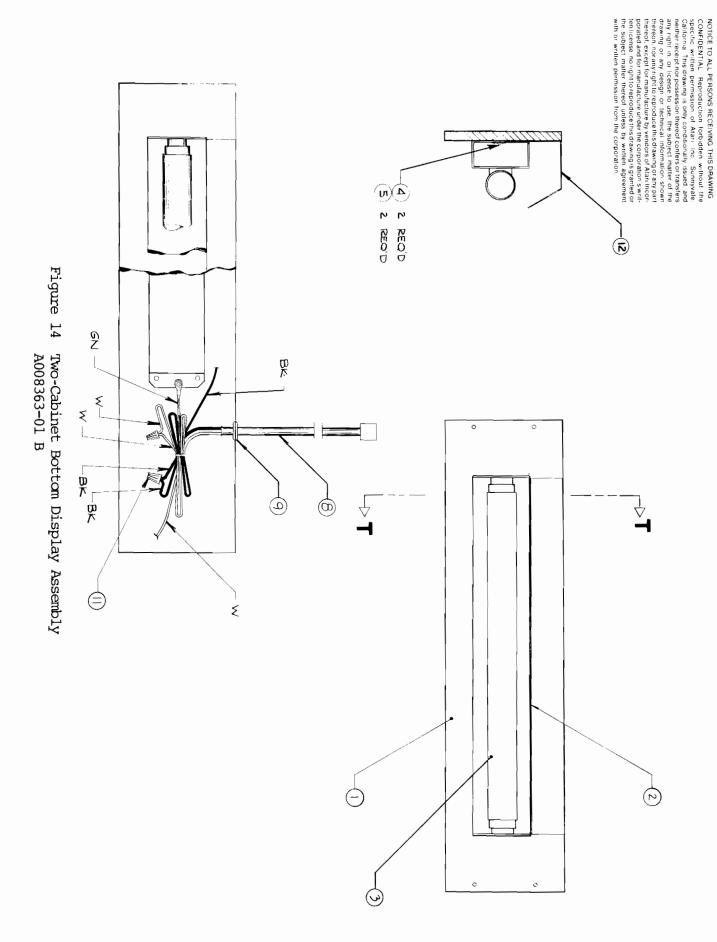




Figure 14 Two-Cabinet Bottom Display Assembly Parts List

| Item     | Part Number                   | Qty. | Description                                      |
|----------|-------------------------------|------|--|
| 1        | 007964-01                     | 1    | Board, Light Mount, Front                        |
| 2        | 93-104                        | 1    | Fluorescent Fixture 18"                          |
| 3        | <b>70-</b> 306                | 1    | Fluorescent Tube 18" (Black - Lite F 15 T8/ BLB) |
| 4        | 72-6610                       | 2    | #6x5/8 sms                                       |
| 5        | 75 <b>-</b> 010S              | 2    | Washer, Flat #10                                 |
| 6        |                               |      |  |
| 7        |                               |      |  |
| 8        | A006916-03                    | 1    | Fluorescent Harness 82" Lg.                      |
| 9        | 78-2652                       | 1    | Grommet, Rubber                                  |
| 10       | 78-24001                      | A/R  | Tie Wrap   |
| 11<br>12 | <b>79-561816</b><br>008375-01 | 2    | Wire Nut, Ideal 71-B<br>Metal Light Shield       |
|          |                               |      |  |
|          |                               |      |  |
|          |                               |      |  |
|          |                               |      |  |
|          |                               |      |  |
|          |                               |      |  |




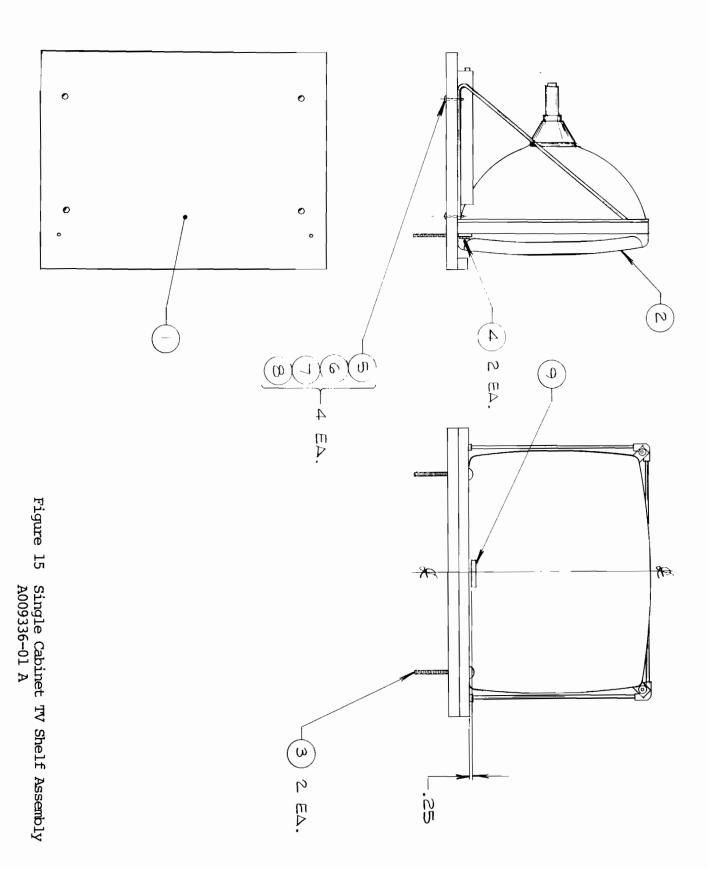

# Figure 15 Single Cabinet TV Shelf Assembly Parts List

| Item                            | Part Number  | Qty.                            | Description  |
|---------------------------------|--|---------------------------------|--|
| 1 2                             | 009295-01<br>92-032<br>or  | 1 1                             | T.V. SHELF<br>23-inch TV Monitor, Motorola Model M7000-155   |
| 3<br>4<br>5<br>6<br>7<br>8<br>9 | 92-030<br>82-404<br>72-6012<br>75-5120N<br>75-010S<br>75-040<br>75-911S<br>006319-02 | 1<br>2<br>2<br>4<br>4<br>4<br>4 | 23-inch TV Monitor, TEC Model 623 EYE BOLT 4-20 x 4" LG. SCREW, SHT. MET. PHIL. PAN HD. #10 x 3/4 LG. BOLT, CARRIAGE, #10-24 x 1.25" LG. WASHER, FLAT, #10 WASHER, SPLIT LOCK, #10 HEX NUT, #10-24 COPYRIGHT DECAL, 1977 |
|                                 |  |                                 |  |
|                                 |  |                                 |  |
|                                 |  |                                 |  |
|                                 |  |                                 |  |
|                                 |  |                                 |  |

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING CONFIDENTIAL Reproduction forbidden without the specific written permission of Mari, Inc. Sunnyvale California This drawing is only conditionally issued and neither receipt nor possession thereof confers of transfers any right, in or ilicense to use the subject matter of the drawing or any design or technical information shown thereon, not any night to reproduce this drawing or any part thereof, except for manufacture by wendors of Mari Incorporated and for manufacture under the corporation's written incense, no right to reproduce this drawing is grateful with the subject matter thereof unless by written agreement with or written permission from the corporation.

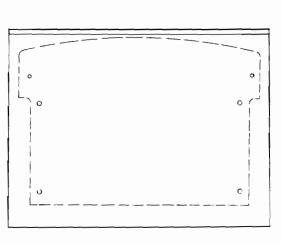

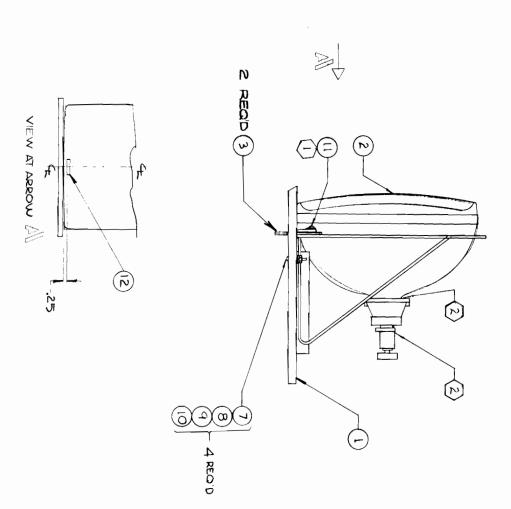


Figure 16 Two-Cabinet TV Shelf Assembly A008365-01 D



## Figure 16 Two-Cabinet TV Shelf Assembly Parts List

| Item | Part Number      | Qty.  | Description   |
|------|------------------|-------|---|
| 1    | 008331-01        | 1 ref | T.V. SHELF  |
| 2    | 92-032           | 1     |   |
| -    | or               |       | 23-inch TV Monitor, Motorola Model M7000-155                |
|      | 92-030           | 1     | 23-inch TV Monitor, TEC Model 623                           |
| 3    | 82-404           | 2     | EYE BOLT, ¼-20 x4 " LG.                                     |
| 4    |                  |       |   |
| 5    |                  |       |   |
| 6    |                  |       |   |
| 7    | 75-5120N         | 4     | BOLT, CARRIAGE #10-24 x 1.25" LG.                           |
| 8    | 75 <b>-</b> 010S | 4     | WASHER, FLAT #10  |
| 9    | 75-040           | 4     | WASHER, SPLIT-LOCK #10                                      |
| 10   | 75-9118          | 4     | HEX NUT, #10-24   |
| 11   | 72-6012          | 2     | SCREW, SM #10 $\times$ 3/4 PH $_{\circ}$ PAN $_{\circ}$ HD. |
| 12   | 006319-02        | 1     | Copyright Decal 1977  |
|      |                  |       |   |
|      |                  |       |   |
|      |                  |       |   |
|      |                  |       |   |
|      |                  | 1     |   |
|      |                  | 1     |   |
|      |                  |       |   |
|      |                  |       |   |
|      |                  |       |   |
|      |                  |       |   |
|      |                  |       |   |
|      |                  |       |   |
|      |                  |       |   |
|      |                  |       |   |
|      |                  |       |   |

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING CONFIDENTIAL. Reproduction forbidden without the Specific written permission of Alari, Inc. Surnywale. California This drawing is only conditionally issued, and neither receip nor possession thereof confess of transfers any right in or license to use the subject matter of the drawing or any design or technical information shown thereon nor any right to reproduce this drawing or any part thereof except for manufacture by vendors of Ahar Incorporated and for manufacture under the corporation's written lesses, no right to reproduce this drawing is granted or the subject matter therefor unless by written agreement with or written permission from the corporation.

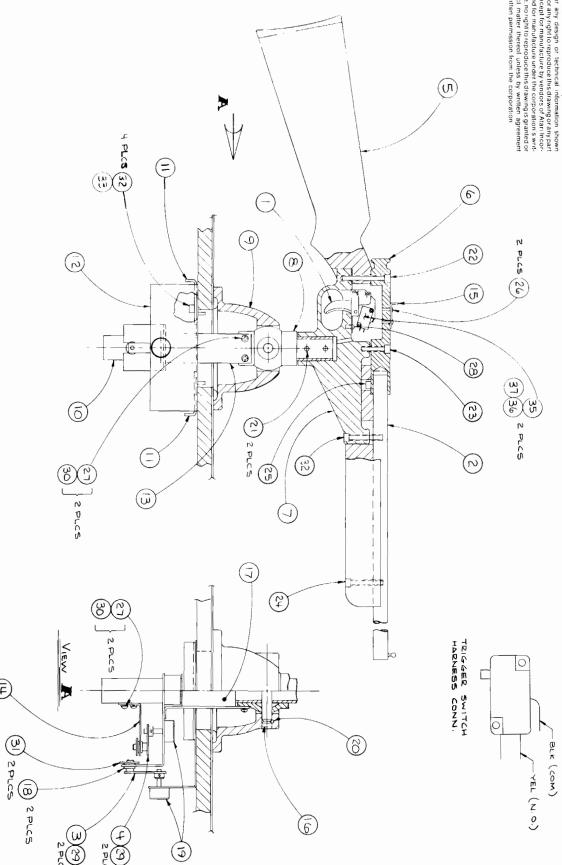
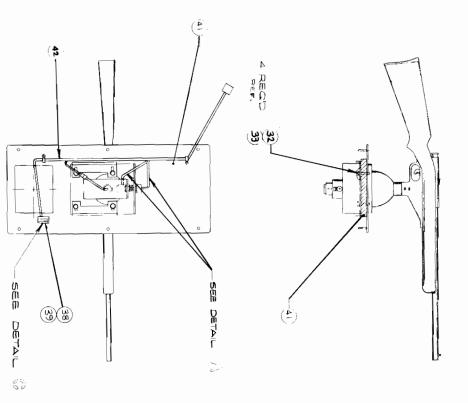


Figure 17 Rifle and Pot Mount Assembly A008315-01 B and -02 A

46

**(£**)

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING CONFIDENTIAL Reproduction forbidden without the specific written permission of Atari Inc. Sunnywale, California This drawing is only conditionally issued and neither receipt nor possession thereof confers or transfers any right in, or license to use the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce this drawing or any part thereof except for manufacture under the corporation's written (Lesses no right to reproduce his drawing is granted or the subject matter thereof unless by written agreement with or written permission from the corporation.



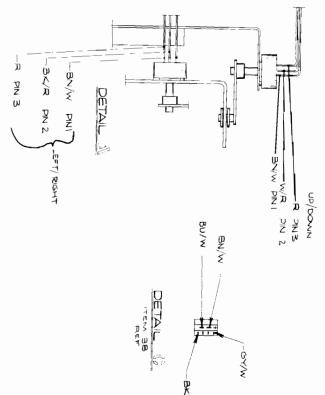


Figure 17 Rifle and Pot Mount Assembly A008315-01 B and -02 A



### Figure 17 Rifle and Pot Mount Assembly Parts List

#### NOTE:


The only difference between Rifle and Pot Mount Assembly part numbers A008315-01 and -02 is the -02 has a shorter gun barrel.

|      | and -02 is the -02 has a shorter gun parren. |      |   |
|------|--|------|---|
| Item | Part Number                                  | Qty. | Description   |
| 1    | A008833-01                                   | 1    | Trigger Switch Assembly                               |
| 2A   | A008834-01                                   | 1    | Barrel Assembly - Used only on Single Cabinet games   |
| 2B   | A008834-02                                   | 1    | Barrel Assembly - Used only on Two-Cabinet games      |
| 3    | A008840-01                                   | ] 1  | Pot Linkage   |
| 4    | A008841-01                                   | 1    | Pot Linkage   |
| 5    | 008317-01                                    | 1    | Rifle Stock   |
| 6    | 008319-01                                    | 1    | Receiver  |
| 7    | 008322-01                                    | 1    | Rifle Mount   |
| 8    | 005309-01                                    | 1    | Ball  |
| 9    | 005308-01                                    | 1    | Pot Mount   |
| 10   | 005317-01                                    | 1    | Center Post   |
| 11   | 005313-01                                    | 2    | Bumper Bracket  |
| 12   | 005334-01                                    | 1    | Backing Plate   |
| 13   | 005315-01                                    | 1    | Center Post Bracket                                   |
| 14   | 005314-01                                    | 1    | Linkage Bracket                                       |
| 15   | 008323-01                                    | 1    | Rear Sight  |
| 16   | 005310-01                                    | 1    | Retaining Pin   |
| 17   | 005312-01                                    | 1    | Rubber Stop   |
| 18   | 005333-01                                    | 2    | Hub   |
| 19   | 007903-01                                    | 2    | Special Pot   |
| 20   | 73-20812                                     | 1    | Roll Pin  |
| 21   | 73-21228                                     | 2    | Roll Pin, $3/16 \times 1 3/4 \text{ Lg}$ .            |
| 22   | 72-8536                                      | 1    | Scr. Mach., 4-20 x 2.25 Lg. Soc. Hd. Blk              |
| 23   | 72-8520                                      | ] 1  | Scr. Mach., $\frac{1}{4}$ -20 x 1.25 Lg. Soc. Hd. Blk |
| 24   | 72-8528                                      | 1    | Scr. Mach., $\frac{1}{4}$ -20 x 1.75 Lg. Soc. Hd. Blk |
| 25   | 72-8804                                      | ] 1  | Scr. Mach., 8-32 x .25 Lg. Soc. Hd. Blk               |
| 26   | 75-3406 B                                    | 2    | Scr. Mach., 4-40 x .38 Lg. Flat Hd. Blk               |
| 27   | 72-1806S                                     | 4    | Scr. Mach., 8-32 x .38 Lg. Pan Hd.                    |
| 28   | 72-1605C                                     | 1    | Scr. Mach., 6-32 x .31 Lg. Rd. Hd.                    |
| 29   | 75 <b>-</b> 4606                             | 4    | Scr. Set, 6-32 x .38 Lg. Allen                        |
| 30   | 75-048                                       | 4    | Washer, #8, Split-Lock                                |
| 31   | 73-3001                                      | 2    | Retaining 'E' Ring (1/4 Shaft)                        |
| 32   | 72-8524                                      | 5    | Screw, Mach., $\frac{1}{4}$ -20 x 1.50 Lg. Soc. Hd.   |
| 33   | 75-045                                       | 4    | Washer, #4, Split-Lock                                |
| 34   | A008308-01                                   | 1    | Trigger Switch Harness                                |
| 35   | 65-191C                                      | 1    | Switch, Cherry  |
| 36   | 72-1408C                                     | 2    | Screw, Mach., #4-40 x ½ Lg.                           |
| 37   | 75-044                                       | 2    | Washer, #4, Split-Lock                                |
| 38   | 62-002                                       | 1    | L.E.D. Switch   |
| 39   | 001856-01                                    | 1    | Alum. Bushing   |
| I i  |  |      |   |



## Figure 17 Rifle and Pot Mount Assembly Parts List

| Item           | Part Number                          | Qty.        | Description   |
|----------------|--------------------------------------|-------------|---|
| 40<br>41<br>42 | 007951-01<br>007919-01<br>A008307-01 | 1<br>1<br>1 | Gun Mount Control Panel W/Graphics Gun Mount Spacer Control Panel Harness |
|                |                                      |             |   |
|                |                                      |             |   |
|                |                                      |             |   |
|                |                                      |             |   |
|                |                                      |             |   |
|                |                                      |             |   |

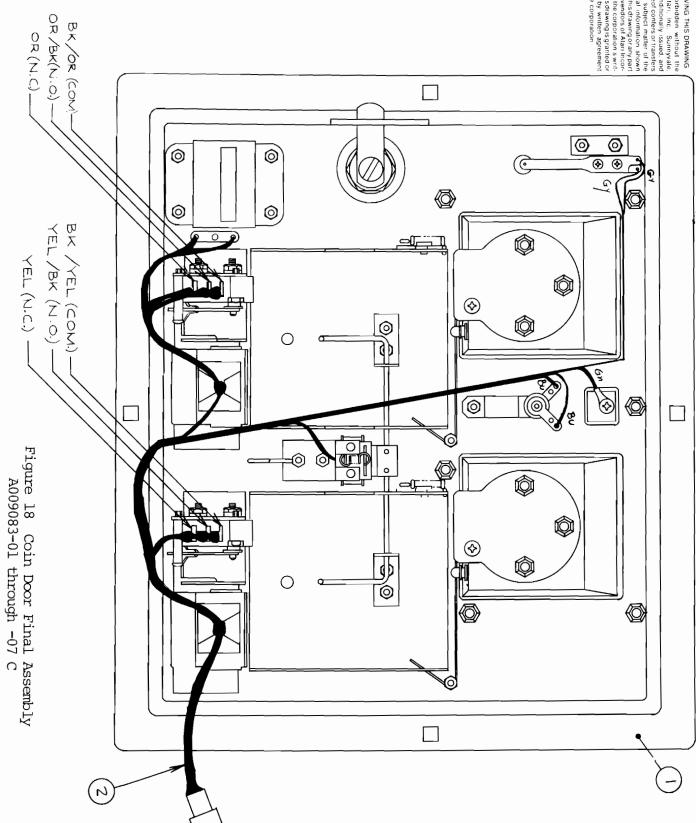



## Figure 18 Coin Door Final Assembly Parts List

| Item | Part Number  | Qty.   | Description   |
|------|--|--|---|
| 1    | A006794-01<br>A006794-02<br>A006794-03<br>A006794-04<br>A006794-05<br>A006794-06<br>A006794-07 | Ref.<br>Ref.<br>Ref.<br>Ref.<br>Ref.<br>Ref. | Coin Door Assy. for American Quarter Only - See Figure 19. Coin Door Assy. for Belgian 5 Francs Only - See Figure 19. Coin Door Assy. for German Mark Only - See Figure 19. Coin Door Assy. for Swedish Krona Only - See Figure 19 Coin Door Assy. for Japanese 100 Yen Only - See Figure 19. Coin Door Assy. for English 10 Pence Only - See Figure 19 Coin Door Assy. for Australian 20-Cent Piece Only - See |
| 2    | A006921-01   | 1  | Harness Assembly  |

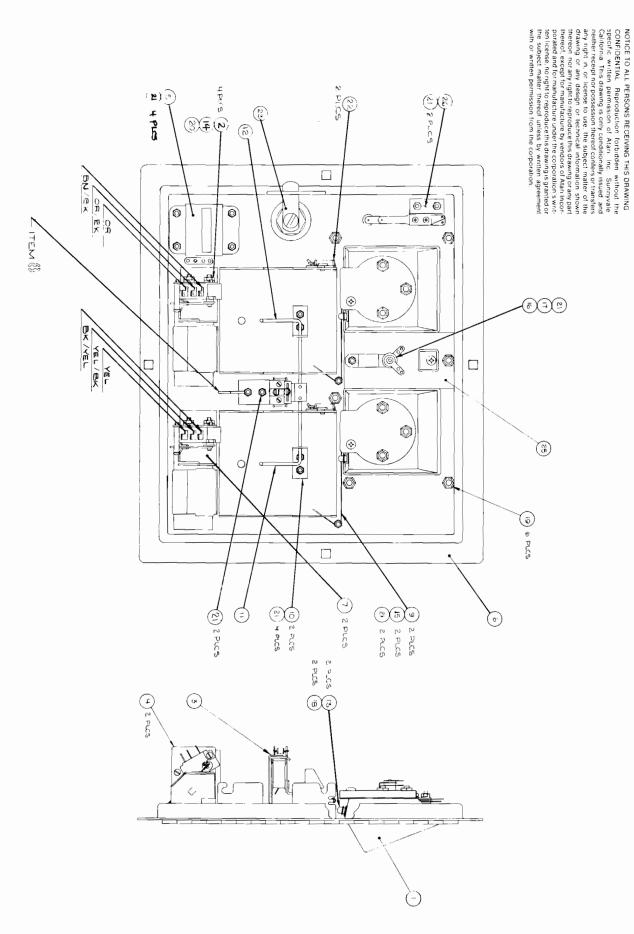


Figure 19 Coin Door Assembly A006794-01 E



Figure 19 Coin Door Assembly
Parts List

NOTICE TO ALL PERSONS RECEIVING THIS DRAWING CONFIDENTIAL Reproduction forbidden without the specific written permission of Atari, Inc. Sunnywale Caldorna. This grawing is only conditionally issued, and neither receipt nor possession thereof confers of transfers any right in or license to use the subject matter of the drawing or any design or technical information shown thereon, nor any right to reproduce this grawing or any part thereof except for manufacture by vendos of Atari incorporated and for manufacture under the corporation's switten agreement with or written permission from the corporation with or written permission from the corporation

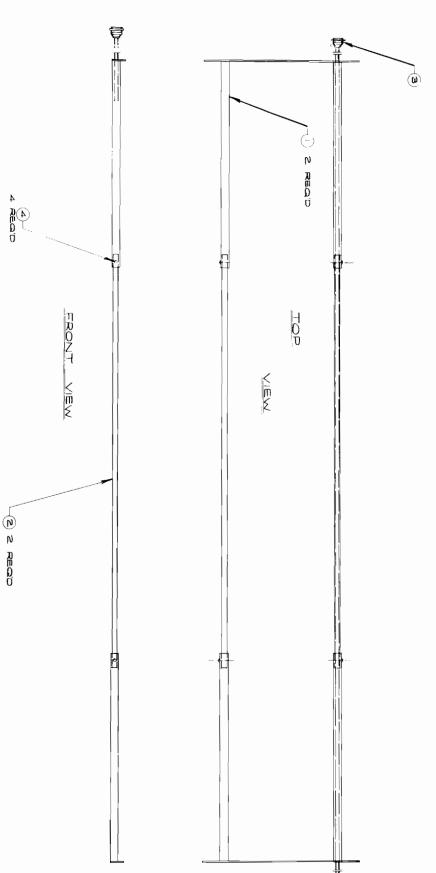


Figure 20 Brace Assembly A008456-01 A



## Figure 20 Brace Assembly Parts List

| Item | Part Number | Qty. | Description   |
|------|-------------|------|---|
| 1    | A008115-01  | 2    | Support Tube & Plate Assy Tube (Support) Interconnect Cable Assy Screw, Allen Hd, Socket #10-32 x3/16" Lg. Shipping Container (Brace) |
| 2    | 008114-01   | 2    |   |
| 3    | A008306-01  | 1    |   |
| 4    | 74-4003     | 4    |   |
| 5    | A008455-XX  | 1    |   |



