


ENDURO RACER

○ コイン・クレジットの設定


COIN/CREDIT OPTION SETTING DIP SW A

OPTION	1	2	3	4	5	6	7	8
1 COIN 1 CREDIT	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN 2 CREDITS	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
1 COIN 3 CREDITS	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
1 COIN 4 CREDITS	ON	ON	OFF	OFF	ON	ON	OFF	OFF
1 COIN 5 CREDITS	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
1 COIN 6 CREDITS	ON	OFF	ON	OFF	ON	OFF	ON	OFF
2 COINS 1 CREDIT	OFF	ON	ON	OFF	OFF	ON	ON	OFF
3 COINS 1 CREDIT	ON	ON	ON	OFF	ON	ON	ON	OFF
4 COINS 1 CREDIT	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
2 COINS 3 CREDITS	ON	OFF	OFF	ON	ON	OFF	OFF	ON
2 COINS 1 CREDIT								
4 COINS 2 CREDITS	OFF	ON	OFF	ON	OFF	ON	OFF	ON
5 COINS 3 CREDITS								
6 COINS 4 CREDITS								
2 COINS 1 CREDIT	ON	ON	OFF	ON	ON	ON	OFF	ON
4 COINS 3 CREDITS								
1 COIN 1 CREDIT								
2 COINS 2 CREDITS								
3 COINS 3 CREDITS	OFF	OFF	ON	ON	OFF	OFF	ON	ON
4 COINS 4 CREDITS								
5 COINS 6 CREDITS								
1 COIN 1 CREDIT								
2 COINS 2 CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
3 COINS 3 CREDITS								
4 COINS 5 CREDITS								
1 COIN 1 CREDIT	OFF	ON	ON	ON	OFF	ON	ON	ON
2 COINS 3 CREDITS								
FREE PLAY	ON	ON	ON	ON	ON	ON	ON	ON

COIN SW #1 COIN SW #2

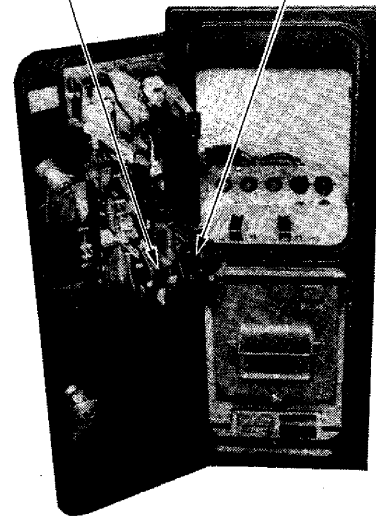

GAME BOARD A (834-6000)

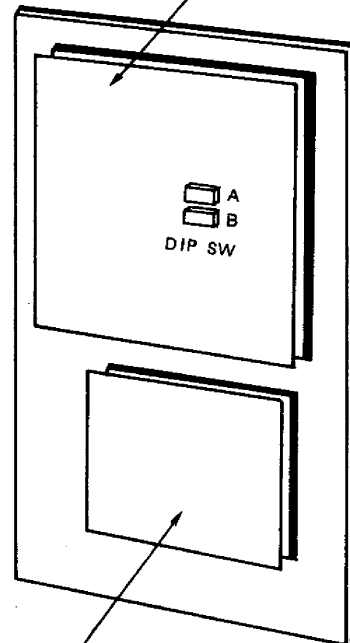

GAME BOARD B (834-6003)

○ ゲーム条件の設定

GAME OPTION SETTING

DIP SW B

OPTION	1	2	3	4	5	6	7	8
TYPE SELECT	WHEELIE UP RIGHT	OFF ON						
GAME DIFFICULTY	MEDIUM		OFF	OFF				
	EASY		ON	OFF				
	HARD HARDEST		ON	ON				
TIME ADJUST	MEDIUM				OFF	OFF		
	EASY				ON	OFF		
	HARD HARDEST				ON	ON		
TIME CONTROL	MEDIUM					OFF	OFF	
	EASY					ON	OFF	
	HARD					OFF	ON	
	HARDEST					ON	ON	
ADVERTISE SOUND	OFF ON							OFF ON

① 他車の出現頻度 (SWITCH 2, 3 で設定)

Other cars' appearance frequency (set by DIP SWITCHES 2 & 3)

SWITCH NO.	The other cars' appearance frequency		Difficulty level
2	3	他車の出現頻度	難易度
OFF	OFF	—————	MEDIUM
ON	OFF	MEDIUM 設定に対し 30% 減	EASY
OFF	ON	" 40% 増	HARD
ON	ON	" 80% 増	HARDEST

※ ← 出荷時 When shipping

② ゲーム時間調整 (SWITCH 4, 5 で設定)

Game time adjustment (set by DIP SWITCH 4 & 5)

SWITCH NO.	Game time (seconds) per stage					Difficulty level	
4	5	1	2	3	4	5	難易度
OFF	OFF	60	50	50	50	50	MEDIUM
ON	OFF	65	50	50	50	50	EASY
OFF	ON	55	50	50	50	50	HARD
ON	ON	50	50	50	50	50	HARDEST

※ ← 出荷時 When shipping (WHEELIE TYPE)

※ ← 出荷時 When shipping (UPRIGHT TYPE and SIT-DOWN TYPE)

③ 内部時間調整 (SWITCH 6, 7 で設定)

Inner time adjustment (set by DIP SWITCH 6 & 7)

SWITCH NO.	DISLAY TIME 1 SEC speed		Difficulty level
6	7	DISPLAY TIME 1 SECの速さ	難易度
OFF	OFF	95%	MEDIUM
ON	OFF	100%	EASY
OFF	ON	85%	HARD
ON	ON	80%	HARDEST

※ ← 出荷時 When shipping

具体的な設定例

DETAILED EXAMPLES

DIP SW NO.						Difficulty level
2	3	4	5	6	7	難易度
ON	OFF	ON	OFF	ON	OFF	易しい
ON	OFF	ON	OFF	OFF	ON	EASY
ON	OFF	OFF	OFF	ON	ON	↑
ON	OFF	ON	ON	OFF	ON	← WHEELIE TYPE
OFF	OFF	OFF	OFF	OFF	OFF	
OFF	OFF	OFF	OFF	OFF	ON	
OFF	OFF	OFF	ON	OFF	OFF	← UPRIGHT TYPE & SIT-DOWN TYPE
OFF	ON	OFF	OFF	ON	OFF	
OFF	ON	OFF	OFF	OFF	ON	
OFF	ON	OFF	ON	OFF	ON	
ON	ON	ON	OFF	OFF	OFF	
ON	ON	OFF	ON	ON	OFF	
ON	ON	ON	ON	OFF	OFF	↓
ON	ON	ON	ON	ON	ON	HARDEST
ON	ON	ON	ON	ON	ON	難しい