

GAME 1167-E
FO 628

Bally PARAGON



Bally MANUFACTURING CORPORATION
2640 Belmont Avenue Chicago, Illinois, 60618, U.S.A.

© BALLY MFG. CORP. 1979
ALL RIGHTS RESERVED


GAME #1167-E PARAGON

Installation and General Game Operation Instructions

INDEX

	PAGE
I. INSTALLATION	1
II. GENERAL GAME OPERATION	2
III. BOOKKEEPING FUNCTIONS	3
IV. FEATURE OPERATION AND SCORING	4
V. GAME ADJUSTMENTS	5
A. PLAYFIELD ADJUSTMENTS	5
B. BACKBOX ADJUSTMENTS	5
CREDITS/COIN	5
MAXIMUM CREDITS	6
BALLS/GAME	6
MATCH FEATURE OPTION	6
CREDIT DISPLAY	6
HIGH SCORE FEATURE OPTION	6
HIGH SCORE TO DATE	6
GAME FEATURE OPTIONS	7
SOUND OPTION	7
C. FRONT DOOR GAME ADJUSTMENTS	
HIGH SCORE FEATURE	8
HIGH SCORE TO DATE FEATURE	8
VI. RECOMMENDED SCORE CARDS	11
VII. RECOMMENDED SETTINGS	12
VIII. ROUTINE MAINTENANCE ON LOCATION	13
IX. TROUBLE SHOOTING ON LOCATION	13
X. SERVICE/PARTS	19
XI. PARTS LIST	20-30

BLOCK DIAGRAM—ELECTRONIC PINBALL GAME

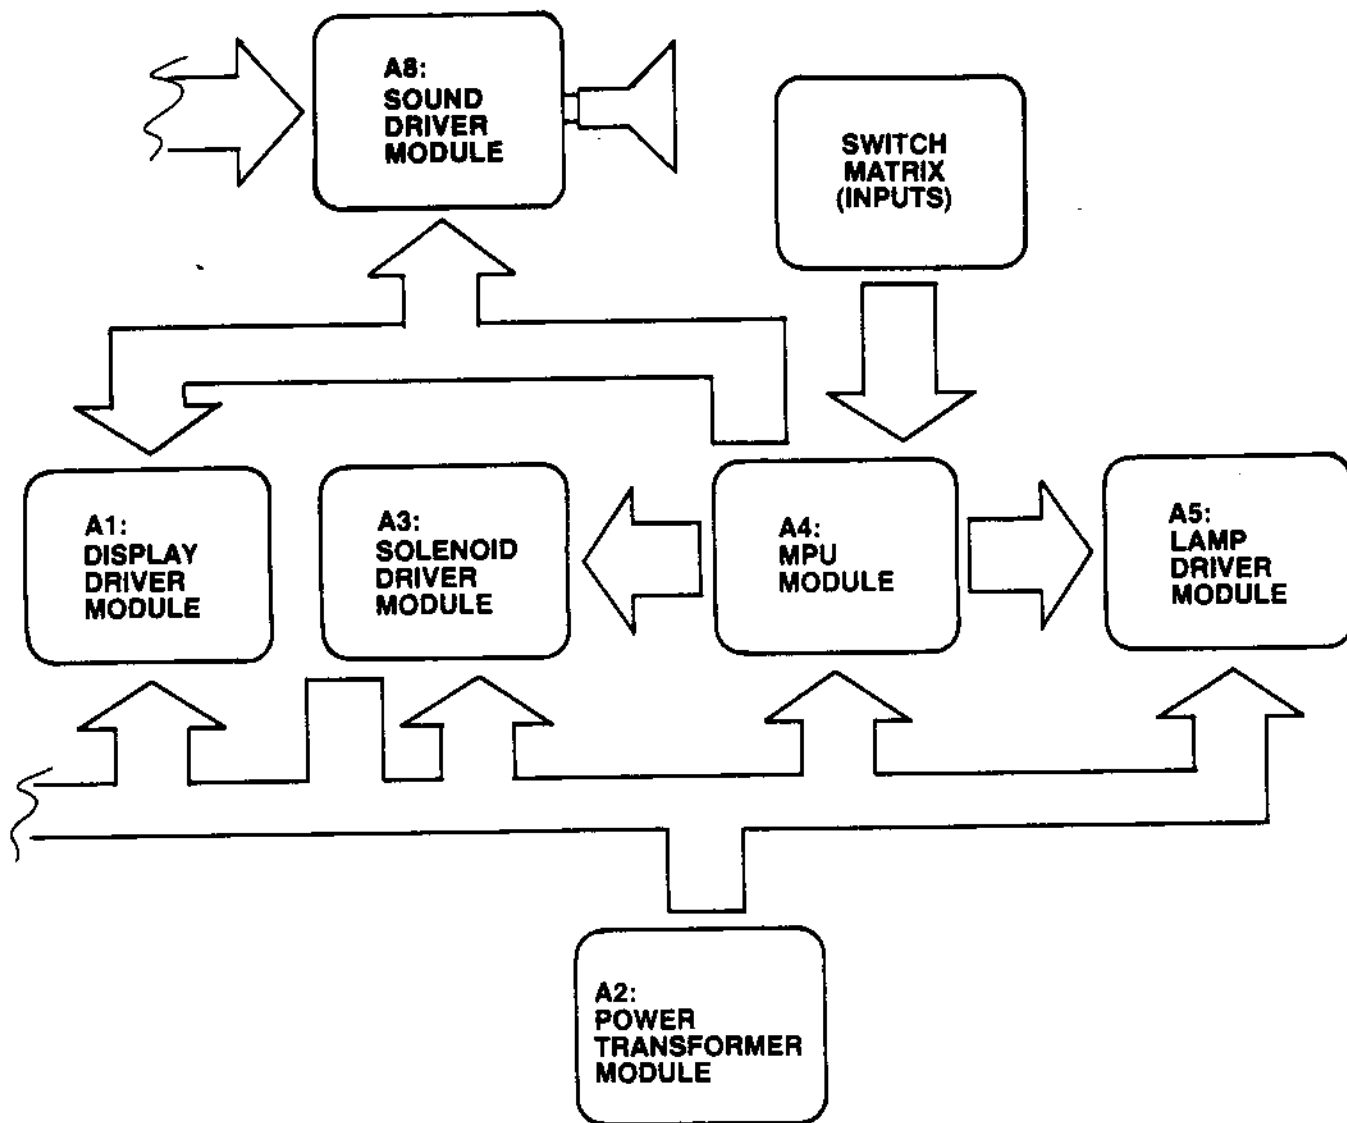

I. INSTALLATION

Assemble the game as follows:

Bolt legs to cabinet. Bolt back box to cabinet. Use flat washers under bolt heads. Gently feed cable connectors and ground braid through cable port in back box. Screw ground braid to braid in back box. Carefully and fully insert connectors on printed circuit assemblies.

On all games there are certain items that should be checked after shipment. These are visual inspections which may avoid time consuming service work later. Minor troubles caused by abusive handling in shipment are unavoidable. Cable connectors may be loosened, switches (especially tilt switches) may go out of adjustment. Plumb bob tilt switch should always be adjusted after game is set on location and leg levelers are adjusted.

Visual inspections before plugging in line cord:


1. Check that all cable connectors are completely seated on printed circuit assemblies.
2. Check that cables are clear of all moving parts.
3. Check for any wires that may have become disconnected.
4. Check switches for loose solder or other foreign material that may have come loose in shipment and could cause shorting of contacts.
5. Check wires on coils for proper soldering. Cold solder connections may not show up in factory inspection, but vibration in shipment may break contact.
6. Check that fuses are firmly seated and making good contact.
7. Check the transformer for any foreign material shorting across wiring lugs.
8. Check wiring of transformer to correspond to location voltage. See figure 1.

Check adjustment of the three (normally open) tilt switches:

1. Panel tilt on bottom of playfield panel.
2. Plumb bob tilt on left side of cabinet near front door.
3. Ball tilt above plumb bob tilt. Insert the smaller ball (15/16" dia.) into the ball tilt assembly, and adjust the bracket so the ball will roll free to contact the switch blade, if front of cabinet is raised.


TRANSFORMER CONNECTION INSTRUCTIONS

E-122-125 TRANSFORMER WIRING FOR 220/240 V.,
50/60 CYCLE INPUT.

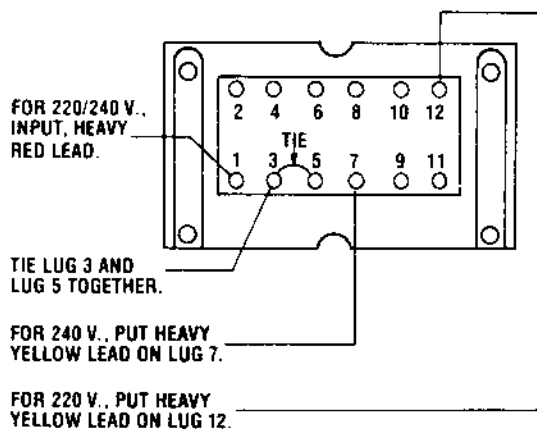

VARISTOR, BALLY PART NO. E-713-1,
LOCATED IN CABINET, MUST BE USED
FOR OPERATION AT 220 V. OR 240 V. A. C.

E-122-125 TRANSFORMER WIRING FOR 115/120 V.,
50/60 CYCLE INPUT.

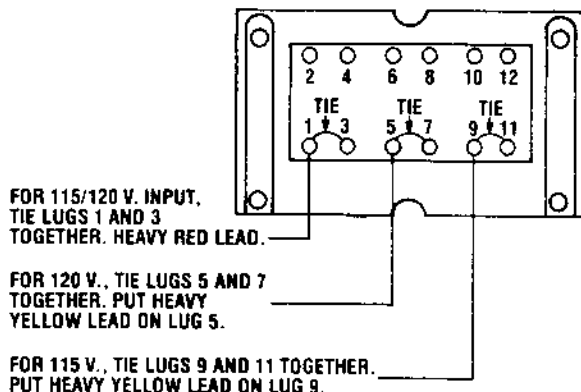

VARISTOR, BALLY PART NO. E-713,
LOCATED IN CABINET, MUST BE USED
FOR OPERATION AT 115 OR 120 V. A. C.

FIGURE I. TRANSFORMER
(PART OF POWER—TRANSFORMER MODULE A2, LOCATED IN BACK BOX).

II. GENERAL GAME OPERATION

Place ball into playfield by outhole.

Coin game. Coin should be rejected. Plug in line cord. Move power ON-OFF master switch at bottom right front corner of cabinet to 'ON' position. The game will play a power-up tune to announce game-readiness. Drop targets are reset, scores are set to zero, alternating with the 'High Score to Date', and the game is ready for play. Coin game. The game should accept the coin and post credits* for coins accepted (adjustable). Pressing the credit button on the door will cause the outhole kicker to serve the ball to the shooter alley. The 1st player-up lite is lit. A game-up tune* is played to announce play-readiness. The bonus score is advanced to 1000 points.

One player is posted each additional time the credit button is pressed (one to four can play). The credits are reduced by one each time the credit button is pressed until the credits are reduced to zero.

Shooting the ball initiates play. Rebound switches score 10 points. Thumper-bumpers, when not lit, score 10 points.

The game awards all points earned by the player. If spinner is turning and scoring when the ball hits a target, the spinner and the target scores are awarded.

When the ball enters the outhole, the bonus score is added to the total score. The player-up and/or ball in play on the back box is advanced one position. The bonus score is advanced to 1000 points. The outhole kicker serves the ball to the shooter alley and play is resumed. This continues until each player has played the allowable number of balls per game (adjustable). At this time the 'Game Over' light is lit. A random Match* number appears and the 'Match' light is lit. If the number is the same as the last two digits in a player's score, a free game is awarded.

Extra balls won during the course of the game are played immediately after the player's regular ball enters the outhole. The player-up and/or ball in play on the back box are not advanced for extra ball play. Bonus score is added to the player's score and the bonus is set to 1000 points before the game serves the extra ball for play.

At the end of the game, a 'High Score to Date' is alternately flashed with all 4 player scores. If the 'High Score to Date' is beat, this feature* awards free games.

Tilting the game results in loss of a ball. The flippers, thumper-bumpers, etc., go 'dead.' Bonus points are not scored. The purpose of the tilt penalty is to discourage the player from jostling the machine in an attempt to prolong play. Game action becomes normal after the ball kicker assembly serves the ball to the shooter alley.

Slamming the machine results in loss of the game. All feature lights go out, the game goes 'dead,' and a time delay occurs. The purpose of the time delay is to discourage unnecessary abuse of the machine. After the delay, the 'Game Over' light lites and the power-up tune is played. The time delay occurs anytime one of the slam switches is made to contact. There is one factory installed slam switch on the front door. (Any number of slam switches could be installed by the operator, to meet his individual requirement.) The switch should be adjusted to have approximately 1/16" gap between the contacts. The weighted blade should be adjusted to attain the desired sensitivity. Decreasing the gap between contacts will make the switch more sensitive. Opening the gap will reduce sensitivity.

*Some tunes and features can be disabled by operator if so desired. See Back Box Adjustments.

III. BOOKKEEPING FUNCTIONS

The game is designed to help the operator perform certain accounting functions. The game can display the number of total plays and replays (free games). It can display the number of coins dropped down each coin chute. The bookkeeping functions are displayed on all player score displays simultaneously. An identification number, 05 to 11 appears on the Match/Ball in Play window as follows:

- 05— 00 to— 40 = Current Credits
- *06—10000 to—999999 = Total Plays (Payed & Free Games)
- *07—10000 to—999999 = Total Replays (Free Games)
- 08— 00 to—999999 = Total times 'High Game to Date' is beat
- *09—10000 to—999999 = Coins Dropped thru Coin Chute #1
- *10—10000 to—999999 = Coins Dropped thru Coin Chute #2**
- *11—10000 to—999999 = Coins Dropped thru Coin Chute #3**

The game displays the first bookkeeping entry if the Self-Test button (See Fig. III) on the inside of the front door is pressed nine times. Alternately push and release the Self-Test button at one second intervals. The number 05 appears in the 'Match/Ball in Play' window. Current credits appear on the player score displays. Each additional press of the button causes the next entry to be displayed.

After the data in each bookkeeping register is recorded, it can be set to zero simply by pressing switch button S33, located on A4, the MPU module in the back box. (See Fig. III). Any or all registers can be cleared by alternating between the Self-Test button and the switch button on the MPU module. The operator is given this option as a possible convenience and can elect to use or not use it as his needs direct.

Pressing the button once more with the eleventh entry displayed causes the game to play the power-up tune and light the Game-Over light.

*The 10,000 level is pre-set at the factory; can be set to zero, initially, if desired.

**If Coin Chute is not used in game, number displayed (if other than 00) on Player Score displays has no significance.

PARAGON #1167-E FEATURE OPERATION & SCORING

A. TOP RIGHT "PARAGON" SAUCER FEATURE:

Each time the ball goes into the top right PARAGON SAUCER, the letter that is lit there, is spotted at the center of the playfield and the player's total score and bonus score advance before the ball is ejected onto the playing surface (NOTE: SEE FIXED-DATA SWITCH #24 & #23 BELOW). When all of the letters of "P-A-R-A-G-O-N" are spotted in the center of the playfield, the PARAGON SAUCER SPECIAL LITE lites; a ball entering the PARAGON SAUCER at this point will score and flash 25,000 points, score a SPECIAL and reset all of the "P-A-R-A-G-O-N" letters in the center of the playfield, enabling this sequence to be repeated and another SPECIAL earned. Also, the VALLEY OF DEMONS TARGETS may spot these letters (SEE FIXED DATA SW. #22). The lit "P-A-R-A-G-O-N" letters in the center of the playfield and the PARAGON SAUCER SPECIAL LITE are remembered from ball-to-ball.

FIXED DATA SWITCH #23 controls the score of the PARAGON SAUCER:

- ON (lib) — scores 3000 & 2 bonus advances.
- OFF (cons) — scores 500 & 1 bonus advance.

FIXED DATA SWITCH #24 controls the mode of the PARAGON SAUCER:

- ON (lib) — letters advance one at a time when made; *no scan*.
- OFF (cons) — letters *scan* continuously.

B. TOP LEFT "GOLDEN CLIFFS" SAUCER FEATURE:

Each time the ball goes into the top left GOLDEN CLIFFS SAUCER, the player's total score advances by the lit value; then the lit value advances one step when the ball is ejected onto the playing surface. At the start of a new game, the 2000 lite is lit. Also, the bonus is advanced when the lit value reaches 20,000. The GOLDEN CLIFFS SAUCER value is remembered from ball-to-ball.

C. "VALLEY OF DEMONS" IN-LINE DROP TARGET FEATURE:

There are four IN-LINE DROP TARGETS. Each target advances the player's total score and bonus score (NOTE: SEE FIXED DATA SWITCH #30). Targets number 1 & 2 score points and advance bonus only; target #3 additionally awards the 2X bonus multiplier; target #4 additionally awards the 3X bonus multiplier. The TREASURE CHAMBER SAUCER always awards 5000 points; also, 5X bonus multiplier when the ball enters it for the first time during any one particular ball-in-play; this same saucer awards the S.P.S.A. lite and resets the targets when the ball enters it for the second time during any one particular ball-in-play. All (4) targets must now be knocked down again during that same particular ball-in-play to collect a SPECIAL in the TREASURE CHAMBER SAUCER.

FIXED DATA SWITCH #30 controls the scoring of the "VALLEY OF DEMONS" targets:

- ON (lib) — each target scores 3000 and 2 bonus advances.
- OFF (cons) — each target scores 1000 and 1 bonus advance.

FIXED DATA SWITCH #22 controls the spotting of "P-A-R-A-G-O-N" by the VALLEY OF DEMONS targets:

- ON (lib) — each target spots top PARAGON SAUCER letter when hit.
- OFF (cons) — does not spot.

D. RIGHT SIDE WATERFALL (3) DROP TARGET FEATURE:

Each drop target scores 500 points. Knocking all (3) targets down scores the lit value and also

advances the WATERFALL LANE value, (see "E" below), as well as the drop target lite value. The game starts with the value of 10,000 points lit. The WATERFALL DROP TARGET VALUE is remembered from ball-to-ball.

FIXED DATA SWITCH #31 controls the WATERFALL DROP TARGET VALUE:

- ON (cons) — after one special is awarded, lite reverts back to 25K.
- OFF (lib) — special lite stays on once lit.

E. RIGHT SIDE WATERFALL LANE FEATURE:

Each time the ball goes through the WATERFALL LANE, the bonus is advanced one step; also, the player's total score advances as follows:

FIXED DATA SWITCH #29 controls the initial value of the WATERFALL LANE for every new ball.

- ON (lib) — lane starts at 5000—10,000—Spec—10,000.
- OFF (cons) — lane starts at 1000— 5,000—10,000—Spec—10,000.

Dropping all (3) WATERFALL DROP TARGETS advances the lane value; the lane value is reset ball-to-ball.

F. BONUS SCORE FEATURE:

A bonus of 1,000 to 49,000 may be scored. The game starts with a bonus of 1,000. The bonus score advances one step at a time each time either top or center "Advance Bonus" target is hit; also, the top roll-over button and the spinner advance the bonus. The bonus score is also advanced at several other places (see sec's. A-B-C-E). When a bonus score of 20,000 or higher is achieved, the 20,000 — 30,000 or 40,000 SUPER BONUS LITES will remain in memory and will be lit with the start of each new ball for that player. A tilt nulifies the bonus score.

G. EXTRA-PARAGON FLIPPERS FEATURE:

There are two extra PARAGON FLIPPERS on the playfield in addition to the standard set. These enable the player to effectively have control over the entire width of the wide-bodied game. One extra flipper is aimed at the VALLEY-OF-DEMONS targets and the other extra flipper is aimed at the WATERFALL targets.

H. PARAGON BEAST'S LAIR FEATURE:

This unique feature enables the player to save the ball at the last second thru a ramp that returns the ball to his flippers.

I. SPECIAL REPLAY / X-BALL / NOVELTY MODES

Switch #14 and #15 give the operator flexibility to award a replay, extra ball or score (Novelty) when a special is scored (drop target, WATERFALL, PARAGON and TREASURE CHAMBER). The following chart explains the settings.

SWITCH	SW. 14 ON SW. 15 ON	SW. 14 OFF SW. 15 ON	SW. 14 OFF SW. 15 OFF
Positions	Replay	X-Ball	NOVELTY
Paragon Saucer Special	Replay	X-Ball*	50,000
Drop Target Special	Replay	X-Ball*	50,000
Waterfall Lane Special	Replay	X-Ball*	50,000
Treasure Chamber Saucer Spec.	Replay	—*	50,000
Treasure Chamber Saucer X-Ball	X-Ball	X-Ball**	25,000
Scoring Thresholds	Replay	X-Ball**	NO AWARD

(*) 50,000 if Same Player Shoot Again is lit. (**) 25,000 if Same Player Shoot Again is lit.

V. GAME ADJUSTMENTS

A. Playfield Panel Post Adjustments:

Posts that control left and right outlane opening on panel can be moved to make access to outlanes easier or harder for ball to enter. See Figure II.

Easier entry will decrease playing time and scoring (conservative).

Harder entry will increase playing time and scoring (liberal).

B. Back Box Game Adjustments:

Each game has thirty-two switches located on A4, the MPU module, located in the back box, that allow play to be customized to the location. See Figure III. Credits per coin, maximum credits, credit display, balls per game, match feature, high game feature, special award and melody are selectable by means of the switches. The switches are contained in four-sixteen lead packages numbered S1-8, S9-16, S17-24 and S25-32 for easy identification. The "ON" toggle position is marked on the assembly. **Turn off power before making adjustments.**

Credits/Coin Adjustments:

The credits per coin are selectable by means of S25-S28 for coin chute #2. The switch settings and resultant credits/coin are as follows:

S28	S27	S26	S25	Credits/Coin
OFF	OFF	OFF	OFF	Same as Coin Chute #1 Settings
OFF	OFF	OFF	ON	1/1 Coin
OFF	OFF	ON	OFF	2/1 Coin
OFF	OFF	ON	ON	3/1 Coin
OFF	ON	OFF	OFF	4/1 Coin
OFF	ON	OFF	ON	5/1 Coin
OFF	ON	ON	OFF	6/1 Coin
OFF	ON	ON	ON	7/1 Coin
ON	OFF	OFF	OFF	8/1 Coin
ON	OFF	OFF	ON	9/1 Coin
ON	OFF	ON	OFF	10/1 Coin
ON	OFF	ON	ON	11/1 Coin
ON	ON	OFF	OFF	12/1 Coin
ON	ON	OFF	ON	13/1 Coin
ON	ON	ON	OFF	14/1 Coin
ON	ON	ON	ON	15/1 Coin

The credits given per coin are selectable by means of switches 1-5 incl., for coin chute #1 and switches 9-13 incl., for coin chute #3. Thirty-one different credit ratios are available for each coin chute. The switch settings and resultant credits/coin are listed below.

CREDITS/COIN ADJUSTMENTS

COIN CHUTE #1 (HINGE SIDE) OR #3	SWITCHES					CREDITS/COIN
	5	4	3	2	1	
	13	12	11	10	9	
	OFF	OFF	OFF	OFF	OFF	3/2 COINS**
	OFF	OFF	OFF	OFF	ON	3/2 COINS**
	OFF	OFF	OFF	ON	OFF	1/COIN
	OFF	OFF	OFF	ON	ON	1/2 COINS*
	OFF	OFF	ON	OFF	OFF	2/COIN
	OFF	OFF	ON	OFF	ON	2/2 COINS*
	OFF	OFF	ON	ON	OFF	3/COIN
	OFF	OFF	ON	ON	ON	3/2 COINS*
	OFF	ON	OFF	OFF	OFF	4/COIN
	OFF	ON	OFF	OFF	ON	4/2 COINS*
	OFF	ON	OFF	ON	OFF	5/COIN
	OFF	ON	OFF	ON	ON	5/2 COINS*
	OFF	ON	ON	OFF	OFF	6/COIN
	OFF	ON	ON	OFF	ON	6/2 COINS*
	OFF	ON	ON	ON	OFF	7/COIN
	OFF	ON	ON	ON	ON	7/2 COINS*
	ON	OFF	OFF	OFF	OFF	8/COIN
	ON	OFF	OFF	OFF	ON	8/2 COINS*
	ON	OFF	OFF	ON	OFF	9/COIN
	ON	OFF	OFF	ON	ON	9/2 COINS*
	ON	OFF	ON	OFF	OFF	10/COIN
	ON	OFF	ON	OFF	ON	10/2 COINS*
	ON	OFF	ON	ON	OFF	11/COIN
	ON	OFF	ON	ON	ON	11/2 COINS*
	ON	ON	OFF	OFF	OFF	12/COIN
	ON	ON	OFF	OFF	ON	12/2 COINS*
	ON	ON	OFF	ON	OFF	13/COIN
	ON	ON	OFF	ON	ON	13/2 COINS*
	ON	ON	ON	OFF	OFF	14/COIN
	ON	ON	ON	OFF	ON	14/2 COINS*
	ON	ON	ON	ON	OFF	15/ COIN
	ON	ON	ON	ON	ON	15/2 COINS*

*No Credits until second coin is dropped

**One Credit for first coin. Two Credits for second coin provided that no scoring occurred between 1st and 2nd coin drops. If scoring occurred second coin gives one credit.

MAXIMUM CREDITS:

The maximum credits accepted by the machine limits the number of games that can be accumulated by coining, by winning replays or both. The maximum number of credits is selectable by means of switches 17, 18 and 19. Eight credits limits are available. Switch settings are listed below.

MAXIMUM CREDITS	SWITCHES		
	19	18	17
5	OFF	OFF	OFF
10	OFF	OFF	ON
15	OFF	ON	OFF
20	OFF	ON	ON
25	ON	OFF	OFF
30	ON	OFF	ON
35	ON	ON	OFF
40	ON	ON	ON

BALLS PER GAME:	# BALLS/GAME	SWITCH 16
	5	ON
	3	OFF

MATCH FEATURE:

When the Match Feature is ON, a random number appears in the Match/Ball in Play window and the word MATCH is illuminated. If the number matches the tens digit in a player's score, a free game is awarded. The Match feature creates an incentive to play.

MATCH	SWITCH 21
ON	ON
OFF	OFF

CREDIT DISPLAY:	CREDITS DISPLAYED	SWITCH 20
	YES	ON
	NO	OFF

HIGH SCORE FEATURE:

The game is designed to award an Extra Ball or Free Game at each of the three score levels. See Front Door Game Adjustments.

AWARD	SWITCH 15	SWITCH 14
REPLAY	ON	ON
EXTRA BALL	ON	OFF
NO AWARD	OFF	OFF

HIGH SCORE TO DATE FEATURE:

The game is designed to award free games as an option if high score to date is beat. Each time this happens, the winning score becomes the new high score to beat. This score is displayed on all 4 player score displays at the end of each game as an incentive to play. Recommended setting is underlined.

HIGH SCORE TO DATE FEATURE	SWITCH 7	SWITCH 6
No Award	OFF	OFF
One Credit	OFF	ON
Two Credits	ON	OFF
<u>Three Credits</u>	<u>ON</u>	<u>ON</u>

State and local laws may regulate the use of the above features, and they have been designed to allow for appropriate adjustment in order to conform to such requirements.

#1167-E PARAGON

SOUND OPTION

The game is designed to play several melodies to announce power-up, game-up, etc. The tunes are intended to attract attention to the game and increase game usage. The tunes are controlled by switch settings as shown.

	S8				
	S32	OFF	OFF	ON	ON
		OFF	ON	OFF	ON
POWER UP		TUNE	TUNE	TUNE	TUNE
COIN (NO CREDIT)		NOISE	CHIME	NOISE	CHIME
COIN (WITH CREDIT)		NOISE	TUNE	NOISE	TUNE
PLAYER-UP		TUNE	NOISE	TUNE	TUNE
SCORE (10,100 1K)		CHIME	CHIME	NOISE	NOISE
SCORE (25K)		CHIME	NOISE	NOISE	NOISE
REPLAY CREDITS		KNOCKER	KNOCKER	KNOCKER	KNOCKER
TILT		NOISE	NOISE	NOISE	NOISE
OUTHOLE		CHIME	CHIME	CHIME	NOISE
GAME OVER		NOISE	NOISE	TUNE	TUNE

GAME FEATURE OPTIONS:

In line target PARAGON spot adjustment:

Liberal	SW. 22 ON	Hitting in line target spots any PARAGON letter.
Conservative	SW. 22 OFF	Hitting in line target does not spot any letters.

PARAGON saucer bonus and points adjustment:

Liberal	SW. 23 ON	Scores 3,000 points and 2 bonus advances.
Conservative	SW. 23 OFF	Scores 500 points and one bonus advance.

PARAGON saucer scanning adjustment:

Liberal	SW. 24 ON	PARAGON lites do not scan.
Conservative	SW. 24 OFF	PARAGON lites keep scanning.

Waterfall lane 5,000 lite adjustment:

Liberal	SW. 29 ON	5,000 lite is on at start of game.
Conservative	SW. 29 OFF	5,000 lite is not on at start of game.

In line drop target bonus and points adjustment:

Liberal	SW. 30 ON	Hitting target scores 3,000 points and 2 bonus advances.
Conservative	SW. 30 OFF	Hitting target scores 1,000 points and one bonus advance.

3 drop target special adjustment:

Liberal	SW. 31 OFF	Special can be collected more than one time.
Conservative	SW. 31 ON	Special can be collected only one time, then 25,000 lites.

C. Front Door Game Adjustments:

High Score Feature Adjustments:

The game is designed to award an extra ball (option) or a free game at each of three score levels. The recommended levels are on the score card in the game.

Any level from 10,000 to 990,000 can be set, as desired. It is also possible to reset or turn off (00) any or all of the levels, if desired.

1. Push and release Self-Test button (see Figure III) at one second intervals approximately five times or until number 01 appears on the Match/Ball in Play display.
2. The number on the Player Score Displays is the score level*. It can be increased, if desired, by holding the credit button in. To decrease the score level, reset to '00' and then hold the credit button in. Release the credit button when the desired number appears. Note that the level changes 10,000 points at a time. If the number '00' is left on the displays, the high score feature is eliminated for that level.
3. Repeat steps 1 and 2 for the second and third score levels. The number '02' and '03' on the Match/Ball in Play display are for the second and third levels, respectively.

High Score to Date Feature:

The game is designed to award free games when 'High Score to Date' is beat.

It is recommended that the level, which will build with game play, be periodically reset to the factory recommended level to encourage game play. The adjustment procedure is the same as for the High Score Feature Adjustment, Steps 1 and 2. Continue pushing the Self-Test button until the number '04' appears on the Match/Ball in Play display and then do Step 2.

Any level from '00' to 990,000 can be set as described. It is to be noted that '00' does **not** turn off the feature, as it does on High Score feature. The feature is turned off by positioning switches S6 and S7 to the 'OFF' position, and 'ON' by positioning switches as discussed under "Back Box Game Adjustments.

*Can be quickly set to '00' by pressing S33 on the MPU assembly in the back box. See Figure III.

#1167-E PARAGON RUBBER PARTS


A. R-243	5/6" DIA.	(4)
B. R-521	3/4" DIA.	
C. R-521-1	1" DIA.	(5)
D. R-521-2	1 1/2" DIA.	
E. R-521-3	2" DIA.	(4)
F. R-521-4	2 1/2" DIA.	
G. R-521-5	3" DIA.	
H. R-521-6	3 1/2" DIA.	
I. R-406-3	FLIPPERS	(3)

PANEL TOP PARTS

1. Arch Rail	M-1774
2. Rail Post	C-907
3. Rail Post Cap	C-908
4. Bottom Arch	P-5871-67
5. Shooter Gauge	P-6359-33
6. Ball Gate Assembly (R)	A-1475-13
7. Ball Gate Assembly (L)	A-1475-12
8. Ball Gate & Wire Assembly	ASE-2250-11
9. Ball Gate & Wire Assembly	ASE-2250-59
10. Ball Gate & Wire Assembly	ASE-2250-25
11. Ball Gate & Wire Assembly	ASE-2250-18
12. Ball Gate & Wire Assembly	ASE-2250-60
13. Screened Plastic Set	M-1330-161
14. Spinner Gate Assembly (L)	ASE-2250-51
15. Thumper Cap Assembly (4)	A-3713-50
16. Drop Target Assembly (3)	ASE-2795-30
17. In-Line Drop Target Assy. (4)	ASE-2993
18. Outhole Wire	ASE-2806-21
19. Rollover Wire	ASE-2806
20. Ball Guide Wire	M-121-53
21. Target Assembly	ASE-2911-3
22. Ball Guide Wire (4)	M-121-46
23. Flipper & Shaft Assembly (3)	ASE-2214-24
24. Flipper & Shaft Assembly (1)	ASE-2214-25
25. Ball Guide Wire	M-121-18
26. Ball Guide Wire	M-121-47
27. Ball Guide Wire	M-121-30
28. Ball Guide Wire	M-121-83
29. Rollover Button (4)	C-900
30. Mini-Post Assembly (7)	AS-2836-1

CONS. — CONSERVATIVE
MED. — MEDIUM
LIB. — LIBERAL

INDICATES MOVABLE POSTS
FOR SCORING ADJUSTMENTS

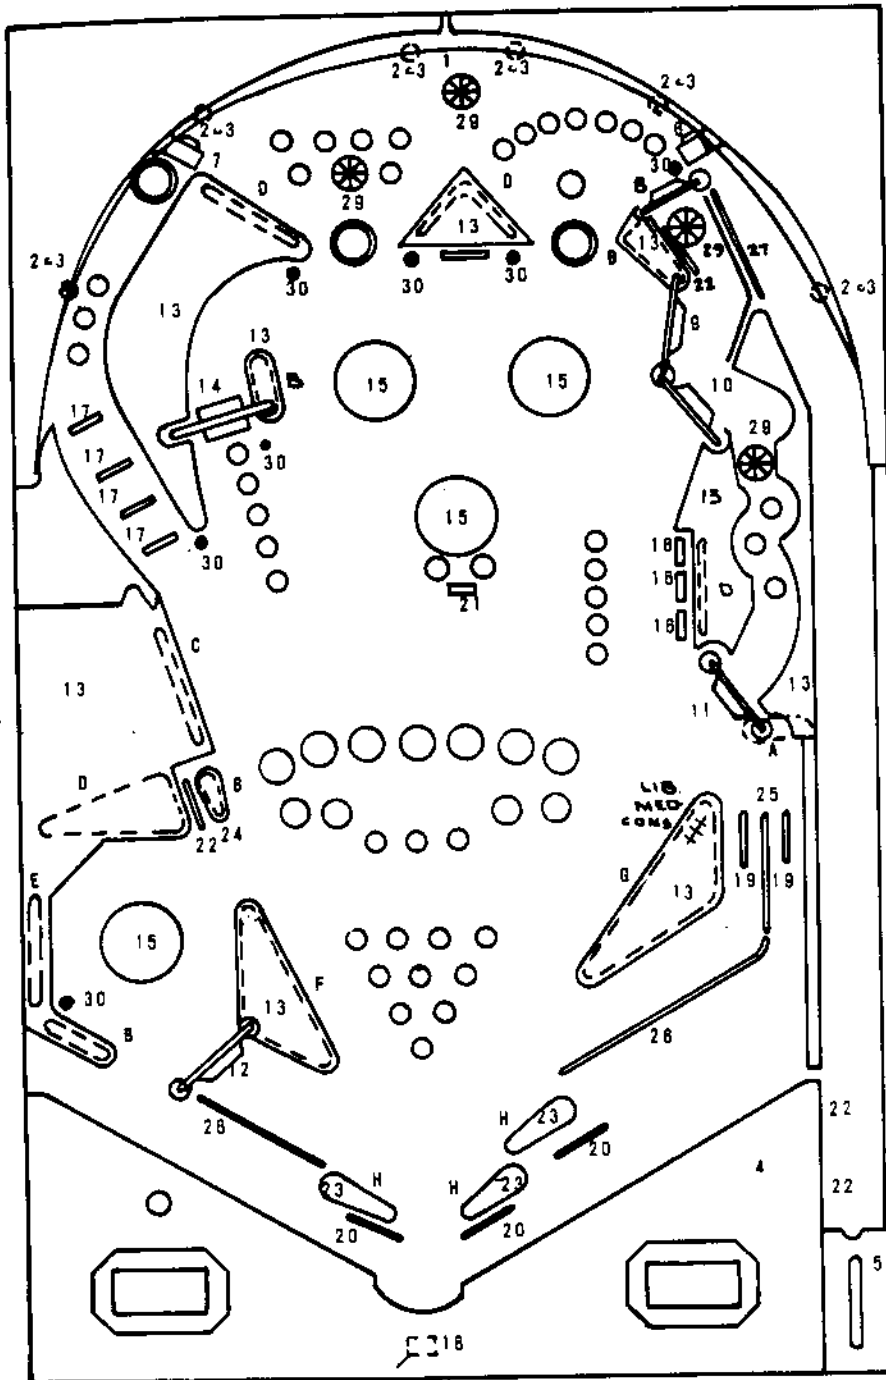

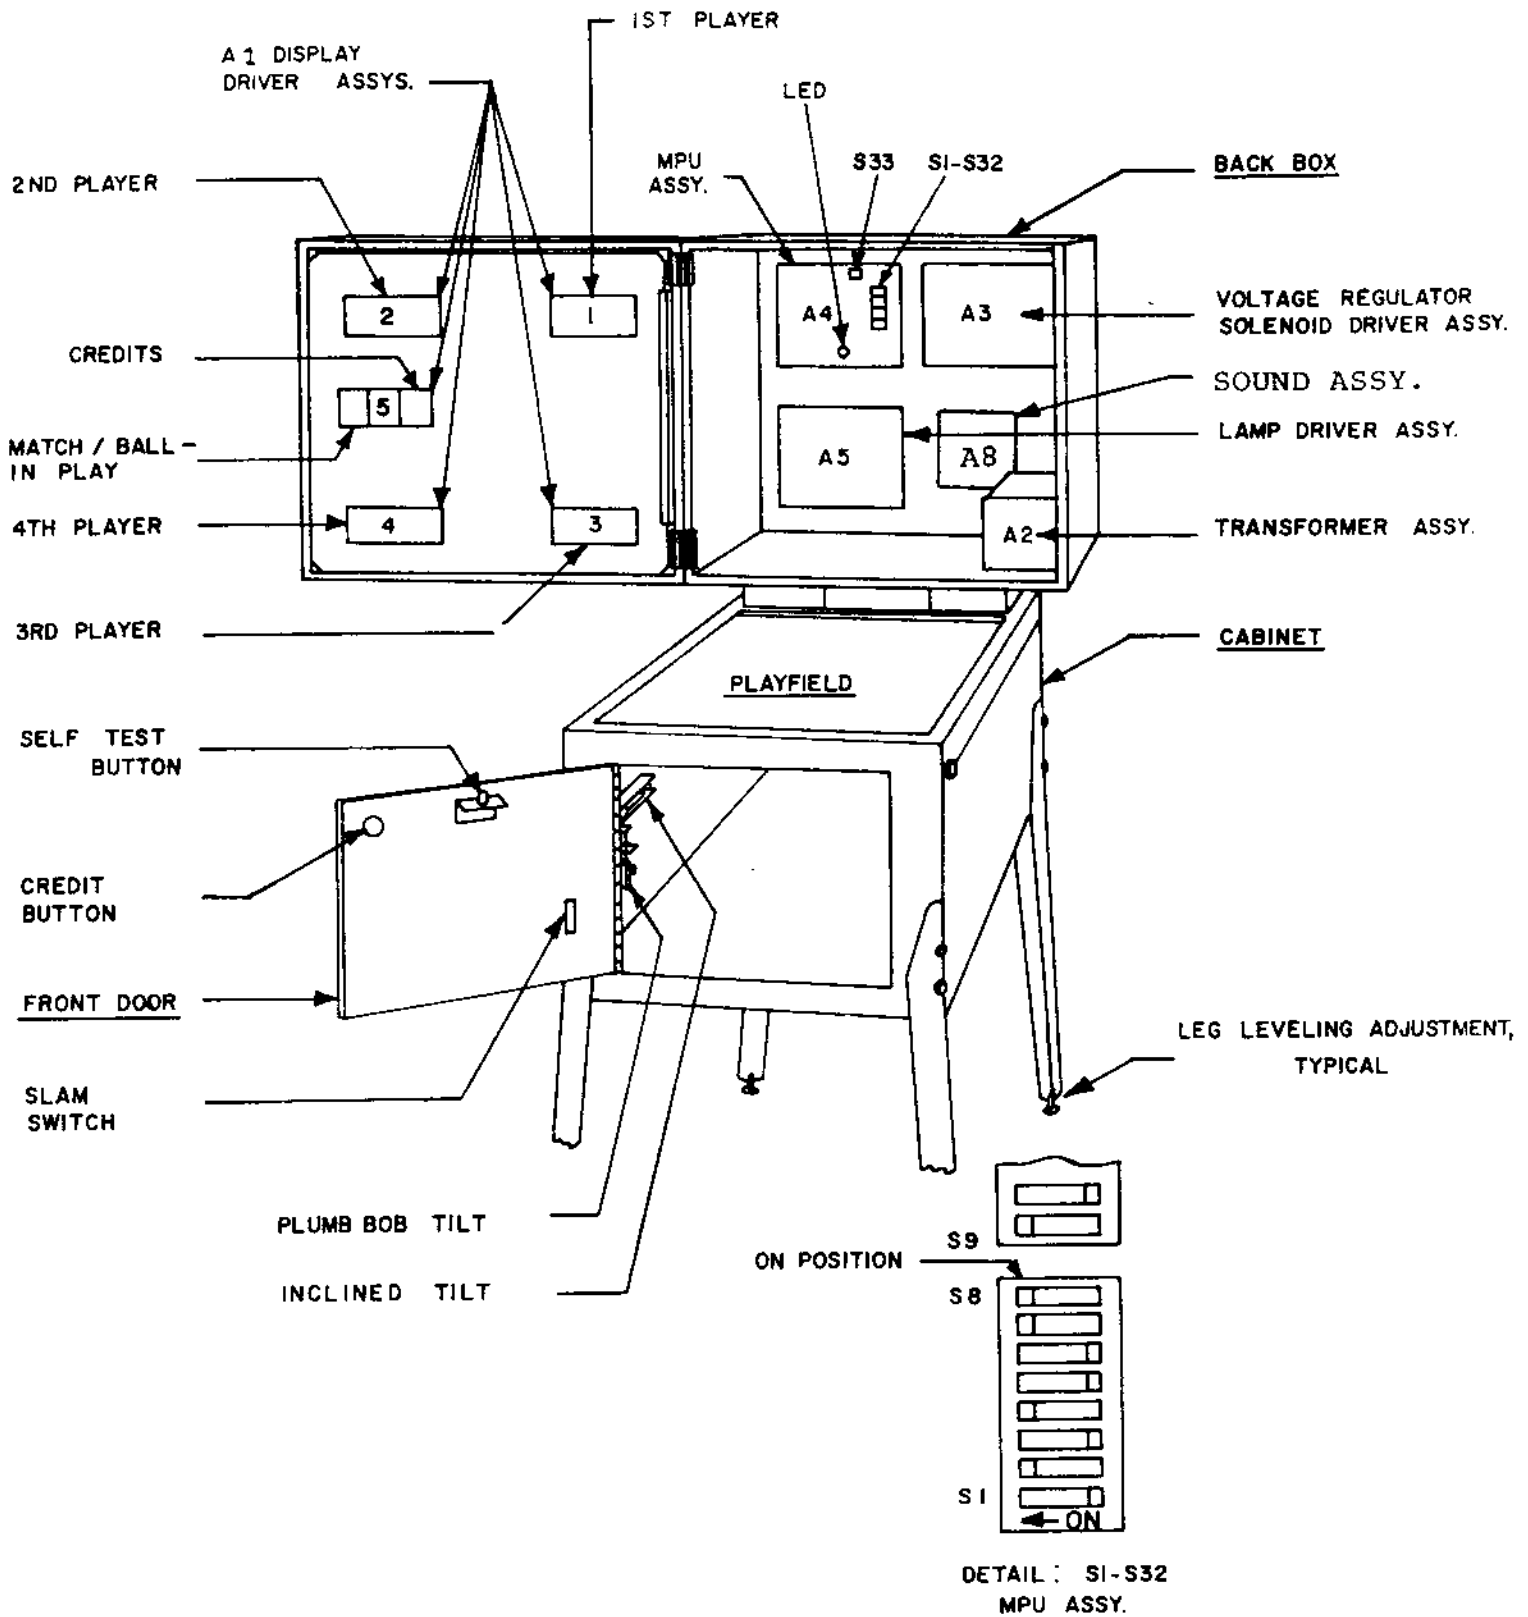


FIGURE III. ELECTRONIC PIN BALL MACHINE

RECOMMENDED:

Instruction, Score Cards and High Score feature settings to be used on PARAGON ELECTRONIC # 1167-E.

3-BALL

REPLAYS

Instruction Card M-1508-81-E
 Score Card M-1508-81-D/N
 *Score Card M-1508-81-B/N
 1 Replay at 240,000
 1 Replay at 480,000

EXTRA BALL

Instruction Card M-1508-81-F
 Score Card M-1508-81-UU
 1 Extra Ball at 200,000
 1 Extra Ball at 440,000
 1 Extra Ball at 660,000

5-BALL

REPLAYS

Instruction Card M-1508-81-TT
 Score Card M-1508-81-C/P
 *Score Card M-1508-81-A/P
 1 Replay at 280,000
 1 Replay at 520,000

EXTRA BALL

Instruction Card M-1508-81-F
 Score Card M-1508-81-MM
 1 Extra Ball at 240,000
 1 Extra Ball at 480,000
 1 Extra Ball at 700,000

(*) Use for end of game replay award. Use with insert cards (7), M-1508-68B

(all playfield posts in medium position)

ADDITIONAL CARDS

REPLAYS

M-1508-H	120,000	360,000	
M-1508-I	140,000	380,000	
M-1508-J	160,000	400,000	
M-1508-K	180,000	420,000	
M-1508-L	200,000	440,000	
M-1508-M	220,000	460,000	
M-1508-N	240,000	480,000	
M-1508-O	260,000	500,000	
M-1508-P	280,000	520,000	
M-1508-Q	300,000	540,000	
M-1508-R	320,000	560,000	
M-1508-S	340,000	580,000	
M-1508-T	360,000	600,000	
M-1508-U	380,000	620,000	
M-1508-V	400,000	640,000	
M-1508-W	420,000	660,000	
M-1508-X	440,000	680,000	
M-1508-Y	460,000	700,000	
M-1508-AA	140,000	430,000	580,000
M-1508-BB	160,000	450,000	600,000
M-1508-CC	180,000	470,000	620,000
M-1508-DD	200,000	490,000	640,000
M-1508-EE	220,000	510,000	660,000
M-1508-FF	240,000	530,000	680,000
M-1508-GG	260,000	550,000	700,000

EXTRA BALL

M-1508-UU	200,000	440,000	660,000
M-1508-VV	220,000	460,000	680,000
M-1508-MM	240,000	480,000	700,000
M-1508-NN	270,000	510,000	730,000
M-1508-OO	300,000	540,000	760,000
M-1508-PP	330,000	570,000	790,000
M-1508-QQ	360,000	600,000	820,000
M-1508-RR	390,000	630,000	850,000
M-1508-SS	420,000	660,000	880,000

Instruction Card, Novelty
 M-1508-78-G

Blanks (3)

High game to date recommended levels:
 (reset periodically)

		3 BALL	560,000
		5 BALL	600,000
M-1508-HH	280,000	570,000	720,000
M-1508-II	300,000	590,000	740,000
M-1508-JJ	320,000	610,000	760,000
M-1508-KK	340,000	630,000	780,000
M-1508-LL	360,000	650,000	800,000

#1167-E PARAGON

RECOMMENDED SETTINGS

		<u>3-BALL</u>	<u>5-BALL</u>
SPECIAL: REPLAY	SW.14	ON	ON
	SW.15	ON	ON
In line drop target Paragon spot	SW.22	ON	OFF
Paragon saucer bonus and points	SW.23	ON	OFF
Paragon saucer scanning	SW.24	OFF	OFF
Waterfall rollover button	SW.29	ON	ON
In line drop target bonus & points	SW.30	ON	OFF
Drop target special	SW.31	OFF	ON

The following chart gives recommendations for three typical types of operation.

	<u>3-BALL</u>	<u>5-BALL</u>
REPLAY		
Instruction Card	M-1508-81-E	M-1508-81-E
Score Card	M-1508-81-B/N	M-1508-81-A/P
Major Mode	SW. 14, 15 ON	SW. 14, 15, ON
Match	SW. 21 ON	SW. 21 ON
High Score to Date	SW. 6, 7, ON	SW. 6, 7, ON
X-BALL		
Instruction Card	M-1508-81-F	M-1508-81-F
Score Card	M-1508-81-D W/UU	M-1508-81-C w/MM
Major Mode	SW. 14 OFF	SW. 14 OFF
	SW. 15 ON	SW. 15 ON
Match	SW. 21 OFF	SW. 21 OFF
High Score to Date	SW. 6, 7, OFF	SW. 6, 7, OFF
NOVELTY		
Instruction Card	M-1508-81-G	M-1508-81-G
Major Mode	SW. 14, 15, OFF	SW. 14, 15, OFF
Match	SW. 21 OFF	SW. 21 OFF
High Score to Date	SW. 6, 7, OFF	SW. 6, 7, OFF

VIII. ROUTINE MAINTENANCE ON LOCATION:

Self-Test routines are written into the game design. They are particularly useful for routine maintenance. The tests are described below. The first test is automatic and occurs on power-up. This test causes the MPU module A4 to examine itself for failures. Seven flashes of an LED indicates proper operation. The second series of self-diagnostic tests causes the MPU to 'exercise' each of the other modules in such a way as to make their faults, if any, obvious. See Figure III and Page ii.

It is recommended that these tests be used several times a week to check out the games before play. If faults are discovered, they may be corrected on location if the operator has a stock of replacement modules. See "Trouble Shooting on Location."

MPU Module Self-Test:

At power on, the LED on the MPU module flashes once. (Flicker-Flash). After a pause, it flashes six more times and goes out. A power-up tune is played to announce game readiness. This indicates proper MPU operating condition and successful completion of the power-up test.

Game Self-Diagnostic Tests:

1. Pressing the Self-Test button inside the door initiates the Self-Test routine. See Figures III and IV. All switched lamps flash off and on continuously.
2. Pressing the Self-Test button again causes each digit on each display to cycle from 0 thru 9, and repeat continuously.
3. Pressing the Self-Test button again causes each solenoid to be energized, one at a time, in a continuous sequence. Hold both flipper buttons 'in' during this test. The number appearing on the Player Score displays is the same as the number assigned to the solenoid. The sound of a solenoid pulling-in as a number appears indicates proper operation. The absence of sound is improper. If sound is absent, see Page 17 for help in Solenoid identification.
4. Pressing Self-Test button again causes the sound module to play the "Game Over" tune repeatedly.
5. Pressing the Self-Test button again causes the MPU to search each switch assembly for stuck contacts. If any are found, the number of the first set encountered is flashed on the Player Score displays. The number remains until the fault is cleared. See Page 17 for help in Stuck Switch identification. Other numbers may follow if more stuck contacts are present. If there are no stuck switches, the Match/Ball in Play display flashes '0'.
6. Pressing the Self-Test button eleven more times causes the MPU to step thru the threshold and bookkeeping functions described previously and finally to repeat the power-up test. For more rapid exit to power-up, turn the game off, then on. The game is now ready to play.


After successful completion of the Self Diagnostic Test procedure, set the game up for play. Exercise each rollover, thumper-bumper, slingshot, etc., by hand until each switch assembly on the playfield has been checked for proper operation. If actuating a switch assembly results in intermittent or no response, clean contacts by gently closing them on a clean business card or piece of paper and wiping until they wipe clean. Regap, if necessary, to 1/16". **Do not burnish or file Gold Plated Switch Contacts.**

IX. TROUBLESHOOTING ON LOCATION

The game is designed to make troubleshooting easy. Several simple procedures are given herein that cover the greatest percentage of game failures. They are written for an operator on location and require module replacement. (See Figure III) Symptoms and the action to be taken are given for each type of problem.

If the problem is more complicated and is not solved by following this procedure, more detailed procedures are available from Bally. See the Parts List for ordering information.

FIGURE IV SELF DIAGNOSTIC TEST

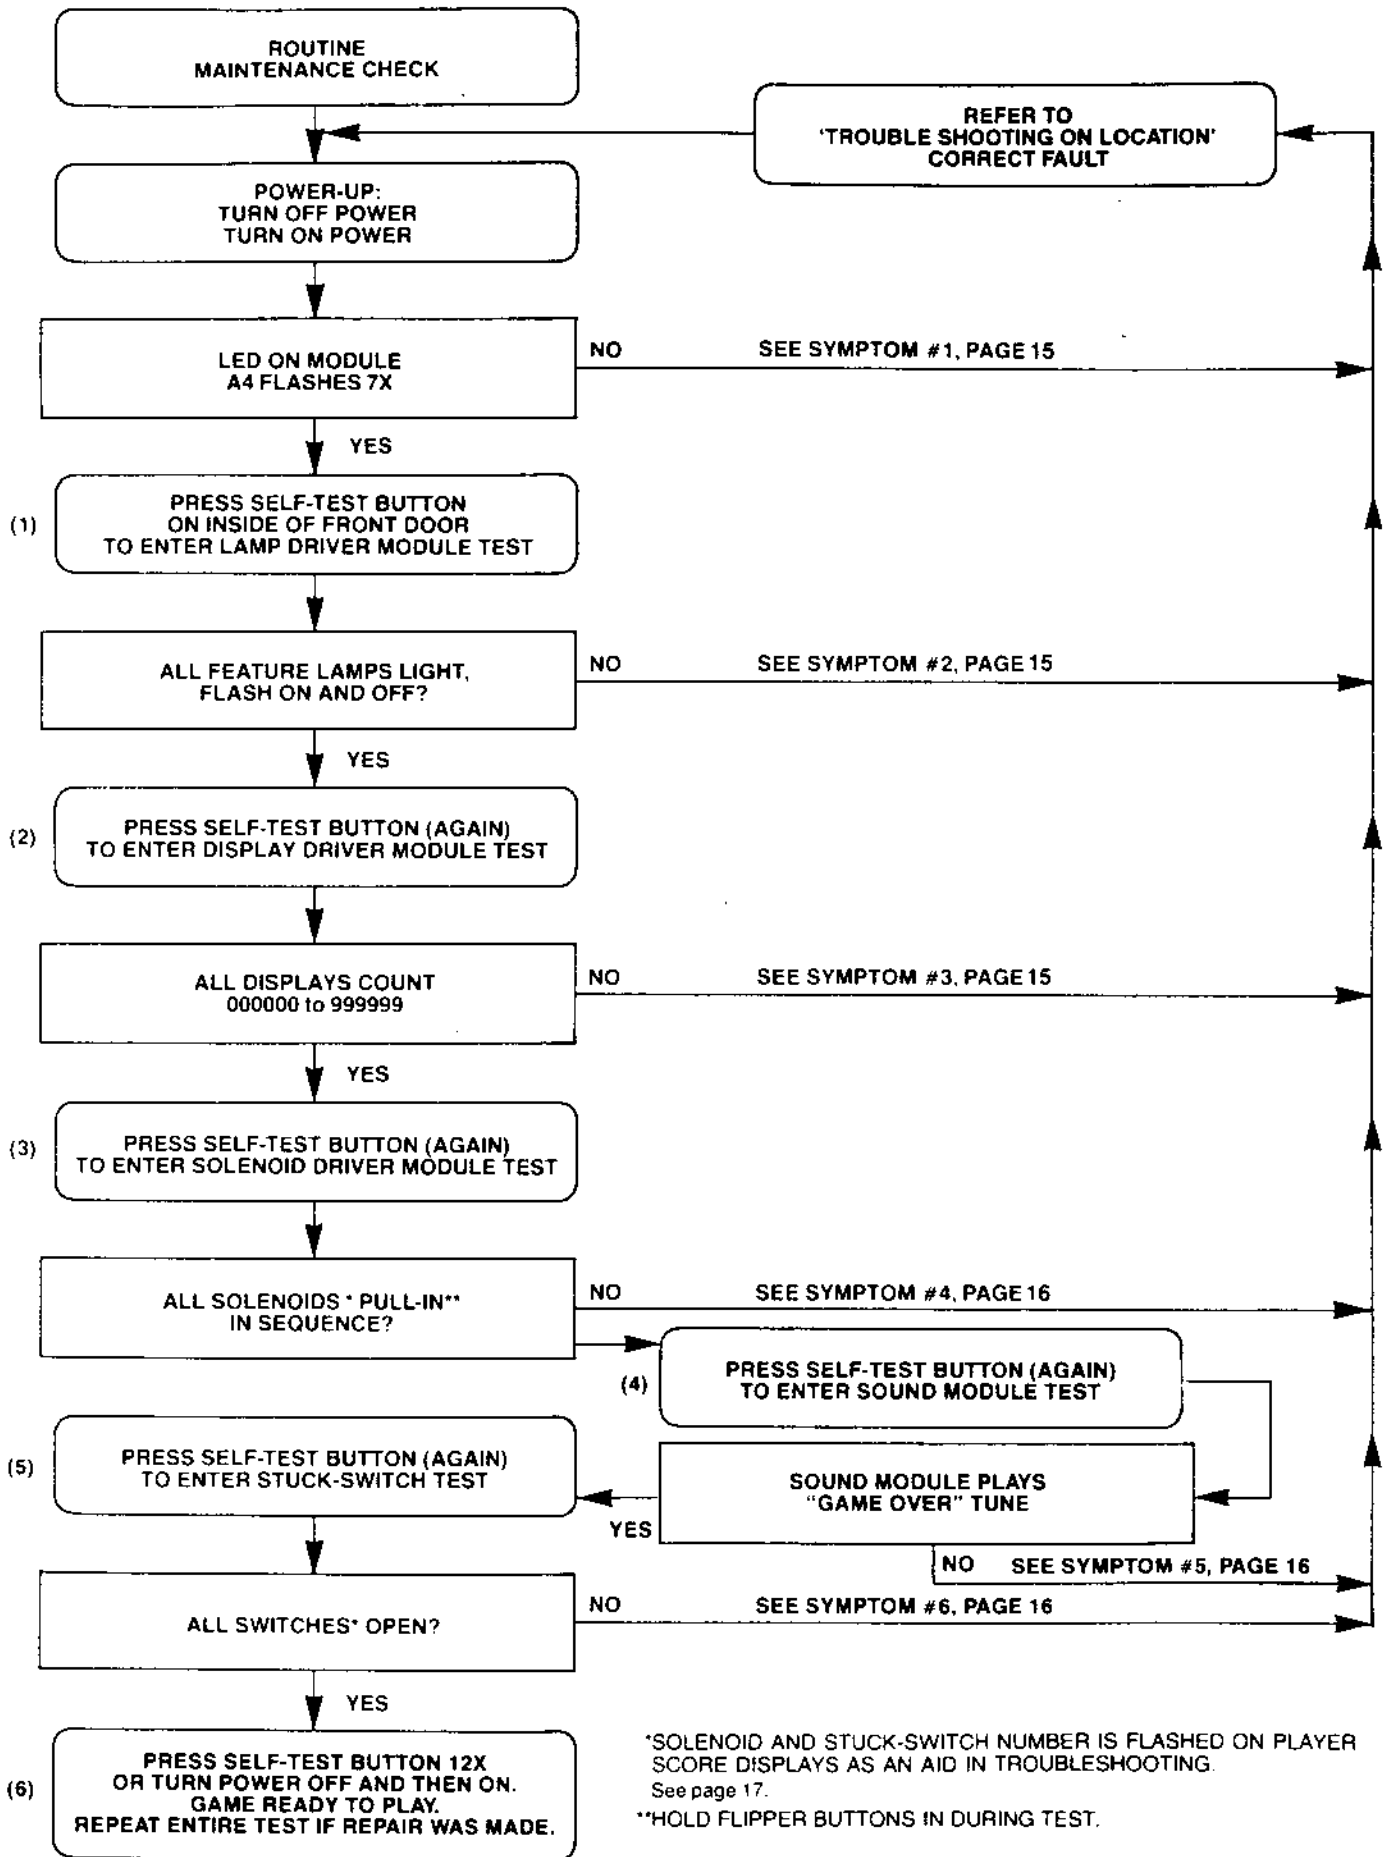

*SOLENOID AND STUCK-SWITCH NUMBER IS FLASHED ON PLAYER SCORE DISPLAYS AS AN AID IN TROUBLESHOOTING.
See page 17.

**HOLD FLIPPER BUTTONS IN DURING TEST.

- 1A) SYMPTOM:** Game does not play power-up tune when power is turned on. General illumination is present.
- ACTION:**
- A)** Turn power OFF. Open back box. Locate light emitting diode (LED) on MPU module A4.
 - B)** Turn Power ON. LED must flash 7X to indicate that module A4 is good. Correct flash sequence is flicker/flash-pause-and then six more flashes and LED goes out.
 - C.** If LED does not come on, or does not flash, or flashes, but less than 7X, turn off power. Replace MPU module A4.
- CAUTION:** **Replacement MPU Module must have same Part Number or incorrect operation will result! See Parts List for MPU Module Part Number.**
- Turn power ON.
- D)** If game is correct, it is now ready for play. If game is not correct, refer to Module Replacement procedure. (See Parts List.)
- 2A) SYMPTOM:** Not all feature lamps light during game play.
- ACTION:**
- A)** With power ON, open front door. Press button (Self-Test switch) once. If the game is correct, **all** feature lamps flash ON and OFF.
 - B)** Carefully raise playfield or open back box to gain access to lamps.
 - C)** Replace bulbs that do not flash.
 - D)** If game is correct, it is now ready for play.
 - E)** If game is not correct, turn power OFF. Replace Lamp Driver Module A5. Turn power ON and repeat A.
 - F)** If game is correct, it is now ready for play.*
 - G)** If game is not correct, turn power OFF. Replace MPU module A4. See CAUTION, 1C. Turn power ON and repeat A.
 - H)** If game is correct, it is now ready for play.* If game is not correct, refer to Module Replacement procedure. (See Parts List.)
- 2B) SYMPTOM:** One or some switched lamps always ON.
- ACTION:** Repeat 2AA, AB, AE, and AF and, if necessary AG & AH.
- 3A) SYMPTOM:** Display digits improper on **one** or **several**, but less than all Display Driver module(s), A1. Improper: One or several segments always OFF, digits mottled or several segments or digit(s) always ON.
- ACTION:**
- A)** With power ON, open front door. Press button (Self-Test switch) twice. If the game is correct, each digit on each Display Driver Module A1 (5 used/game) displays the count 1-9 and 0 continuously in all 6 digit positions. Note defective Display Driver modules.
 - B)** Turn power OFF.
- CAUTION: High Voltage is supplied to the Display Driver Modules, A1, from the Solenoid Driver/Voltage Regulator Module A3. Wait 30 seconds for High Voltage to Bleed Off.**
- C)** Replace Display Driver module(s) A1. Turn power ON. Repeat A.
 - D)** If game is correct, it is now ready to play.* If game is not correct, refer to Module Replacement procedure. (See Parts List.)
- 3B) SYMPTOM:** **All** displays improper (all five display Driver modules). Improper: Digit(s) always on or off/segment(s) always on or off, all displays.
- ACTION:**
- A)** Repeat 3AA, and AB.
 - B)** Replace MPU module A4. See CAUTION NOTE, 1C. Turn power ON. Repeat A.

- C) If game is correct, it is now ready to play.* If game is not correct, refer to Module Replacement procedure. (See Parts List.)
- 3C) **SYMPTOM:** One or several displays always off.
ACTION: A) Do 3AA, AB, AC, and AD.
 B) Repeat 3BB and BC, if necessary.
- 4A) **SYMPTOM:** Solenoid(s) do(es) not pull-in during course of game.
ACTION: A) With power ON, open front door. Press button (Self-Test switch) three times.
 B) If game was correct, each solenoid would be energized. A number is flashed on the Player Score displays as each solenoid is pulsed. Note any numbers that do not have the sound of a solenoid associated. See Solenoid Identification Table, Page 17 and Figure V.
 C) Carefully lift the playfield (or open the back box) to gain access to the solenoid. Turn power OFF. Inspect the solenoid.
 D) If a lead is broken off, repair. Repeat A & B. If game is correct, it is now ready for play.* If solenoid wiring was correct, turn power OFF.
 E) Replace Solenoid Driver/Voltage Regulator module A3. See CAUTION NOTE 3AB.
 F) Repeat AA & AB. If game is correct, it is now ready to play.* If game is not correct, turn power OFF.
 G) Replace Sound Module A8.
 H) Repeat AA and AB if game is correct. It is now ready to play. If game is not correct, turn power OFF."
 I) Replace MPU module A4. See CAUTION NOTE, 1C.
 J) Repeat A & B. If game is correct, it is now ready to play.* If game is not correct, refer to Module Replacement Procedure. (See Parts List.)
- 4B) **SYMPTOM:** Solenoid(s) always energized—Note: if impulse solenoids (ball ejects, slingshots, thumper-bumpers, etc.) are energized continuously, they are subject to damage. Limit troubleshooting to one minute with power ON, followed by **five minutes with power OFF**. Repeat as necessary. Replace damaged solenoids.
ACTION: Do 4AA, AB, AE, AF, AG, AH and if necessary, AI and AJ.
- 5) **SYMPTOM:** No Sound.
ACTION: A) With Power ON, open front door, press Self-Test switch four times.
 B) Turn volume control clockwise to Max.
 C) If correct, sound will be heard. If incorrect, try seating speaker lead connector (J2) and input connector (J1).
 D) If correct, sound will be heard. If incorrect, refer to Module Replacement procedure."
- 6) **SYMPTOM:** Feature (Drop Targets, etc.) does not score.
ACTION: A) With power ON, open front door. Press button (Self-Test switch) five times.
 B) If the game is correct, Match/Ball in Play display would flash '0'. If a number appears on the Player Score displays, see Switch Assembly Identification Table, Page 17 and Figure V.
 C) Carefully lift the playfield. Locate the switch assembly identified from the number. Visually inspect the switch assembly. If the contacts are 'stuck', regap them to 1/16". See section under ADJUSTMENTS. Repeat A & B. If the game is correct, it is now ready to play.* If game is not correct, turn the power OFF.
 D) Replace MPU module A4. See CAUTION NOTE 1, C.
 E) Repeat A & B. If the game is correct, it is now ready to play.* If the game is not correct, refer to Modul. Replacement Procedure. (See Parts List).
- 7) **SYMPTOM:** Game blows fuse(s) repeatedly.
ACTION: See Module Replacement Procedure. F.O. 560

*Turn power On-Off switch OFF and then ON.

GAME # 1167-E PARAGON (Figure V)

SOLENOID IDENTIFICATION TABLE


SELF-TEST #	SOLENOID IDENTIFICATION	SELF-TEST #	SOLENOID IDENTIFICATION
01	Outhole kicker	08	Left thumper bumper
02	Knocker	09	Right thumper bumper
03	Treasure chamber saucer	10	Bottom thumper bumper
04	Paragon saucer	11	Center thumper bumper
05	Golden cliffs saucer	12	Drop target (in line)
06	Left slingshot	13	Drop target
07	Right slingshot	14	Coin lockout door
		15	K1 relay (flipper enable)

SWITCH ASSEMBLY SELF-TEST DISPLAY NUMBERS

SELF-TEST #	DESCRIPTION	SELF-TEST #	DESCRIPTION
01	Drop target (in line) "D" (top)	21	
02	Drop target (in line) "C"	22	Right outlane
03	Drop target (in line) "B"	23	Right flip feeder lane
04	Drop target (in line) "A" (bottom)	24	Paragon saucer
05		25	
06	Credit button	26	Top center rollover button
07	Tilt (3)	27	500 point rebound (2)
08	Outhole	28	Waterfall rollover button
09	Coin III (right)	29	Center target
10	Coin I (left)	30	Top center target
11	Coin II (middle)	31	Treasure chamber saucer
12		32	Golden cliffs saucer
13		33	Spinner
14		34	Top right, golden cliffs rollover button and drop target rebound.
15		35	Right slingshot
16	Slam (2)	36	Left slingshot
17	Drop target "C" (bottom)	37	Bottom thumper bumper
18	Drop target "B"	38	Center thumper bumper
19	Drop target "A" (top)	39	Right thumper bumper
20		40	Left thumper bumper

NOTE: SLINGSHOT & THUMPER BUMPER COILS WILL BE ENERGIZED WHEN SWITCH IS MADE.

#1167-E PARAGON

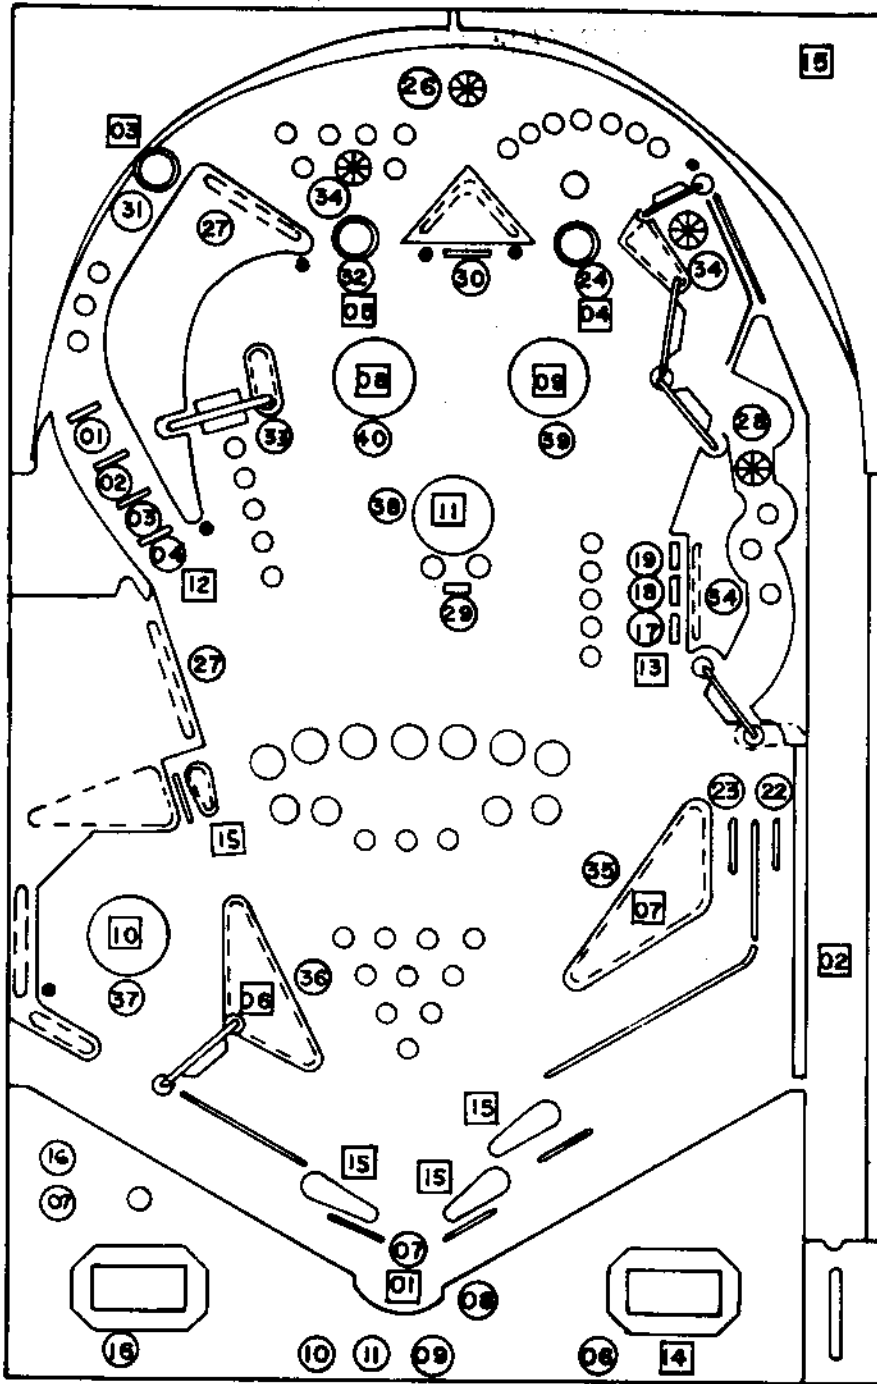

○ INDICATES SWITCH ASSEMBLY IDENTIFICATION NUMBERS.
NOTE: CABINET: 07, 16
DOOR: 06, 09, 10, 11, 16

□ INDICATES SOLENOID IDENTIFICATION NUMBERS.
NOTE: DOOR: 14
BACKBOX: 15
CABINET: 02

FIGURE V

ASSEMBLY ADJUSTMENTS:

GENERAL:

All switch assemblies consist of leaf springs, contacts, separators, plastic tubing and screws to hold them to the mounting surface. Before attempting to adjust a switch assembly, make sure that these screws are tight. If not, tighten screw closest to the contact end of the leaf spring first. This will prevent the assembly from being secured in such a manner that the leaf springs tend to fan out. In general, all leaf springs are adjusted for a 1/16" gap in the open position and .010" overtravel or wipe in the closed position. All contacts should be in good condition. Unless otherwise instructed, they should be dry or non-lubricated. All contacts should be free of dust and dirt. Contacts, with the exception of the flipper button switch assemblies, are plated to resist corrosion. Filing or burnishing breaks the finish and encourages corrosion. Clean by closing the contacts over a clean piece of paper (e.g. a business card) and wiping gently until the contacts are clean. For the flipper button switch assemblies **ONLY**: Tarnish can be removed with a contact file followed by a burnishing tool. Severely pitted contacts must be replaced as an assembly. In general, contacts need be cleaned or replaced and adjusted only when they are found to be a source of game malfunction.

X. SERVICE PARTS:

A parts catalogue is available upon request. The catalogue is illustrated and lists all replacement parts for each game manufactured by Bally. Requests should be addressed to:

BALLY MANUFACTURING CORPORATION
2640 WEST BELMONT AVENUE
CHICAGO, ILLINOIS 60618
ATTN: PARTS DEPARTMENT

SERVICE HINTS:

The Bally playfield has an improved tuff-coat finish with excellent wearing properties. Its life expectancy, as well as play appeal, can be extended by periodic cleaning of the playfield.

DO: Bally recommends you clean your playfield with Wildcat #125 (Wildcat Chemical Co., 1333 W. Seminary Drive, Ft. Worth, Texas 76115). Wildcat #125 is a combination cleaner and polish. Bally has tried and tested this product and found it to be very effective. If Wildcat #125 is not available, Bally suggests you ask your Distributor to order it. Inspect and hand polish the ball in a clean cloth. A chipped ball must be replaced. It can ruin the finish on the playfield in a short period of time.

DON'T: Use water in large quantities, highly caustic cleaners, abrasive cleaners or cleaning pads on the playfield. Do not allow a wax or polish build up. Waxes yellow with age and spoil play appeal.

XI. PARTS LIST #1167-E PARAGON

MISCELLANEOUS	PART NUMBER
Transformer (Domestic or Export)	E-122-125
Bulbs, #44	E-125-22
Fuse, 1 Amp, 3 A6 Slow Blow (Playfield Solenoid Protection)	E-133-44
 ASSEMBLY COILS	
Coin Lockout	FO-36-7000
Flipper (4)	AQ-25-500/ 34-4500
Knocker	AR-26-1200
Outhole Kicker	AN-26-1200
Thumper-Bumper (4)	AN-26-1200
Sling-Shot (2)	AN-26-1200
Drop Target Reset (2)	NO-26-1900
Saucer (3)	AO-27-1300
 PLAYFIELD PARTS	 See Figure II
 MODULES	
Lamp Driver A5	AS-2518-23
Display Driver A1 (5 Used)	AS-2518-21
Solenoid Driver/Voltage Regulator A3	AS-2518-22
MPU A4	AS-2962-8
Transformer & Rectifier A2	AS-2877-1
Rectifier Board (Part of A2)	AS-2518-18
Sound	AS-2888-4
 REPAIRS PROCEDURES/AIDS	
Module & Component Replacement	F.O.560-1
AID (Assistance in Diagnostics)	
Kit, used with F.O.560-1	KIT #485-1
 MODULE COMPONENTS	
SEE MODULE PARTS LIST	
 MODULE COMPONENT STARTER KITS	
(Each Kit contains an assortment of the most needed electronic parts for use in Module repair.)	
Kit #490—For Rectifier Board (Part of A2)	
Kit #503—For MPU Board A4 (Less Memory U1-U6)	
Kit #492—For Solenoid Driver/Voltage Regulator A3	
Kit #493—For Display Driver A1	
Kit #494—For Lamp Driver A5	
Kit #518—For Sound A8	